

Quick start guide

Power on: press and hold for 3 seconds to power on/off.



 
Charge: when the battery level is lower than 10%, please connect the charger in time.




Delivery: Click on the target table number on the Delivery Mode menu and click "Start".




Cruise: Select the cruise route in Cruise Mode and click "Start".

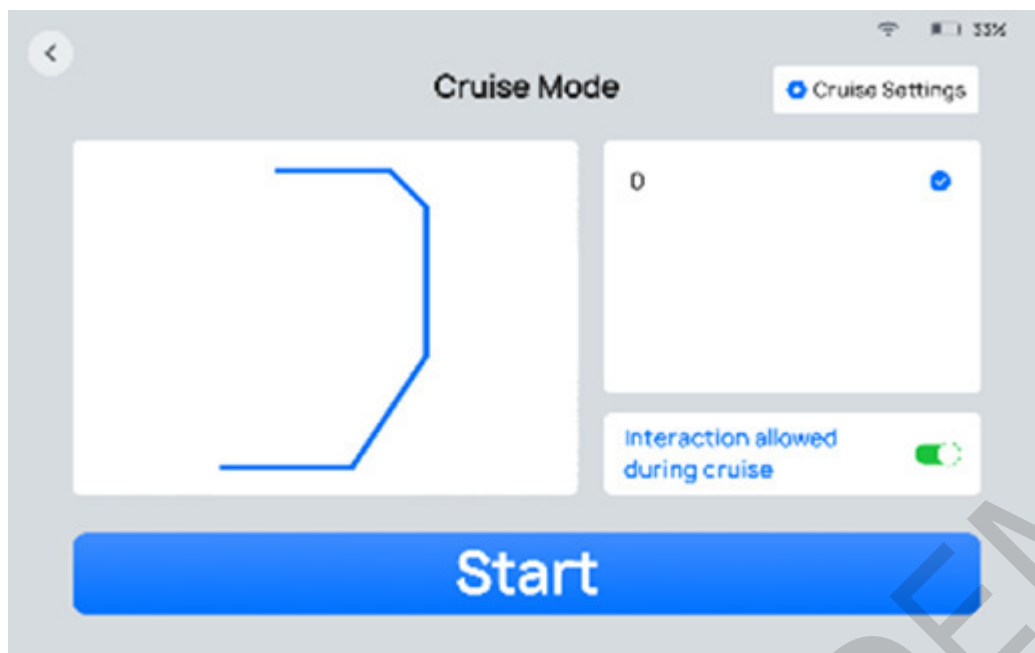

 
Customer Attraction: Select the Customer Attraction Mode then click "Start", the robot will go to the defined location to attract customers by itself.

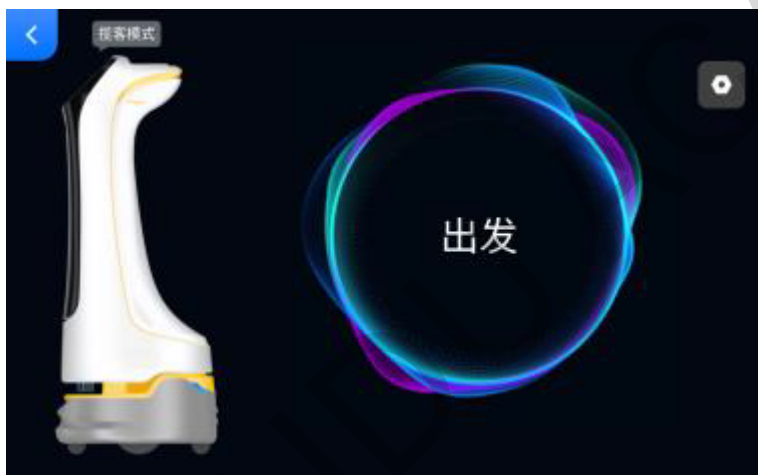

 
Escorting: Select the table number in Escorting Mode menu, and the robot may lead the customers to the table.

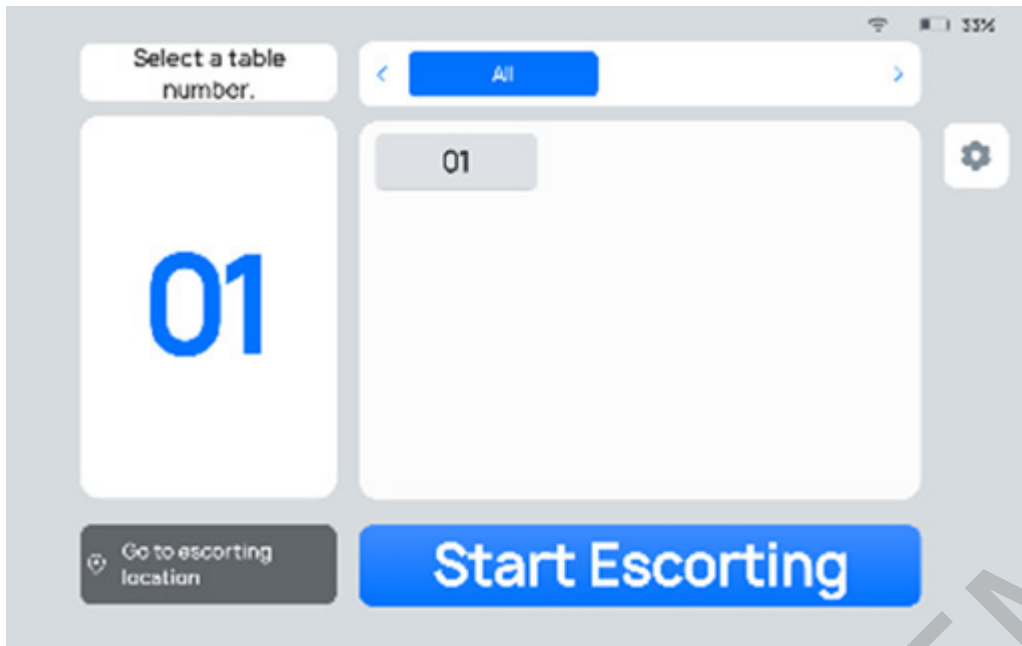

 Dish-Return: In Dish-Return Mode, select the table number and click "Start". The Dwell Time and Return Interval can be defined in the settings.

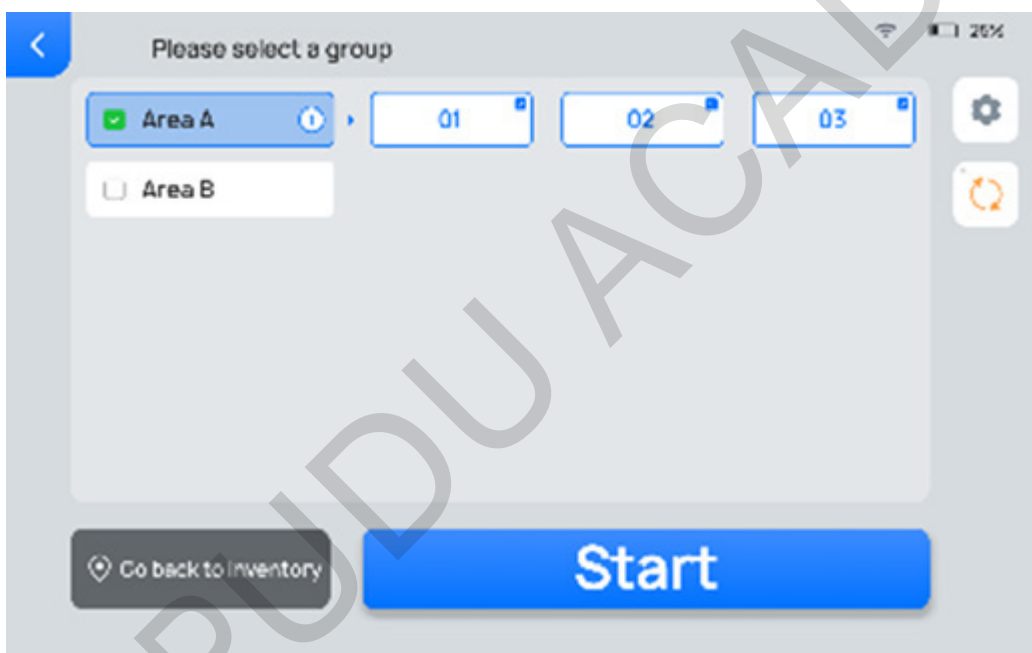

 Self-Charging: Click "Charging Now", the robot will automatically head to the charging pile for charging. (A charging pile is required)

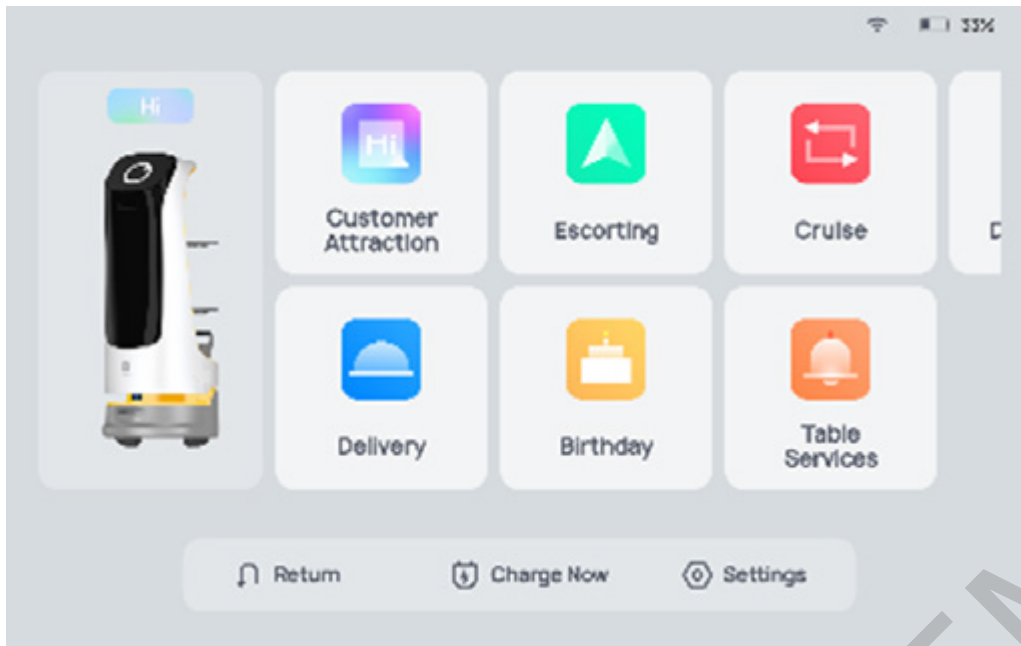

Note

1. Press the Emergency Button on the top of the robot to make it stop immediately. Then it cannot move and the button needs to be rotated to make it move again.
2. Do not to deliver liquid dishes, such as soup or hot pot, which may spill on the trays and cause other accidents.
3. The robot has an automatic obstacle avoidance function, but it is strictly forbidden to block the robot suddenly during its running. Otherwise, it may cause an accident.
4. Please designate a person to charge the robot, do not leave it charging unattended.
5. Please keep the robot and its charging port in dry environment and at room temperature.
6. Do not place the robot and charger in high-temperature environment for charging ($>40^{\circ}\text{C}$ / 104°F) or let water in.