

# BREDA



## DETAILED INSTRUCTIONS

FOR USE OF A **HEAT PUMP** DRYER

LUDH92700

Life is complicated today. Let's make at least laundry care simple! Your new dryer uses innovative technology and the latest achievements in laundry care to help you simplify your daily household chores. The technology offers the gentlest care for any garment, with minimum creasing, while the **IonTech** technology will leave your laundry even softer and less wrinkled, without any unpleasant odours and bacteria. Moreover, your new dryer is also friendly to the environment as it uses power in the most economical way possible.

This dryer is intended solely for household use. Please do not use it to dry clothes that are not suitable for machine drying.

The following symbols are used throughout the manual and they have the following meanings:



Information, advice, tip, or recommendation



Warning – general danger



Warning – danger of electric shock



Warning – danger of hot surface



Warning – danger of fire



It is important that you carefully read the instructions.

# TABLE OF CONTENTS

|   |  |
|---|--|
| <b>4 IMPORTANT SAFETY INSTRUCTIONS</b><br>.....<br><b>14 DESCRIPTION OF THE DRYER</b><br>15 Technical information<br>16 Control unit  | <b>INTRODUCTION</b>  |
| <b>18 INSTALLATION AND CONNECTION</b><br>19 Selecting the room<br>22 Adjusting the dryer feet<br>23 Draining the condensate<br>24 Connecting to the power mains<br>25 Electrical installation<br>27 Moving and transport after installation<br>.....<br><b>28 BEFORE USING THE APPLIANCE FOR THE FIRST TIME</b>   | <b>PREPARING THE DRYER BEFORE FIRST USE</b>                                      |
| <b>29 DRYING PROCESS, STEP BY STEP (1 - 6)</b><br>29 Step 1: Heed the labels on the laundry<br>30 Step 2: Preparing for the laundry drying process<br>34 Step 3: Choosing the drying programme<br>37 Step 4: Selecting extra functions<br>43 Step 5: Starting the drying programme<br>43 Step 6: End of the drying programme<br>.....<br><b>44 INTERRUPTIONS AND CHANGING THE PROGRAMME</b><br>.....<br><b>46 MAINTENANCE &amp; CLEANING</b><br>47 Cleaning the net filter in the door<br>48 Cleaning the heat pump filter<br>49 Cleaning of the heat exchanger<br>50 Emptying the condensate tank<br>51 Cleaning the dryer | <b>DRYING PROCESS, STEP BY STEP</b><br><br><b>DRYER CLEANING AND MAINTENANCE</b> |
| <b>52 TROUBLESHOOTING</b><br>52 What to do ...?<br>53 Troubleshooting table<br>56 Servicing<br>.....<br><b>57 TIPS FOR DRYING AND ECONOMIC USE YOUR DRYER</b><br><b>58 DISPOSAL</b>   | <b>TROUBLE-SHOOTING</b><br><br><b>MISCELLANEOUS</b>                              |

# IMPORTANT SAFETY INSTRUCTIONS



**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE!**

**⚠ WARNING** – To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. Read all instructions before using the appliance.
2. Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapours that could ignite or explode.
3. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
4. Before the appliance is removed from service or discarded, remove the door to the drying compartment.
5. Do not reach into the appliance if the drum is moving.
6. Do not install or store this appliance where it will be exposed to the weather.
7. Do not tamper with controls.
8. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.

9. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
10. Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
11. Clean lint screen before or after each load.
12. Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
13. The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
14. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
15. ⚠️ **WARNING:** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative or personnel if you are in doubt as to whether the appliance is properly grounded.

**Carefully read the instructions for use before using the dryer.**

**Please, do not use the dryer without reading and understanding these instructions for use first.**

**These instructions for use of a dryer are supplied with different types or models of dryers. Therefore, they may include descriptions of settings or equipment that are not available in your dryer.**

**Failure to observe the instructions for use** or inappropriate use of the dryer may result in damage to the laundry or the appliance, or injury to the user. Keep the instruction manual handy, near the dryer.

**Your dryer is intended solely for household use.** If the dryer is used for professional, for-profit purpose or purpose exceeding normal use in a household, or if the dryer is used by a person who is not a consumer, the warranty period shall be equal to the shortest warranty period required by relevant legislation.

Follow the instructions for correct installation of the dryer and connection to the power mains (see chapter »INSTALLATION AND CONNECTION«).

All and any repairs or maintenance tasks on the dryer should only be done by trained experts. Unprofessional repair may result in an accident or major malfunction.

To avoid danger, a **damaged power cord** may only be replaced by the manufacturer, a service technician, or an authorized person.

**After installation, the dryer should stand still for two hours before it is connected to the power mains.**

At least two persons are required to install the tumble dryer on top of a washing machine.

**⚠ WARNING:** The dryer may not be connected to the power mains using an extension cord.

Do not connect the dryer to power mains using an external switching device such as a programme timer, or connect it to power mains that is regularly switched on and off by the power supply provider.

**⚠ WARNING:** In case of a defect, only use approved spare parts by authorized manufacturers.

**⚠ WARNING:** In case of incorrect dryer connection, incorrect use, or servicing by an unauthorized person, the user shall bear the cost of any damage as such damage shall not be covered by warranty.

Always use the ducts or hoses supplied with the dryer.

Install the dryer in a room with adequate ventilation and a temperature between 50°F (10°C) and 77°F (25°C).

Place the dryer on a level and stable solid (concrete) base.

**⚠ WARNING:** Do not place the dryer behind lockable or sliding door, or door with a hinge on the opposite side of the dryer door hinge. Install the dryer in such way that the door can always be freely opened.

Never block the air exhaust (evacuation opening).

**⚠ WARNING:** Do not place the dryer on a carpet with long fibres as this may impede air circulation.

**Air in the dryer environment should not contain dust particles. The air where the dryer is installed should be thoroughly ventilated** to prevent reverse flow of gases released from the gas appliances with open fire (e.g. a fireplace).

Make sure the fibres do not accumulate around the dryer.

The appliance may not be in contact with a wall or adjacent furniture.

After installation, let the dryer rest still for 24 hours before using it. If the dryer has to be laid down on one of the sides during transport or servicing, place it with its left side, viewing from the appliance front, downwards.


Do not use the dryer to dry any laundry that has not been washed.



Laundry stained with oil, acetone, alcohol, oil derivatives, stain removers, turpentine, wax, and wax removers should be washed in a washing machine with hot water and detergent before it is dried in the dryer.

Clothing that includes latex, rubber parts, shower and bathing caps, and laundry or covers with rubber foam may not be dried in the dryer.

Use laundry conditioners or similar products in compliance with manufacturer's instructions.

 **WARNING:** Remove all objects such as lighters and matches from the pockets.

If the condensate tube is blocked or clogged, then tumble dryer operation is stopped (see chapter »PAUSING AND CHANGING THE PROGRAMME/Full condensate tank«).

Before moving the dryer or before storing it in a non-heated room during the winter, the condensate tank has to be emptied.

**Clean the dryer filters after each drying cycle.** If you have removed the filters, replace them before the next drying cycle.

**⚠ WARNING: Do not use any solvents or cleaning agents that could damage the dryer** (please observe the recommendations and warnings provided by the manufacturers of the cleaning agents).



**After the drying process, unplug the dryer power cord from the power outlet.**

**Never add chemicals or fragrances into the condensate tank** (see chapter »DESCRIPTION OF THE DRYER and EMPTYING THE CONDENSATE TANK«).

**The dryer uses a heat pump system to heat the air.**

**The system consists of a compressor and a heat exchanger.** When the dryer is started, compressor operation (the sound of flowing liquid) or flow of refrigerant may be louder as long as the compressor operates. This is not a sign of malfunction and it will not affect useful life of the dryer. In time and with use of the dryer this noise will become quieter.

The dryer is not intended for use by persons (including children) with physical or mental impairments, or persons with lacking experience and knowledge. These persons should be instructed about the use of the dryer by a person responsible for their safety.

**The warranty does not cover** consumables, minor deviations in colour, increased noise that results from appliance age and which does not affect the functionality of the dryer, and aesthetic defects on components, which do not affect the dryer's functionality and safety.

## **CHILD SAFETY**

### **Do not allow children to play with the dryer.**

Prevent your children and pets from entering the dryer drum.

Before closing the dryer door and running the programme, make sure there is nothing except laundry in the drum (e.g. if a child climbed into the dryer drum and closed the door from the inside).

**Activate the Child lock.** See chapter »STEP 4: SETTING THE EXTRA FUNCTIONS/Child lock«.

**Do not let children younger than three years to come near the tumble dryer, unless they are under constant supervision.**

**The dryer is made in compliance with all relevant safety standards.**

This dryer may be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they are supervised during the use of the appliance, if they have been provided relevant instructions regarding safe use of the dryer, and if they understand the hazards of inappropriate use. Make sure children do not play with the dryer. Children may not clean the dryer or perform any maintenance tasks without supervision.

 **WARNING: DANGER OF HOT SURFACE**


At higher drying temperatures, the door glass will heat up. Be careful to avoid burns. Make sure children do not play near the door glass.

**The back of the dryer may get very hot during operation. Wait for the dryer to cool down completely before touching its back side.**

If you open the dryer door during the drying process, the clothes may be very hot and there is a risk of burning.

Never stop the drying process before it is completed; if you do interrupt the cycle for any reason, be careful when removing the laundry from the drum as it is very hot. Quickly remove the laundry from the drum and spread it to allow it to cool down as quickly as possible.

## SAFETY

 **WARNING:** Only use the dryer to dry laundry that was washed with water. Do not dry any laundry that was washed or cleaned with flammable cleaners or substances (such as gasoline, trichloroethylene etc.) as this may result in an explosion.

If you have cleaned your clothes with industrial cleaners or chemical substances, **do not dry** them in the dryer.


The dryer is protected with an automatic switch-off system in case of overheating. This system will switch off the dryer if the temperature is too high.

If the net filter is clogged, the overheating automatic switch-off system may be activated. Clean the filter, wait for the dryer to cool down, and try running it again. If the dryer still fails to start, call a service technician.

# DESCRIPTION OF THE DRYER


## FRONT

- 1 Condensate tank
- 2 On/off button
- 3 Programme selector knob
- 4 Start/pause button
- 5 Control unit
- 6 Door
- 7 Net filter
- 8 Air vent
- 9 Heat pump filter
- 10 Rating plate

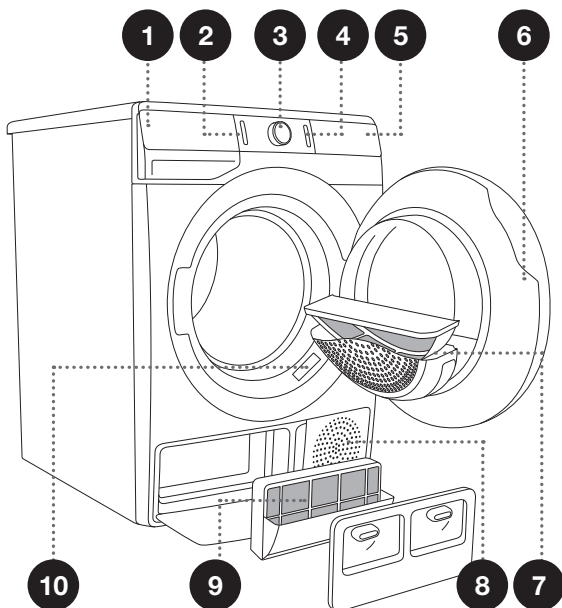

## BACK

- 1 Power cord
- 2 Condensate discharge hose
- 3 Adjustable feet
- 4 Junction box

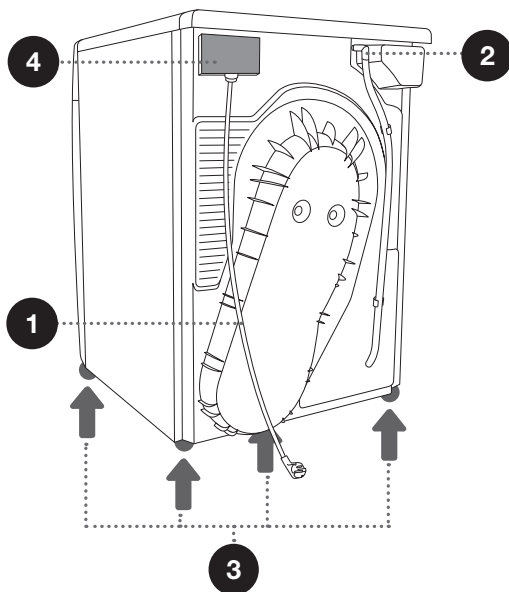



# TECHNICAL INFORMATION

Rating plate with basic information about the dryer is fitted on the front wall of the dryer door opening (see chapter »DESCRIPTION OF THE DRYER«).


|                                 |                  |
|---------------------------------|------------------|
| <b>Width</b>                    | 23½" (600 mm)    |
| <b>Height</b>                   | 33½" (850 mm)    |
| <b>Dryer depth (a)</b>          | 24½" (625 mm)    |
| <b>Depth with door closed</b>   | 25½" (653 mm)    |
| <b>Depth with door open (b)</b> | 44½" (1134 mm)   |
| <b>Weight</b>                   | 19.8 lb (9 kg)   |
| <b>Rated voltage</b>            | See rating plate |
| <b>Fuse</b>                     | See rating plate |
| <b>Nominal power</b>            | See rating plate |
| <b>Amount of refrigerant</b>    | See rating plate |
| <b>Refrigerant typ</b>          | R134a            |
| <b>Maximum load</b>             | See rating plate |

The product includes fluorinated greenhouse gases.  
 Refrigerant type: R134a  
 Amount of refrigerant: 0.30 kg  
 Total GWP (global warming potential): 1430  
 CO<sub>2</sub> equivalent: 0.429 t  
 Hermetically sealed.

Rating plate

|                          |   |   |
|--------------------------|---|---|
| TYPE: SP15/XXX           | MODEL: XXXXXX/X   |   |
| Art.No.: XXXXXX          | Ser.No.: XXXXXXXX   | IPX4  |
| 220-240 V ~ XX Hz ⚡ XX A |   |   |
| Pmax.: XXXX W            | RXXXX/XXX kg  | (X kg)  |
|                          |  |  |
|                          |   | MADE IN SLOVENIA  |

# CONTROL UNIT

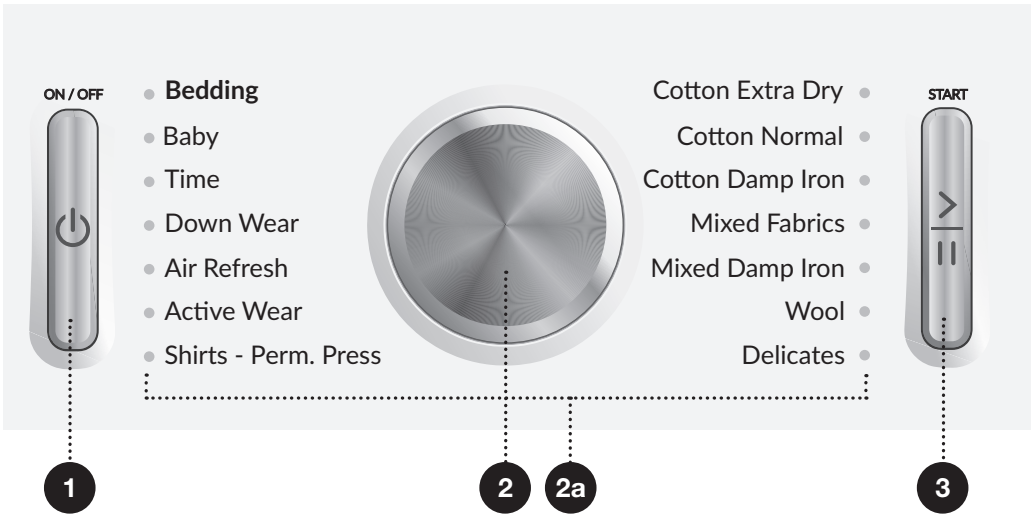

**1 ON/OFF BUTTON**  
Switching the dryer on and off.


Button lighting upon power on.

**2 PROGRAMME SELECTOR KNOB**  
**2a** The light next to the selected drying programme is lit.

**3 START/PAUSE BUTTON**  
Use this button to start or stop the programme.

Upon start-up or during pause, the button light will flash; when the programme is started and in progress, it will be lit continuously.



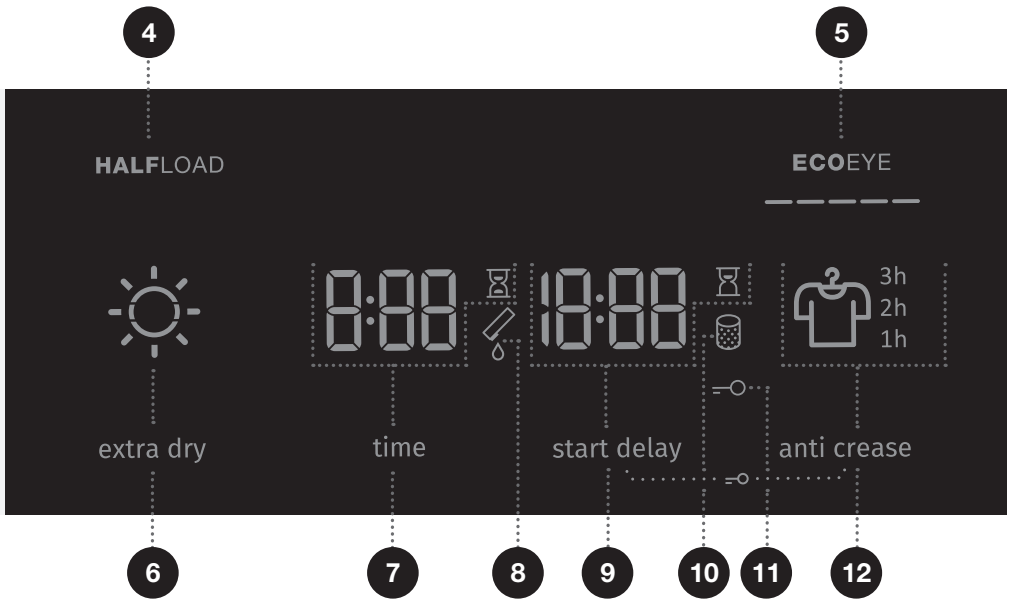

## 4 HALFLOAD

## 7 TIME (DRYING TIME)

 
Drying time setting option

## 10 CLEAN THE FILTER

☑ symbol lighting


**5 ECO EYE**  
Information on power consumption, according to the selected drying settings.

**8 EMPTY THE CONDENSATE TANK**   
symbol lighting

**11 CHILD LOCK**  symbol lighting  
Press the positions 9+12 and hold them for 3 seconds.

**6 EXTRA DRY**  
Lighting of the ☀ symbol when the function is selected

**9 START DELAY**  
Option to set a start delay

**12 ANTI CREASE**  
Lighting of the  and anti-crease time.

# INSTALLATION AND CONNECTION



**WARNING:** Install the clothes dryer according to the manufacturer's instructions and local codes.




**WARNING:** Clothes dryer installation must be performed by a qualified installer.




**WARNING:** To reduce the risk of severe injury or death, follow all installation instructions.



**WARNING:** Save these instructions.

 Remove all packaging. When removing the packaging, make sure not to damage the dryer with a sharp object.

# SELECTING THE ROOM

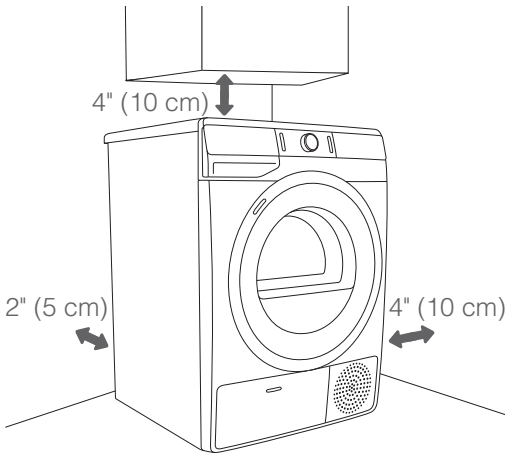

⚠ The dryer may not be in contact with a wall or adjacent furniture. For optimum dryer operation, we recommend observing the clearance from the walls as indicated in the figure. In case of failure to heed the required minimum clearance, the dryer may overheat.

⚠ Vents on the back wall and the air exhaust opening on the front side of the dryer should never be obstructed.

The room in which you will install the dryer should be sufficiently ventilated, with a temperature between 50°F (10°C) and 77°F (25°C). Dryer operation at a lower environment temperature may result in condensate accumulation in the dryer interior. Do not place the dryer into a place where there is danger of freezing. Frozen water in the condensate tank and pump may damage the dryer.

The dryer emits heat. Therefore, do not place it in a very small room, as the drying process may take longer due to limited amount of available air.

Lighting in the room should be sufficient to allow reading the information on the display unit on the control panel.



**WARNING:** Appliances are not intended to be installed in a

closet.


# DRYER PLACEMENT

If you also have a dryer of corresponding (same) dimensions, it can be placed on top of the washing machine; in this case, vacuum feet must be used. Alternatively, the dryer can be placed next to the washing machine (figures 1 and 3).

If your washing machine is smaller (minimum depth  $21\frac{1}{2}$ " (545 mm)) than your dryer, then the dryer support has to be purchased extra (figure 2). The supplied vacuum feet must be used; they are designed to prevent the dryer from slipping. It is essential to use the vacuum feet! Additional equipment (dryer support (a), vacuum feet (b) and wall fixing bracket (c)) can be purchased at the service centre.

The surface on which the appliance is placed should be clean and level.


Washing machine onto which you intend to place the dryer should be able to hold the weight of the dryer (see chapter »DESCRIPTION OF THE DRYER/Technical information«).

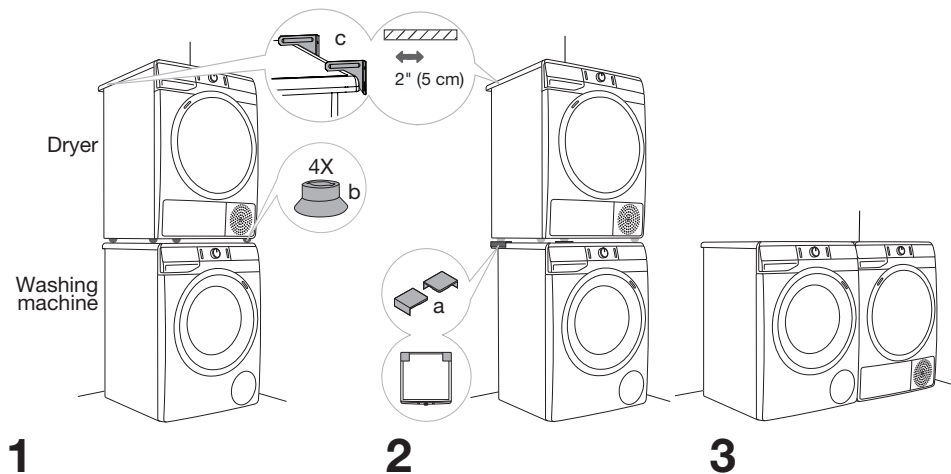

☀ Stacking kit is in each dryer.

☀ At least two persons are required to install the tumble dryer on top of a washing machine.

## Opening the dryer door (bird's-eye view)

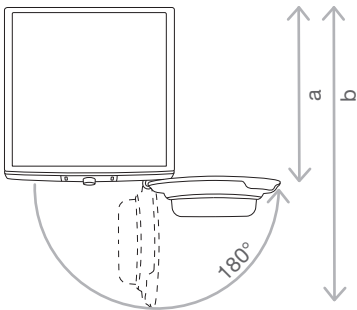


See chapter »DESCRIPTION OF THE DRYER/ Technical information«.

a =  $24\frac{1}{2}$ " (625 mm)

b =  $44\frac{1}{2}$ " (1134 mm)

⚠ Do not place the dryer behind lockable or sliding door, or door with a hinge on the opposite side of the dryer door hinge. Install the dryer in such way that the door can always be freely opened.


⚠ Do not place the dryer on a carpet with long fibres as this may impede air circulation.

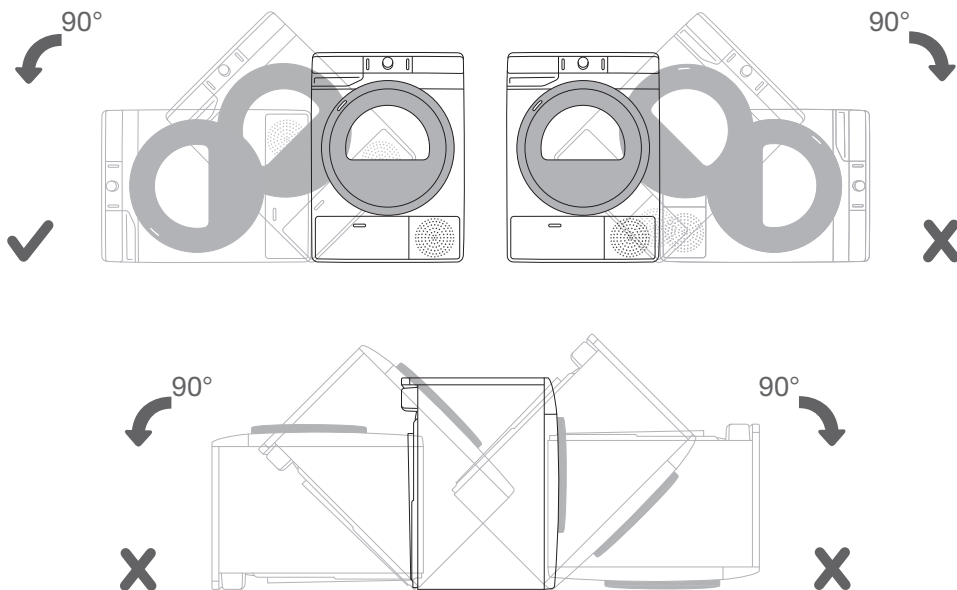

⚠ After installation, wait for 24 hours without moving the appliance before using it for the first time. If the dryer has to be laid down on one of the sides during transport or servicing, place it with its left side, viewing from the appliance front, downwards.

# ADJUSTING THE DRYER FEET

Level the dryer in longitudinal and traverse direction by rotating the adjustable feet which allow levelling by  $\pm 1/2$ " ( $\pm 1$  cm). Use a spirit level and spanner No. 22.

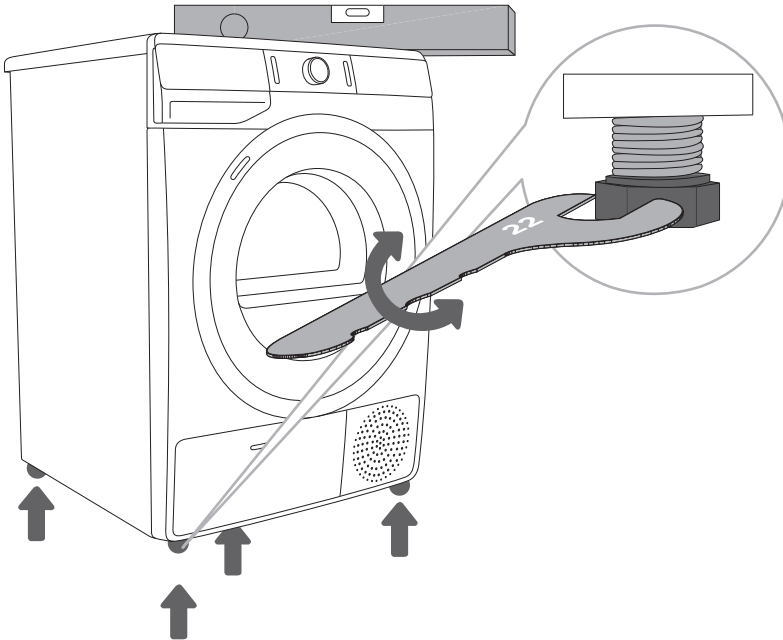

⚠ Floor on which the dryer is placed must have a concrete base. It should be clean and dry; otherwise, the dryer may slide. Also clean the adjustable feet.


⚠ The dryer must stand level and stable on a solid base.

⚠ Incorrect levelling of the dryer with the adjustable legs may cause vibration, appliance sliding across the room, and loud operation. Incorrect levelling of the dryer shall not be subject to warranty.


⚠ Sometimes, unusual or louder noise may appear during appliance operation; these are mostly the result of improper installation.

# DRAINING THE CONDENSATE

The moisture from the laundry is extracted in the condenser unit and accumulated in the condensate tank.


During the drying process, an indicator light (symbol  (8) is lit on the display unit) warns when the condensate tank is full and needs to be emptied.


To avoid emptying the condensate tank, run the condensate discharge hose located at the back of the appliance directly into a drain.

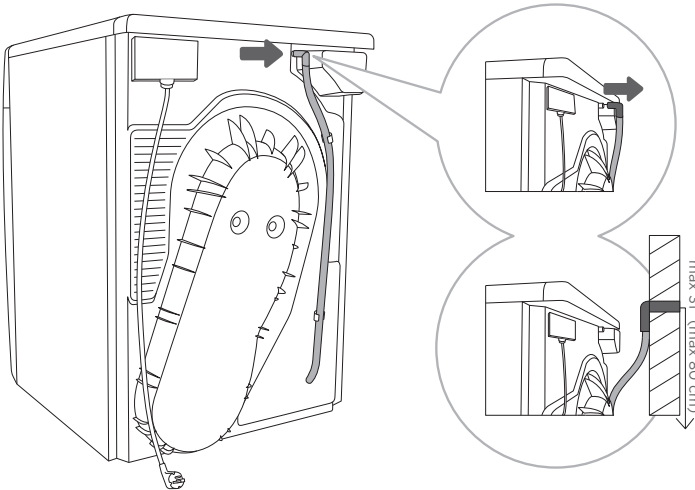


.....  
**1** Release the hose from the holder on the back wall of the dryer (left hand side, below the top cover).  
.....

**2** Run the hose into a drain at a height of no more than 31" (80 cm) from the floor.

 If you decide to run the condensate drain hose into a drain, make sure the hose is securely fastened. This will prevent any water spillage which could result in unexpected damage.

 Always use the hoses supplied with the dryer.

## CONNECTING TO THE POWER MAINS

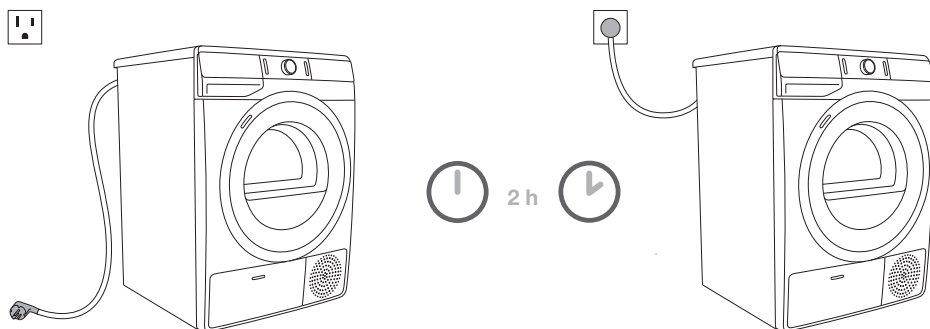

**⚠ After installation, the dryer should stand still for two hours before it is connected to the power mains; this allows the dryer to stabilize.**

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Connect the dryer to a grounded power outlet. After installation, the wall outlet should be freely accessible. The outlet should be fitted with an earth contact (in compliance with the relevant regulations).

Information on your dryer is indicated on the rating plate (see chapter »DESCRIPTION OF THE DRYER/Technical information«).

**⚠ We recommend using over-voltage protection to protect the appliance in case of a lightning strike.**

**⚠ The dryer may not be connected to the power mains using an extension cord.**

⚡ Do not connect the tumble dryer to an electrical outlet intended for an electric shaver or a hair dryer.

⚡ Any repair and maintenance pertaining to safety or performance should be done by trained experts.

⚡ A damaged power cord may only be replaced by a person authorized by the manufacturer.




# ELECTRICAL INSTALLATION

**⚠** The receptacle on the rear of the machine is designed to accommodate washers **ONLY** (rated 208–240 V.) To use this receptacle, you must use the ready-fitted plug supplied with the washing machine or an equivalent. Washers rated 208–240 V have two internal fuses of 15 A each. The machine should only be connected to a grounded wall socket.

**⚠** This appliance must be properly grounded. Refer to the “Important Safety Instructions” for grounding instructions. The power supply cord must be grounded. If the machine is to be used in a wet area, the supply must be protected by a residual current device. Connection to a permanently wired supply point must be made only by a qualified electrician. As supplied: Single-phase, 230 V, 60 Hz, 2500 W heater rating 30 A circuit required.

**⚡** Do not connect the machine to the mains electricity supply by an extension lead.

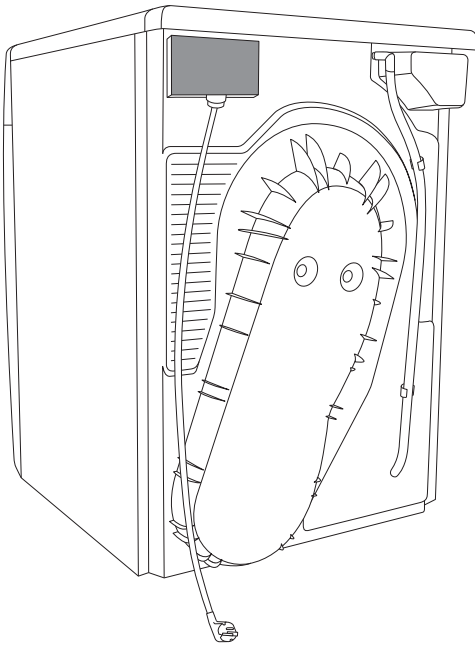

# ELECTRICAL CONNECTIONS


 Read the Electrical requirements and grounding instructions before connecting the tumble dryer.

Electric models of the dryer are manufactured for a 3-wire connection system. The dryer frame is grounded by a link to the neutral conductor on the dryer terminal block. If local codes do not permit grounding through the neutral, the grounding link from the terminal block must be removed and a separate ground wire must be used.

Only a 4-conductor cord shall be used when the appliance is installed in a location where grounding through the neutral conductor is prohibited. Grounding through the neutral conductor is prohibited for new branch-circuit installations, mobile homes, recreational vehicles, and areas where local codes prohibit grounding through the neutral conductors. The grounding link on the dryer must be removed for all 4-wire installations.

These Electrical Connection instructions provide for installing the dryer in the following situations: 3-wire connections where local codes permit grounding through the neutral, 3-wire connections with a separate grounding connector where local codes do not permit grounding through the neutral, and 4-wire connections.

Each of the above connections can be made with an approved power supply cord or by direct wiring. Each connection instruction identifies the appropriate Power Supply Cord and covers requirements for direct wiring.

 In Canada, the dryer is delivered ready-fitted with a four-prong plug intended for connection to a single-phase supply.

# MOVING AND TRANSPORT AFTER INSTALLATION

After every drying cycle, a small amount of condensed water will remain in the dryer. Switch on the dryer and choose one of the programmes, then let the appliance operate for approximately half a minute. This will pump out the remaining water and prevent damage to the dryer during transport. If the dryer cannot be transported in the upright position, tilt it to the left side.

**⚠ After transport, the dryer should be left to stand still for at least two hours before it is connected to the power mains. The appliance should be installed and connected by a trained technician.**

💡 If the appliance was not transported in compliance with the instructions, the dryer should be left to stand still at least 24 hours before it is reconnected to the power mains. Failure to do so may result in a heat pump failure which shall not be covered by the warranty. Be careful not to damage the cooling system (see chapter »INSTALLATION AND CONNECTION/ Dryer placement«).


**⚠ Carefully read the instructions for use before connecting the dryer. Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty.**

💡 The belt may only be replaced by a service technician authorized by the manufacturer, who can supply the original spare part with the code OPTIBELT EPH 1906, code 104265; OPTIBELT 8 EPH 1941, code 160165; POLY-V 7PH 1956 HUTCHINSON, code 562038; HUTCHINSON 8 PHE 1942, šifra 270313 (depending on the model).


# BEFORE USING THE APPLIANCE FOR THE FIRST TIME

Make sure the dryer is disconnected from the power mains; then, open the door by pulling the left side of the door towards you (figures 1 and 2).


Before using the dryer for the first time, clean the dryer drum using a soft damp cotton cloth and water (figure 3).

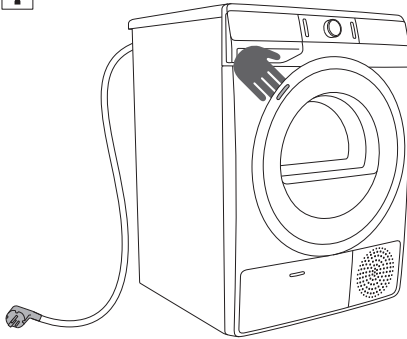


1

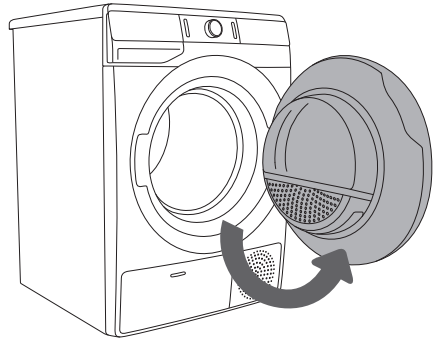

2

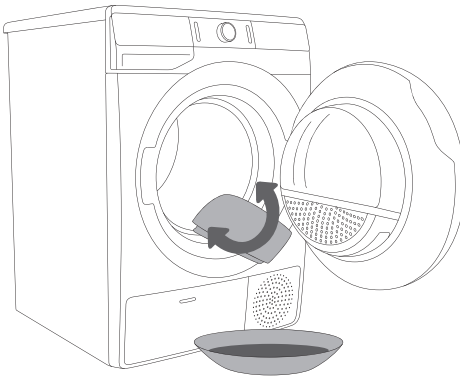

























3

 Do not use any solvents or cleaning agents that could damage the dryer (please observe the recommendations and warnings provided by the manufacturers of the cleaning agents).


# DRYING PROCESS, STEP BY STEP (1 - 6)

## STEP 1: HEED THE LABELS ON THE LAUNDRY

|  |   |   |  |   |  |
|--|---|---|--|---|--|
| <b>Cotton Normal wash;<br/>Sensitive laundry</b> | Max. washing temperature<br>EXTRA HOT<br><br> | Max. washing temperature<br>HOT<br><br> | Max. washing temperature<br>WARM<br><br>           | Hand wash only<br>COLD<br>   | Do not wash<br> |
| <b>Bleaching</b>                                 | Bleaching in cool water<br>  |   | Bleaching not allowed<br>   |   |  |
| <b>Dry cleaning</b>                              | Dry cleaning with all agents<br>   | Petroleum solvent<br>R11, R113<br>   | Dry cleaning in kerosene, pure alcohol, and in R113<br>   | Dry cleaning not allowed<br> |  |
| <b>Ironing</b>                                   | Hot ironing, max. HIGH temperature<br>   | Hot ironing, max. MEDIUM temperature<br>   | Hot ironing, max. LOW temperature<br>   | Ironing not allowed<br>      |  |
| <b>Drying</b>                                    | Dry flat (place on a flat surface)<br>   | Drip dry<br><br><br>Line dry<br>     | High temperature<br><br><br>Low temperature<br> | Do not tumble dry<br>       |  |

## STEP 2: PREPARING FOR THE LAUNDRY DRYING PROCESS

1. Sort the laundry by type and thickness of the fabric (see PROGRAMME TABLE).
2. Close the buttons and zips, tie any ribbons, and turn the pockets inside out.
3. Place very sensitive clothes in a special-purpose laundry bag.  
(The special-purpose laundry bag is available as an optional accessory.)

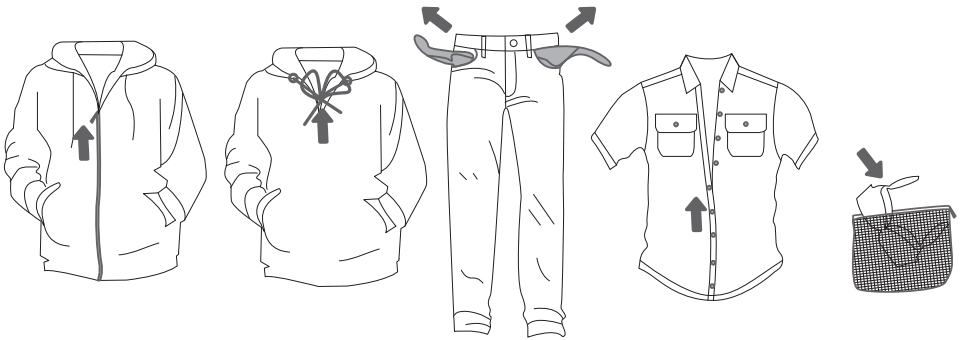


**Drying laundry made of particularly delicate fabrics that may be deformed is not recommended. The following types of laundry may not be dried in the dryer as this may cause your garments to deform:**

- leather garments and other leather products;
- garments that are waxed or treated in any other way;
- garments with major wooden, plastic, or metal parts;
- garments with spangles;
- garments with metal parts subject to rusting.

## DRYING IN A BASKET (DEPENDING ON THE MODEL)

⚠ Before the first drying cycle, remove the basket and all packaging from the drum.

Laundry may only be dried in the basket when using the timed drying programme. (The basket is available for purchase as an optional accessory at the service centre.)

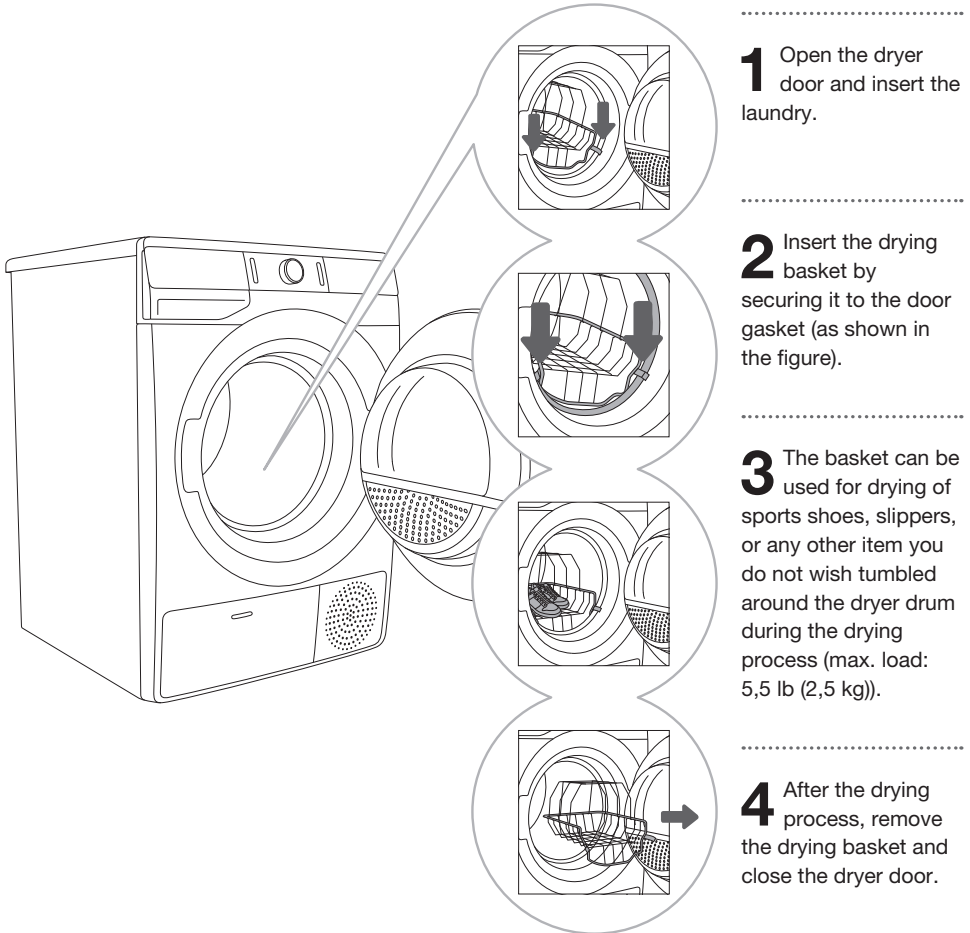

Only dry clean sports shoes or slippers that have been wrung just enough to prevent water from dripping from them.


As the drum rotates, the laundry basket will be still. Therefore, make sure the items you are drying in the basket are not in contact with the drum, as this could result in damage to the item and the dryer.

# SWITCHING ON THE DRYER

Connect the dryer to the power mains by plugging in the power cord.  
Press the (1) **ON/OFF** button to switch on the dryer (figure 1).

With some models, the dryer drum is lit as well (figure 2).  
(The light in the dryer drum is not suitable for any other use.)




⚠ The light in the dryer drum may only be replaced by the manufacturer, a service technician or an authorized person.

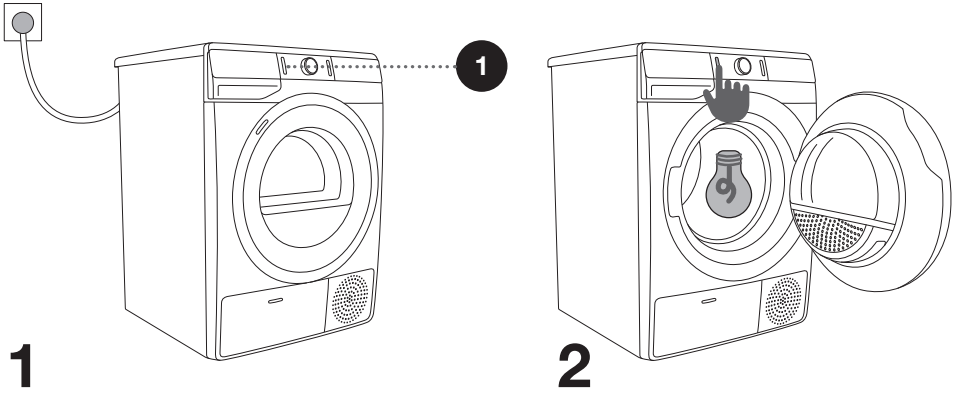



# LOADING THE DRYER

Open the dryer door by pulling the left side of the door towards you (figure 1).  
Insert the laundry into the drum (after making sure the drum is empty) (figure 2).  
Close the dryer door (figure 3).

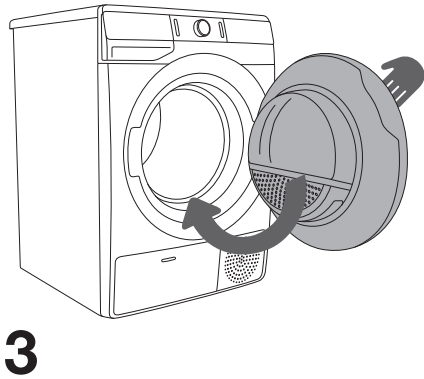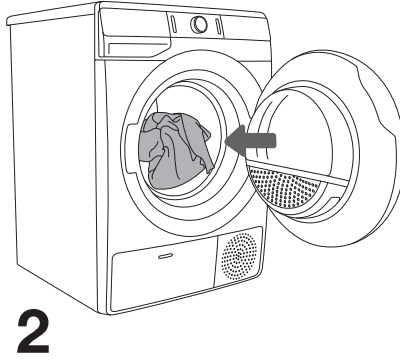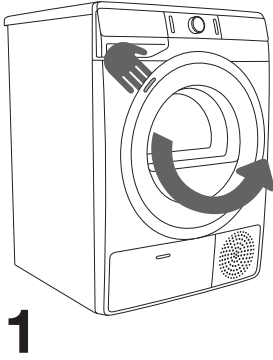

⚠ Do not insert laundry into the dryer if it has not been wrung or spun (recommended minimum spinning cycle: 800 rpm).



Do not overload the drum! See PROGRAMME TABLE and observe your nominal load as indicated on the rating plate.

If the dryer drum is overloaded, the laundry will be more wrinkled and perhaps unevenly dried.

⚠ When drying larger items (bedding, towels, tablecloths etc.), loosen them and then insert them into the dryer drum.

## STEP 3: CHOOSING THE DRYING PROGRAMME

Choose the **programme** by rotating the programme selector knob (2) to the left or to the right (depending on the type of laundry and the desired level of dryness). See PROGRAMME TABLE. When you select the drying programme, the light (2a) next to the selected drying programme lights up.

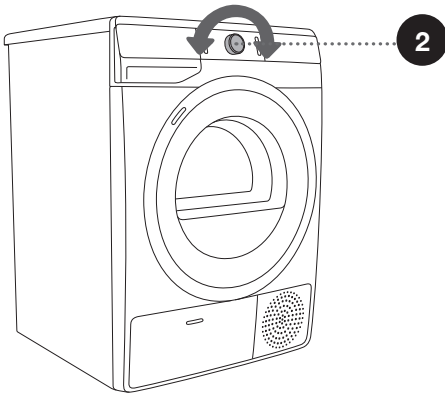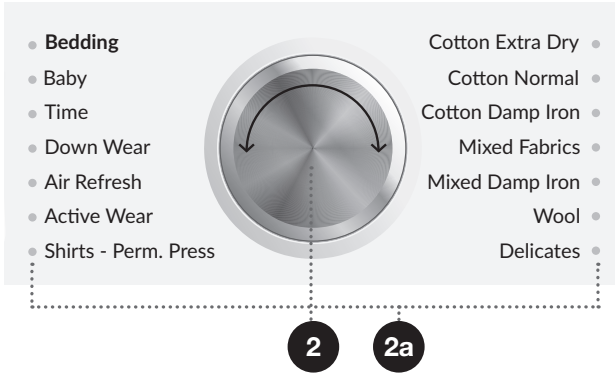


⚠ The programme selector knob (2) will not rotate automatically during operation.

# PROGRAMME TABLE

| Programme Dryness levels             | Max. load       | Programme description  |
|--------------------------------------|-----------------|--|
| Cotton Extra Dry (Cupboard dry)      | 19,8 lb (9 kg)  | Use this programme for thicker non-sensitive cotton laundry. After drying, it will be dry and ready to be stored in the cupboard.  |
| Cotton Normal                        | 19,8 lb (9 kg)  | Use this programme for thicker non-sensitive cotton laundry of approximately the same thickness. After drying, it will be dry.   |
| Cotton Damp Iron (Moist for ironing) | 19,8 lb (9 kg)  | Use this programme for non-sensitive cotton laundry. After drying, it will be ready for ironing.   |
| Mixed Fabric (Cupboard dry)          | 7,7 lb (3,5 kg) | Use this programme for sensitive laundry made of a mixture of synthetic and cotton fibres. After the drying cycle, the laundry will be dry.  |
| Mixed Damp Iron (Moist for ironing)  | 7,7 lb (3,5 kg) | Use this programme for sensitive laundry made of a mixture of synthetic and cotton fibres. After drying, the laundry will be slightly moist.   |
| Wool                                 | 4,4 lb (2 kg)   | This short programme is intended for softening or fluffing of clothes made of wool and silk, which have to be dried thoroughly according to manufacturer s instructions.   |
| Delicates                            | 2,2 lb (1 kg)   | Use this programme to dry highly delicate laundry made of synthetic fibres, which may be slightly moist after the drying process. We recommend using a special-purpose laundry bag.  |
| Shirts - Perm. Press                 | 4,4 lb (2 kg)   | Use this programme to dry shirts and blouses. Adjusted drum rotation prevents the laundry from creasing.   |
| Active Wear (Sportswear)             | 6,6 lb (3 kg)   | Use this programme for clothing with a membrane, for sportswear made of mixed materials, and breathable fabrics.   |
| Air Refresh                          | 4,4 lb (2 kg)   | In this programme, the heater is switched off. The programme is suitable for refreshing your laundry.  |
| Down Wear                            | 3,3 lb (1,5 kg) | Use this programme to dry textiles stuffed or padded with down (pillows, duvets, jackets etc.). Dry large items separately and use the EXTRA DRY function or the Time Programme if necessary.  |
| Time (Timed drying program)          | 8,8 lb (4 kg)   | Use this programme for non-sensitive laundry that is still slightly moist and has to be thoroughly dried. In the time programme, remaining moisture is not detected automatically. If the laundry is still damp after the programme is complete, repeat the programme; if it is too dry and therefore creased and rough to touch, the drying time you selected was too long. |
| Baby (Baby clothes)                  | 8,8 lb (4 kg)   | Use this programme to dry baby clothes. Clothes dried with this programme are usually normally dry.  |

| Programme Dryness levels | Max. load       | Programme description   |
|--------------------------|-----------------|---|
| <b>Bedding</b>           | 11 lb<br>(5 kg) | Use this programme for larger items. When the programme is complete, they will be dry. Adjusted drum rotation prevents the laundry from tangling. |

 The Cotton Normal program is intended for drying wet cotton laundry. It is the most energy-efficient program for drying cotton laundry. The energy usage data is determined using the Cotton Normal program cycle setting and medium dryness setting per CAN/CSA-C361-16 Standard and DOE test procedure methods specified at 10 CFR 430, Subpart B, Appendix D2.

## STEP 4: SELECTING EXTRA FUNCTIONS

☼ Activate/deactivate the function by pressing the desired position (before pressing the (3) START/PAUSE button).


Adjust the settings by pressing the relevant function button (before pressing the (3) START/PAUSE button).

Functions that can be changed or adjusted with the selected drying programme are partly lit (dimmed).

Certain settings cannot be selected with some programmes. Such settings will not be lit, and the button will flash when pressed (see FUNCTION TABLE).

Description of lighting of functions for the selected drying programme:

- **Lit** (Basic/preset setting);
- **Dimmed** (Functions that can be adjusted) and
- **Unlit** (Functions that cannot be selected).

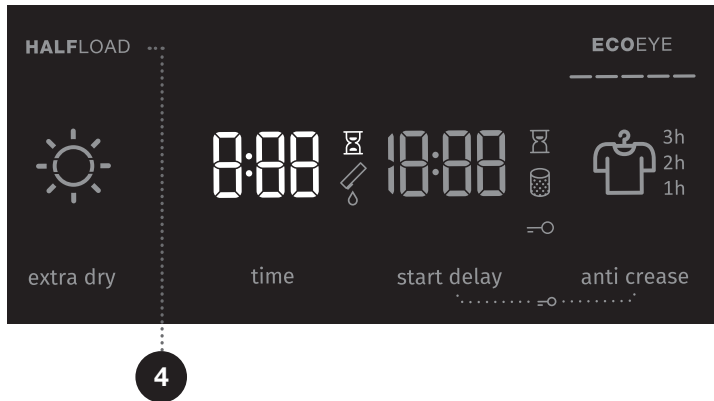

4

### HALFLOAD

Press the **HALFLOAD** position to choose between normal and half load, which also affects the displayed laundry drying time.

5

## ECO EYE


Displays information about how economical your dryer setting is.



**ECO EYE** displays power consumption based on the selected programme and any extra functions or settings. The more symbols are lit, the more economical setting you have selected and the lower power consumption.




**ECO EYE** displays a less economical drying setting with higher power consumption.

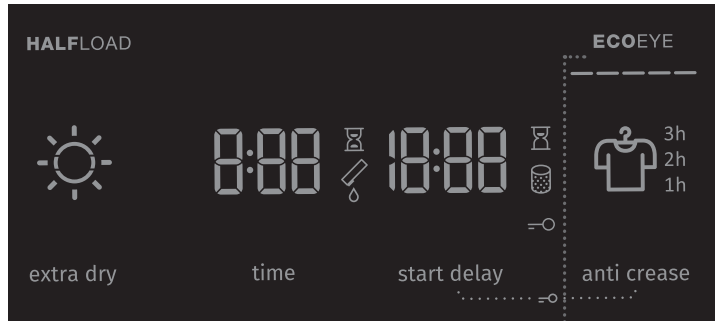

5

☀ The **ECO EYE** function offers control of the energy values of selected drying programmes and extra drying functions. By choosing different settings, the user can save on power consumption.

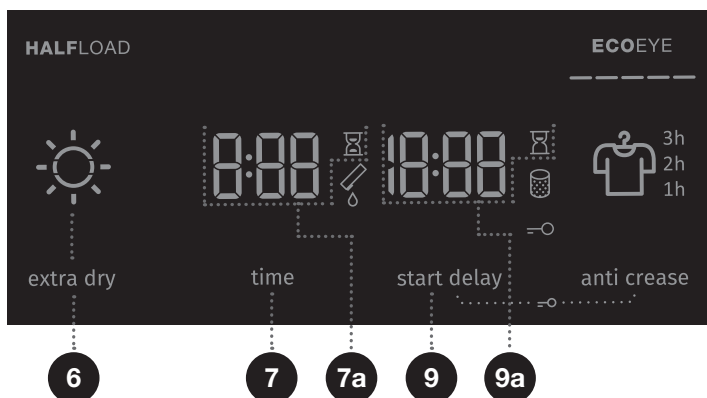

6

### EXTRA DRY

Press on the **EXTRA DRY** position to adjust the dryness level – the dryer the laundry, the longer the drying cycle. This setting can be adjusted before the start of the drying process. After the drying programme, this setting is not stored.

7

### TIME (DRYING TIME)

The symbol  (7a) is lit when the **DRYING TIME** is in progress/counting down.

9

### START DELAY

Desired time when the drying programme should start can be set in advance, which allows more flexibility.

Press the position (9) **START DELAY** to choose from 0 to 6 hours in 30-minute steps, and from 6 to 24 hours in 1-hour steps (9a) of start delay. When you press the (3) **START/PAUSE** button, the selected time is displayed. When the set delay time expires, the selected drying programme will start automatically.

To deactivate the start delay, press the position (9) **START DELAY** and hold it for 3 seconds.

In case of a power supply failure before the delay time has elapsed, press the **START/PAUSE** (3) button to resume the countdown.


The symbol  (9a) is lit when the **START DELAY** function (9) is selected.

12

## ANTI CREASE

If you do not intend or cannot remove the laundry from the dryer immediately after the completion of the drying programme, we recommend using the (12) **ANTI CREASE** function which has to be selected before the start of the drying process.

Press on the position (12) **ANTI CREASE** to choose between 1h, 2h, and 3h (12a) or deactivating this function. When you open the dryer door after the completion of the drying programme, the function is automatically deactivated.

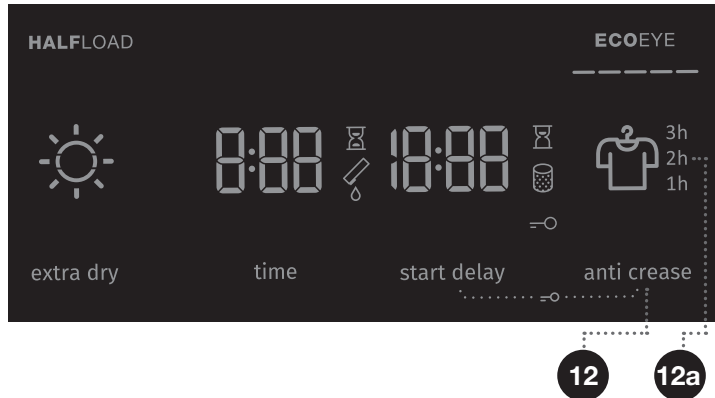






## CHILD LOCK

To activate or deactivate the child lock, press the positions (9) **START DELAY** and (12) **ANTI CREASE** simultaneously and hold them for at least 3 seconds until the symbol  $\text{=}\text{O}$  (11) lights up or goes off, respectively. If the child lock is activated, programme or additional functions cannot be changed. The child lock remains active after the dryer is switched off. Therefore, it has to be deactivated before a new programme can be selected. It can also be switched off during the drying process.

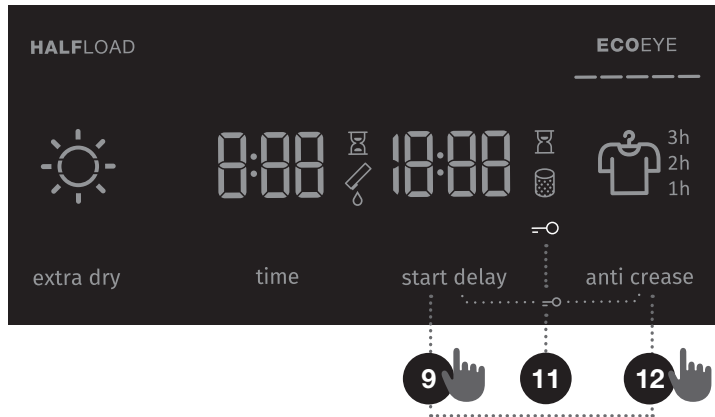

⚠ Some functions are not available and cannot be selected with certain programmes; an acoustic signal and a flashing light will indicate such cases (see EXTRA FUNCTION TABLE).

⚠ After disconnecting the dryer from the power mains, all settings will be reset to their default factory values, except for the acoustic signal loudness, anti-crease, and child lock setting.

# EXTRA FUNCTION TABLE


| Programme                            | HALFLOAD | EXTRA DRY | START DELAY | ANTI CREASE | TIME (DRYING TIME) |
|--------------------------------------|----------|-----------|-------------|-------------|--------------------|
| Cotton Extra Dry (Cupboard dry)      | •        | •         | •           | •           |                    |
| Cotton Normal                        | •        | •         | •           | •           |                    |
| Cotton Damp Iron (Moist for ironing) | •        | •         | •           | •           |                    |
| Mixed Fabric (Cupboard dry)          |          | •         | •           | •           |                    |
| Mixed Damp Iron (Moist for ironing)  |          | •         | •           | •           |                    |
| Wool                                 |          |           |             |             |                    |
| Delicates                            |          | •         | •           | •           |                    |
| Shirts - Perm. Press                 |          | •         | •           | •           |                    |
| Active Wear (Sportswear)             |          | •         | •           | •           |                    |
| Air Refresh                          |          |           |             |             | •                  |
| Down Wear                            |          | •         | •           | •           |                    |
| Time (Timed drying program)          |          |           |             | •           | •                  |
| Baby (Baby clothes)                  |          | •         | •           | •           |                    |
| <b>Bedding</b>                       | •        | •         | •           | •           |                    |

- Extra functions can be used

If your laundry is not dried to the desired dryness level, use extra functions or use a more suitable programme.


## STEP 5: STARTING THE DRYING PROGRAMME

Press the button (3) **START/PAUSE**.

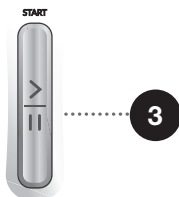

## STEP 6: END OF THE DRYING PROGRAMME

At the end of the drying programme, »End« will appear on the display unit **End**, the two red indicator lights will light up, and the (3) **START/PAUSE** button light and **ANTI CREASE** (12a) time indicator, if activated or selected, will flash.

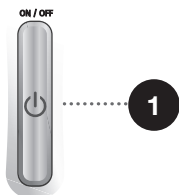

1. Open the dryer door.
2. Clean the filters (see section »CLEANING« ...).
3. Take the laundry from the drum.
4. Close the door!
5. Switch off the dryer (press the (1) **ON/OFF** button).
6. Empty the condensate tank.
7. Unplug the power cord from the outlet.

💡 After the end of the drying programme, immediately remove the laundry from the dryer to prevent it from creasing again.

# INTERRUPTIONS AND CHANGING THE PROGRAMME

## INTERRUPTIONS

### Interrupting the programme process

Press the (3) START/PAUSE button to pause/resume a programme.


To stop and cancel the drying programme, press the (3) START/PAUSE button and hold it for 3 seconds. The selected programme will stop, and the dryer will start to cool down. Cooling down time depends on the selected programme. After this process, the drying programme can be selected again.

### Open door

If the dryer door is opened during the drying process, the drying cycle will be interrupted. When the door is closed and the (3) START/PAUSE button is pressed, the drying will resume from the point at which it was interrupted.

**⚠ The dryer door will heat up during the drying process. Make sure you do not burn yourself when opening the dryer door.**

### Full condensate tank

When the condensate tank is full, the drying programme will pause (symbol  (8) will be lit up). Empty the condensate tank (see chapter »CLEANING AND MAINTENANCE/Emptying the condensate tank«).

Press the (3) START/PAUSE button to resume the drying programme from the point at which it was interrupted.

### Power supply failure

When power supply is resumed, the signal light on the (3) START/PAUSE button will flash. To resume the drying process, press the (3) START/PAUSE button.


## CHANGING THE PROGRAM/FUNCTIONS

Switch off the dryer by pressing the button (1) ON/OFF; then, switch it on again by pressing the button (1) ON/OFF and rotate the (2) programme selector knob to the desired programme, or choose extra functions.

Select another program/function and press the (3) START/PAUSE button again.

## ADDING LAUNDRY AFTER THE START OF THE PROGRAM

Open the dryer door and press the (3) **START/PAUSE** button. Insert the laundry and press the button (3) **START/PAUSE**.

 **When loading the laundry, make sure you do not burn yourself when you open the dryer door.**

Drying time may be extended.

## SAVING PERSONAL SETTINGS

Initial settings may be changed.

When the programme and additional functions are selected, you may store such combination by pressing the (3) **START/PAUSE** button and holding it for five seconds. An indicator light on the (3) **START/PAUSE** button and an acoustic signal will confirm your selection. **SC** (settings changed) will be displayed briefly on the display.

Press the (3) **START/PAUSE** button to start the drying process.

The changed combination will appear every time you switch on the dryer.

Follow the same procedure to change a previously saved combination.

## PERSONAL SETTINGS MENU

Switch on the dryer by pressing the (1) **ON/OFF** button. To open the personal settings menu, simultaneously press the positions (6) **EXTRA DRY** and (7) **TIME (DRYING TIME)** and hold them for 3 seconds. The symbols (9a) **START DELAY**, (7a) **DRYING TIME**, (10) **FILTER**, and (8) **CONDENSATE TANK** will be lit on the display unit. Number 1 will appear on the LED display, indicating the settings function. Rotate the programme selector knob (2) to the left or to the right to choose the function to change.

Press on the position (7) **TIME (DRYING TIME)** to confirm the desired functions and relevant settings. Press the position (6) **EXTRA DRY** to go back one step. If the desired settings are not selected in 20 seconds, the programme will automatically return to main menu.


Number 1 indicates **Acoustic signal volume** setting. Acoustic signal volume can be set at four levels (0 means the sound is off; 1 means that the button sound is activated; 2 means low volume, and 3 means high volume). Choose the volume level by rotating the programme selector knob (2) to the left or to the right. The lowest setting means that the acoustic signal is switched off.

Number 2 indicates reset of **Personal programme settings** to factory defaults.

# MAINTENANCE & CLEANING

**⚠ Before cleaning, make sure to switch off the dryer and disconnect it from the power mains (unplug the power cord from the outlet).**


The dryer is fitted with a **filtering system** consisting of several filters that prevent any impurities from entering the heat exchanger system.

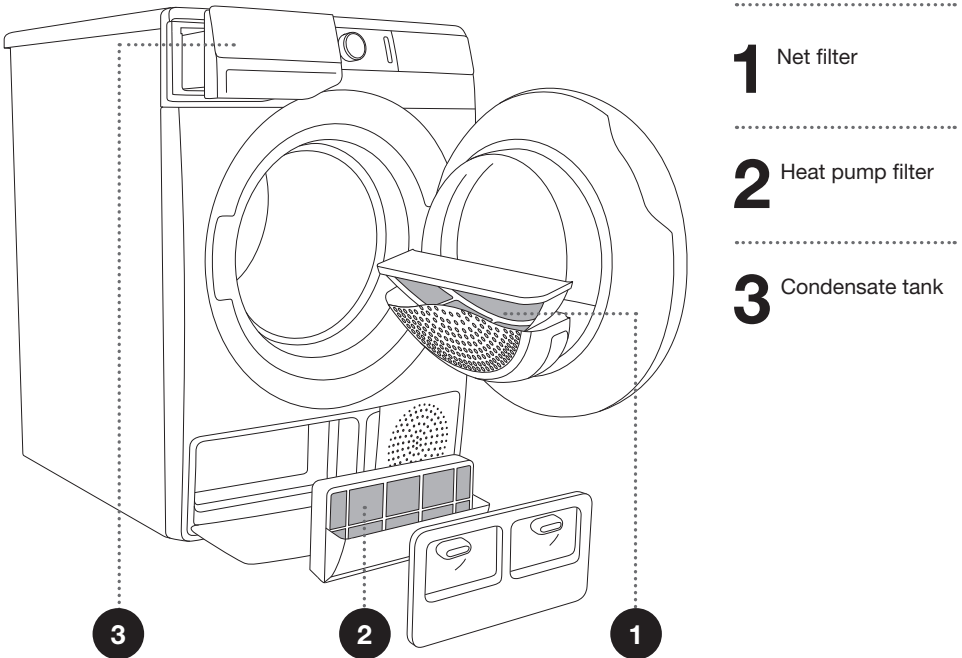

**⚡** The dryer may never be operated without the filters in place or with damaged filters, as excessive amount of accumulated fibres from the fabric could cause malfunction or failure of the dryer.

# CLEANING THE NET FILTER IN THE DOOR

☼ Clean the net filter after each drying cycle.

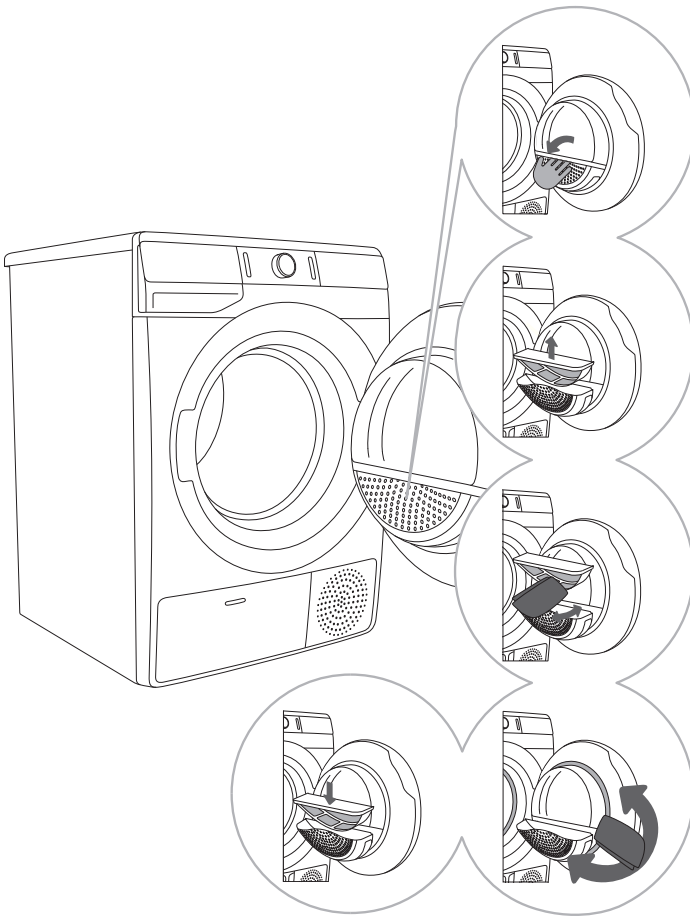

**1** Open the filter housing.

**2** Pull out the net filter.

**3** Gently scrape the filter to remove the lint, i.e. the lining of fibres and threads, with your hand or with a cloth.


**4** If necessary, clean the filter housing and door gasket as well.

**5** Insert the net filter and close the filter housing.

☼ Make sure you do not pinch your fingers with the filter cover.

# CLEANING THE HEAT PUMP FILTER

⚠ During cleaning, some water may be spilled. It is therefore recommended to place an absorbent cloth on the floor.

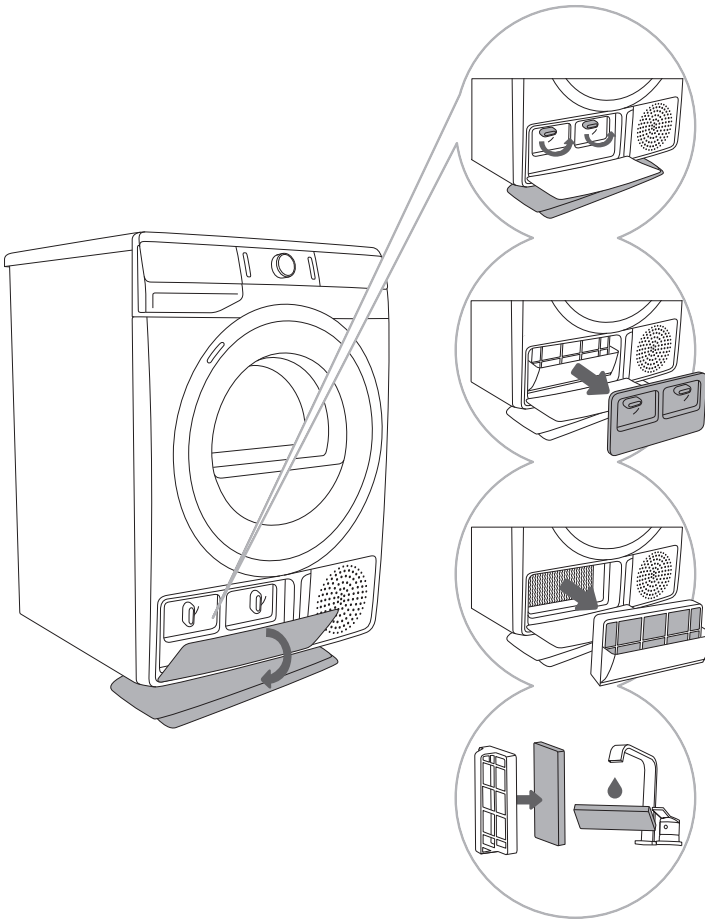

**1** Open the outer cover. Hold the levers on the inside cover and rotate them upwards. Remove the inside cover.

**2** Use the handle to pull out the heat pump filter.

**3** Push the foam part of the filter from the housing. Use a damp cloth to clean the heat pump filter housing.

**4** Wash the foam filter under running water and dry it before replacing it in the filter housing.

⚠ Insert the heat pump foam filter into the housing and close the outer cover (push it upwards toward the machine until it latches into place).

⚠ The heat pump filter has to be correctly inserted into its slot. Otherwise, the heat exchanger installed inside the dryer may be clogged or damaged.

⚠ Clean the foam filter at least after every five drying cycles.



# CLEANING OF THE HEAT EXCHANGER

⚠ Do not touch the inner metal parts of the heat exchanger with bare hands. Danger of injury on sharp parts. Use appropriate protection gloves when cleaning the heat exchanger.


⚠ Incorrect cleaning of the metal fins of the heat exchanger can permanently damage the tumble dryer. Do not press on the metal fins with hard objects like for example the plastic tube of a vacuum cleaner.

The dust and dirt in the metal fins of the heat exchanger can be cleaned with a vacuum cleaner and a soft brush attachment.

Access to the heat exchanger is possible, when the heat pump filter is removed as is described in the chapter »cleaning of heat pump filter«.

Without pressing, gently move the brush attachment only in the direction of the metal fins from top to bottom. Too much pressure can damage or bend the metal fins of the heat exchanger.


💡 We recommend you clean the heat exchanger at least every twelve months.

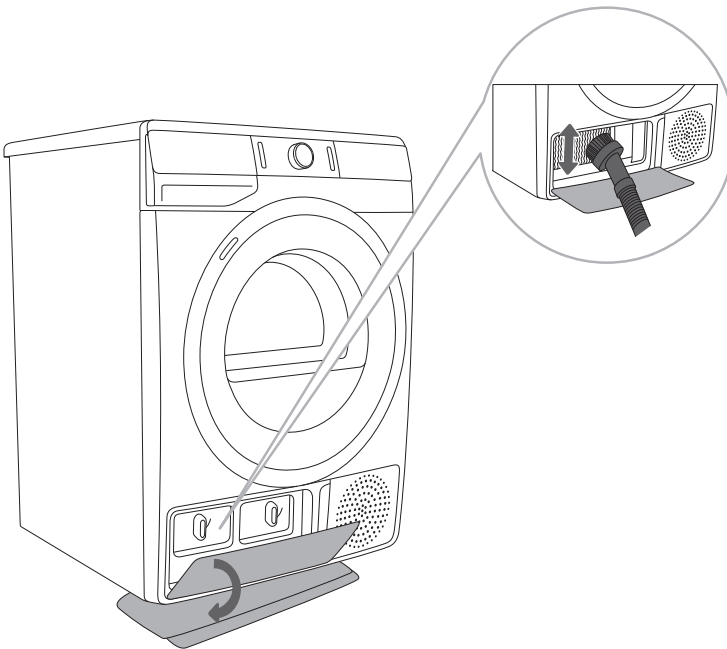

# EMPTYING THE CONDENSATE TANK

☼ Empty the condensate tank after each drying cycle.

If the condensate tank is full, the drying programme will be paused automatically. Symbol ☼ (8) will light up on the display unit, indicating that the condensate tank should be emptied.

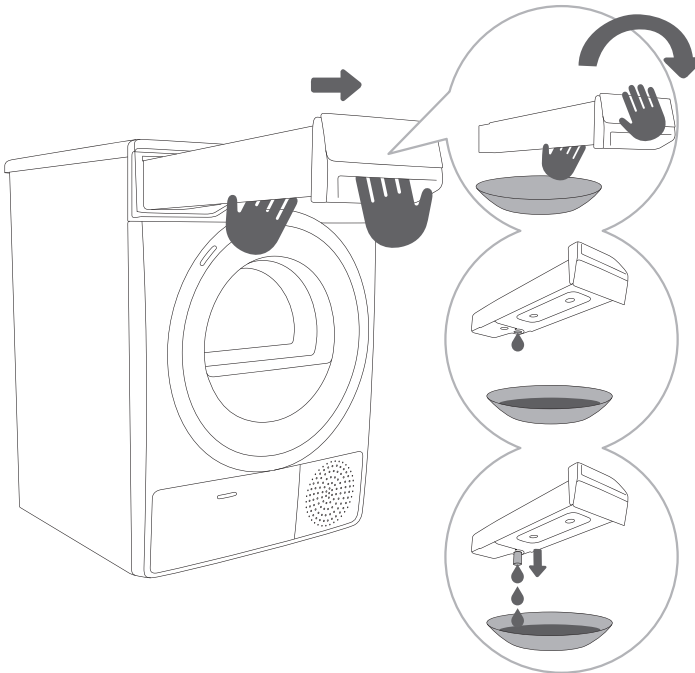

**1** Pull out the condensate tank from the dryer (using both hands as shown in the figure), then turn it upside down over a washbasin, sink, or any suitable vessel.

**2,3** Empty the condensate tank. Pull out the spout at the opening for easier emptying. Replace the condensate tank.

☼ Water from the condensate tank is not potable. If thoroughly filtered, it can be used for ironing.

⚠ Never add chemicals or fragrances into the condensate tank.

It is not necessary to empty the condensate tank if the drain hose is connected directly to a drain (see chapter »INSTALLATION AND CONNECTION/Draining the condensate«).

# CLEANING THE DRYER


**⚠ Always disconnect the dryer from the power mains before cleaning.**

Clean the dryer exterior using a soft damp cotton cloth.

**⚠ Do not use any solvents or cleaning agents that could damage the dryer (please observe the recommendations and warnings provided by the manufacturers of the cleaning agents).**

Wipe all parts of the dryer with a soft cloth until dry.

**⚡ Do not clean the dryer with a jet of water!**

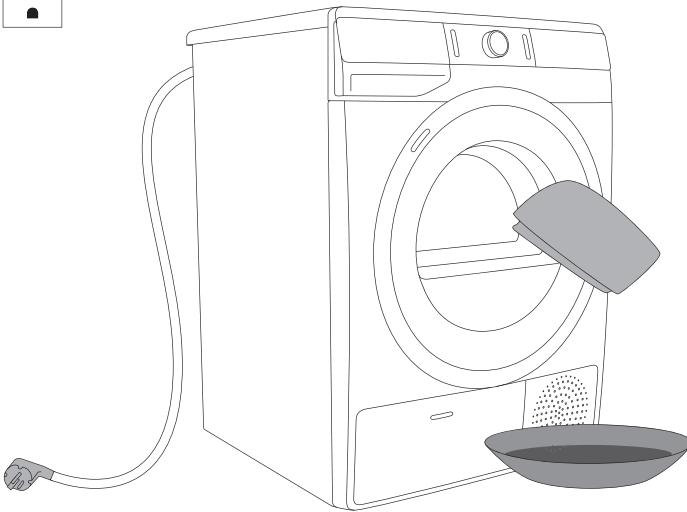


# TROUBLESHOOTING

## WHAT TO DO ...?

Disturbances from the environment (e.g. the power grid) may result in various error reports (see TROUBLESHOOTING TABLE). In such case:

- Switch off the dryer and wait at least one minute.
- Switch on the dryer and repeat the drying programme.
- Most errors during operation can be resolved by the user (see TROUBLESHOOTING TABLE).
- If the error persists, call an authorized service unit.
- Repairs may only be carried out by an adequately trained person.
- Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.


 

 
 The warranty does not cover the errors or failures resulting from disturbances from the environment (lightning strike, power grid failures, natural disasters etc.).





# TROUBLESHOOTING TABLE

| Problem/error   | Cause  | What to do?  |
|---|--|--|
| The machine will not start.   | <ul style="list-style-type: none"> <li>The main switch is not switched on.</li> </ul>  | <ul style="list-style-type: none"> <li>Check whether the main switch is on.</li> </ul>   |
|   | <ul style="list-style-type: none"> <li>There is no voltage in the power outlet.</li> </ul>   | <ul style="list-style-type: none"> <li>Check the fuse.</li> <li>Check if the power cord plug is correctly inserted into the power outlet.</li> </ul>   |
| There is voltage in the outlet, but the drum does not spin and the appliance does not work. | <ul style="list-style-type: none"> <li>Open the door.</li> </ul>   | <ul style="list-style-type: none"> <li>Check if the door is closed properly.</li> </ul>  |
|   | <ul style="list-style-type: none"> <li>The condensate tank is full.</li> </ul>   | <ul style="list-style-type: none"> <li>Empty the condensate tank (see chapter »CLEANING AND MAINTENANCE/Emptying the condensate tank«).</li> </ul>   |
|   | <ul style="list-style-type: none"> <li>Perhaps the <b>START DELAY</b> function was set.</li> <li>Programme was not started in accordance with the instructions.</li> </ul>                                 | <ul style="list-style-type: none"> <li>To deactivate the start delay option, press the position (9) <b>START DELAY</b> and hold for 3 seconds.</li> <li>Re-read the instructions for use again.</li> </ul>   |
| The appliance stops heating completely during a programme.                                  | <ul style="list-style-type: none"> <li>The net filter may be clogged. As a result, the temperature in the dryer rises, which in turn causes overheating, and therefore heating is switched off.</li> </ul> | <ul style="list-style-type: none"> <li>Clean the net filter (see chapter »CLEANING AND MAINTENANCE/Cleaning the net filter in the door«).</li> <li>Wait for the appliance to cool down, and try running it again. If the dryer still fails to start, call a service technician.</li> </ul> |
| A slight hitting noise appears.   | <ul style="list-style-type: none"> <li>If the dryer is out of use for a long period of time, the support elements are under stress at the same point.</li> </ul>   | <ul style="list-style-type: none"> <li>The noise will subside without any intervention.</li> </ul>   |
| The door opens during drying.   | <ul style="list-style-type: none"> <li>Excessive load on the door (too much laundry in the drum).</li> </ul>   | <ul style="list-style-type: none"> <li>Reduce the amount of laundry.</li> </ul>  |
| Unevenly dried laundry.   | <ul style="list-style-type: none"> <li>Laundry of varying types and thickness, or excessive amount of laundry.</li> </ul>  | <ul style="list-style-type: none"> <li>Make sure you have sorted the laundry by type and thickness, whether you have added a suitable amount of laundry to the drum, and whether you have selected a suitable programme (see PROGRAMME TABLE).</li> </ul>                                  |




| Problem/error                                     | Cause   | What to do?  |
|---|---|--|
| <b>Laundry not dried or drying takes too long</b> | <ul style="list-style-type: none"> <li>• Filters are not clean.</li> </ul>  | <ul style="list-style-type: none"> <li>• Clean the filters (see chapter »CLEANING AND MAINTENANCE«).</li> </ul>  |
|   | <ul style="list-style-type: none"> <li>• Dryer is placed in a closed room; room that is too cold; or room that is too small and the air overheats as a result.</li> </ul> | <ul style="list-style-type: none"> <li>• Make sure there is adequate supply of fresh air to the dryer; for example, open the door and/or window.</li> <li>• Check if the temperature in the room where the dryer is installed is too high or too low.</li> </ul>   |
|   | <ul style="list-style-type: none"> <li>• Laundry was not sufficiently wrung or spun.</li> </ul>   | <ul style="list-style-type: none"> <li>• If the laundry is still wet after the drying cycle, repeat the drying and select an appropriate drying programme (after cleaning the filters).</li> </ul>   |
|   | <ul style="list-style-type: none"> <li>• Amount of laundry dried in the appliance is too large or insufficient.</li> </ul>  | <ul style="list-style-type: none"> <li>• Use a suitable programme or extra functions.</li> </ul>   |
|   | <ul style="list-style-type: none"> <li>• Laundry (such as bedding) gets tangled into large balls.</li> </ul>  | <ul style="list-style-type: none"> <li>• Close the buttons or zippers on the laundry before drying. Select a suitable programme (e.g. the program Bedding).</li> <li>• After the drying process, loosen the laundry and select an additional drying programme (e.g. Time (Timed drying program)).</li> </ul> |
| <b>Drum lighting error</b>                        | <ul style="list-style-type: none"> <li>• There is no lighting when the dryer door is opened.</li> </ul>   | <ul style="list-style-type: none"> <li>• Disconnect the dryer from the power mains and call an authorized service unit.</li> </ul>   |

Errors indicated on the display unit may include the following:

| Problem/error | Indication on the display unit and description of error  | What to do?          |
|---------------|--|----------------------|
| <b>E0</b>     | <b>Control unit failure</b><br>       | Call service centre. |
| <b>E1</b>     | <b>Temperature sensor failure</b><br> | Call service centre. |
| <b>E2</b>     | <b>Communication error</b><br>        | Call service centre. |
| <b>E3</b>     | <b>Pump error</b><br>                 | Call service centre. |


| Problem/error | Indication on the display unit and description of error  | What to do?  |
|---------------|--|--|
| E4            | <b>System overheating</b><br>   | Clean the filter. See chapter »CLEANING AND MAINTENANCE/Cleaning the net filter in the door« or call a service technician. |
| E6, E7, E8    | <b>Control unit failure</b><br><br><br> | Disconnect the tumble dryer from the power supply.<br>Call service centre.   |

Warnings indicated on the display unit may include the following:

| Warning   | Indication on the display unit and description of warning  | What to do?  |
|---|--|--|
|  | <b>Condensate tank warning</b><br>      | Empty the condensate tank before resuming the programme (see chapter »CLEANING AND MAINTENANCE/Emptying the condensate tank«). |
| »PF«  | <b>Power supply failure warning</b><br> | Drying interrupted due to power supply failure.<br>Press the (3) START/PAUSE button to restart or resume the drying programme. |

Write down the error code (e.g. E0, E1), switch off the dryer, and call the nearest authorized service (call centre).

## Sounds

 In the initial drying stage or during drying, the compressor and the heat pump cause noise; this, however, does not affect the tumble dryer operation.

**Humming sound:** this is the sound of the compressor unit. The level of noise depends on the program and the drying stage.

**Whirring sound:** from time to time, the compressor unit is ventilated.

**Pumping sound:** the pump is pumping the condensate into the condensate tank.

**Clicking sound:** clicking noise is caused by automatic cleaning of the heat exchanger (compressor).

**Rattling sound:** can be heard during drying if laundry has any hard parts (buttons, zippers etc.).

# SERVICING



## Before calling a service technician

When you contact a service centre, please state your dryer's type (1), code/ID (2), model number (3), and serial number (4).

Type, code/ID, model, and serial number are indicated on the rating (type) plate located on the front side of the dryer door opening.

⚠ In case of a failure, only use approved spare parts by authorized manufacturers.

⚠ Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.

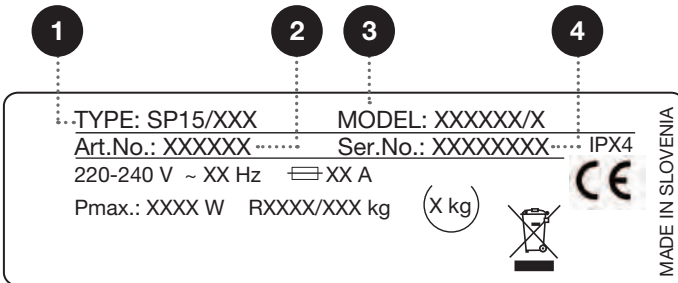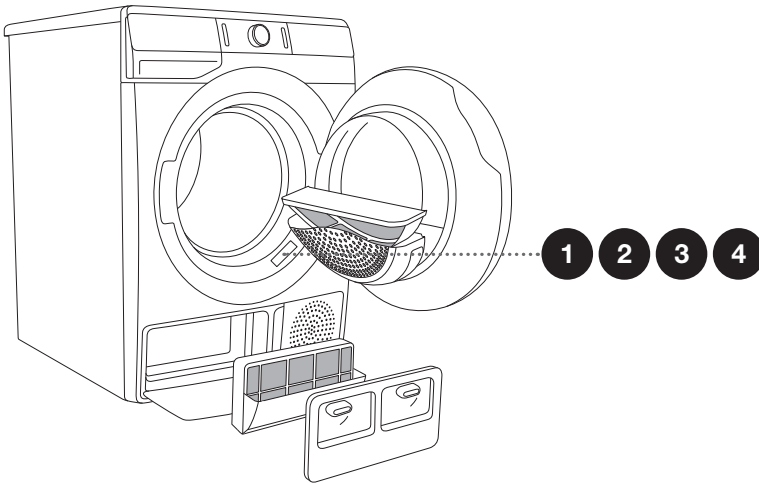



# TIPS FOR DRYING AND ECONOMIC USE YOUR DRYER

The most economical way of drying is to dry the recommended amount of laundry in each batch (see PROGRAMME TABLE).

Drying laundry made of particularly delicate fabrics that may be deformed is not recommended.

Use of conditioner in the washing cycle is not necessary as the laundry is soft and smooth after drying in the dryer. Drying time will be shorter and power consumption will be lower if the garments are thoroughly wrung or spun before drying. By selecting the appropriate drying programme, you will avoid over-drying your laundry and problems with ironing or shrinkage of fabric.

Regular cleaning of the filters will lead to optimum drying time and minimum power consumption.

When drying smaller amounts of laundry or individual garments, the sensor may not perceive the actual level of moisture in the laundry. In such cases, it is recommended to dry smaller items or amounts with programmes for dryer laundry or with the timed programme.

# DISPOSAL

**Packaging** is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. To this end, packaging materials are labelled appropriately.



**The symbol** on the product or its packaging indicates that the product should not be treated as normal household waste. Take the product to an authorized collection centre for waste electric and electronic equipment processing.

When **disposing** of the dryer at the end of its useful life, remove all power cords, and destroy the door latch and switch to prevent the door from locking or latching (child safety).

Correct **disposal** of the product will help prevent any negative effects on the environment and health of people, which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

## LOW STANDBY MODE

If you do not run a programme or do anything else after switching on the dryer, the dryer will switch off automatically after 5 minutes to save energy. Indicator light on the (3) START/PAUSE button will flash.

The display will be reactivated if you rotate the programme selector knob or press the (1) ON/OFF button or open the dryer door. If you do not do anything for 5 minutes after the end of the programme, the display unit will be switched off as well. Indicator light on the (3) START/PAUSE button will flash.

|  |       |
|--|-------|
| $P_o$ = weighted power when off [W]        | < 0,5 |
| $P_I$ = weighted power when in standby [W] | < 0,5 |
| $T_I$ = standby time [min]                 | 5,00  |

⚡ Low mains voltage and different drying loads may affect the drying time; the remaining time displayed is adjusted accordingly during the drying process.

*We reserve the right to any changes and errors in the instructions for use.*

BREDA

SP15 L1 ADVANCED  
HP ND USA



864474

en (05-21)