

AMANA®


ELECTRIC RANGE

MODELS:

ACR4303MFB8 (Black)

ACR4303MFW8 (White)


COOKTOP PARTS

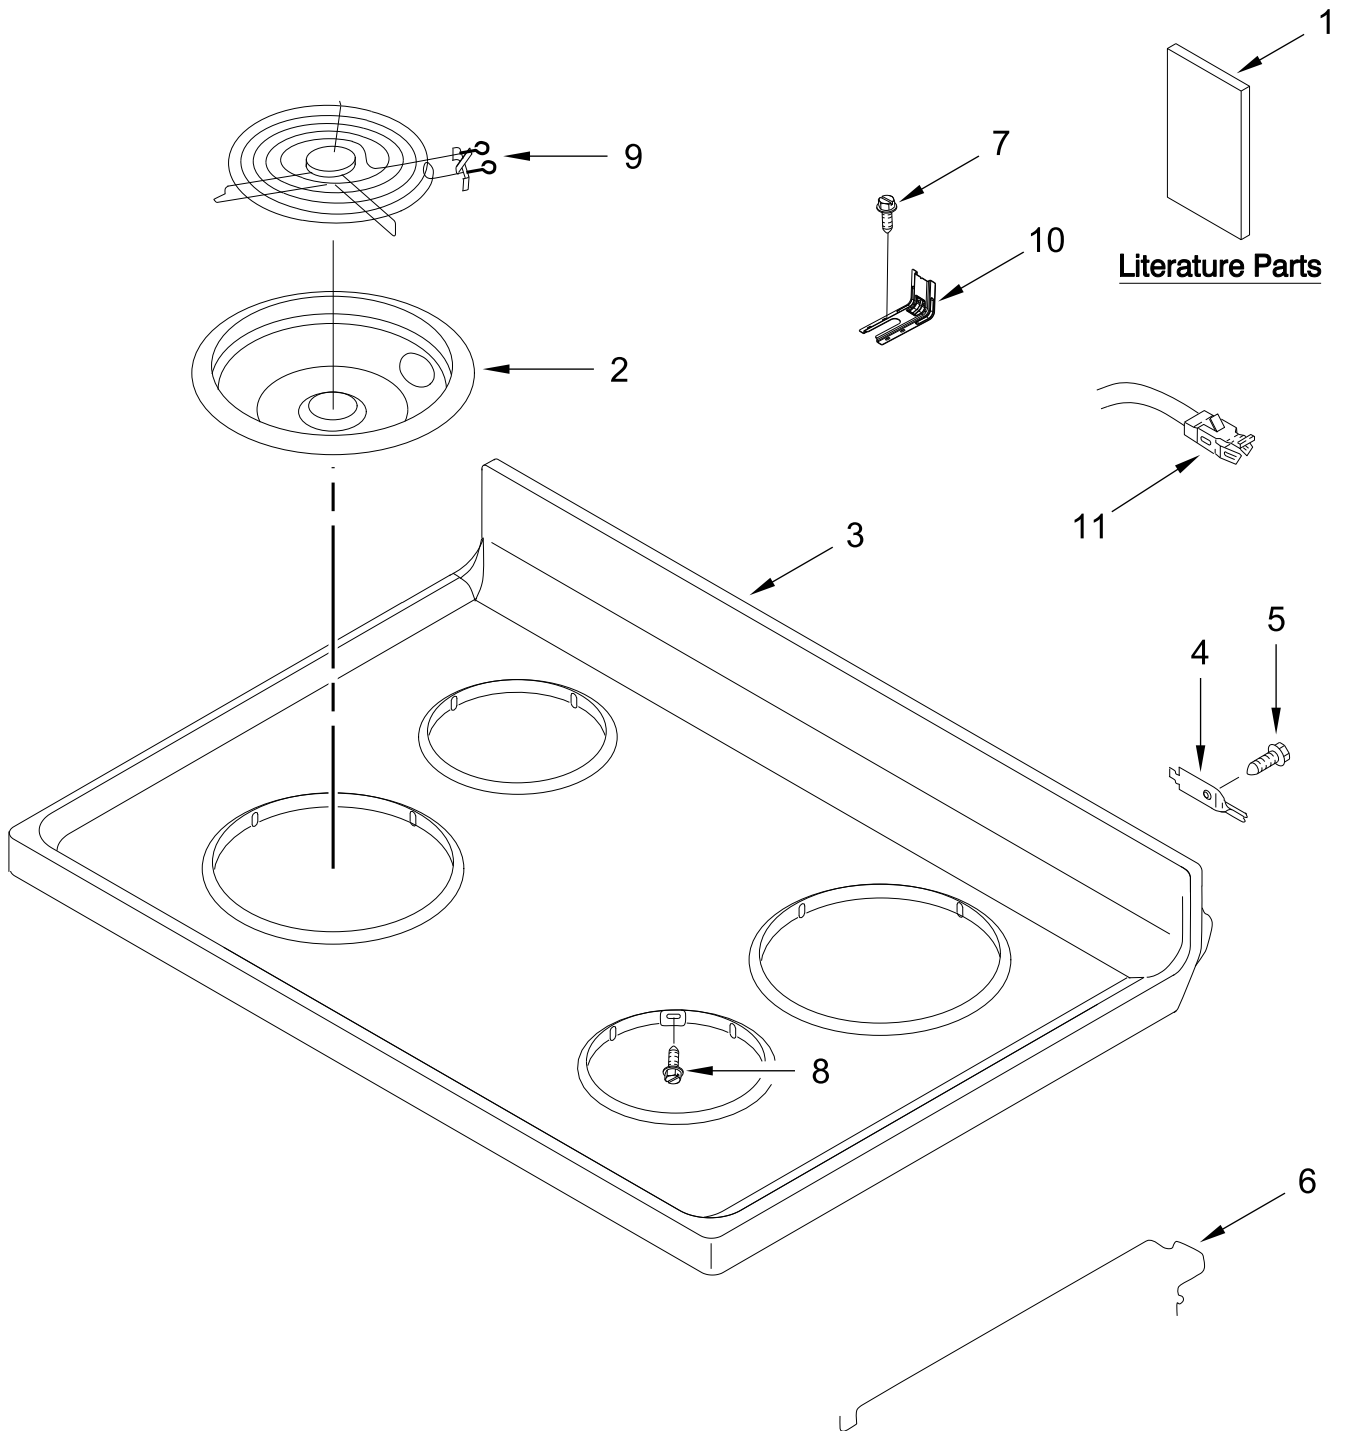

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11509598	User Instructions	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11481066	Quick Start Guide	7	7101P485-60	Screw, Anti-Tip Kit			
	W11401726	Tech Sheet	8	3196154	Screw	W11452635		Harness, Main
2	W10196406	Bowl, Drip (6 in)	9	W11364019	Element, Coil Heating (2400W)	W11134595		Harness, Cooktop
		(Right Front and Left Rear)			(Left Front and Right Rear)	4449154		Screw (Used for Cooktop Harness)
	W10196405	Bowl, Drip (8 in)	W11364018		Element, Coil Heating (1500W)	W10281322		Kit, Bare Wire Adapter Block
		(Left Front and Right Rear)			(Right Front and Left Rear)			
3		Cooktop	10	W11379945	Bracket, Anti-Tip			
	3186233	Black						
	3186231	White						
4	3195060	Hinge, Cooktop						


CONTROL PANEL PARTS

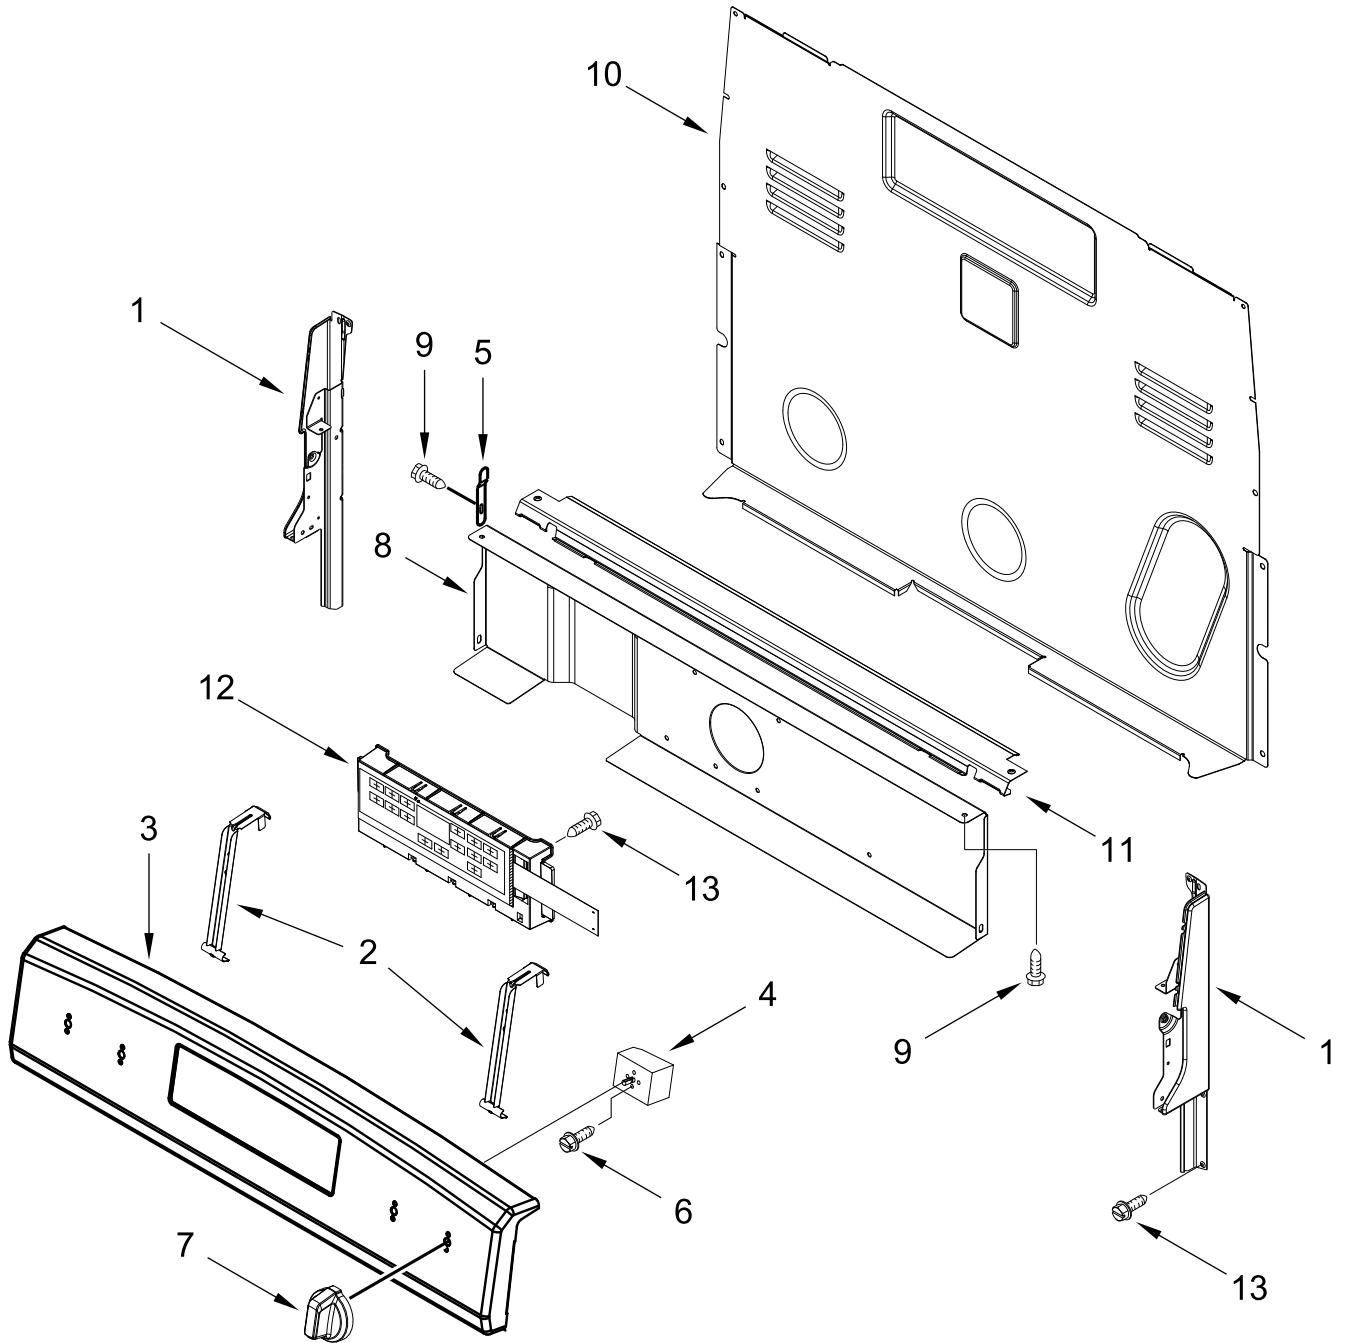

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	8	W10134247	Shield, Heat
	W11130372	Black (Left)			(Right Front and Left Rear)	9	3196165	Screw
	W11130379	Black (Right)				10	8272473	Cover, Upper Rear
	W11130371	White (Left)				11	W10525121	Bracket, Console Mounting
	W11130378	White (Right)		3148954	Switch, Infinite (Orange)	12		Control, Electronic (LCX)
2	W10695491	Bracket, Control			(Left Front and Right Rear)		W11511568	Black
3		Panel, Control					W11511570	White
	W11157013	Black	5	3196200	Clip, Spring	13	3196178	Screw
	W11157012	White	6	3400882	Screw			
			7		Knob, Infinite			
				W10844801	Black			
				W10844800	White			

CHASSIS PARTS

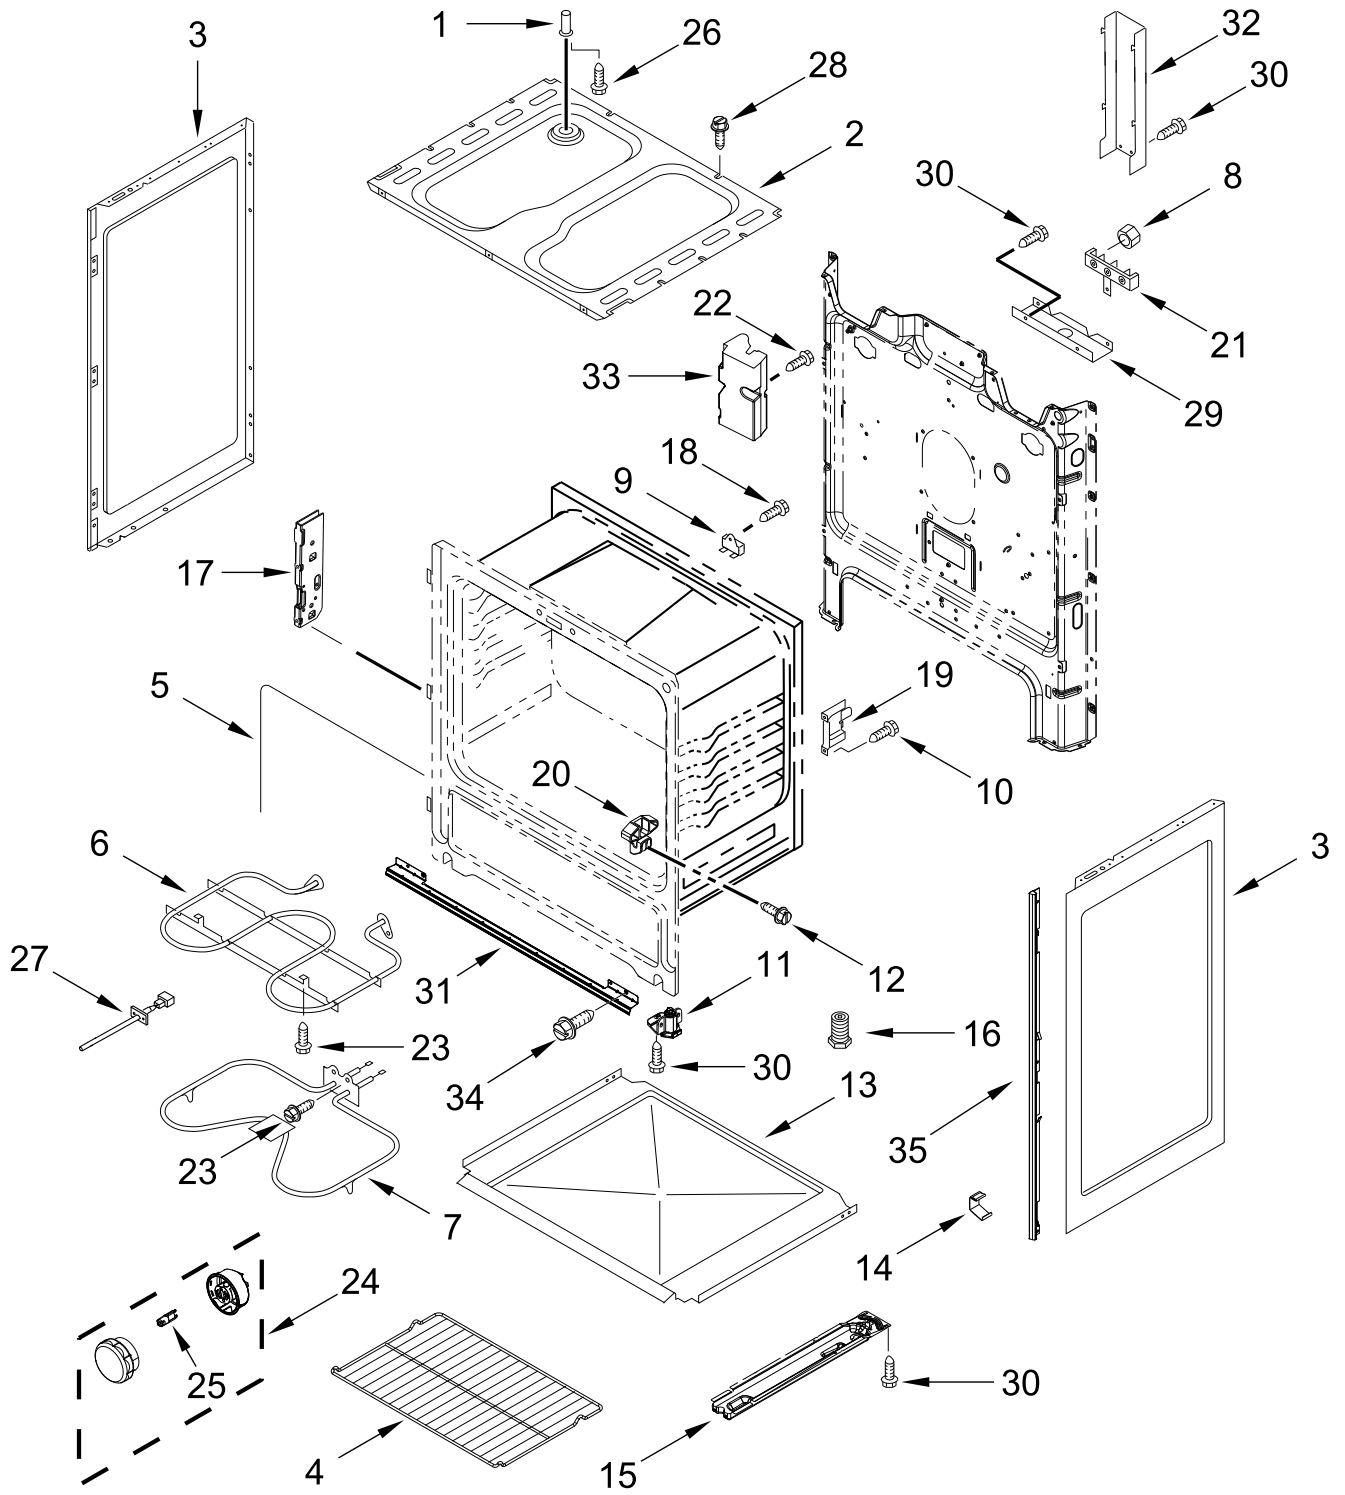


CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent
2	W11380208	Box, Burner
3		Panel, Side
	W10162245	Black
	W10575396	White
4	W11173792	Rack, Oven
5	W10129032	Seal, Door
6	W10308476	Element, Broil
7	W11022836	Element, Bake
8	3400029	Nut
9	3196548	Fuse, Thermal
10	3196169	Screw
11	W10341186	Front Foot Assembly
12	W10067840	Screw
13	8054068	Retainer, Insulation
14	W10137382	Clip, Panel

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10390008	Base Rail Assembly (Left)
	W10390007	Base Rail Assembly (Right)
16	W10058460	Foot, Leveling
17	W10289077	Receiver, Hinge
18	3196172	Screw
19	W10404688	Clip, Oven Support
20	W10674705	Glide, Drawer Front
21	W10245259	Block, Terminal
22	W11034869	Screw
23	3196174	Screw
24	W11634772	Light Assembly
25	W10571723	Bulb, Halogen 40 Watts
26	3196567	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
27	W10181986	Sensor, Oven
28	3196165	Screw
29	3186034	Bracket, Service
30	3196178	Screw
31	W11464547	Bracket, Front Frame
32	W10326122	Cover, Terminal Block
33	W10910404	Counterweight
34	3196560	Screw
35	W11510560	Barrier Rail, Rubber (Left and Right)
		FOLLOWING PARTS NOT ILLUSTRATED
	8273263	Insulation, Wrap
	8272611	Insulation, Back


DOOR PARTS

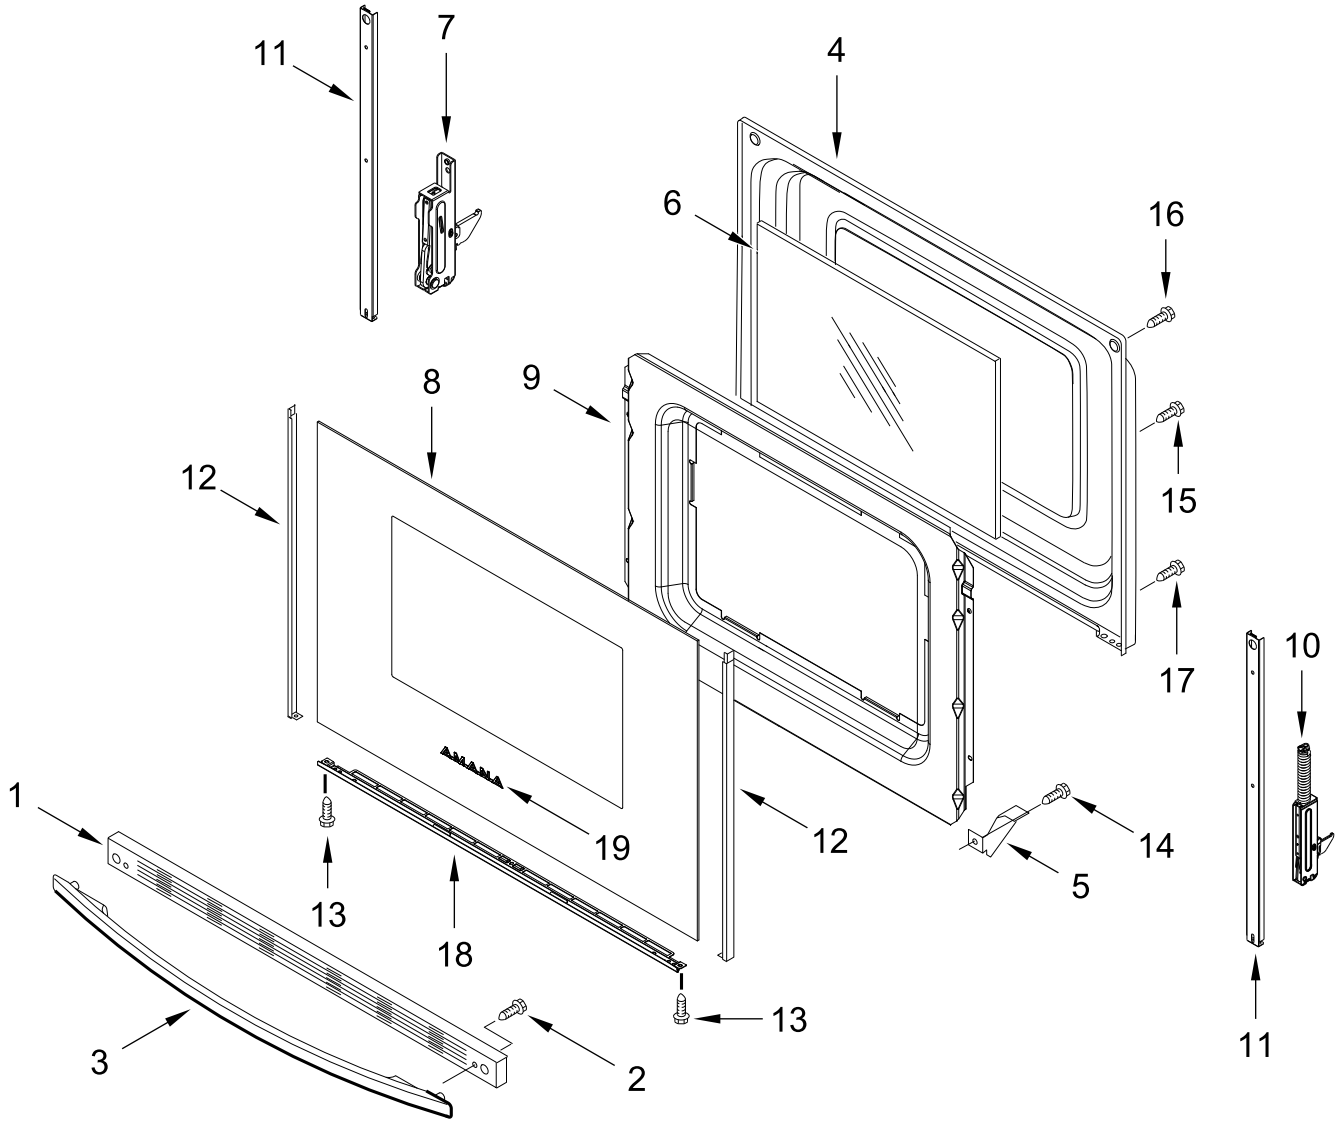

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top	8		Glass Assembly, Outer Door	13	W10327235	Screw
	W10310922	Black				14	3196165	Screw
	W10310920	White		W10831686	Black	15	W10031790	Screw
2	W10168559	Screw		W10851723	White	16	W10200660	Screw
3		Handle, Door	9	W11380221	Retainer, Insulation	17	W10031780	Screw
	W10323589	Black	10	W10299225	Hinge, Active	18		Trim, Lower Door
	W10323588	White	11	W11379944	Strap, Door		W11444043	Black
4	9761344	Liner, Door	12		Trim, Side		W11444042	White
5	W10137382	Clip, Panel		W10746436	Black (Left)	19		Badge
6	W11367326	Glass, Inner		W10746435	Black (Right)		W10846751	Black
7	W10299227	Hinge, Door (Passive)		8523172	White (Left)		W10849465	White
				8523166	White (Right)			

DRAWER PARTS

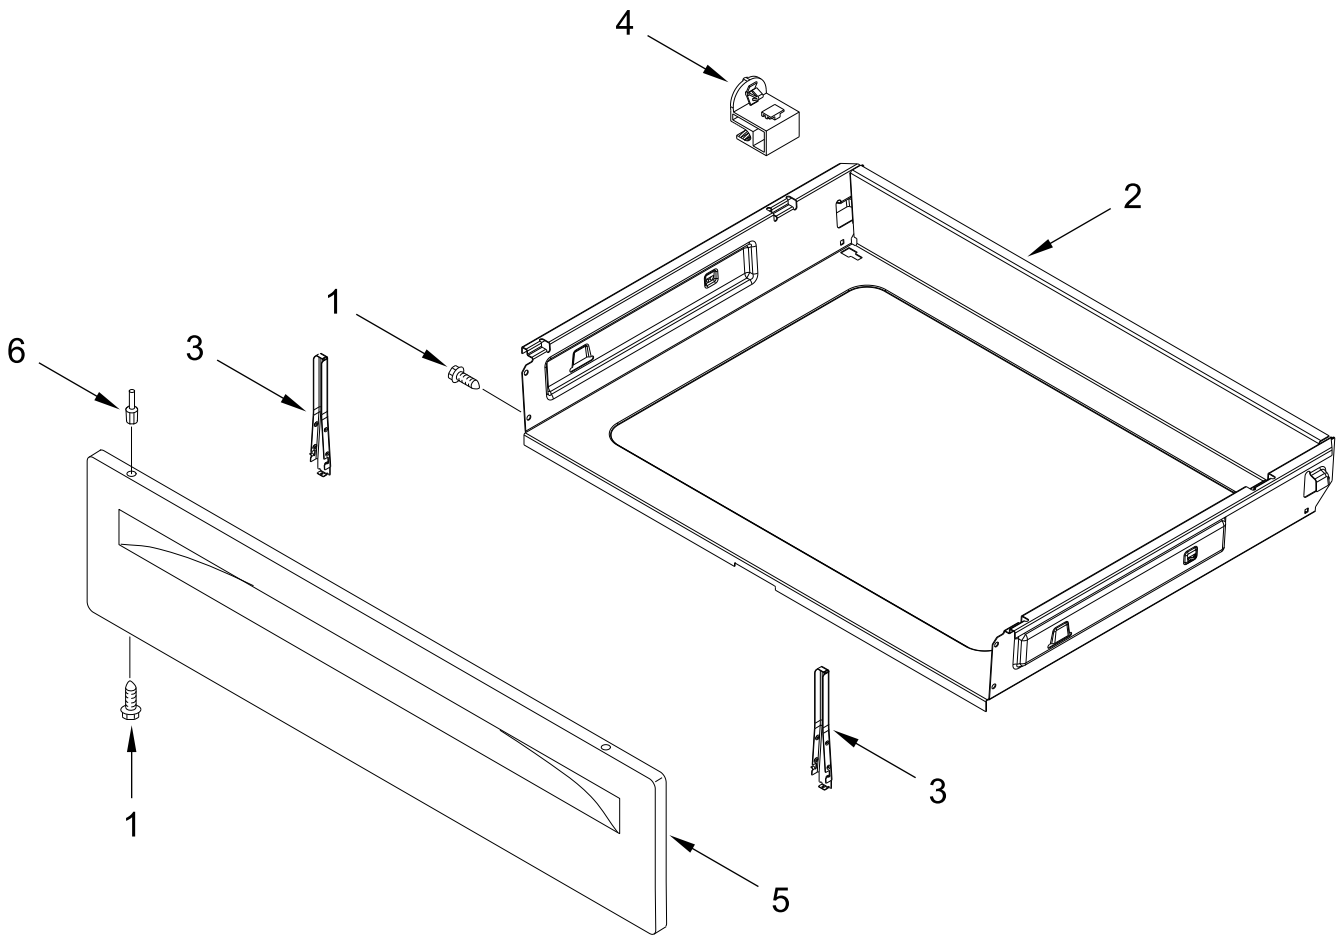

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	5		Panel, Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	Rivet, Plastic (WHITE)
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	206922	Primer (White)
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid
	PT220	Cord, 4 Inch 40 AMP 3 Wire Range
	PT400	Cord, 4 Inch 40 AMP 4 Wire Range
	4396096RB	Griddle