


# AMANA®

## ELECTRIC RANGE

### MODELS:

ACR4303MMS2 (Stainless)


# COOKTOP PARTS

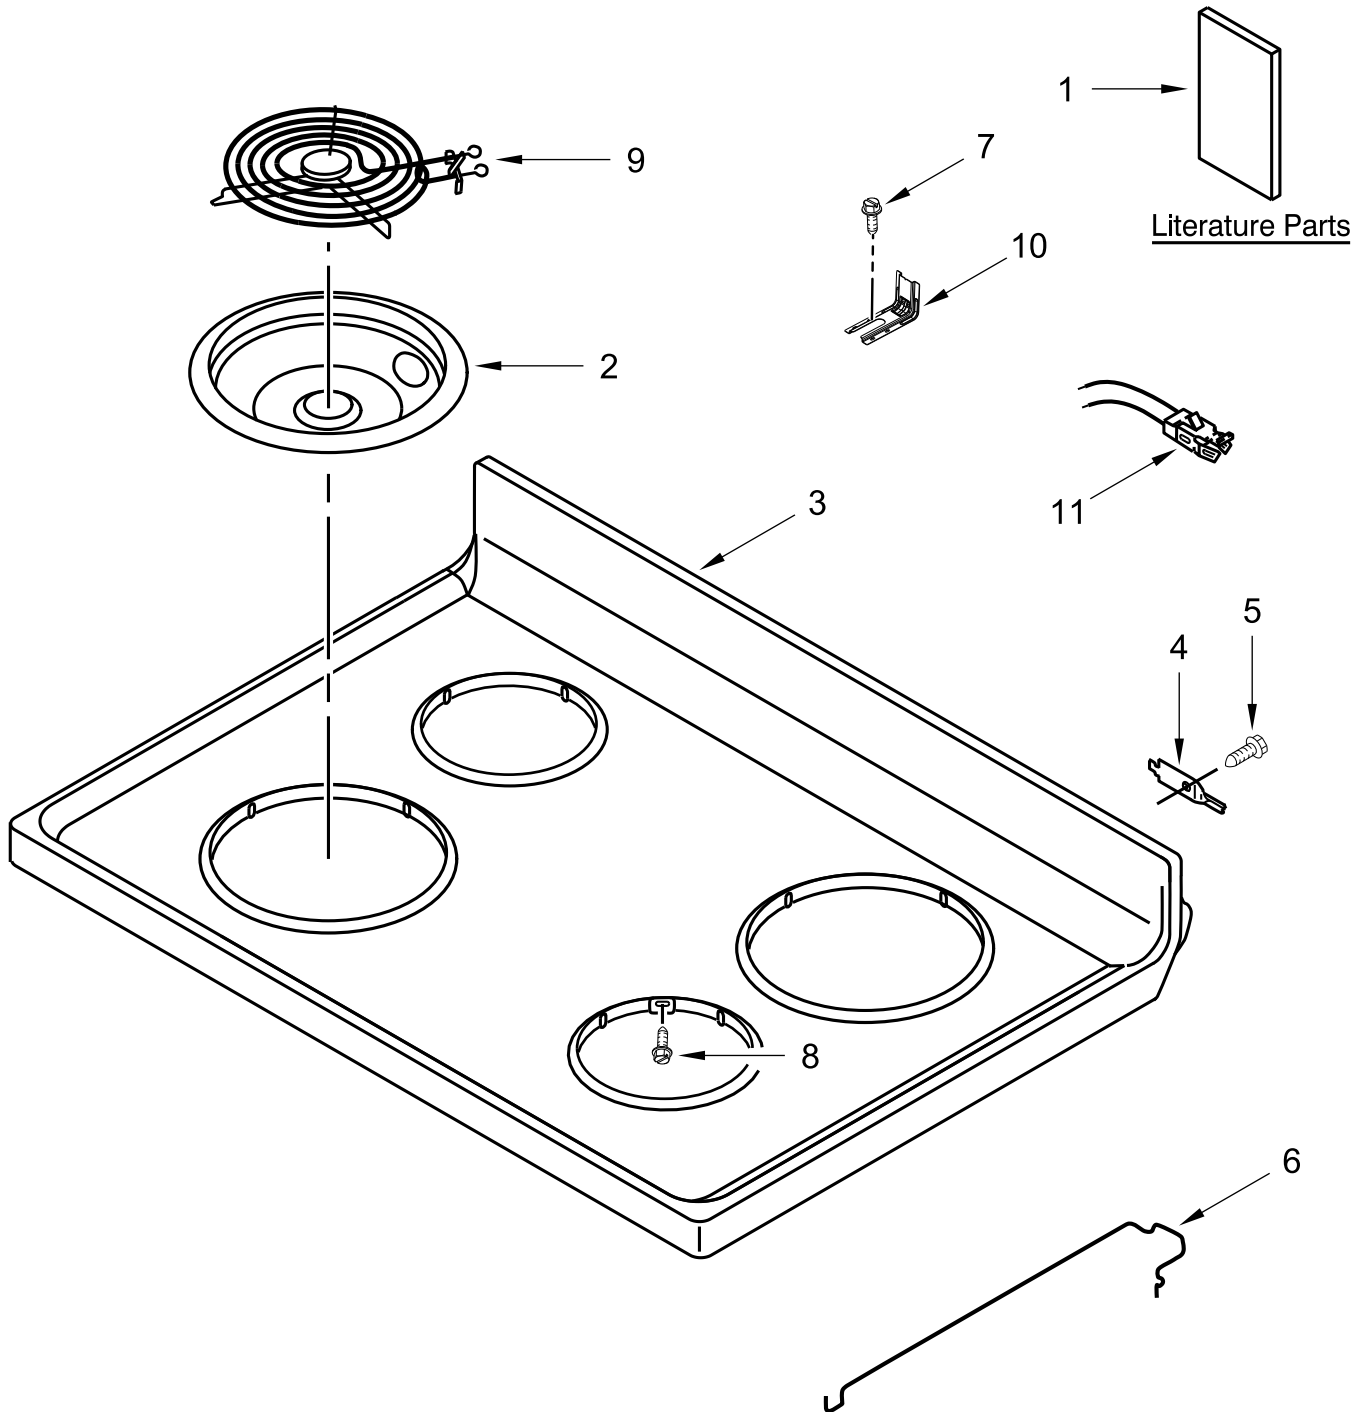

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11509598	User Instructions	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11401726	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit			
	W11481066	Quick Start Guide	8	3196154	Screw	W11452635		Harness, Main
2	W10196406	Bowl, Drip (6 in)	9	W11364018	Element, Coil Heating (1500W)	W11134595		Harness, Cooktop
		(Right Front and Left Rear)			(Right Front and Left Rear)	W10281322		Kit, Bare Wire Adapter Block
	W10196405	Bowl, Drip (8 in)		W11364019	Element, Coil Heating (2400W)			
		(Left Front and Right Rear)			(Left Front and Right Rear)			
3		Cooktop	10	W11379945	Bracket, Anti-Tip			
	3186233	Black						
4	3195060	Hinge, Cooktop						


# CONTROL PANEL PARTS

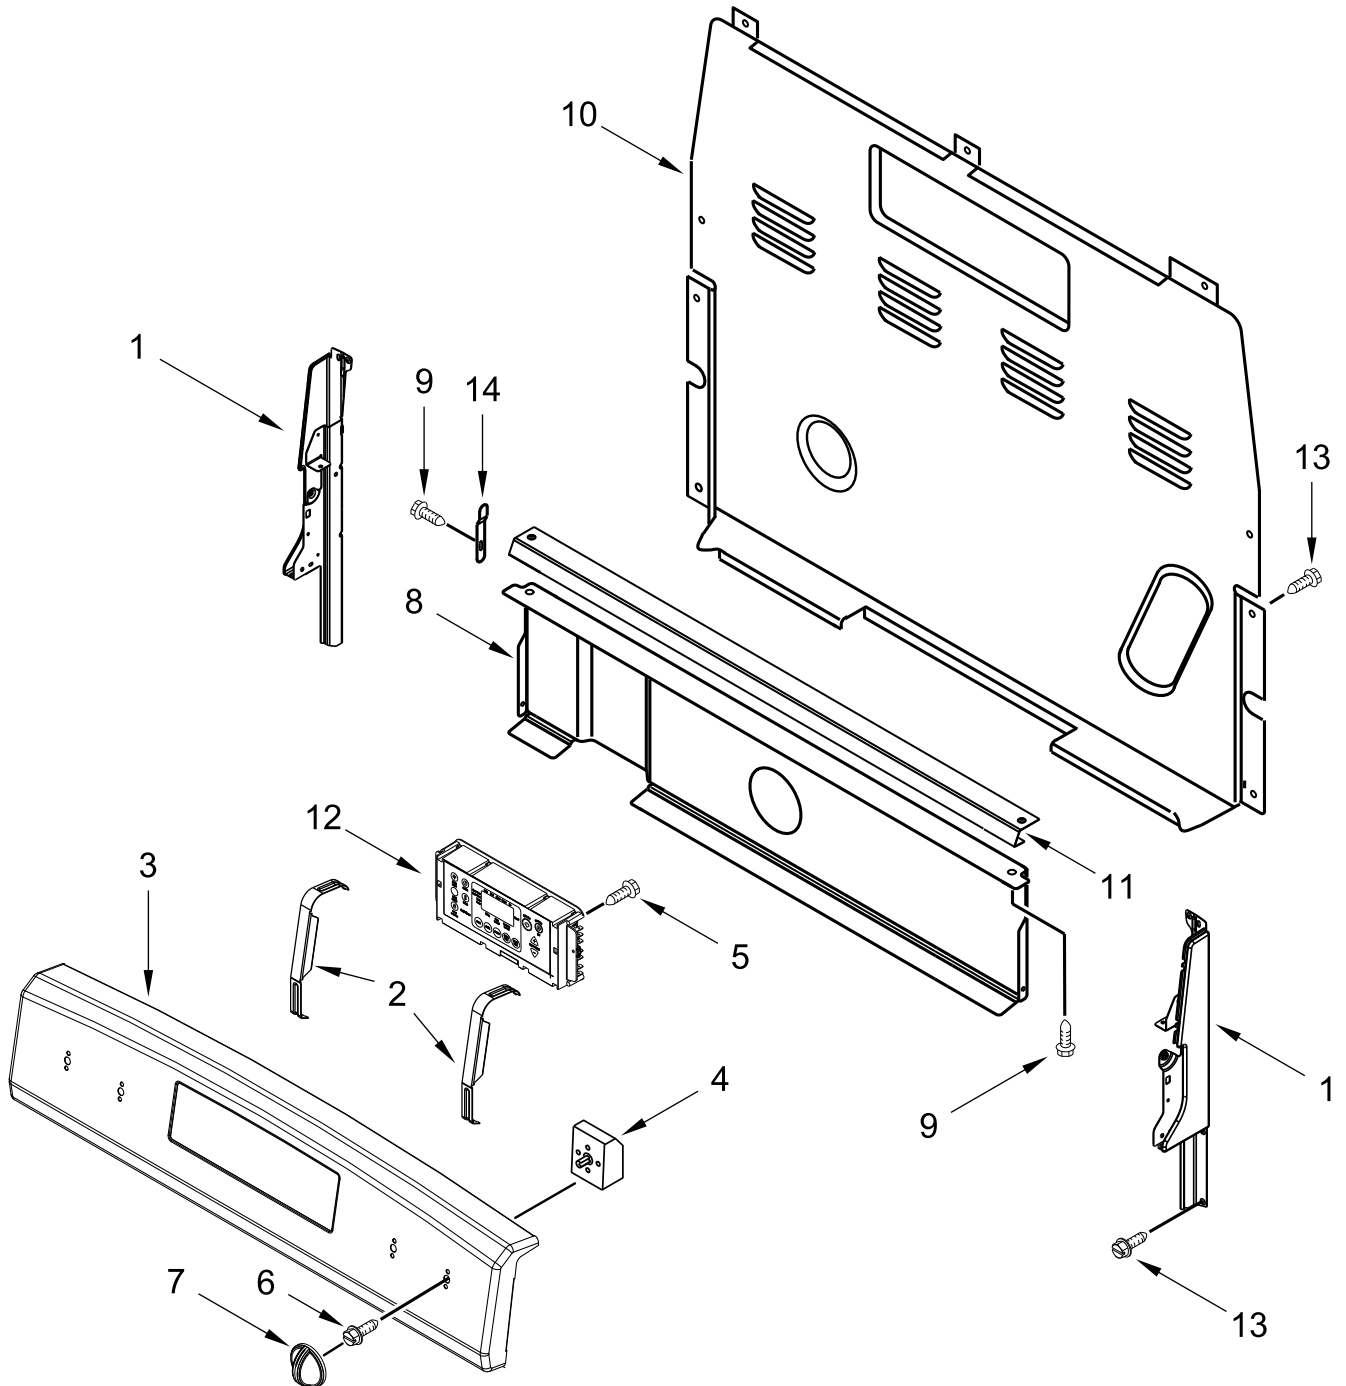

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196169	Screw	13	3196178	Screw
	W11130372	Black (Left)	6	3400882	Screw	14	3196200	Clip, Spring
	W11130379	Black (Right)	7		Knob, Infinite			
2	W10695491	Bracket, Control		W10844801	Black			
3		Panel, Control	8	W10134247	Shield, Heat			
	W11157014	Stainless	9	3196165	Screw			
4	3148952	Switch, Infinite (Yellow)	10	8272473	Cover, Upper Rear			
		(Right Front and Left Rear)	11	W10525121	Bracket, Console Mounting			
	3148954	Switch, Infinite (Orange)	12		Control, Electronic (LCX)			
		(Left Front and Right Rear)		W11511568	Black			


# CHASSIS PARTS

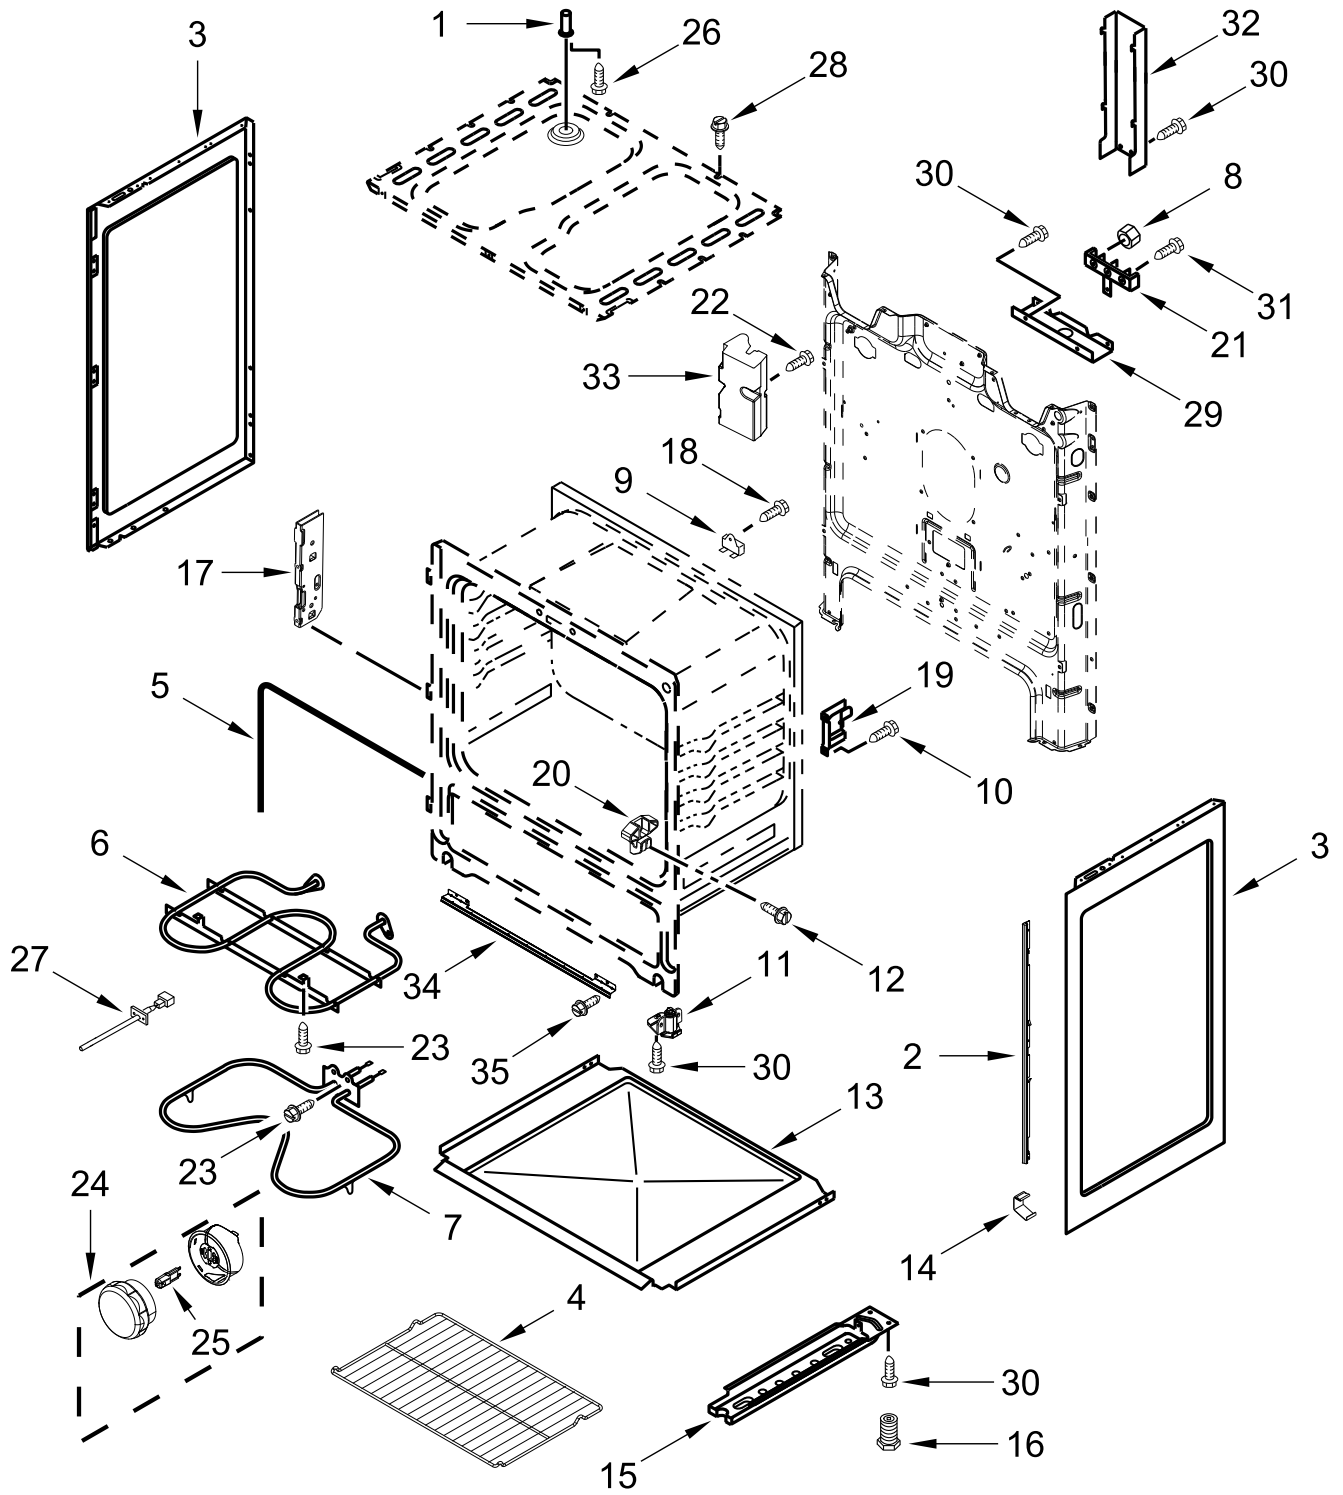

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	15	W10390008	Base Rail Assembly (Left)	27	W10181986	Sensor, Oven
2	W11510560	Barrier Rail, Rubber (Left and Right)		W10390007	Base Rail Assembly (Right)	28	3196165	Screw
3		Panel, Side				29	3186034	Bracket, Service
	W10162245	Black	16	W10058460	Foot, Leveling	30	3196178	Screw
4	W11173792	Rack, Oven	17	W10289077	Receiver, Hinge	31	3400016	Screw
5	W10129032	Seal, Door	18	3196172	Screw	32	W10326122	Cover, Terminal Block
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	33	W10910404	Counterweight
7	W11022836	Element, Bake	20	W10674705	Glide, Drawer Front	34	W11464547	Bracket, Front Frame
8	3400029	Nut	21	W10245259	Block, Terminal	35	3196560	Screw
9	3196548	Fuse, Thermal	22	W11034869	Screw			FOLLOWING PARTS NOT ILLUSTRATED
10	3196169	Screw	23	3196174	Screw		8273263	Insulation, Wrap
11	W10341186	Front Foot Assembly	24	W11634772	Light Assembly		8272611	Insulation, Back
12	W10067840	Screw	25	W10571723	Bulb, Halogen 40 Watts			
13	8054068	Retainer, Insulation	26	3196567	Screw			
14	W10137382	Clip, Panel						

# DOOR PARTS

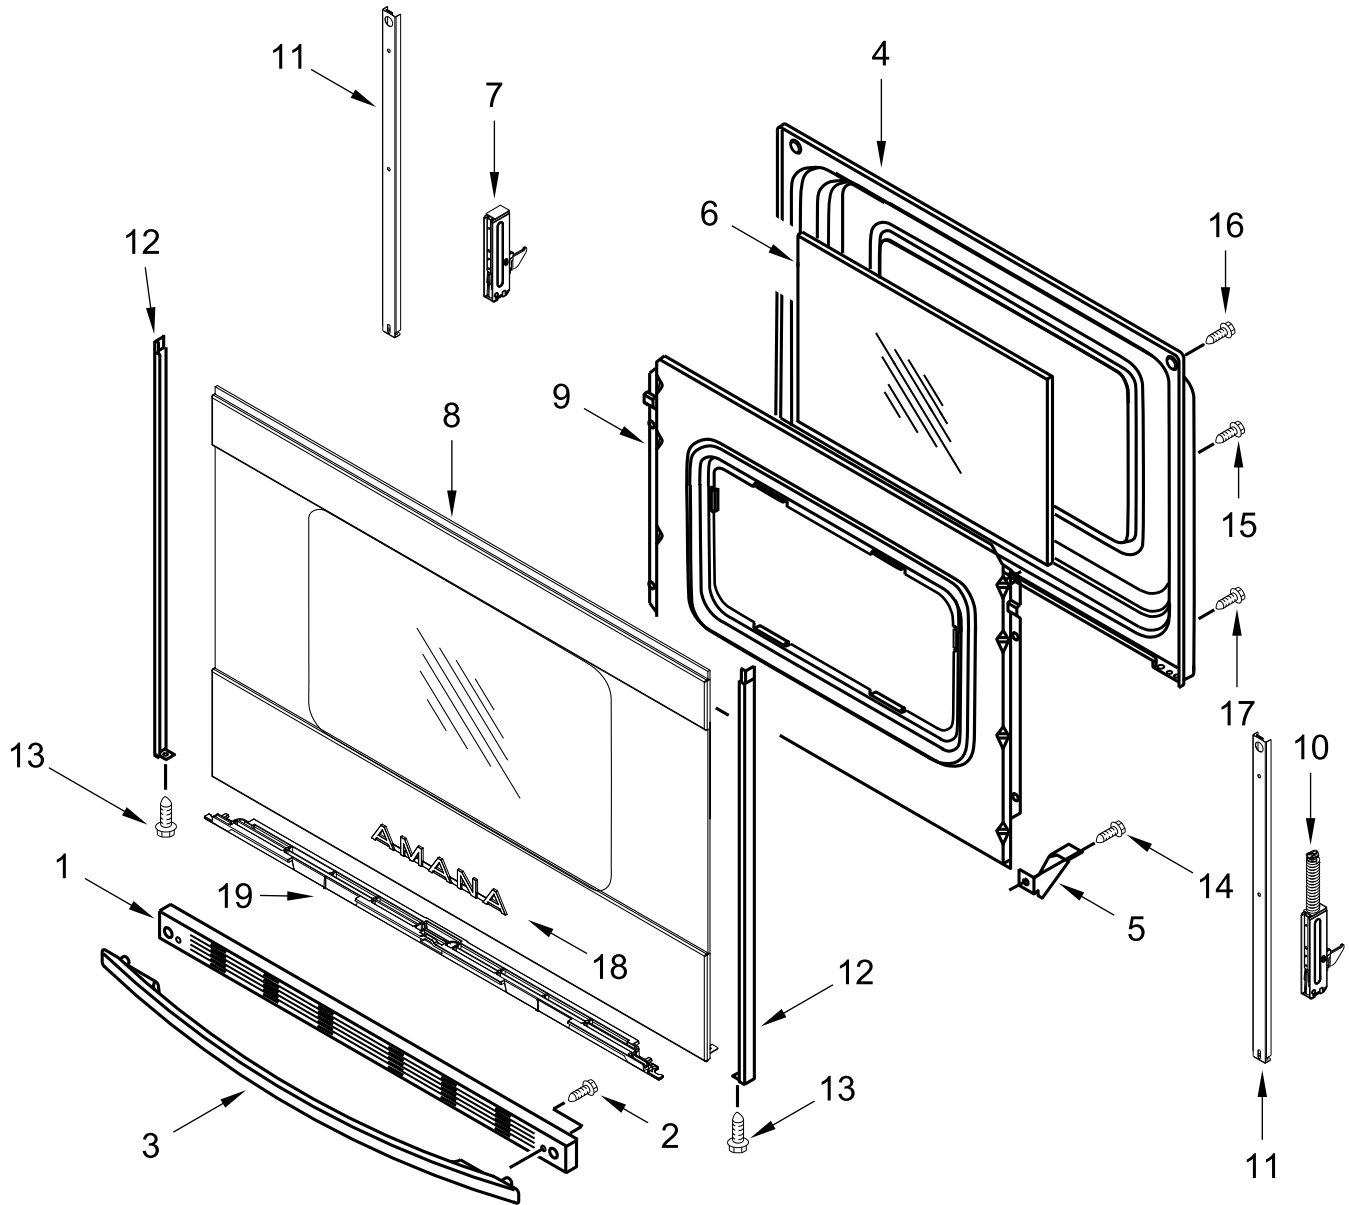




# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top	8		Glass Assembly, Outer Door	13	W10327235	Screw
	W10310922	Black				14	3196165	Screw
2	W10168559	Screw		W11602914	Stainless	15	W10031790	Screw
3		Handle, Door	9	W11380221	Retainer, Insulation	16	W10200660	Screw
	W10323589	Black	10	W10299225	Hinge, Active	17	W10031780	Screw
4	9761344	Liner, Door	11	W11379944	Strap, Door	18		Badge
5	W10137382	Clip, Panel	12		Trim, Side		W10846752	Stainless
6	W11367326	Glass, Inner		W10746436	Black (Left)	19	W11440159	Trim, Bottom Door
7	W10299227	Hinge, Door (Passive)		W10746435	Black (Right)			

# DRAWER PARTS

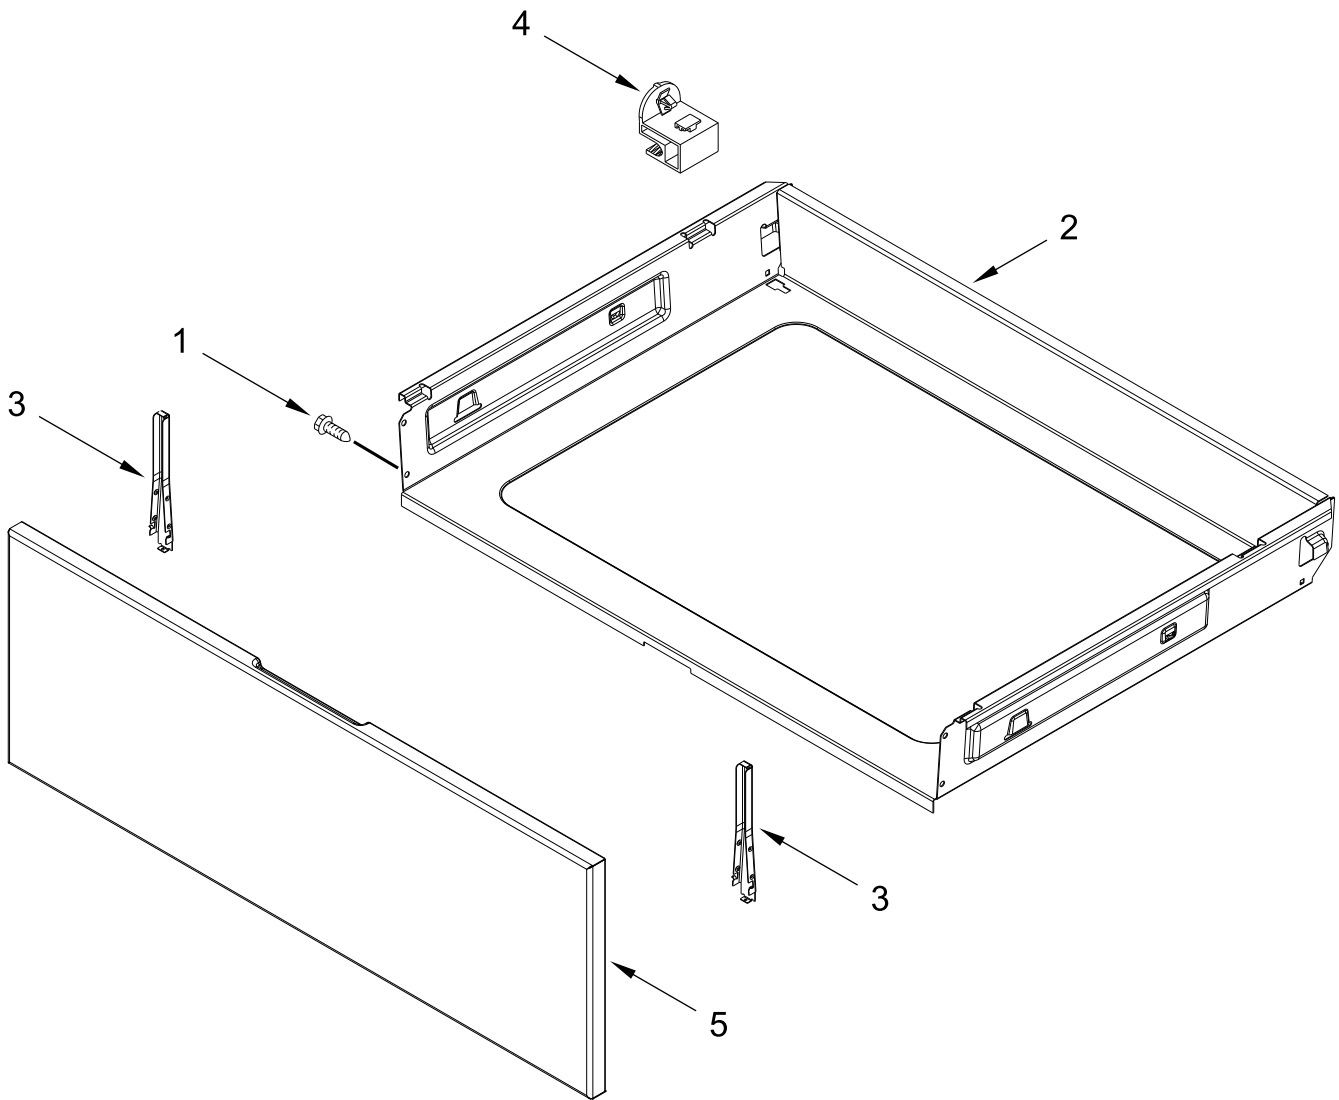

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	3	W10462910	Bracket, Mounting Drawer	5		Panel, Front
2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear		W10330070	Stainless

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid