







Please read the instruction manual and save it for future reference.


 To reduce the risk of fire, electric shock or injury to persons during the use of your appliance, follow the basic precautions, including the following:



- Before using the product for the first time, please read all instructions and save them for future reference.
- Instructions for use are available on our website at www.asko.com.
- The product is intended solely for household use.
- Do not repair and do not attempt to replace any part of the product or to service it in any other way, unless this is expressly recommended in the instructions for use and maintenance or in the instructions for user repairs. Also, do not attempt any repairs or servicing if you do not understand the instructions entirely or if you lack the skills for such repairs.
- Any product repair and maintenance pertaining to safety or performance should be done by trained experts.
- In case of incorrect use or product servicing by an unauthorized person, the user shall be solely responsible for covering any damage or expenses.
- Do not allow children to play with the product or on the product. Watch children closely when you are using the product near them.
- The product is not intended for use by persons (including children) with impaired physical or mental capabilities or lack of experience and knowledge. Such persons should be instructed on safe use of the product by the person responsible for their safety.
- Do not let children younger than three years to come near the appliance, unless they are under constant supervision.
- Do not install or store the product in places where it could be exposed to the elements.

The following symbols are used throughout the manual and they have the following meanings:


	Information, advice, tip, or recommendation
	Warning – general danger
	Warning – danger of electric shock

INSTALLING A HIDDEN HELPER BETWEEN A WASHING MACHINE AND A DRYER


 The hidden helper may only be used with a washing machine and a dryer by the manufacturer Asko Appliances.

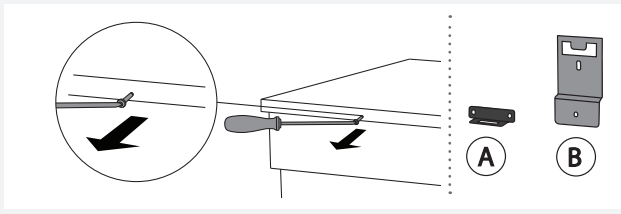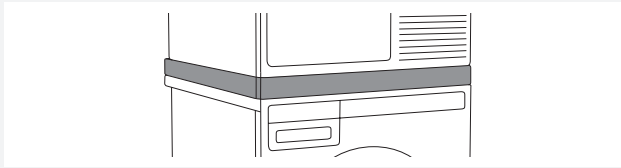


1 Undo the middle screw on the back side of the washing machine.

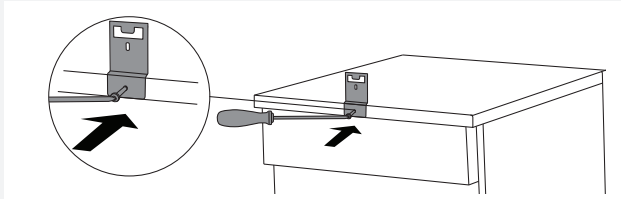


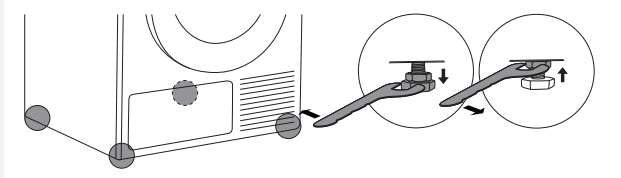
2 Attach the anti-tip bracket (B) to the upper edge of the back of the washing machine.

 The anti-tip bracket (B) is supplied in the hidden helper.

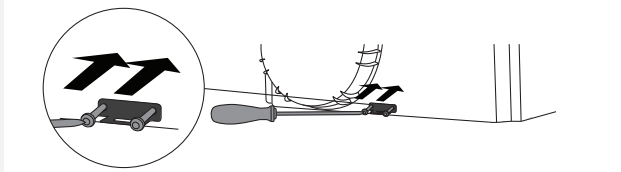


3 Attach the anti-tip bracket (A) to the lower edge of the back of the dryer.


 The anti-tip bracket (A) is supplied in the dryer cardboard box.




4 Before placing the dryer onto the hidden helper, undo the dryer legs by five turns from the fully retracted position, and tighten the safety nuts all the way.

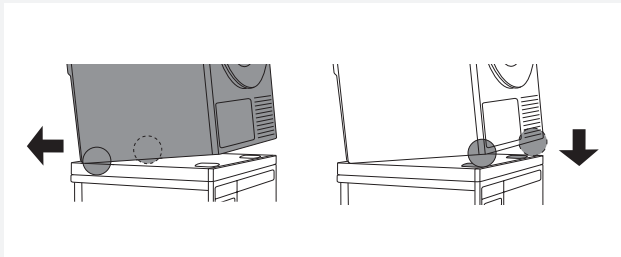


5 Place the Hidden Helper and make sure it is aligned with WM (washing machine) or TD (tumble dryer). Lift the dryer and tilt it towards the back. Insert the back feet of the dryer into the slots in the hidden helper and push the dryer back towards the back of the hidden helper until the anti-tip bracket (A) locks in with the anti-tip bracket (B). Anti-tip bracket position so that the bracket on the dryer and the bracket on the washing machine are fully aligned.


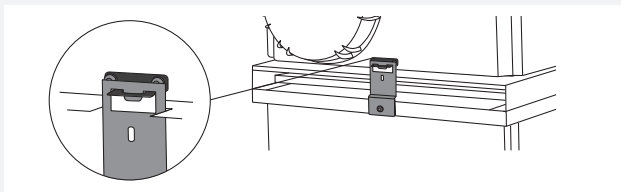


6 Final installation of the hidden helper between a washing machine and a dryer, from the back.


 To install a hidden helper between a washing machine and a dryer that are already stacked in a tower, first follow the instructions for dismantling the tower. This means that the anti-tip bracket has to be removed first.

INSTALLING A HIDDEN HELPER ONTO THE APPLIANCE


 The hidden helper may only be used with a washing machine and a dryer by the manufacturer Asko Appliances.

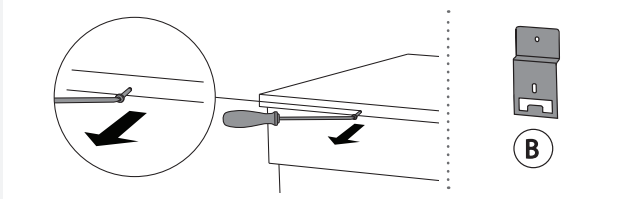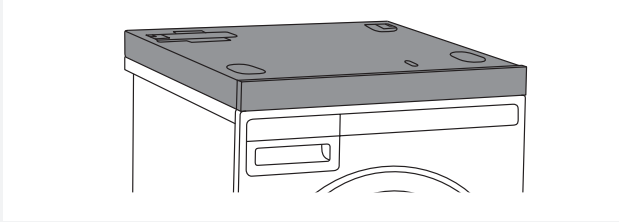


1 Undo the middle screw on the back side of the washing machine or dryer.

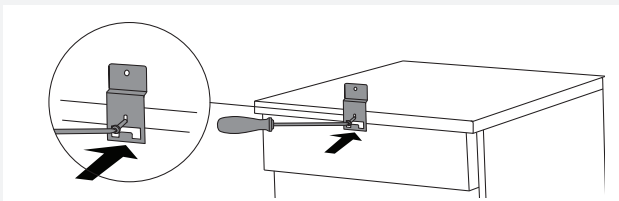


2 Attach the anti-tip bracket **(B)** to the washing machine or dryer.

 The anti-tip bracket **(B)** is supplied in the hidden helper.

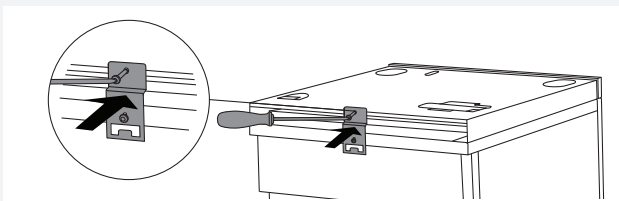


3 The hidden helper can be installed onto a washing machine or onto a dryer.


Attach the anti-tip bracket **(B)** onto the hidden helper and make sure it is aligned with the washing machine and dryer.

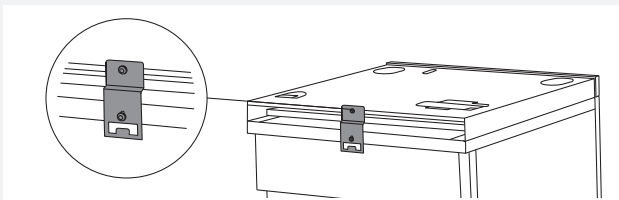


4 Final installation of the hidden helper on a washing machine or dryer, from the back.

 Before tightening the anti-tip bracket, make sure the edges of the hidden helper are accurately aligned with the edges of the washing machine or dryer.

USING A HIDDEN HELPER

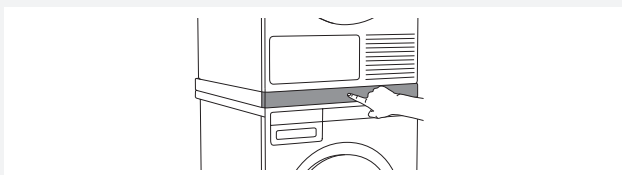

1 Press on the hidden helper to open it.

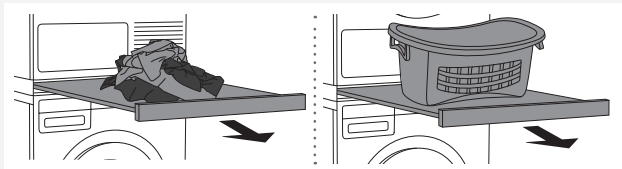

2 Pull the shelf out towards you.



3 After use, push the shelf back inside the hidden helper.