 




WC1
(iFF2-WS30)

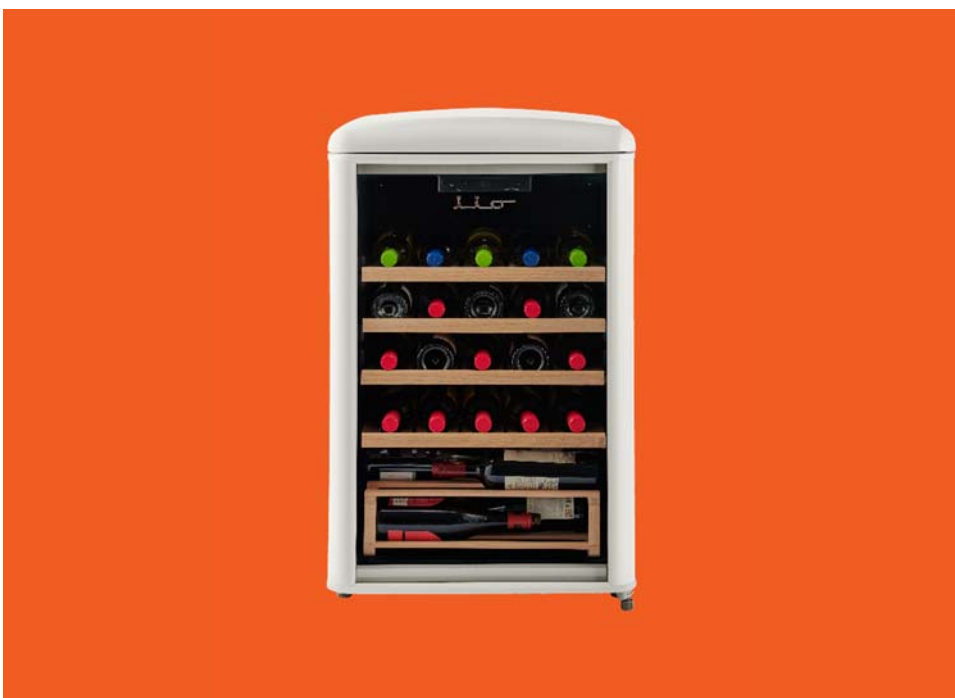

Use & Care Instructions

TABLE OF CONTENTS

1. Welcome to iio	page 2	7. Operation	page 11
2. Product overview.....	page 3	8. Energy saving tips	page 13
3. Important safety notes	page 4	9. Cleaning.....	page 14
4. Installation.....	page 6	10. Troubleshooting.....	page 16
5. Product dimensions	page 8	11. Warranty	page 17
6. Reversing the door	page 9	12. Your appliance information.....	page 18

WELCOME TO iio!

Congratulations, and thank you for your purchase! We truly appreciate your business and are grateful for the trust you have placed in us and our products.

You have purchased one of the most efficient refrigeration products available today. We are proud of this beautifully designed wine cooler and believe it will bring you years of reliable service.

At iio™, we design our appliances for both space and energy efficiency. Our mission is to create a range of stylish home appliances that fit your life, your style, space parameters, taste, eco aspirations, functional needs, budget and way of shopping. We want to help turn your space into your place.

Please register your appliance at www.iio.com >>>>>>>>>



For any inquiries, please contact us at: 1-833-446-4461 or visit www.iio.com for additional information regarding your appliance.

Extend your warranty today!

- Receive up to 1 month of extended warranty for submitting a photo and 2 months of extended warranty by submitting a video (pending review).

To be considered for approval:

 
- Photo upload must demonstrate the product's use or application in a natural setting and should clearly show the product from a perspective not already shown on the site.
- Video review must be at least 30 seconds in duration, clearly show the product in use in a natural setting and include insightful product-specific audio commentary.
- The photo or video must be of sufficient quality, in the opinion of the iio™ management, that it can be used on our website and in other promotional materials.
- Submitting a photo and/or video represents your permission that iio has unlimited use of these materials wherever we require, at no additional cost.

PRODUCT OVERVIEW

- The images in this guide may differ from the actual components and accessories, which are subject to change without prior notice for product improvement purposes.

NOTE: The appearance of components in the appliance may differ from model to model.

- This wine cooler is intended for cooling wine, beverages, and glasses at optimal temperatures.
- Appliance temperature may be changed by adjusting the control panel.

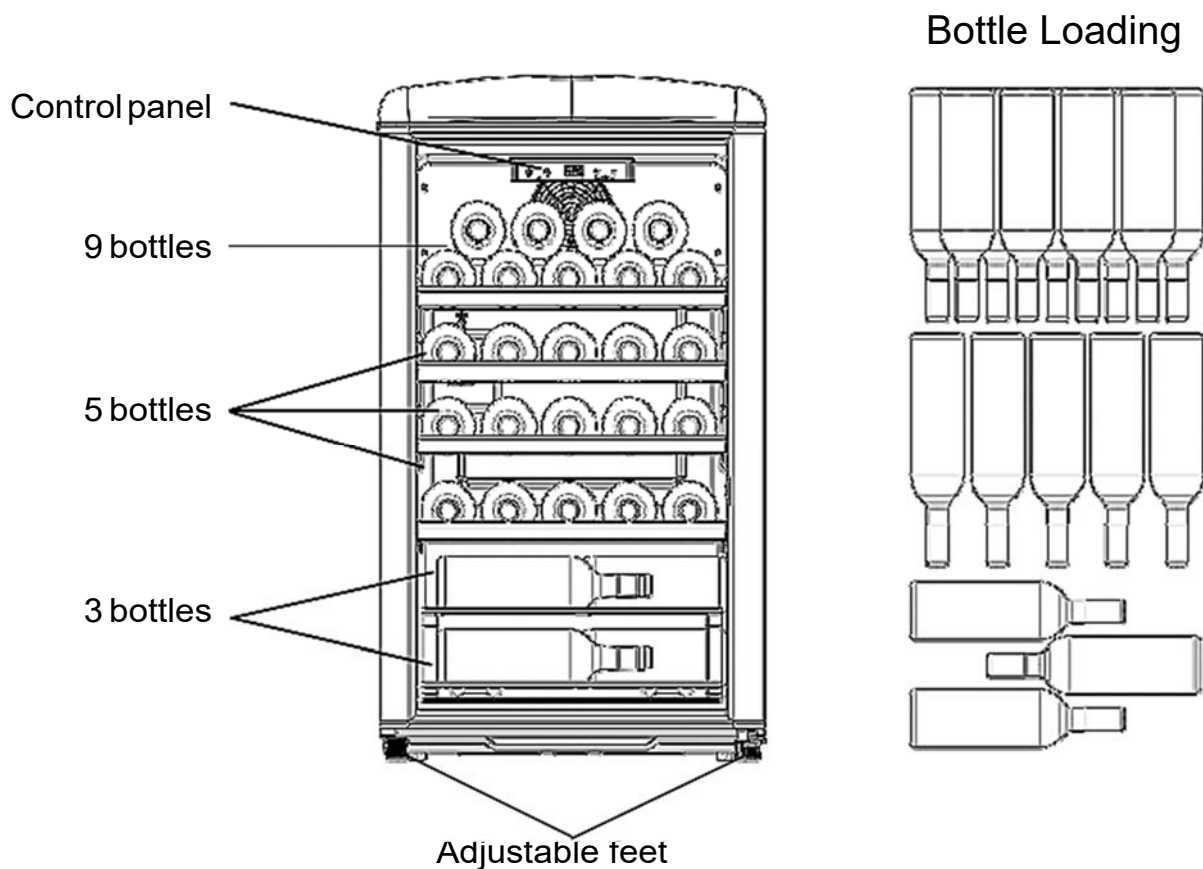

IMPORTANT SAFETY NOTES

Always read and follow all safety messages.

This appliance is not intended to be used as a built-in appliance.

READ ALL INSTRUCTIONS BEFORE USE.



Alert Symbol – will display **WARNING** or **CAUTION** beside the instruction. Messages with the Alert Symbol will inform you of the potential hazard, provide guidance for reducing the hazard, and inform of the possible outcome if the instruction is not followed.

WARNING – YOU MAY BE KILLED, SERIOUSLY INJURED OR DAMAGE THE APPLIANCE IF THE INSTRUCTION IS NOT FOLLOWED.

CAUTION – YOU MAY BE INJURED OR DAMAGE THE APPLIANCE IF THE INSTRUCTION IS NOT FOLLOWED.



WARNING

- Flammable refrigerant used. To be repaired by trained service personnel only. Do not puncture refrigerant tubing or other parts that use refrigerant. Consult user manual before attempting any repairs. All safety precautions must be followed.
- When using this appliance follow basic precautions to reduce the risk of electrical shock, explosion, fire, serious injury or death.
- Do not put flammable, explosive, volatile and highly corrosive items in the appliance to prevent damage to the appliance and prevent injury or death. Keep materials and vapors, such as gasoline and alcohol, away from appliance.
- Use non-flammable cleaner to clean the appliance.
- Do not use electrical appliances (i.e. hair dryer or fan) inside the appliance compartments.
- Disconnect the power before servicing or cleaning.
- This appliance is not intended to be used by children under the age of 8.
- Children shall not play with the appliance. Do not allow any child to get into, climb the appliance or play with the appliance doors.
- Do not allow children to play in, on or around the appliance. It is not a toy. THERE IS A DANGER OF SUFFOCATION IF A CHILD BECOMES TRAPPED INSIDE.
- When the appliance is not in use, secure or remove the doors to prevent children from playing inside the appliance.
- Risk of child entrapment. Before throwing away an old appliance remove the door(s), remove the shelves to prevent children from climbing inside.
- This appliance is not intended for use by persons (including children) whose physical, sensory or mental capabilities may be different or reduced, or who lack experience or knowledge, unless such persons receive supervision or training to operate the appliance by a person responsible for their safety.
- Cleaning and user maintenance shall not be made by children without supervision.





CAUTION

- Appliance **MUST** be in a vertical position for 24 hours before being connected to power.
- Replace all appliance parts and panels before operation.
- To avoid injury two or more people are required to move and install the appliance.
- Never pick up or move the appliance by the door.

Prop. 65 Warning for California Residents



WARNING: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.



Dispose of properly in accordance with federal and/or local regulations. In case of punctured tubing, follow all handling instructions carefully.

INSTALLATION



WARNING

- When using this appliance follow basic precautions to reduce the risk of electrical shock, explosion, fire, serious injury or death.
- Do not damage the refrigerant circuit.
- Only connect this product to a dedicated grounded electrical outlet rated for use with this product (110-120V~, 60Hz, AC only). It is the user's responsibility to replace a standard 2-prong wall outlet with a standard 3-prong (grounded) wall outlet. Ensure that the grounding electrode is equipped with a reliable grounding line.
- Do not remove the ground prong from the power cord.
- Do not use an extension cord.
- Do not use an adapter on the wall socket.
- Do not pull-out plug using the power cord. Firmly grasp the plug and pull it out from the socket.
- Keep packing materials out of the reach of children. Packaging material can be dangerous for children as there is a risk of suffocation.
- When moving the appliance, be careful not to roll, bend, pinch or damage the power cord.
- Do not place electrical appliances on top of the appliance.
- To avoid injury or damage to the appliance, installation should be carried out by two people.
- Do not place heavy objects on top of the appliance as they may fall and cause injury when the appliance door is opened.
- Do not install the appliance in a damp or dusty place where insulation or electrical parts may deteriorate.
- Do not place the appliance in direct sunlight or expose it to the heat from heating appliances such as stoves or heaters.
- Do not put flammable, explosive, volatile and highly corrosive items in the appliance to prevent damage to the appliance and prevent injury or death. Keep materials and vapors, such as gasoline and alcohol, away from appliance.

 


CAUTION

- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your appliance.
- Keep ventilation openings clear of obstructions.
- Do not use an outlet that can be turned off with a switch.
- Appliance **MUST** be in a vertical position for 24 hours before being connected to the power outlet.
- Install the appliance in a dry and well-ventilated room. Ambient temperature should be between 18 °C ~ 38 °C (64 °F ~ 100 °F).
- The appliance is heavy. Protect the floor when moving the appliance for cleaning or servicing.
- Always pull the appliance straight out when moving it. Do not wiggle or walk the appliance as floor damage could occur.
- Never pick up or move the appliance by the door.





Remove the Packaging

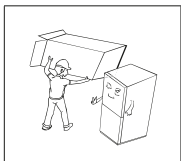

- Remove tape and any temporary labels from your appliance before use. Do not remove any warning labels, the model and serial number labels, or the circuit diagram from the appliance as this will void the warranty.
- Carefully remove the protective plastic film on the doors and appliance body.
- If required, carefully use tweezers or other small instruments to start the peeling at the corners.

  
Appliance Location

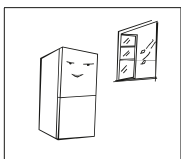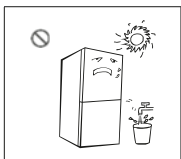

- To avoid noise and vibration, the appliance must be installed and leveled on a solidly constructed floor. If required, adjust the leveling legs to compensate for the unevenness of the floor.
- Keep away from heat and avoid direct sunlight.
- Do not place the appliance in humid or watery places to prevent corrosion or reduced insulation efficiency.
- Ensure that the appliance is placed in a well-ventilated indoor location.
- Ensure that there is enough space around the appliance, as indicated in diagram (pg. 8), to allow for proper ventilation.

Note: Installation on carpeting, soft tile surfaces, a platform or weakly supported structure is not recommended. Surface shall be flat and sturdy (rotate left and right to adjust the wheel for levelling if unsteady).

 PRODUCT DIMENSIONS

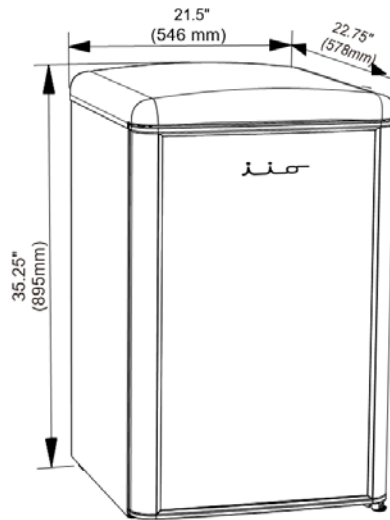

- Your appliance should be installed on a flat and even floor.
- Keep the appliance level by adjusting the front leg levers.

Dimensions and Clearances

- Check the dimensions of the appliance and the installation path to ensure there is sufficient room to move the appliance through doors or narrow openings.
- The installation location chosen for the appliance should allow space behind the unit for connections and airflow as well as space in front to open the doors.
- Too small of a distance from adjacent items may result in reduced cooling capability and increased power consumption. Allow at least 20 inches in front of the appliance to open the doors, and at least 2" clearance between the back of the appliance, sides and wall.

 
Levelling

- The appliance has two front leveling legs. Adjust the legs to alter the tilt from front-to back or side-to side. If the appliance seems unsteady, or the door does not close easily, adjust the appliance's tilt using the instructions below:
 1. Turn the leveling leg counterclockwise to raise that side of the appliance or clockwise to lower it. It may take several turns of the leveling leg to adjust the height of the appliance.
 2. Open the door and check to make sure that it closes easily. If the door does not close easily, tilt the appliance slightly more to the rear by turning both leveling legs counterclockwise. It may take several more turns.

Positioning the Appliance

- Arrange the appliance so that it does not vibrate against adjoining surfaces or against the wall. Be sure to maintain a 2" clearance between the back of the appliance, sides and wall.

REVERSING THE DOOR

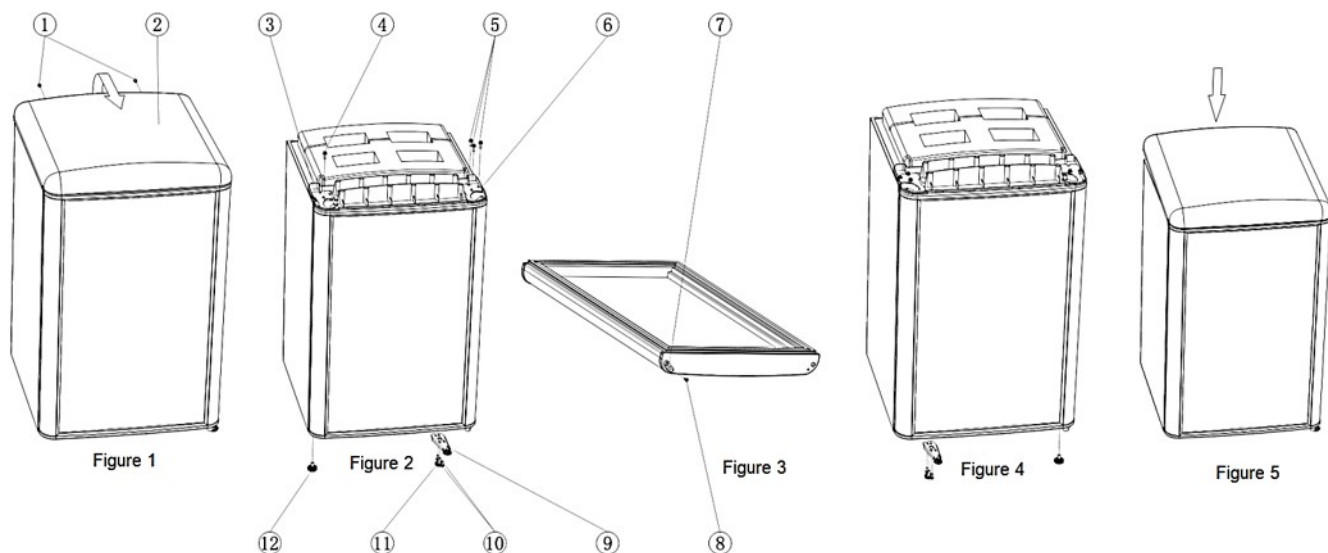

No.	Description	Qty
1	Top cover screw	2
2	Top cover	1
3	Left upper hinge	1
4	Left upper hinge screw	1
5	Upper hinge screw	3
6	Right upper hinge	1

No.	Description	Qty
7	Limit block	1
8	Door screw	1
9	Bottom hinge	1
10	Bottom hinge screw	2
11	Short front foot	1
12	Long front foot	1

Figure 1

- Remove top cover screw ①.
- Push the rear of the top cover ② up above the top of the wine cooler and then push it forward to remove it.

Figure 2

- Remove the upper hinge screws ⑤ and the right-upper hinge ⑥.
Caution: Protect the cooler door and ensure that it does not fall and get damaged.

Figure 3

- Lay the door on a protected surface and ensure that the door seal does not get damaged.
- Remove door screw ⑧ and limit block ⑦.
- Install the limit block ⑦ into the corresponding hole on the other side of the door and affix the door screw ⑧.

Figure 2

- Remove the bottom hinge screw ⑩, short front foot ⑪, and long front foot ⑫.
- Remove the bottom hinge ⑨.

Figure 4

- Install the bottom hinge into the corresponding hole on the other side (left side) of the wine cooler.
- Install the bottom hinge screw ⑩ and Short front foot ⑪.
- Install the long front foot into the corresponding hole on the other side (right side) of the wine cooler.
- Install the limit block ⑦ into the bottom hinge ⑨ shaft.
- Remove the upper hinge screw ④ and left-upper hinge ③.
- Turn the left-upper hinge ③ over and insert the shaft into the corresponding shaft hole of the door, then affix the upper hinge screw ⑤.
- Install the right-upper hinge ⑥ in the axial upward direction and affix the upper hinge screw ④.

Figure 5

- Insert the top cover ② into the corresponding slot.
- Press the rear part down into place and affix the top cover screw ① to complete.

Note: The height of the two-door feet is different, do not install them in the wrong position when changing the door.

OPERATION

Before Use



 
WARNING

- When the control is **OFF**, power is still supplied to the appliance. Disconnect the power before servicing or cleaning to prevent injury or death.
- If the appliance is unplugged, turned **OFF**, or has lost power, you must wait for 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the appliance may not start immediately.



CAUTION

- Do not scratch the appliance with a sharp object or use a detergent that contains alcohol, a flammable liquid, or an abrasive when removing any tape or adhesive from the appliance.

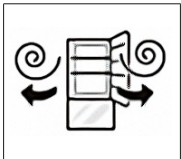

- Do not peel off the model or serial number label or the wiring diagram on the rear surface of the appliance, as this will void the warranty.
- Open appliance doors to ventilate the interior, as the appliance may have a "new car smell."
- Clean the appliance thoroughly by wiping off all surfaces with a soft cloth and mild detergent.



- The appliance may make a loud noise after the initial operation. This is normal and will decrease as the temperature decreases.
- Remove any adhesive tape from inside the appliance and open the doors for ventilation.

Control Panel Display

Depending on the model, some of the following functions may not be available. The control panel display may differ from model to model.



Power key



LED light




Increase key





Decrease key



Digital display



Auto Lock –  No setting can be changed when the lock is activated. The lock is automatically activated 2 minutes after a setting is changed or there is no activity. When engaged, pressing any key will result in a 3 beep alarm.

To deactivate the auto lock, press and hold both the **Power key**  and **LED light key**  simultaneously for 5 seconds. A 2-beep alarm will be heard.

You must deactivate the Auto Lock to access any of the control panel operations listed below.



Turn ON – Press and hold the **Power key**  for 5 seconds.

Turn OFF – Press and hold the **Power key**  for 5 seconds. The display will indicate “oF”.

To raise or lower the Temperature – using the  or  keys, press and release the

key to cycle to the desired temperature. A few seconds after the key is released the display will stop flashing and the temperature will be set.

 
Unit of temperature - The display will indicate whether the set temperature is °C or °F.

To change from °C->°F or °F->°C press and release both  and  keys simultaneously. The digital display will change.

LED Light – press and release the **LED light key**  to turn the light **ON** or **OFF**


NOTE: The appliance temperature will vary depending on the amount of items stored and frequency with which the door is opened. The internal temperature varies in different parts of the appliance. The back of the appliance is coldest. Items in the door shelves will be the least cold. Temperature may vary by 5 °F (3 °C) throughout the appliance.

Wood Shelves

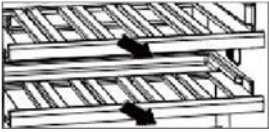

- Wood shelves can be positioned to the desired height by the user.
- To reposition or remove a shelf gently slide out the shelf out towards you.
- Gently re-install the shelf at the desired position by reversing this step.

 Water Drain Port

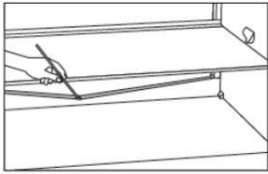

- The water drain port at the rear of the appliance collects condensate from the rear wall of the appliance and funnels it down to the drain pan where it is then assists in the cooling process.

ENERGY SAVINGS TIPS

- Do not install the appliance close to sources of heat, such as a stove, boiler, heater, chimney, etc., and avoid exposure of the appliance to direct sunlight.
- Locate the appliance in a cool well-ventilated room and make sure that the air vents of the compressor housing cover are not obstructed. Also allow adequate spacing around the cabinet for air circulation (2").
- Avoid keeping the door open for extended periods of time or opening the door too frequently as warm air will enter the cabinet and cause the compressor to run unnecessarily.

CLEANING



WARNING

- Unplug the appliance from the power source before cleaning.
- Do not use large amounts of water or liquid when cleaning the appliance as this may affect electrical components, insulating properties of the appliance and the wooden shelves.



CAUTION

- Do not use any detergents or flammable substances such as alcohol, thinner, bleach, or other flammable liquids to clean the appliance.
- Cleaning solutions that contain abrasives, acids or solvents are not suitable for cleaning and may damage the appliance and cause discoloration. Do not use these types of cleaners.
- Do not use sharp objects when cleaning the appliance as these may scratch the appliance.
- Do not peel off or damage the model or serial number labels on the surfaces of the appliance as this will void the warranty.
- Regular cleaning of the appliance is recommended to prevent odors and ensure efficient operation of the unit. This includes interior surfaces such as interior walls, wooden shelves as well as exterior components such as door gaskets, glass, sides, and the condenser unit.
- Use a soft damp cloth with mild detergent to clean all surfaces.
- Removable parts such as the shelves may be taken out for cleaning.
- Wipe up spills immediately.
- Surfaces should be dried after being wiped.



 
CAUTION

Exercise care when moving shelves to avoid breakage.

Exterior Cleaning

- Check and clean the door gasket regularly to ensure that there is no debris on it.
- Exterior surfaces of the appliance can also be cleaned with a soft damp cloth with mild detergent.
- Periodically clean the dust that accumulates under and behind the appliance to improve the cooling efficiency.


Water Drain Port



- The drain opening that collects moisture is located near the bottom of the appliance.
- When cleaning the appliance ensure that the opening is not clogged. Inspect and clean this frequently (i.e. with a plastic straw).

Water Catch Basin

 - There is a water catch basin located on top of the compressor for collecting excess water.
- When defrosting, water will flow from the appliance compartment through the defrost water drain down into the catch basin.

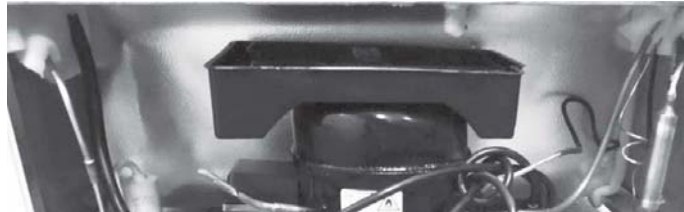

CAUTION

 
- Take notice as the water catch basin could overflow. You may use an absorbent sponge to remove the water.
- Do not attempt to remove the water catch basin from the appliance.

Compressor Cavity



WARNING

- Turn off the appliance and unplug the appliance from the power source before attempting to clean the compressor cavity.
- Take extreme care when cleaning this section of the appliance as it contains electrical and mechanical components as well as delicate refrigerant tubes that must not be damaged.

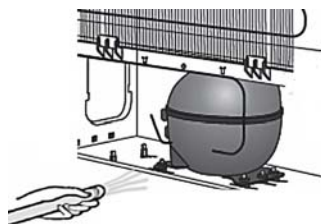

- The compressor cavity area can be cleaned with a vacuum equipped with a soft brush or crevice tool.
- Gently vacuum the dust that has accumulated in this area.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE OR REMEDY
Appliance is connected but does not work:	<ul style="list-style-type: none"> • Ensure that the appliance is plugged in and there is power in the outlet. • Confirm that circuit breaker or fuse has not tripped. • Confirm that the digital display is ON and functioning
Cooling system operates continuously for extended periods of time:	<ul style="list-style-type: none"> • Ambient temperature too high. • Door opened frequently or for too long. • Door not closed properly (misaligned, damaged or dirty door seals). • Large load added at once. • Temperature sensor blocked by food, preventing proper air circulation. • Ensure recommended clearances are adhered to. • Ensure there is adequate air circulation behind the appliance.
Excessive ice build up on the back wall: (Note: some moisture buildup is normal)	<ul style="list-style-type: none"> • Door opened too frequently or for too long. • Warm items placed in appliance. • Poor door sealing. • Door seal damaged or dirty, replace or clean seal. • Extremely humid environment.
Door will not close:	<ul style="list-style-type: none"> • Check and clean the door gasket regularly to ensure that there is no debris on it. • Ensure there is no frost build-up preventing the door from closing. May require to defrost.
Door difficult to open:	<ul style="list-style-type: none"> • Clean door gaskets and contact surfaces with mild soap and warm water. • Add non-slip pads to the appliance feet if it is sliding on the floor.
Water accumulation at the bottom of the appliance:	<ul style="list-style-type: none"> • Clogged water drain port. Over time the drain port may be clogged with dirt and debris. Push a small plastic straw down the hole to clear out any dirt.
LED lighting does not work:	<ul style="list-style-type: none"> • Call a service technician. Do not attempt to repair this yourself as there is a danger of making contact with high voltage.

For other troubleshooting inquiries or for an iio™ authorized repair center please contact us at: 1-833-446-4461 or email us service@iioKitchen.com.



WARRANTY

iio™ warrants this appliance will be free from defects in materials or workmanship for a period of TWO YEARS from the date of original purchase.

THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OR MERCHANT ABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Proof of purchase/original invoice may be required to claim warranty. Keep a photocopy easily accessible.

If the home in which the appliance is installed is sold within the warranty period, the new owner is protected until the expiration of the original purchaser's warranty. During this two-year period, iio™ will at its option, repair or replace, without charges, any product or part which is found to be defective under normal use and service.

This warranty does not cover:

- a) normal maintenance and service;
- b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance, or repair (except by an authorized iio™ repair center), faulty installation or installation contrary to recommended installation instructions
- c) cosmetic damage.

iio™ OBLIGATION TO REPAIR OR REPLACE, AT iio™ OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. iio™ SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, PRODUCT USE OR PERFORMANCE.

This warranty applies only within North America, to appliances installed for use for PRIVATE SINGLE-FAMILY USE. If used for COMMERCIAL, MULTI-FAMILY USE or any other purpose, the warranty will be voided.

Removal or disfigurement of the serial plate will void the warranty. The purchaser will be responsible for any extra expenses involved in making the appliance readily accessible for servicing. The purchaser will be responsible for any extra charges where the installation is in a remote location such as un-assumed roads, islands, and areas known as cottage country, 20 km outside a Metropolitan area or where a technician is not available. Freight damage is not covered by this warranty.

WE OFFER UP TO 5-YEAR EXTENDED WARRANTIES AT EXTREMELY REASONABLE PRICES. YOU STILL QUALIFY UP TO 9 MONTHS POST PURCHASE!

<https://store.iio.com/collections/extended-warranties>



For an iio™ authorized repair center please contact us at: 1-833-446-4461 or you can visit www.iio.com for more information.

YOUR APPLIANCE INFORMATION

To make it easier to request maintenance or warranty service, please record the following information and keep this manual near your appliance.

Make:	
Model:	
Serial Number:	
Invoice Number:	
Date Purchased:	
Store Name:	

NOTES:



We do the utmost to ensure that the provided information is complete and accurate; however, images and specifications are subject to change without notice.

Visit www.iiokitchen.com to download the latest version of the user manual.