


KitchenAid®

Dishwasher

MODELS:

KDTF324PPA0 (Panel Ready)


DOOR AND PANEL PARTS

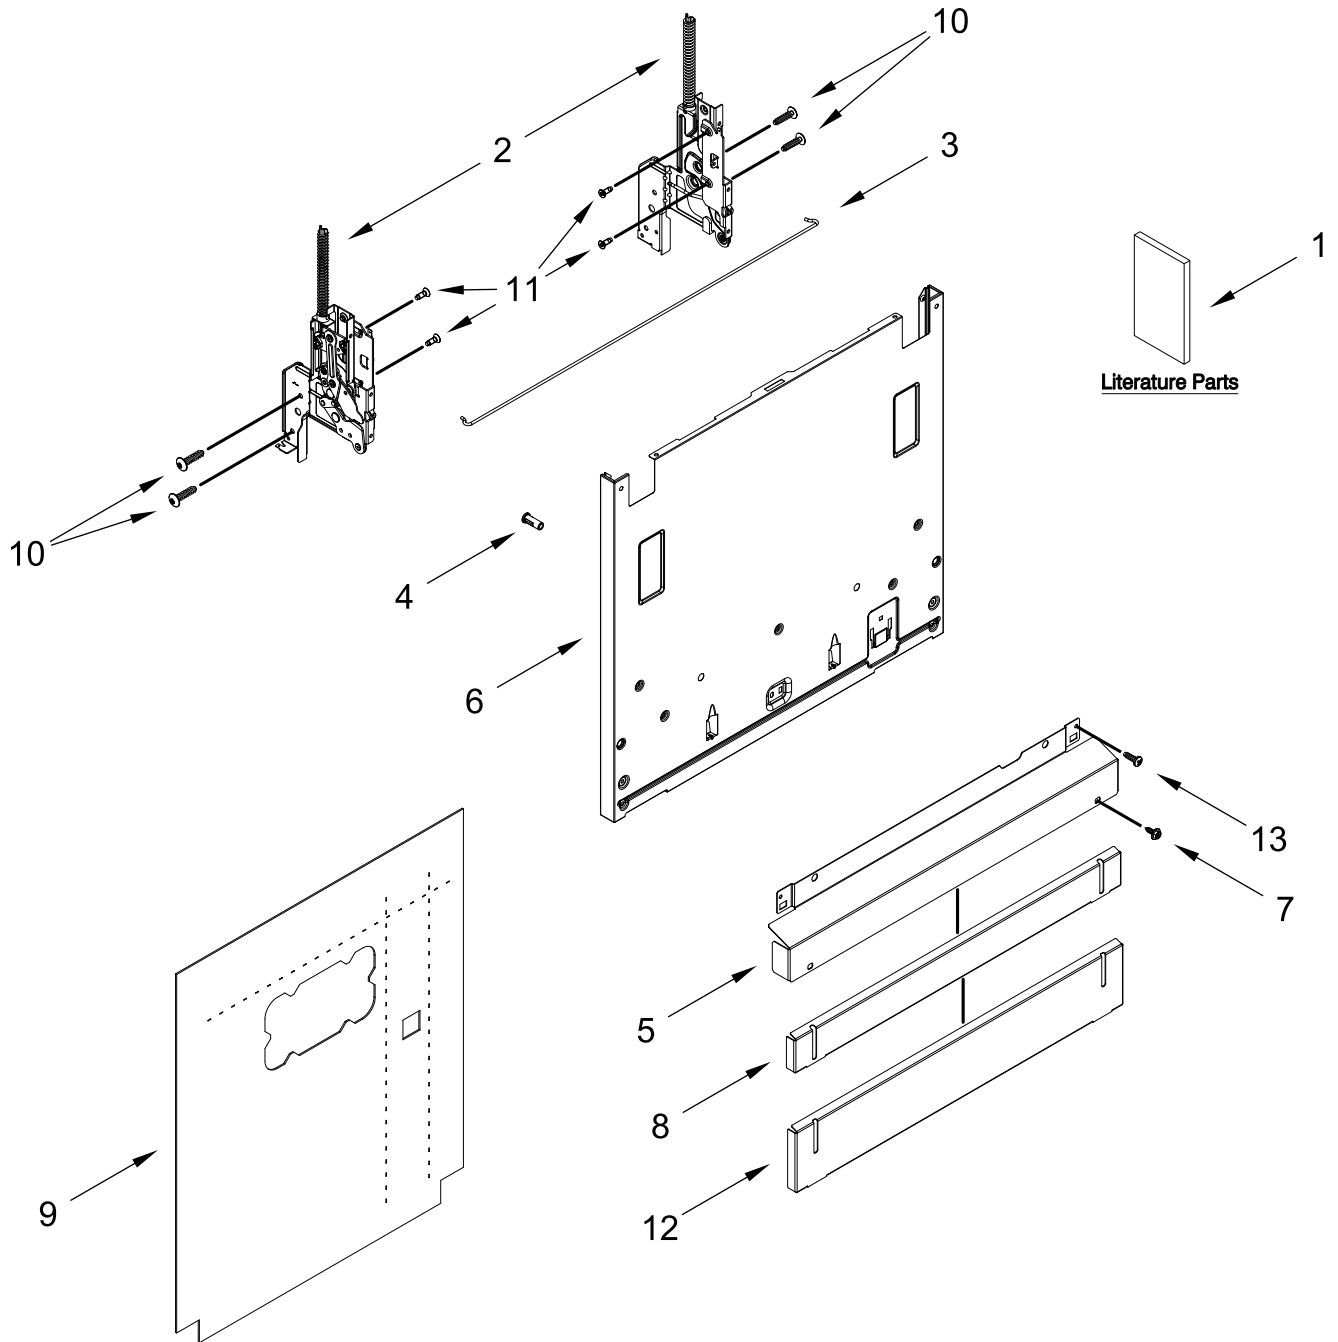

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10885778	Bushing, Door	9	W11564603	Insulation, Inner Door
	W11589935	Owners Manual	5	W11625157	Panel, Main Access (Black)	10	W10942031	Screw
	W11615384	Energy Guide				11	W10941985	Screw
	W11589945	Tech Sheet	6	W11524403	Panel, Outer Door (Includes 4)	12	W11625156	Panel, 4" Adjustable (Black)
2		Arm, Hinge	7	302868	Screw (Black)	13	W10942053	Screw
	W11631592	Left Hand						
	W11631591	Right Hand	8	W11625159	Panel, 2" Adjustable (Black)			
3	W11126789	Cross Brace, Door						


CONTROL PANEL AND INNER DOOR PARTS

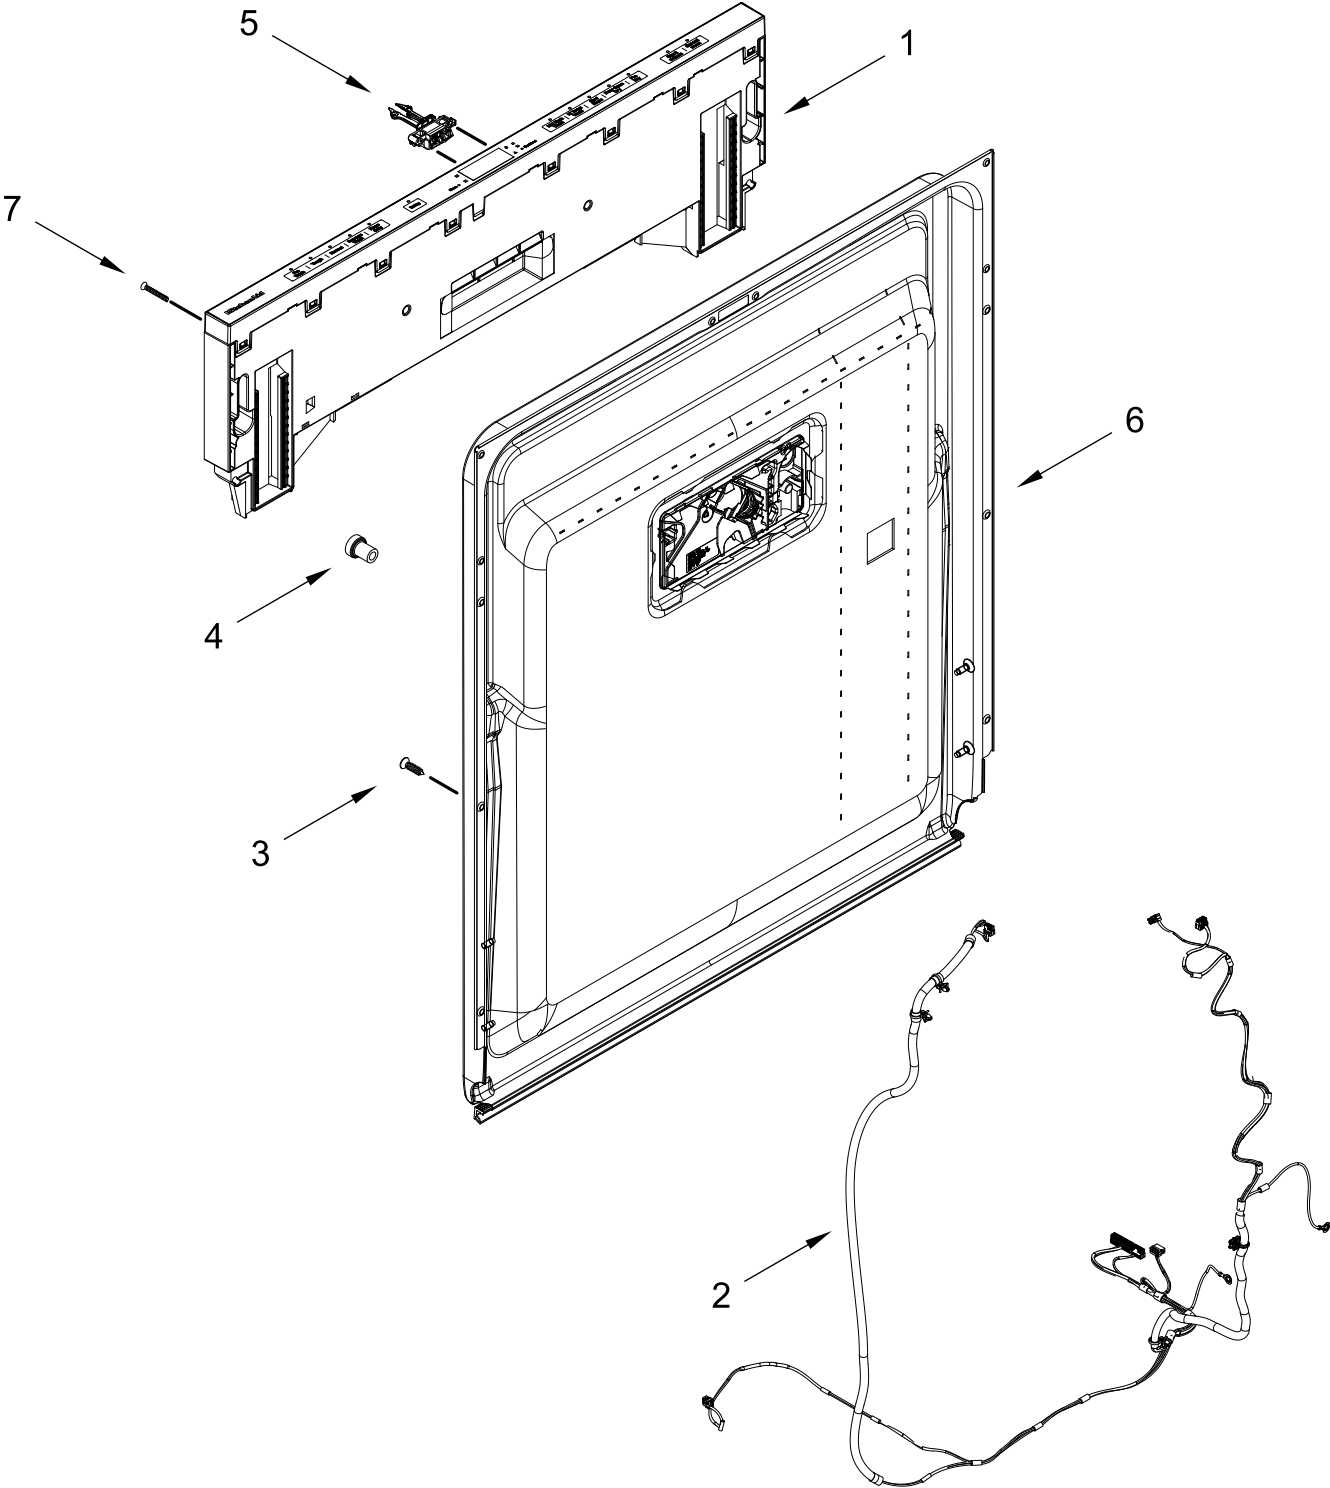

CONTROL PANEL AND INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	3	W10941960	Screw	6	W11684843	Inner Door Assembly (Includes Soap Dispenser)
	W11550042	Black	4	W10944891	Bushing, Shouldered			
2	W11608934	Wiring Harness, Inner Door	5	W11091934	Latch Assembly (Includes Switch)	7	W11381263	Screw


TUB AND FRAME PARTS

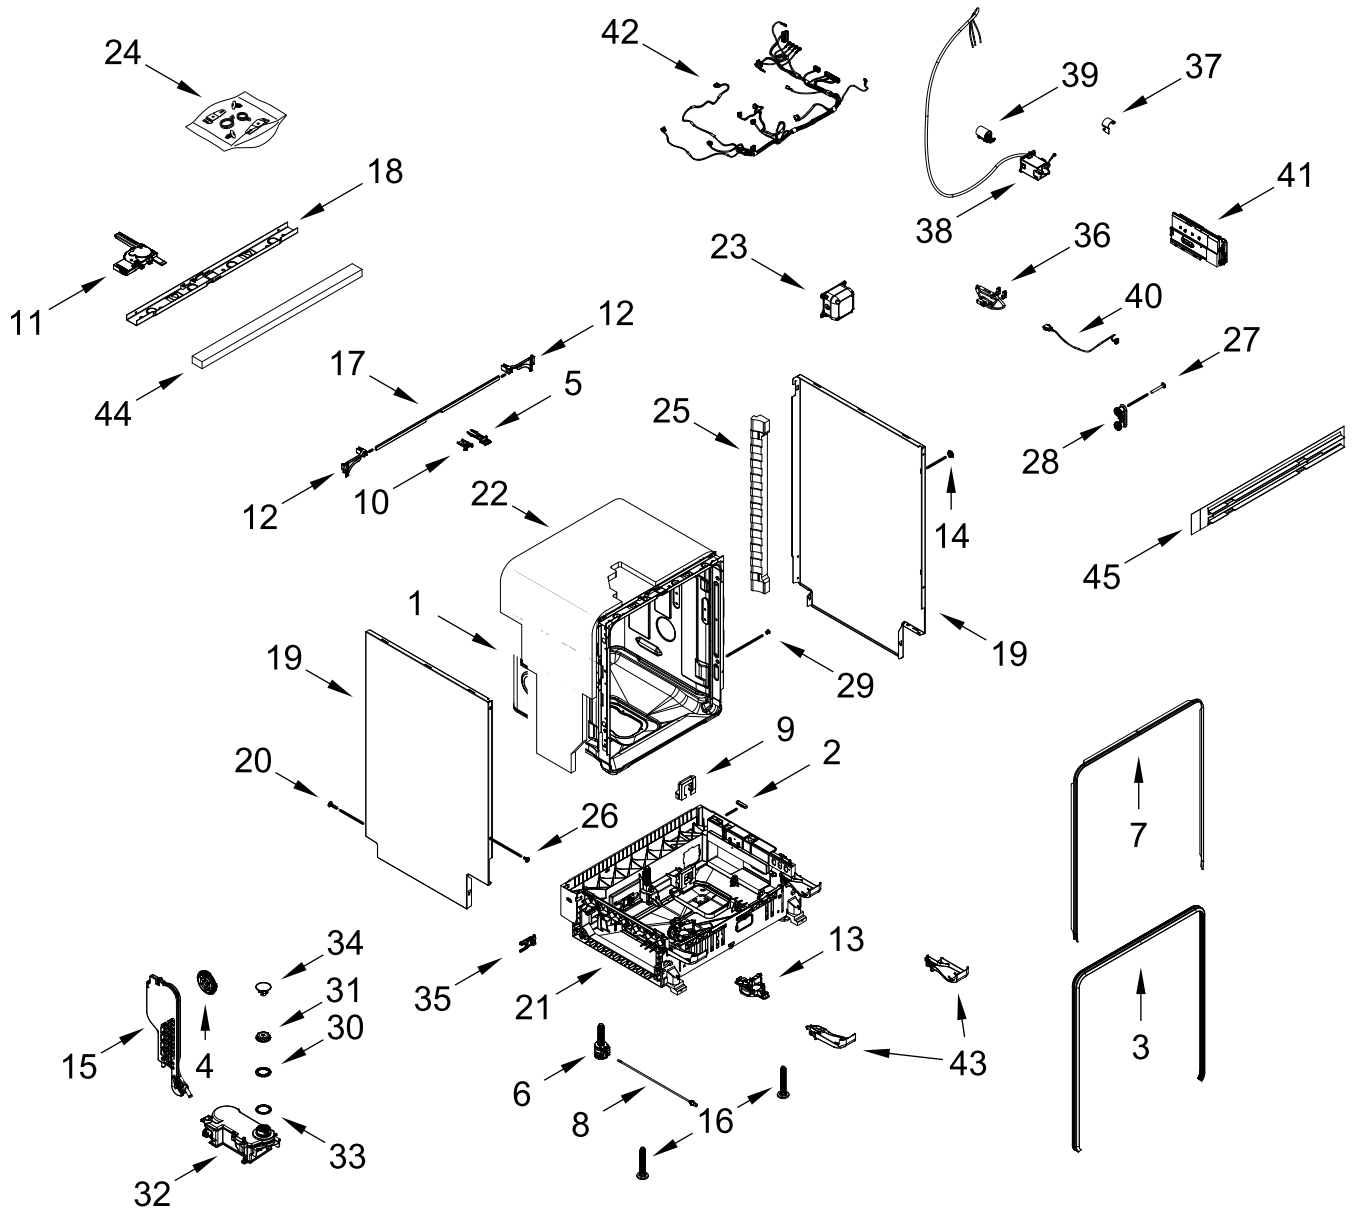

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Tub (Not Serviced)	16	W11325130	Leg, Leveling (Front)	32	W11546882	Softener, Water
2	W11671752	Pad, Tub Support	17	W11317036	Cover, Top	33	W11224085	Seal, Softener
3	W11658880	Gasket, Tub	18	W11306174	Crossbar, Front Frame	34	W11509486	Funnel, Salt
4	W11236521	Nut, Air Break	19	W11355600	Side Panel (Left)	35	W11686061	Plate, In/Out Hoses
5	W11314779	Strike, Latch		W11355598	Side Panel (Right)	36	W11545951	Jumper, RFI to Control
6	W11316238	Assembly, Leveling Leg (Rear)	20	W10986499	Screw	37	W10943118	Spring, Grounding
7	W11554391	Retainer, Tub Gasket	21	W11690567	Assembly, Base	38	W11578108	Power Cord Assembly
8	W11325471	Rod, Foot Adjustment (Rear)	22	W11564606	Shield, Tub Sound	39	W11418782	Filter, RFI
9	W11668893	Holder, Damper	23	W11643567	Assembly, Junction Box	40	W11646878	Jumper Harness, Service Port
10	W11317043	Cover, Door Opening	24	W11696040	Miscellaneous Parts Bag	41	W11696407	Control, Electronic
11	W11590760	Assembly, Door Opening	25	W11525808	Spacer, Side Panel	42	W11609315	Wiring Harness, Main
12	W11316692	Cover, Tub Corner (Left)	26	W11350847	Screw	43	W11684708	Channel, Overflow (Left)
	W11316688	Cover, Tub Corner (Right)	27	W10941972	Screw		W11684709	Channel, Overflow (Right)
13	W11602936	Float Switch	28	W11345595	Tub Mount, Upper Rack	44	W11676843	Foam, Crossbar
14	W11321022	Plug, Tub	29	W11656505	Button, Tub	45	W11673775	Kit, Side Cover Installation
15	W11568183	Air Break	30	W11227921	Nut, Softner			
			31	W11227934	Cap, Salt			


PUMP, WASHARM AND MOTOR PARTS

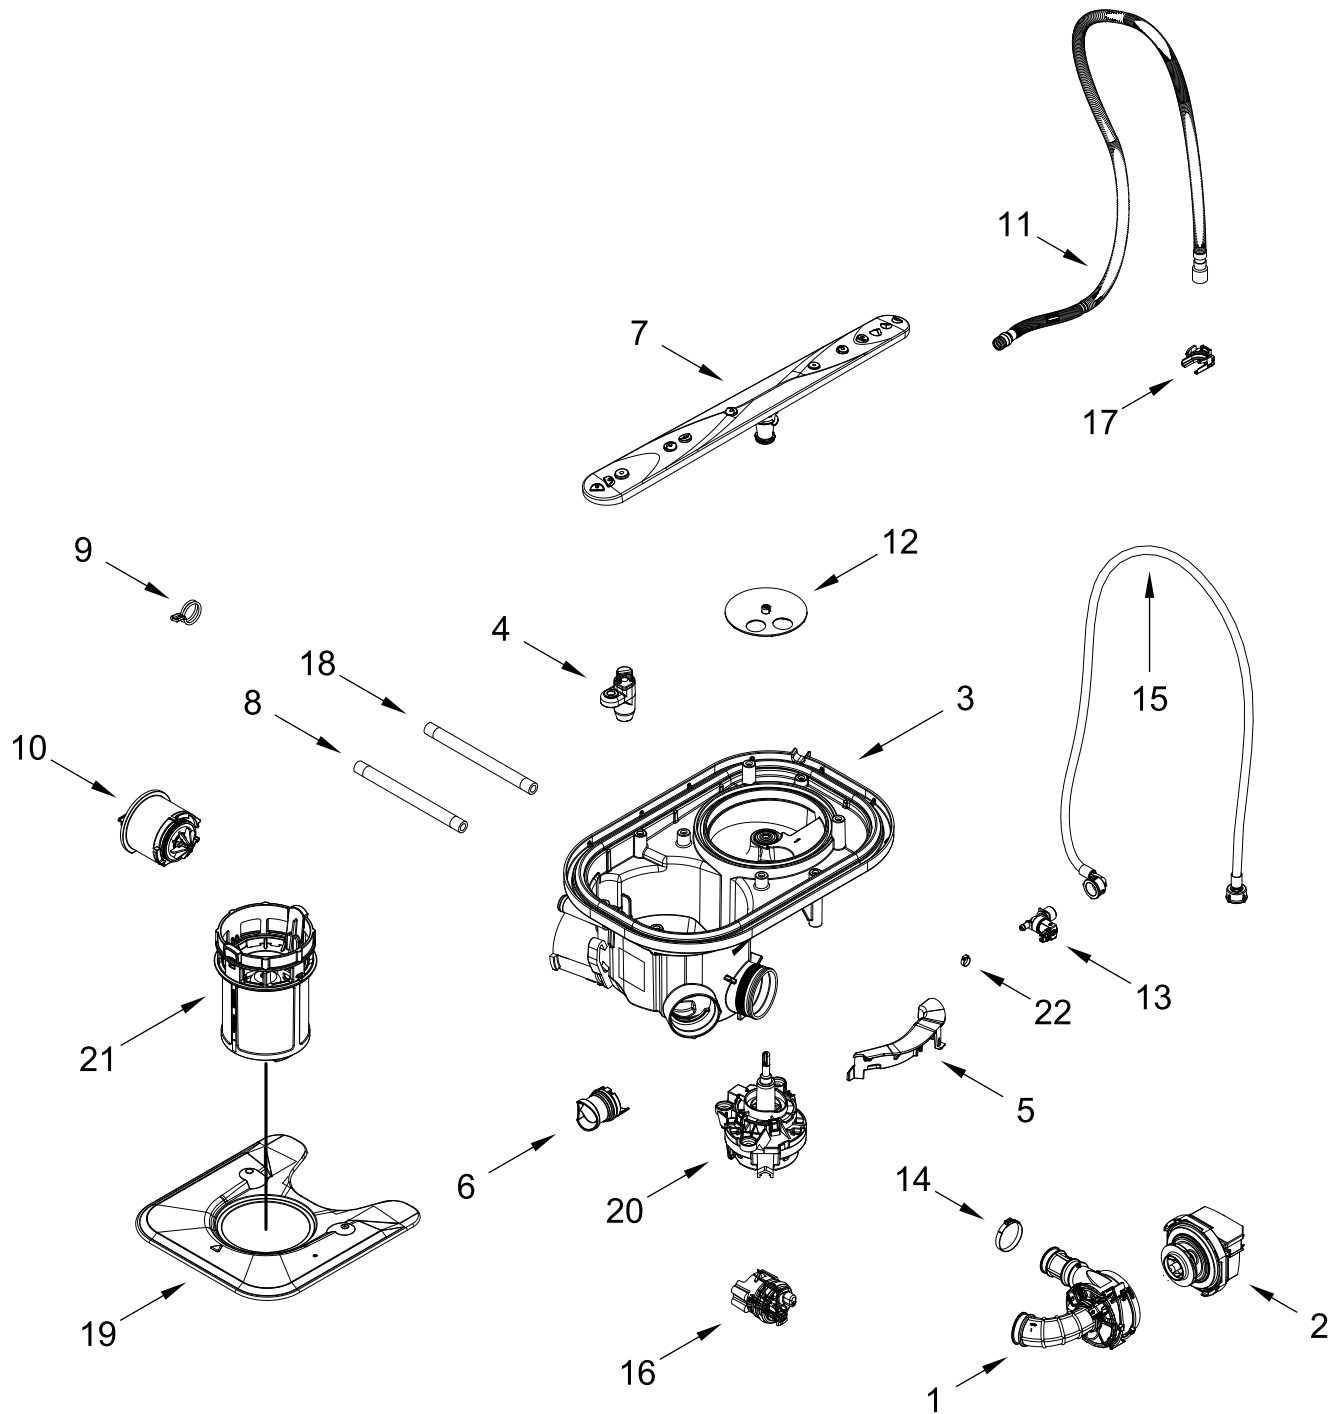

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11630727	Heater, Pump	9	W10096851	Clamp, Hose	17	W11626817	Clip, Hose
2	W11630725	Motor, Pump	10	W11631981	Motor, Drain	18	W11008964	Hose, Inlet
3	W11560668	Sump (includes Seal)	11	W11586395	Hose, Drain	19	W11445183	Grate
4	W11559823	Drain Vent Assembly	12	W11175586	Disc, Diverter	20	W11543924	Diverter Valve Motor
5	W11560657	Diffuser, Inlet	13	W11545826	Fill Valve Assembly	21	W11559846	Filter
6	W11560834	Check Valve, Drain	14	W11122851	Clamp, Hose	22	W11015323	Clamp, Hose
7	W11528063	Wash Arm Assembly	15	W11457583	Hose, Inlet			
8	W11008962	Hose, Pump Inlet	16	W11126174	Indicator, Optical Wash			


UPPER WASH AND RINSE PARTS

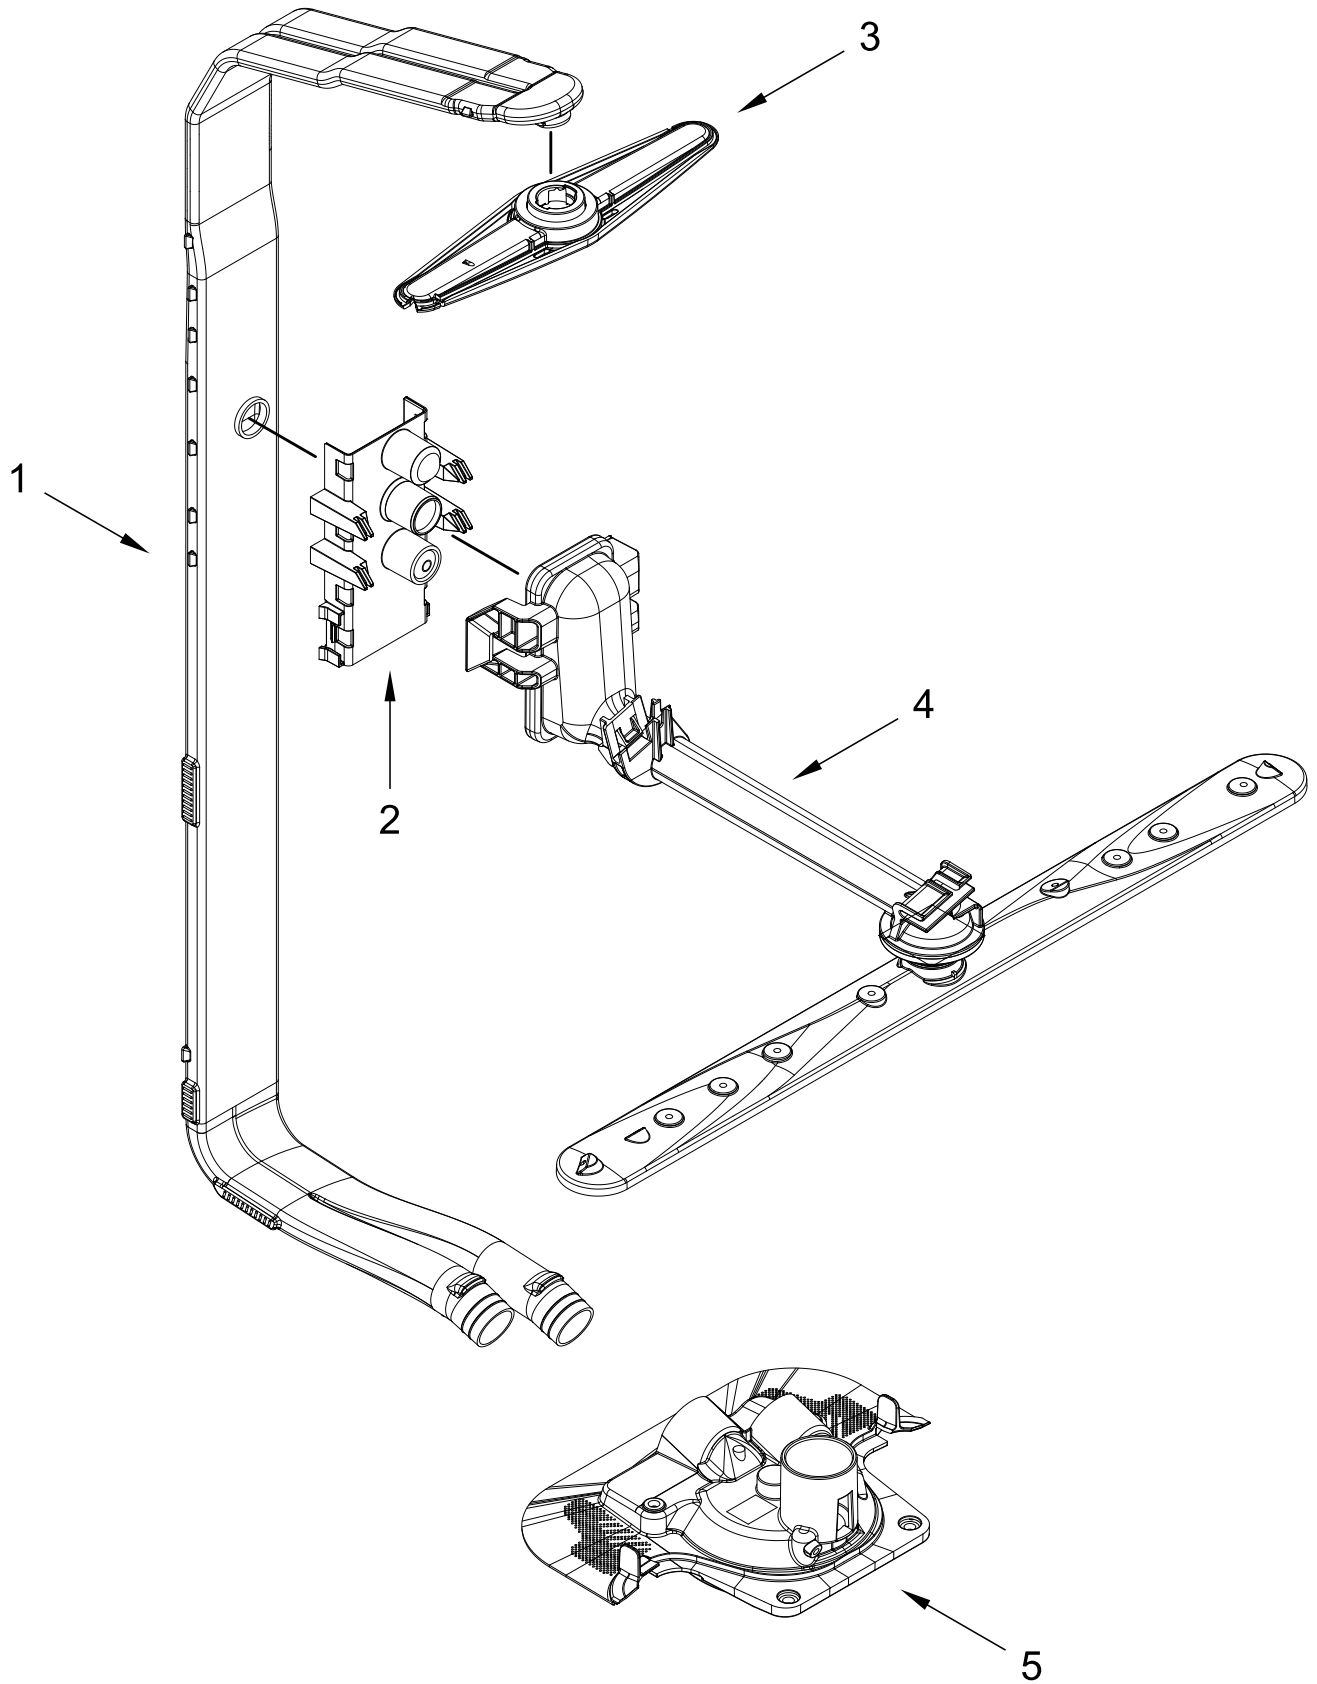

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11668593	Feed Tube Assembly	3	W11522201	Sprayarm, Third Level	4	W11680190	Upper Sprayarm Assembly
2	W11522213	Retainer, Docking (2nd Level)				5	W11602500	Cover, Diverter


UPPER RACK AND TRACK PARTS

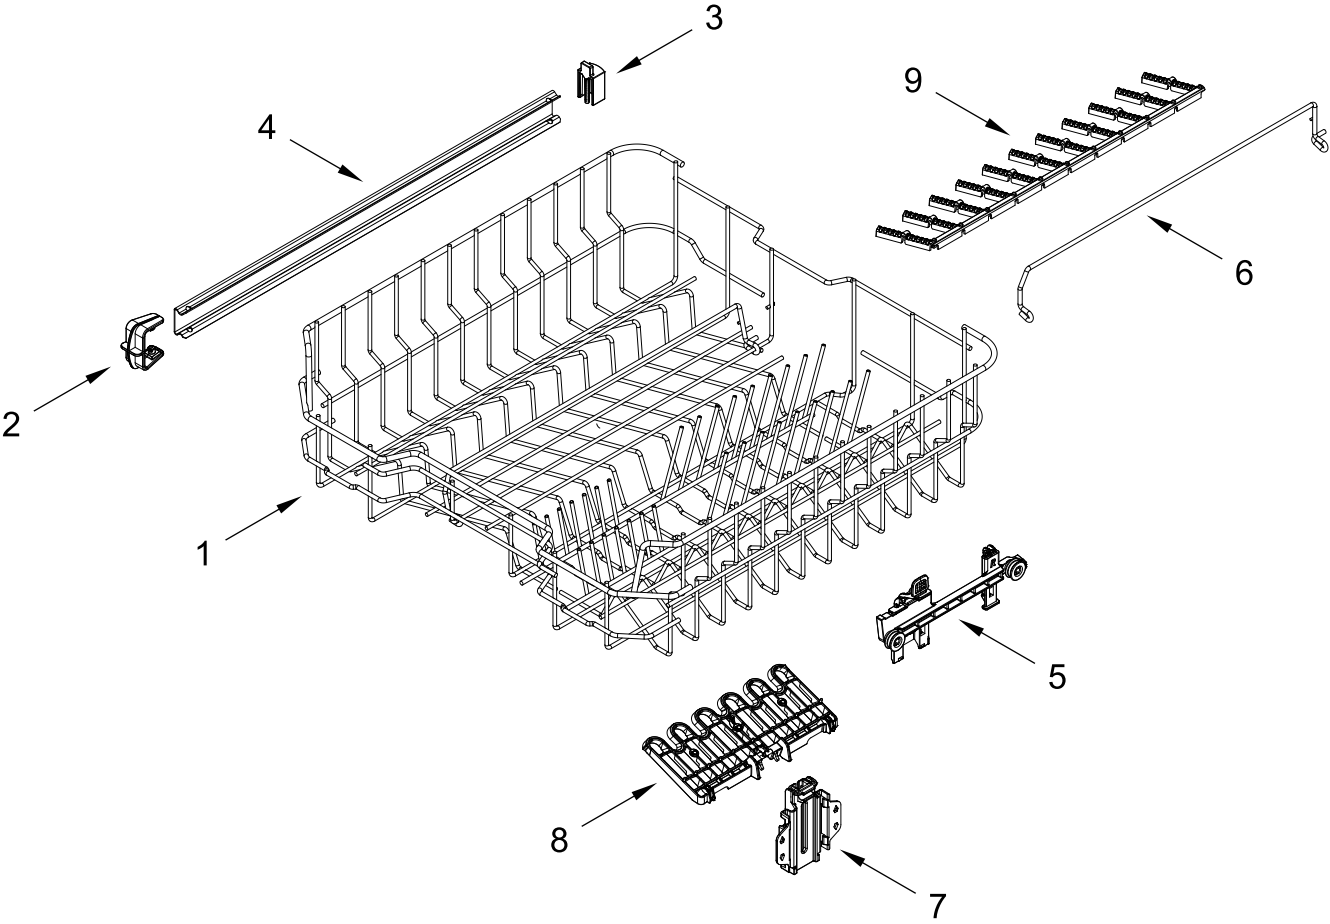

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11521613	Dishrack, Upper	5	W11561901	Adjustment Assembly (Left)	6	W11356045	Support, Tine Row
2	W11315114	Track Stop, Front				7	W11592682	Clip, Cup Shelf
3	W11315116	Track Stop, Rear		W11561900	Adjustment Assembly (Right)	8	W11592896	Cup Shelf
4	W10884045	Track, Dishrack				9	W11538488	Tine Row, Fold Down

LOWER RACK PARTS

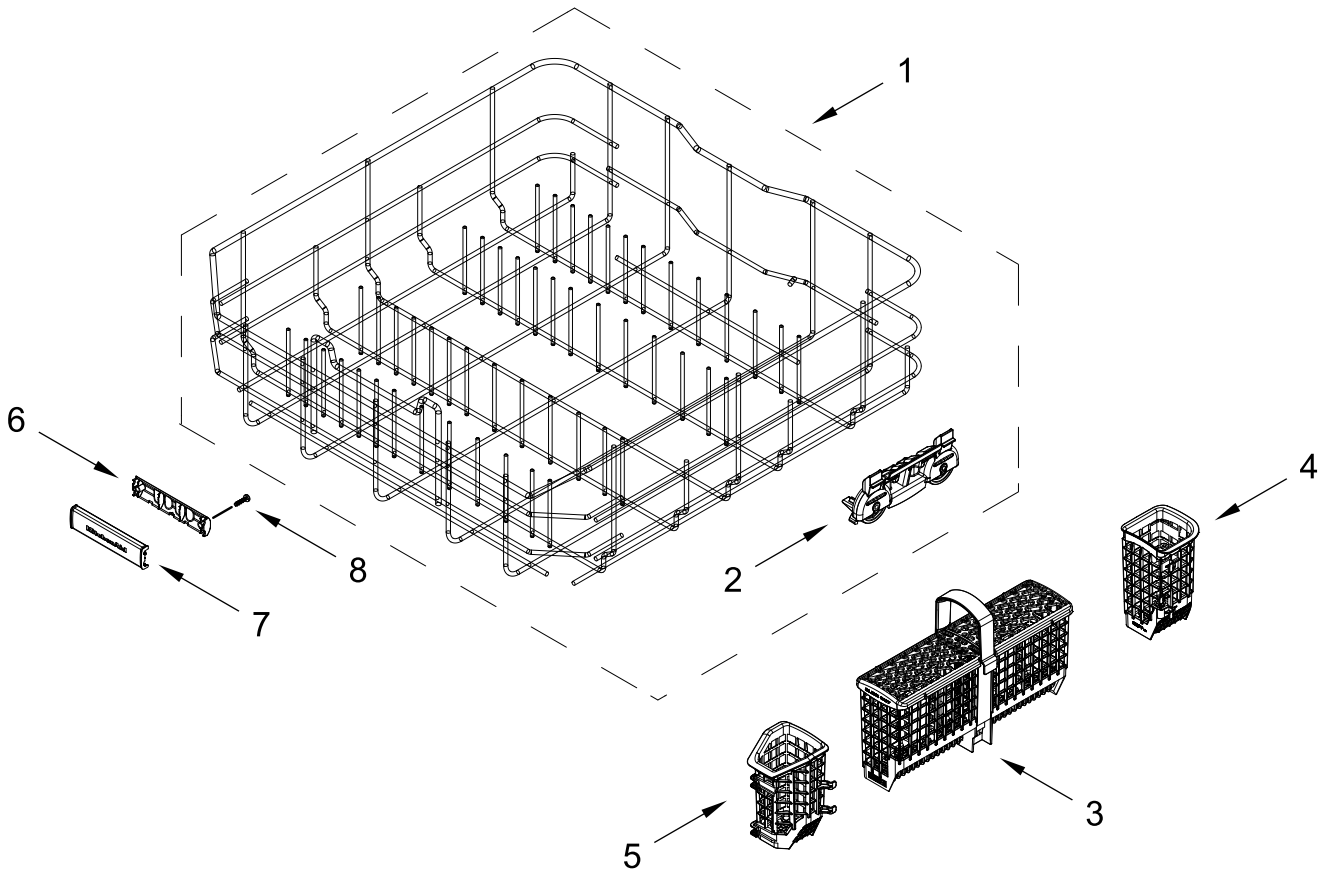

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11543671	Dishrack, Lower	4	W11634637	Utensil Basket (Rear)	7	W11590247	Handle, Front
2	W11543733	Wheel & Transport Assembly	5	W11634635	Utensil Basket (Front)	8	W11337336	Screw
3	W11629677	Silverware Basket Assembly	6	W11590235	Handle, Rear			