


KitchenAid®

Dishwasher

MODELS:

KDTM405PPS1 (Stainless)


DOOR AND PANEL PARTS

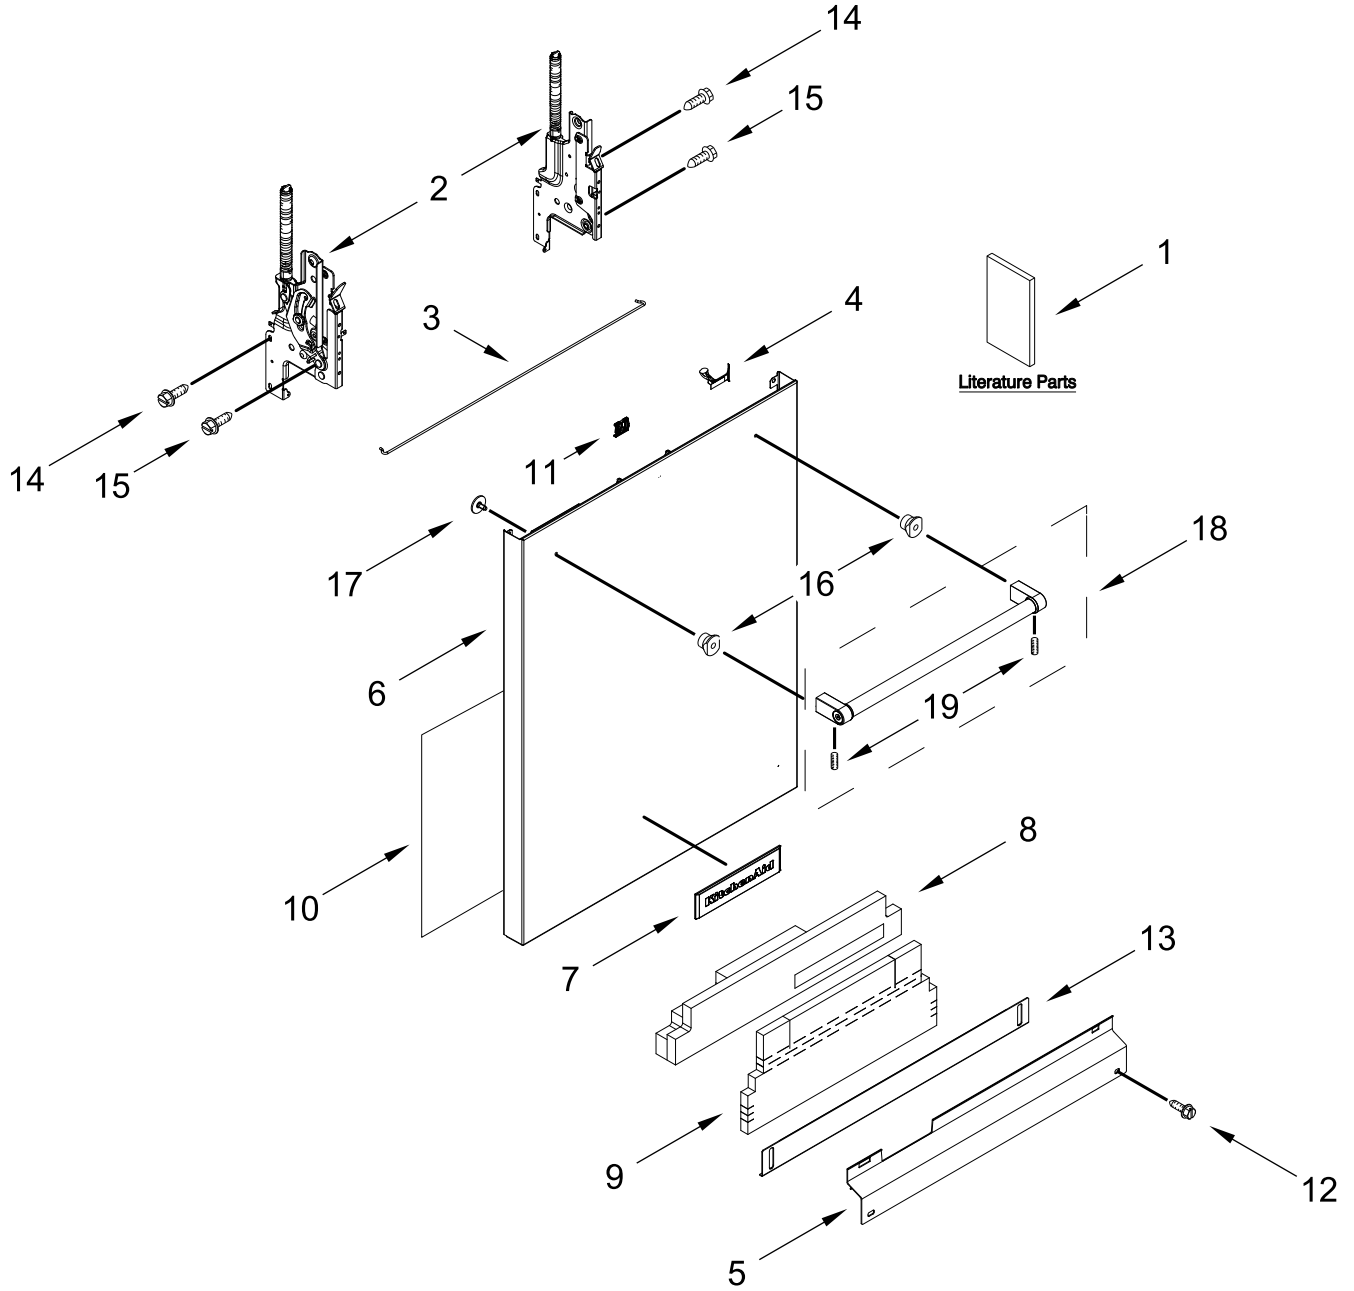

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	
1		Literature Parts	6		Front Panel (Includes 4, 7 & 11)	13		Toe Panel	
	W11323304	Owners Manual		W11233283	Stainless		W11467733	Black	
	W11655303	Energy Guide		7	W10518673	Nameplate	14	W11364953	Screw
	W11366142	Tech Sheet		8	W10919858	Insulation, Multi-Layer	15	3400000	Screw
2		Arm, Hinge		9	W11038694	Insulation, Single Layer	16	W11049903	Stud, Mounting
	W11662392	Left Hand		10	W10919859	Insulation, Front Panel	17	W10316572	Screw
	W11662370	Right Hand		11	W10692757	Barrel Nut, Front Panel	18		Handle Assembly
3	W11377160	Cross Brace, Door		12	W11438978	Screw, Black		W11417401	Stainless
4	W11102920	Light Pipe					19	W10687133	Set Screw
5		Access Panel							
	W11108979	Black							


CONTROL PANEL AND INNER DOOR PARTS

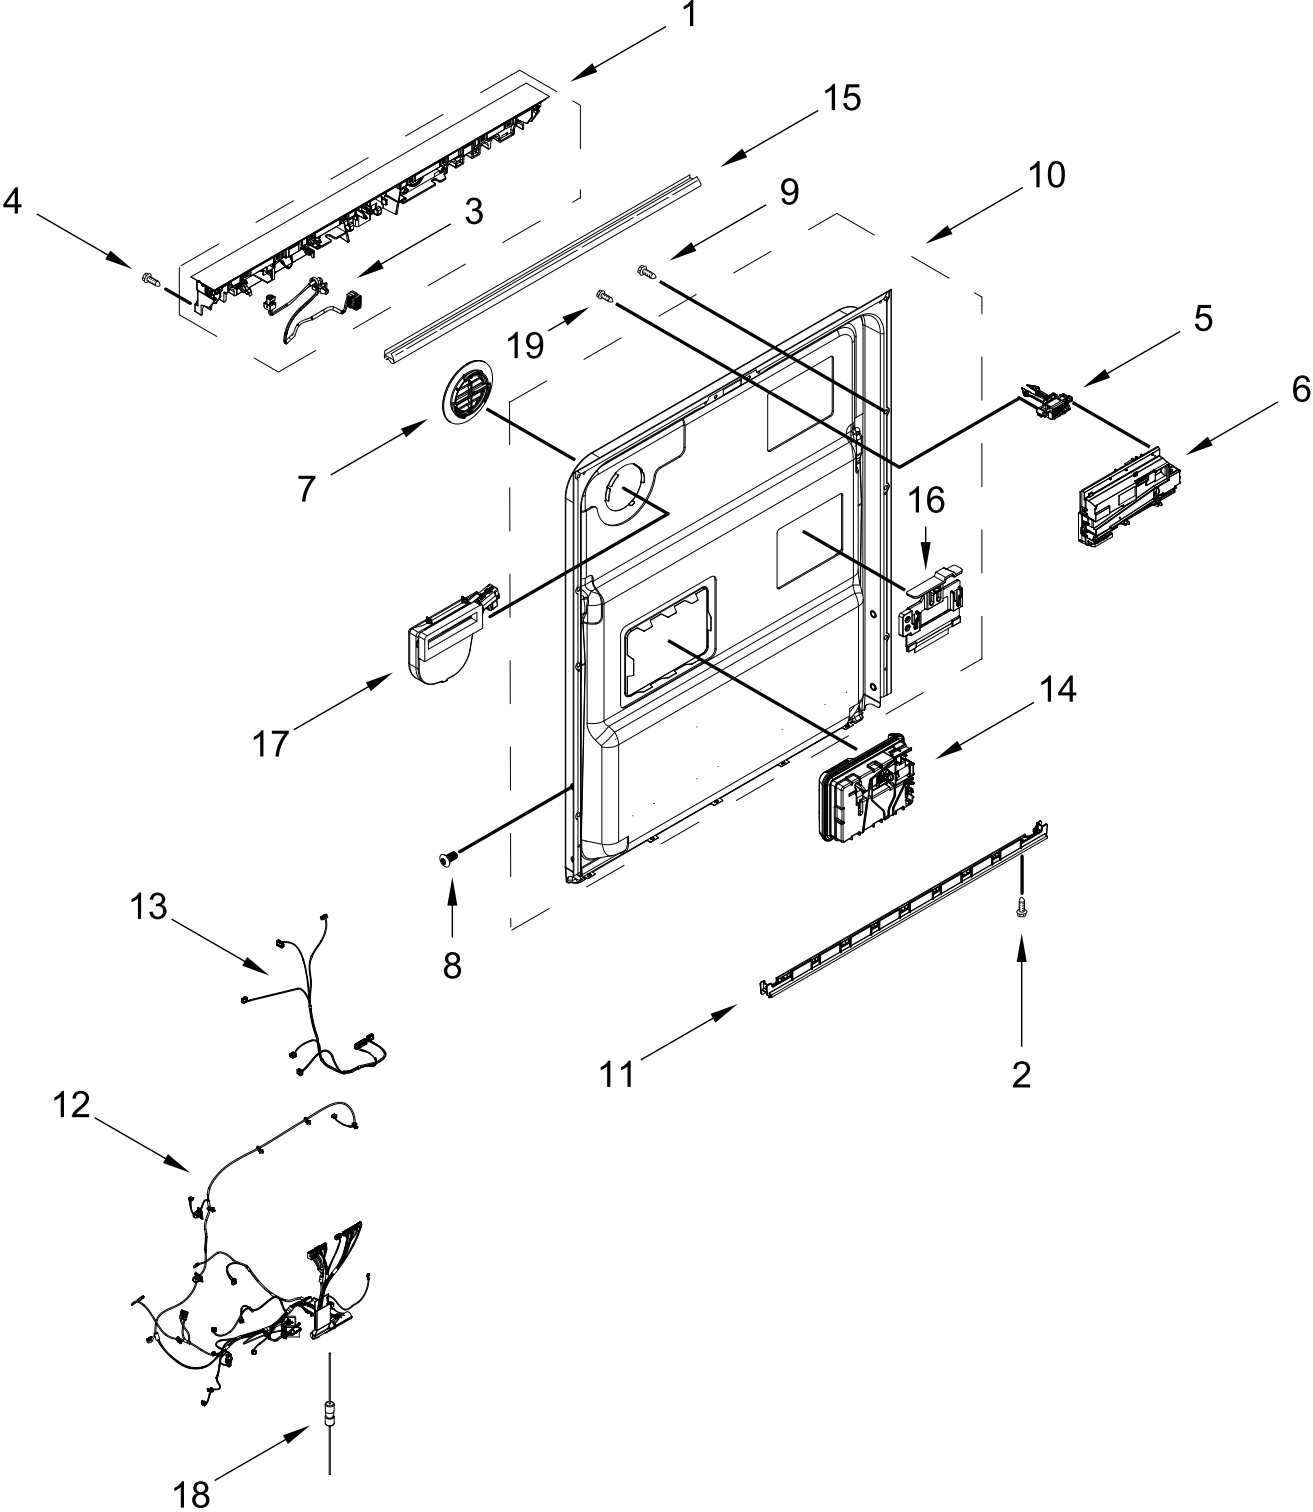

CONTROL PANEL AND INNER DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	8	3400071	Screw	15	W11050927	Seal, Console/Door
	W11496608	Black	9	W10348409	Screw	16	W11088985	Hanger, Control
2	W11258418	Screw	10	W11098822	Inner Door Assembly	17	W11527847	Vent Assembly
3	W11336943	Jumper, Door	11	W11563231	Seal, Door Bottom	18	W11397505	Fuse, In-line
4	W10711884	Screw	12	W11649439	Wiring Harness, Main (Includes Thermostat & Fuse)	19	W10348408	Screw
5	W11091934	Latch Assembly (Includes Switch)	13	W11630926	Wiring Harness, Inner Door			
6	W11673342	Control, Electronic	14	W11092649	Dispenser Assembly			
7	W11025634	Bezel, Vent						


TUB AND FRAME PARTS

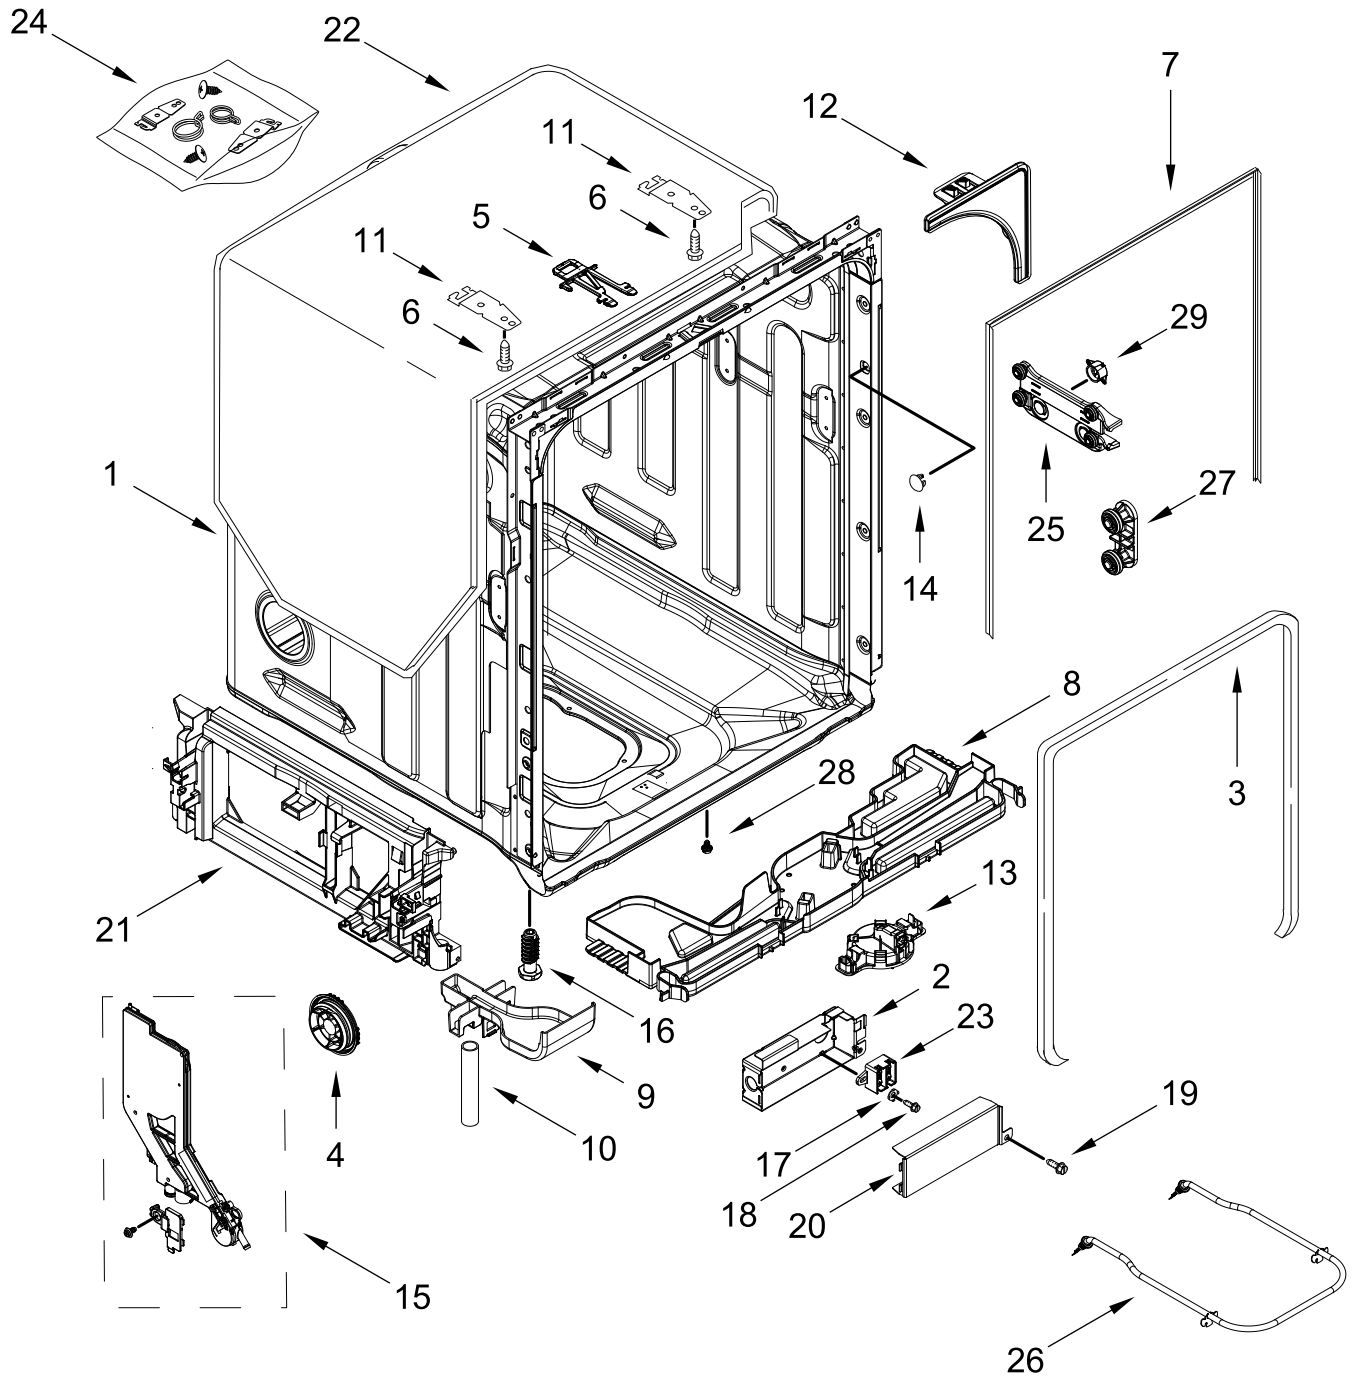

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11120458	Tub Assembly (includes gasket)	13	W11036170	Float Switch	24	W11362500	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)
2	W11226744	Base, Terminal Box	14	W11184083	Plug, Tub			
3	W11035860	Gasket, Tub	15	W11429970	Water Inlet Assembly	25		Tub Mount, Third Level Rack
4	W11429974	Nut, Water Inlet	16	W11455395	Leg, Leveling			
5	W11090487	Strike, Latch	17	3378128	Washer, Pronged Cup		W11101573	Left Hand
6	W11296374	Screw	18	3400014	Screw, Grounding		W11256439	Right Hand
7	W11165091	Seal, Cabinet	19	W10277003	Screw	26	W11536143	Heater Element Assembly
8	W11025993	Drip Tray	20	W11226746	Cover, Terminal Box	27	W11086088	Tub Mount, Upper Rack
9	W11025986	Funnel, Overfill Protection	21		Side Support, Tub	28	3400892	Screw
10	W11025988	Funnel Extension		W10920122	Left Hand	29	W10920244	Nut, Tub
11	8269145	Bracket, Undercounter		W10920120	Right Hand			
12	W11165093	Cover, Tub Corner	22	W11221921	Shield, Tub Sound			
			23	W11132441	Terminal Block			


PUMP, WASHARM AND MOTOR PARTS

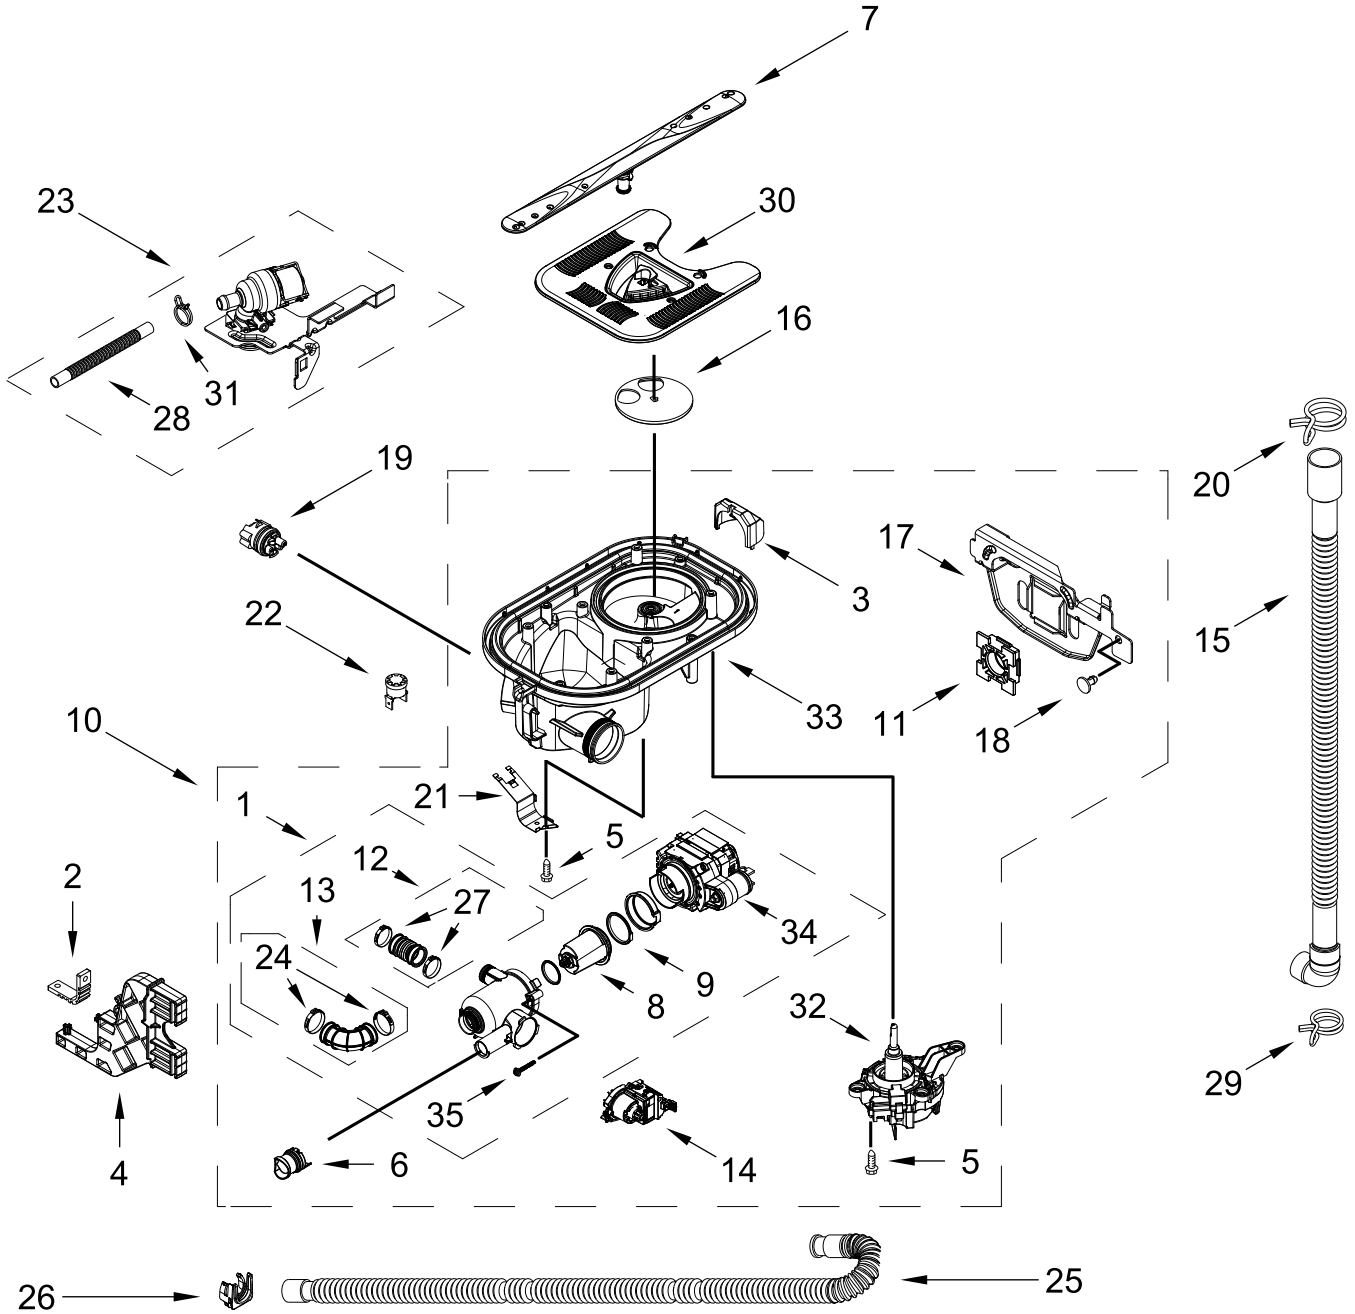

PUMP, WASHARM AND MOTOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11122133	Pump Assembly	13	W10900387	Hose, Suction	24	W11122851	Clamp, Hose
2	W11294352	Isolator, Front Motor	14	W11035709	Motor, Drain	25	W11036161	Hose
3	W10891545	Diffuser, Inlet	15	W11131184	Hose, Drain	26	W11036143	Clip, Hose
4	W11294350	Hanger, Front Motor	16	W10903468	Disc, Diverter	27	W10466656	Clamp, Hose
5	9741232	Screw	17	W11025963	Bracket, Rear Motor	28	W11036287	Hose, Inlet
6	W10891547	Check Valve, Drain	18	W11418271	Fastener	29	W11236576	Clamp, Hose
7	W11048456	Wash Arm Assembly	19	W11126174	Indicator, Optical Wash	30	W11039864	Grate
8	W11108699	Filter Assembly	20	370445	Clamp, Hose	31	371505	Clamp, Hose
9	W10380239	Ring, Volute	21	W11163419	Bracket, Thermostat	32		Diverter Valve Motor (Not Serviced)
10	W11345228	Motor & Sump Assembly	22	W11193089	Thermostat (Included with Main Wiring Harness)	33	W11034556	Sump (includes Seal and Diverter)
11	W11036663	Isolator, Rear Motor	23	W11025970	Fill Valve Assembly	34	W10753070	Capacitor
12	W11250985	Hose, Pressure				35	W10467002	Screw


UPPER WASH AND RINSE PARTS

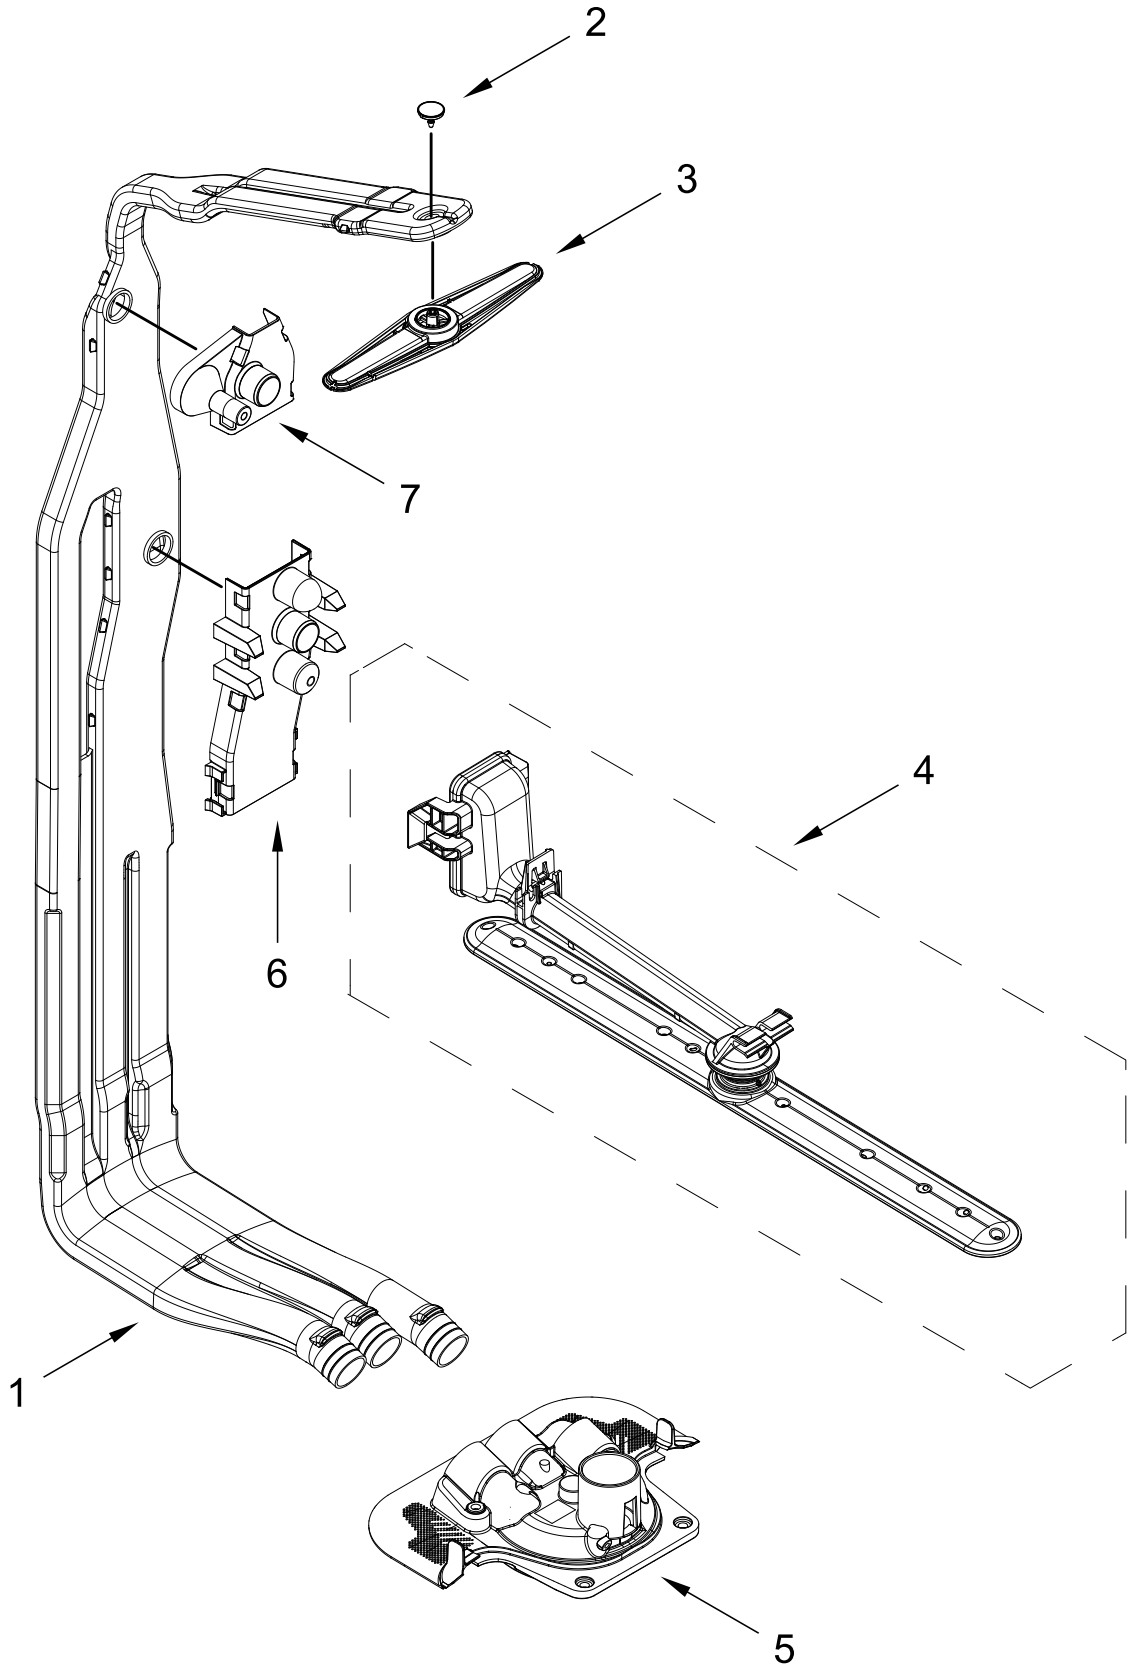

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10872558	Feed Tube Assembly	4	W11174340	Upper Sprayarm Assembly	6	W10892836	Retainer, Docking (2nd Level)
2	W11039888	Retainer						
3	W11039869	Sprayarm, Third Level	5	W10903465	Cover, Diverter	7	W10892835	Retainer, Docking (3rd Level)


UPPER RACK AND TRACK PARTS

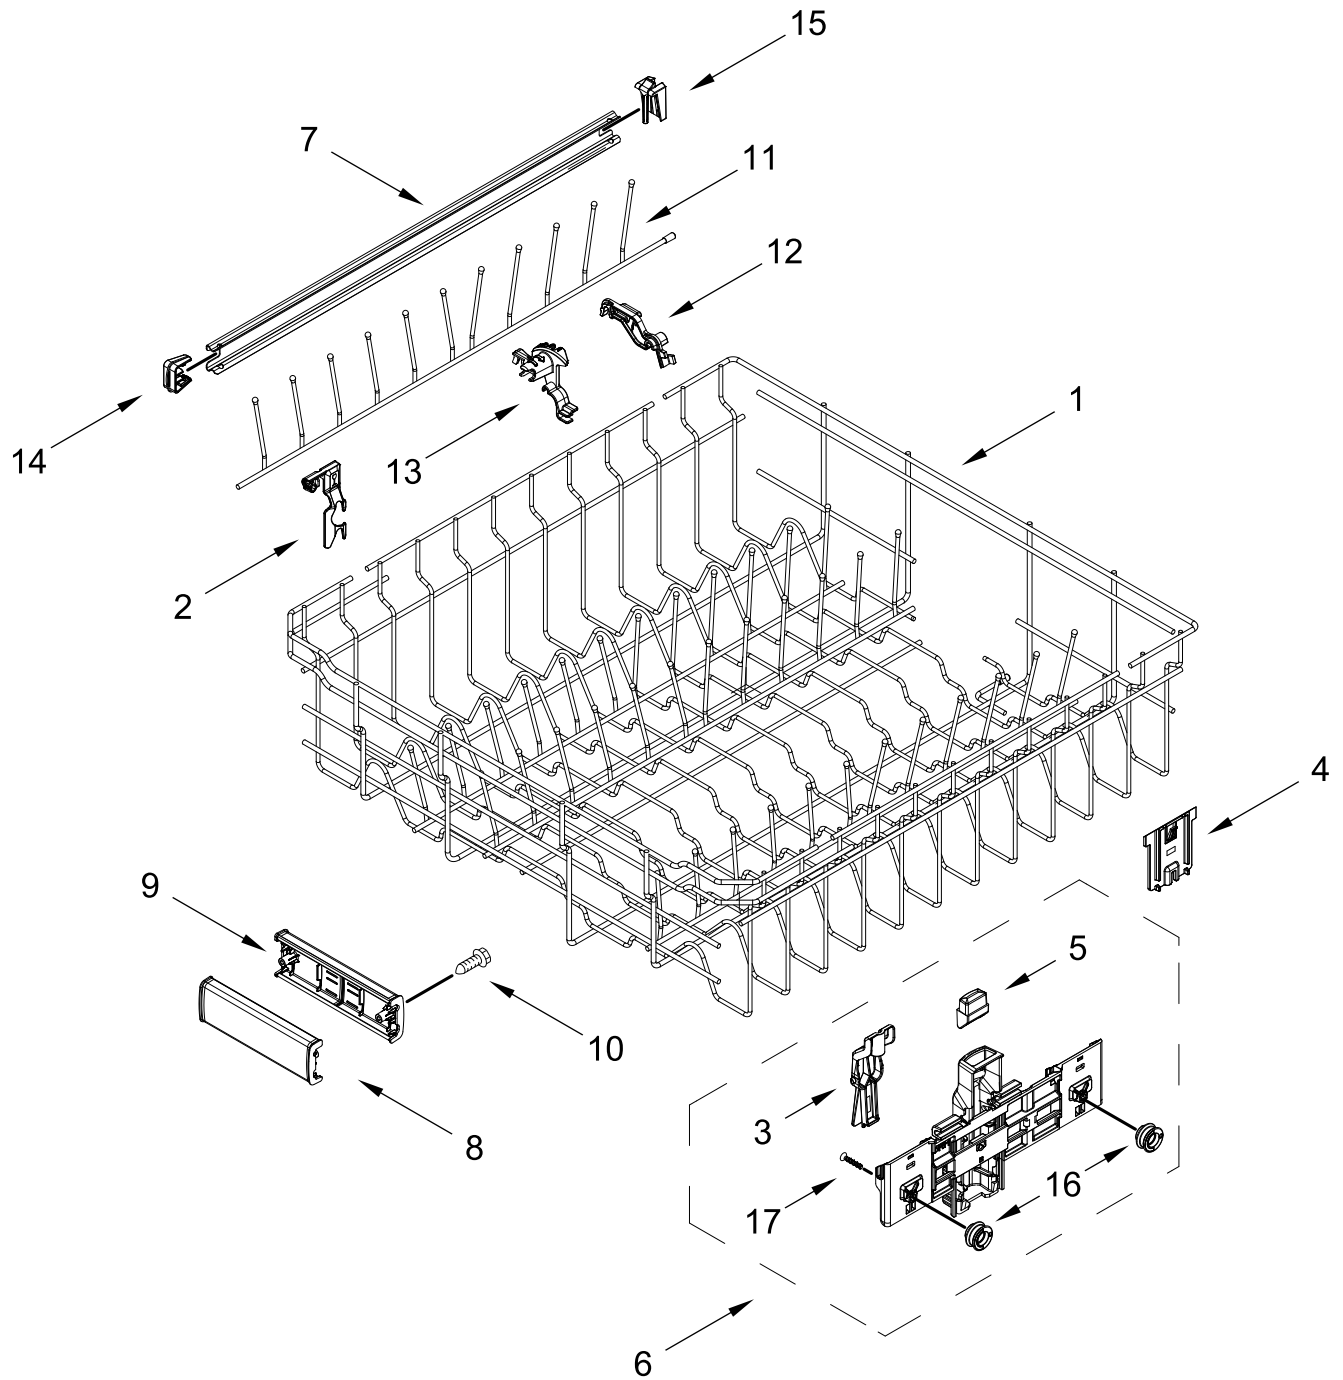

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10847876	Dishrack, Upper	7	W11441109	Track, Dishrack	15	W11084872	Track Stop, Rear
2	W11310287	Clip, Stemware	8	W11268682	Handle, Dishrack Front	16	W11048221	Wheel
3	W11180178	Leveler, Adjuster Arm	9	W11268681	Handle, Dishrack Rear	17	W11376395	Screw
4	W11180605	Clip, Adjuster Arm	10	9741232	Screw			
5	W11267699	Button, Adjuster Arm	11	W11186528	Tine Row, Fold Down			
6		Adjustment Assembly	12	W11179753	Clip, Pivot			
	W11268090	Left Hand	13	W11179755	Positioner			
	W11268086	Right Hand	14	W11084874	Track Stop, Front			


LOWER RACK PARTS

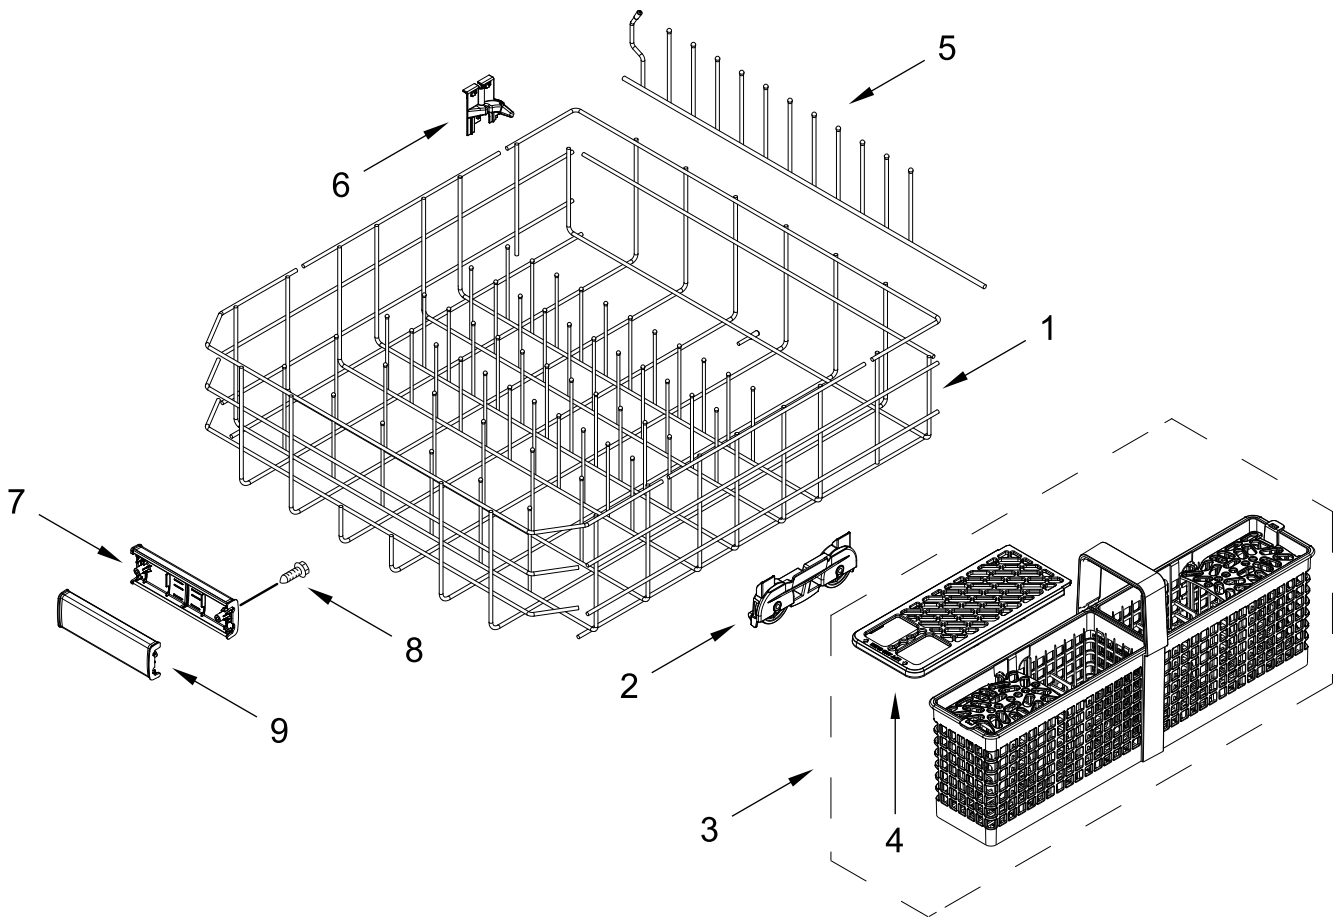

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10525646	Dishrack, Lower	5	W10056272	Tine Row, Fold Down	8	9741232	Screw
2	W11133747	Wheel & Transport Assembly	6	W11268658	Retainer, Flex Row	9	W11392620	Handle, Dishrack Front
3	W11291798	Silverware Basket Assembly	7	W11268681	Handle, Dishrack Rear			
4	W11267718	Lid, Silverware Basket						

THIRD LEVEL RACK AND TRACK PARTS

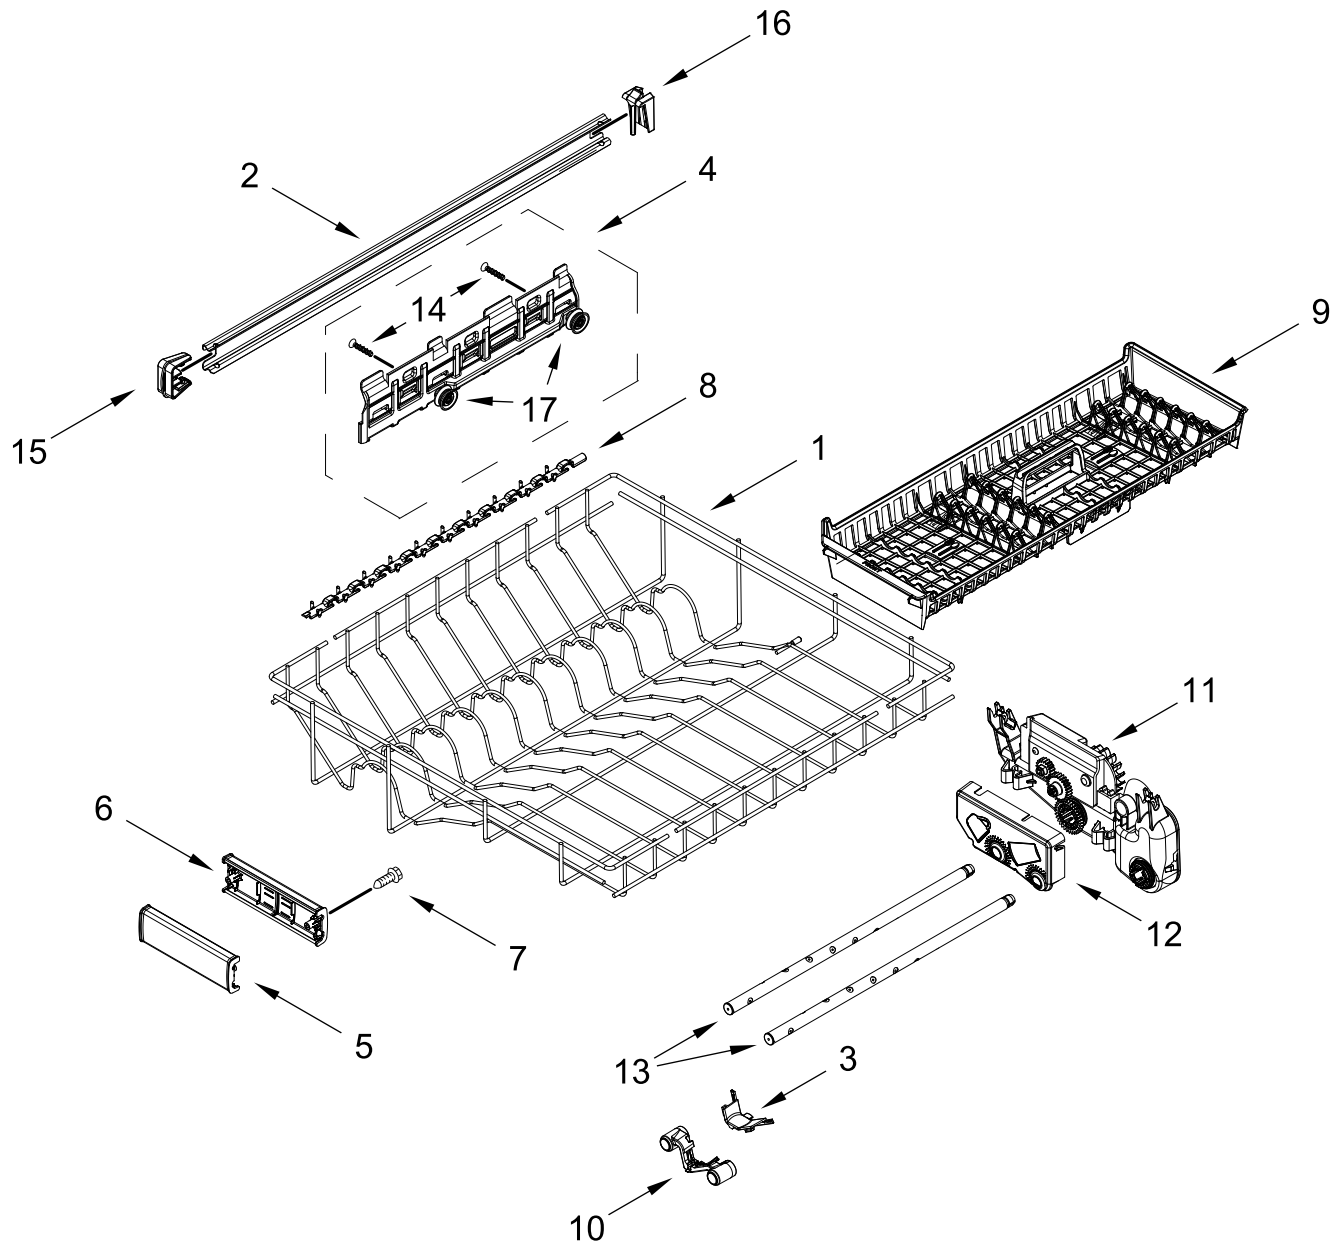

THIRD LEVEL RACK AND TRACK PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11127727	Rack, Third Level	7	9741232	Screw	15	W11084874	Track Stop, Front
2	W11441109	Track, Dishrack	8	W11202101	Cup Guard	16	W11084872	Track Stop, Rear
3	W11184071	Hanger, Tube	9	W11087823	Silverware Tray	17	W11048221	Wheel
4		Track Mount	10	W10830577	Bracket, Front Hanger			
	W11231345	Left Hand	11	W10830523	Drive Box Assembly, Manifold			
	W11231348	Right Hand						
5	W11392620	Handle, Dishrack Front	12	W11101860	Cover, Wash Tube			
			13	W10831864	Tube, Wash			
6	W11268681	Handle, Dishrack Rear	14	W11376395	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396277	Barrier Kit
	W11381654	External Drain Hose, 12 FT
	W11365011	Power Cord Kit (Straight)
	W11365014	Power Cord Kit (Right Angle)
	4396672	Strain Relief, Power Cord (Metallic)
	W10685193	Compression Hose Fitting, Water Line
	W10278635RP	Fill Hose Kit