

KitchenAid®


Dishwasher

MODELS:

KDTM804KPS3 (Stainless)

KDTM804KBS3 (Black Stainless)


DOOR AND PANEL PARTS

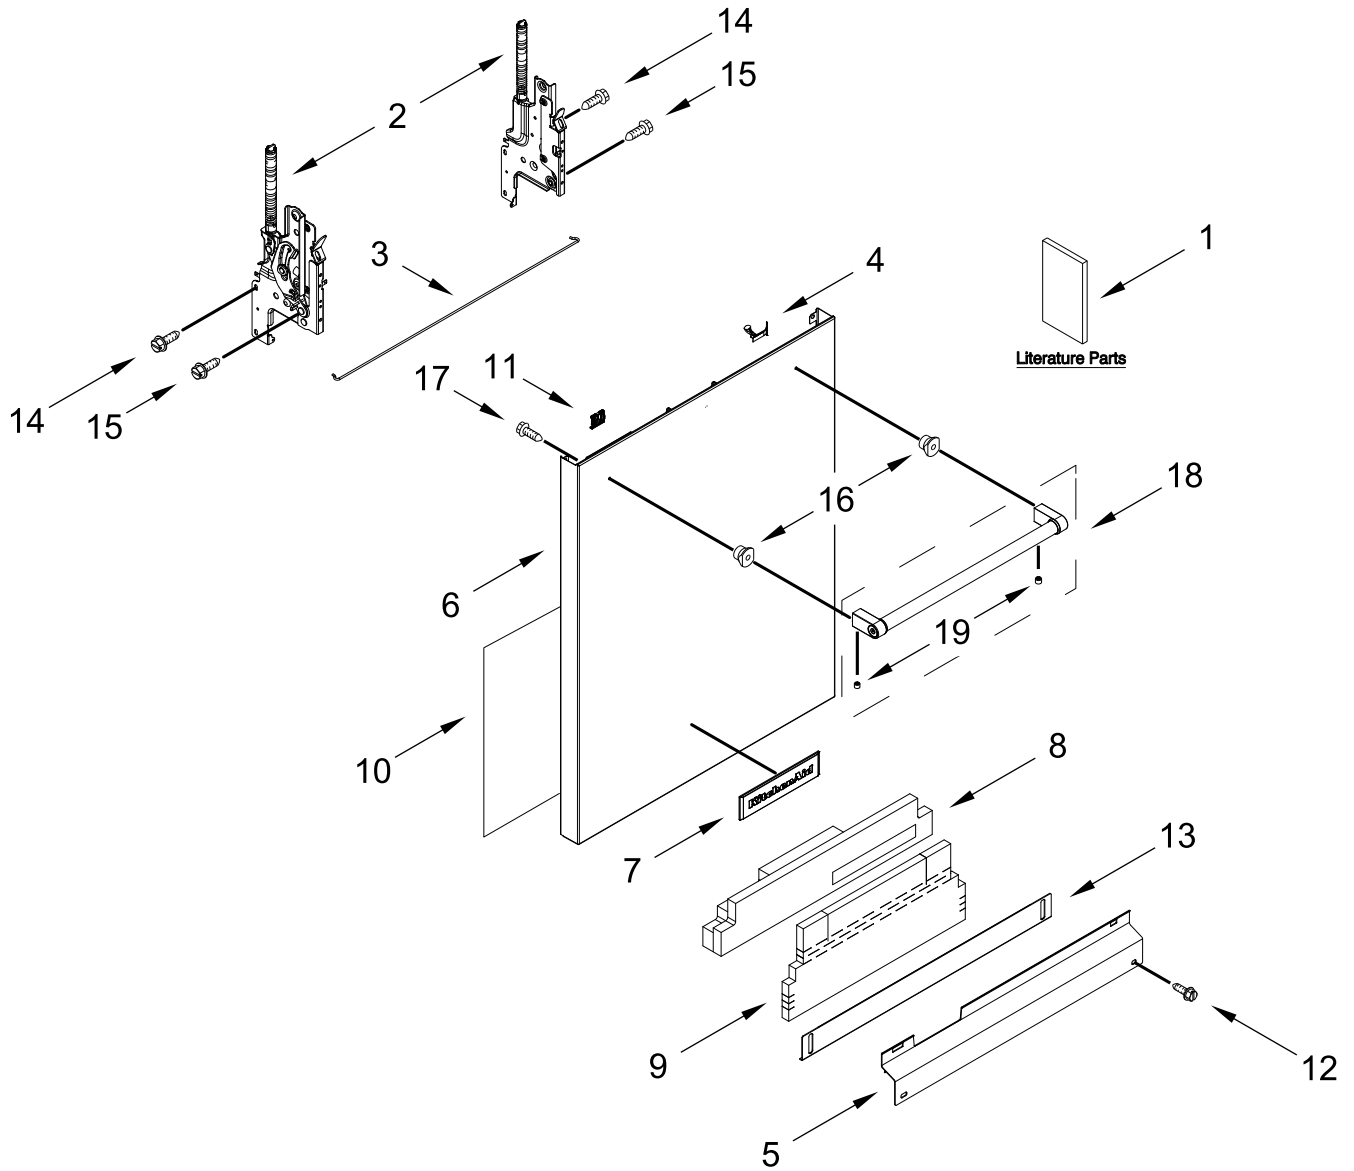

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6		Front Panel (Includes 4, 7 & 11)	13		Toe Panel
	W11323304	Owners Manual					W11467733	Black
	W11650512	Energy Guide		W11684946	Stainless	14	W11364953	Screw
	W11366142	Tech Sheet		W11233297	Black Stainless	15	3400000	Screw
2		Arm, Hinge	7	W10518673	Nameplate	16	W11049903	Stud, Mounting
	W11662392	Left Hand	8	W10919858	Insulation, Multi-Layer	17	W10316572	Screw
	W11662370	Right Hand	9	W11038694	Insulation, Single Layer	18		Handle Assembly
3	W11377160	Cross Brace, Door					W11417401	Stainless
4	W11102920	Light Pipe	10	W10919859	Insulation, Front Panel	19	W10687133	Set Screw
5		Access Panel	11	W10692757	Barrel Nut, Front Panel			
	W11108979	Black	12	W11438978	Screw, Black			


CONTROL PANEL AND INNER DOOR PARTS

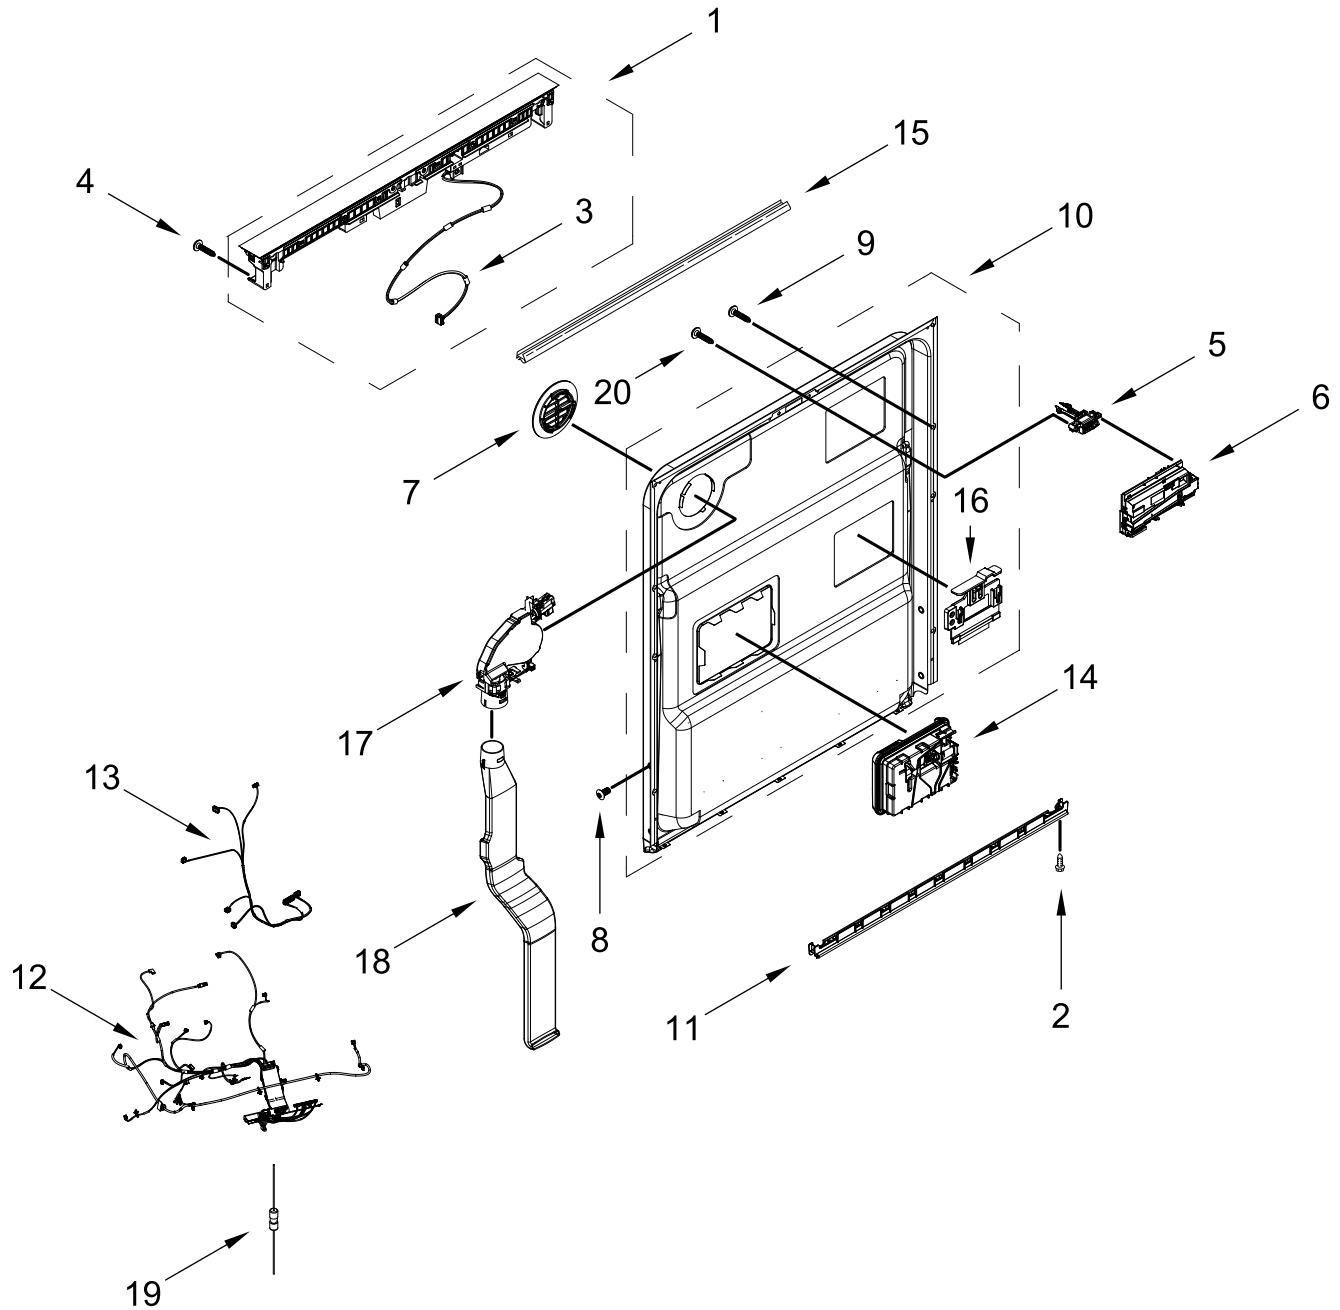

CONTROL PANEL AND INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	8	3400071	Screw	15	W11050927	Seal, Console/Door
	W11496609	Black	9	W10348409	Screw	16	W11088985	Hanger, Control
2	W11258418	Screw	10	W11098822	Inner Door Assembly	17	W11038720	Vent Assembly (Includes Fan)
3	W11336943	Jumper, Door	11	W11563231	Seal, Door Bottom	18	W11038734	Duct, Vent
4	W10711884	Screw	12	W11649440	Wiring Harness, Main (Includes Thermostat & Fuse)	19	W11397505	Fuse, In-line
5	W11091934	Latch Assembly (Includes Switch)	13	W11084867	Wiring Harness, Inner Door	20	W10348408	Screw
6	W11524497	Control, Electronic	14	W11092649	Dispenser Assembly			
7	W11025634	Bezel, Vent (Also Order Gasket)						


TUB AND FRAME PARTS

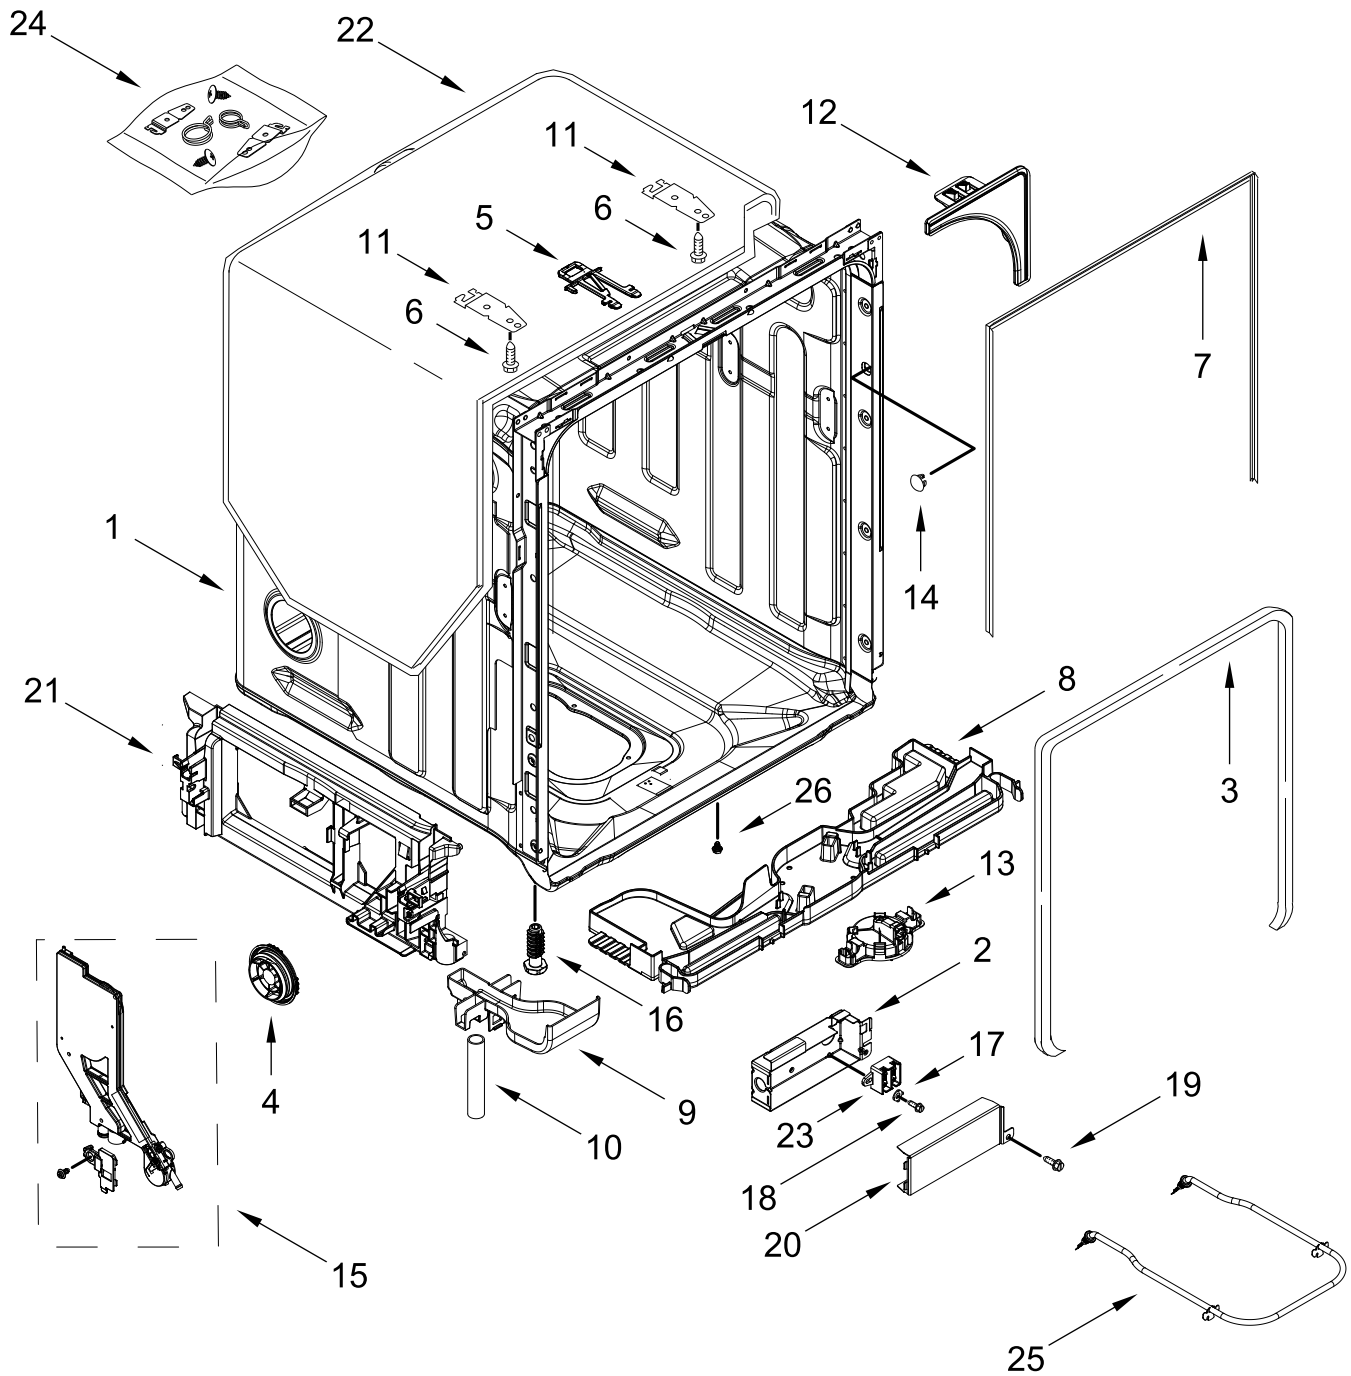

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11120458	Tub Assembly (includes gasket)	13	W11036170	Float Switch	24	W11362500	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)
2	W11226744	Base, Terminal Box	14	W11184083	Plug, Tub			
3	W11035860	Gasket, Tub	15	W11429970	Water Inlet Assembly	25	W11536143	Heater Element Assembly
4	W11429974	Nut, Water Inlet	16	W11455395	Leg, Leveling	26	3400892	Screw
5	W11090487	Strike, Latch	17	3378128	Washer, Pronged Cup			
6	W11296374	Screw	18	3400014	Screw, Grounding			
7	W11165091	Seal, Cabinet	19	W10277003	Screw			
8	W11025993	Drip Tray	20	W11226746	Cover, Terminal Box			
9	W11025986	Funnel, Overfill Protection	21		Side Support, Tub			
10	W11025988	Funnel Extension		W10920122	Left Hand			
11	8269145	Bracket, Undercounter		W10920120	Right Hand			
12	W11165093	Cover, Tub Corner	22	W11221921	Shield, Tub Sound			
			23	W11132441	Terminal Block			


PUMP, WASHARM AND MOTOR PARTS

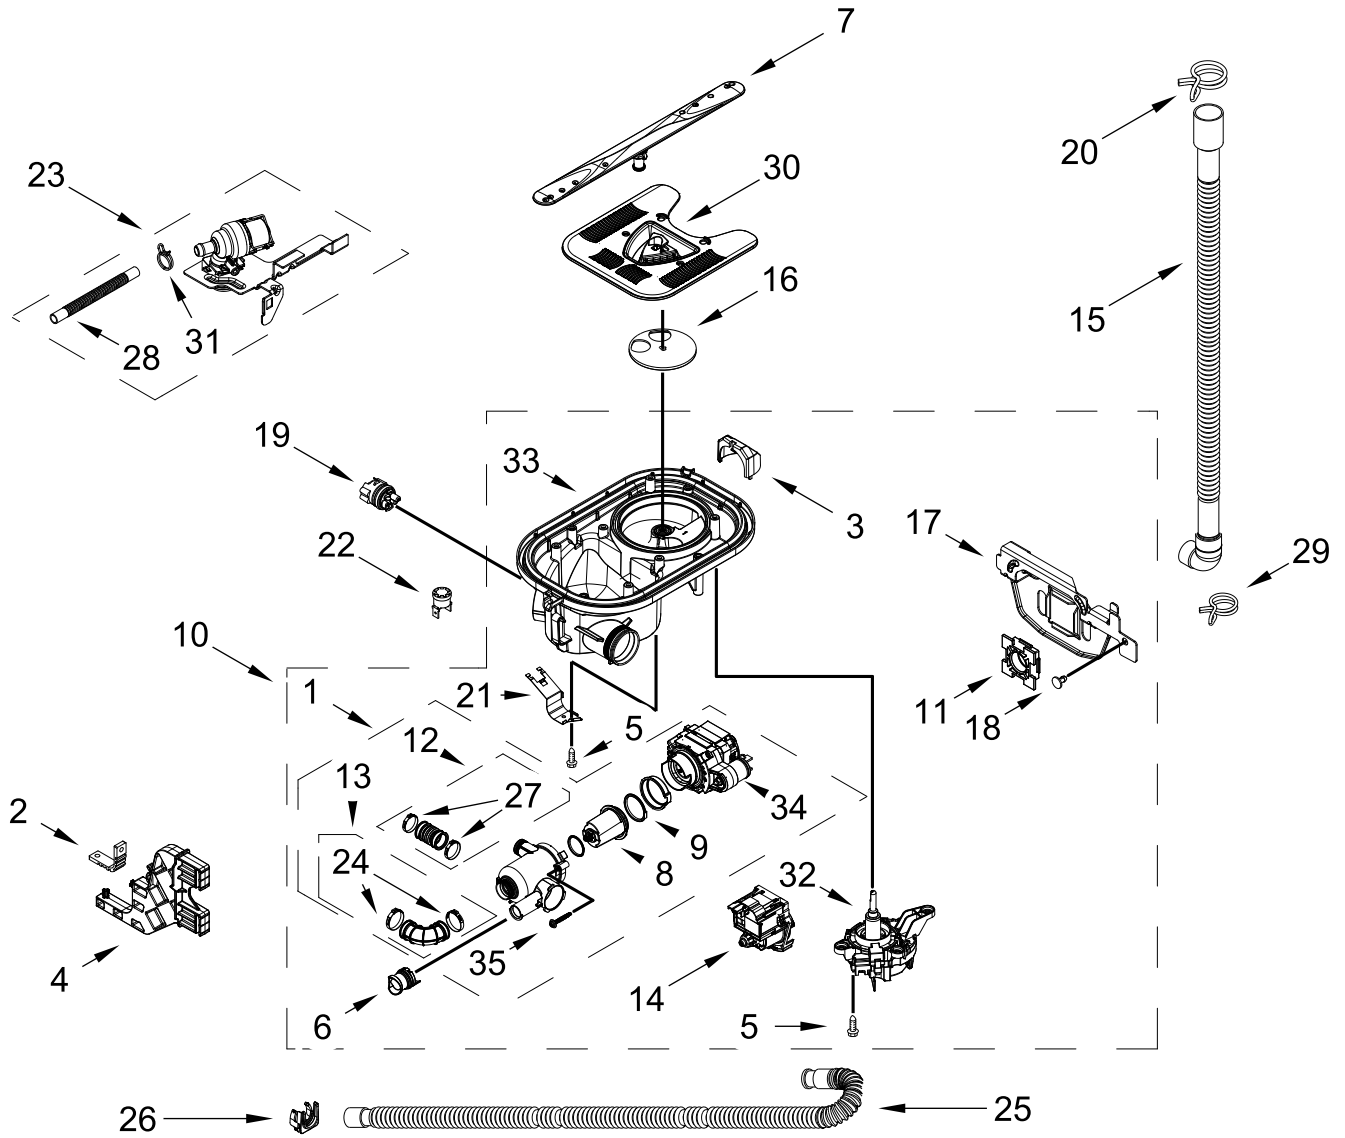

PUMP, WASHARM AND MOTOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11122133	Pump Assembly	13	W10900387	Hose, Suction	24	W11122851	Clamp, Hose
2	W11294352	Isolator, Front Motor	14	W11035709	Motor, Drain	25	W11036161	Hose
3	W10891545	Diffuser, Inlet	15	W11131184	Hose, Drain	26	W11036143	Clip, Hose
4	W11294350	Hanger, Front Motor	16	W10903468	Disc, Diverter	27	W10466656	Clamp, Hose
5	9741232	Screw	17	W11025963	Bracket, Rear Motor	28	W11036287	Hose, Inlet
6	W10891547	Check Valve, Drain	18	W11418271	Fastener	29	W11236576	Clamp, Hose
7	W11048456	Wash Arm Assembly	19	W11126174	Indicator, Optical Wash	30	W11039864	Grate
8	W11108699	Filter Assembly	20	370445	Clamp, Hose	31	371505	Clamp, Hose
9	W10380239	Ring, Volute	21	W11163419	Bracket, Thermostat	32		Diverter Valve Motor (Not Serviced)
10	W11345228	Motor & Sump Assembly	22	W11193089	Thermostat (Included with Main Wiring Harness)	33	W11034556	Sump (includes Seal and Diverter)
11	W11036663	Isolator, Rear Motor	23	W11025970	Fill Valve Assembly	34	W10753070	Capacitor
12	W11250985	Hose, Pressure				35	W10467002	Screw


UPPER WASH AND RINSE PARTS

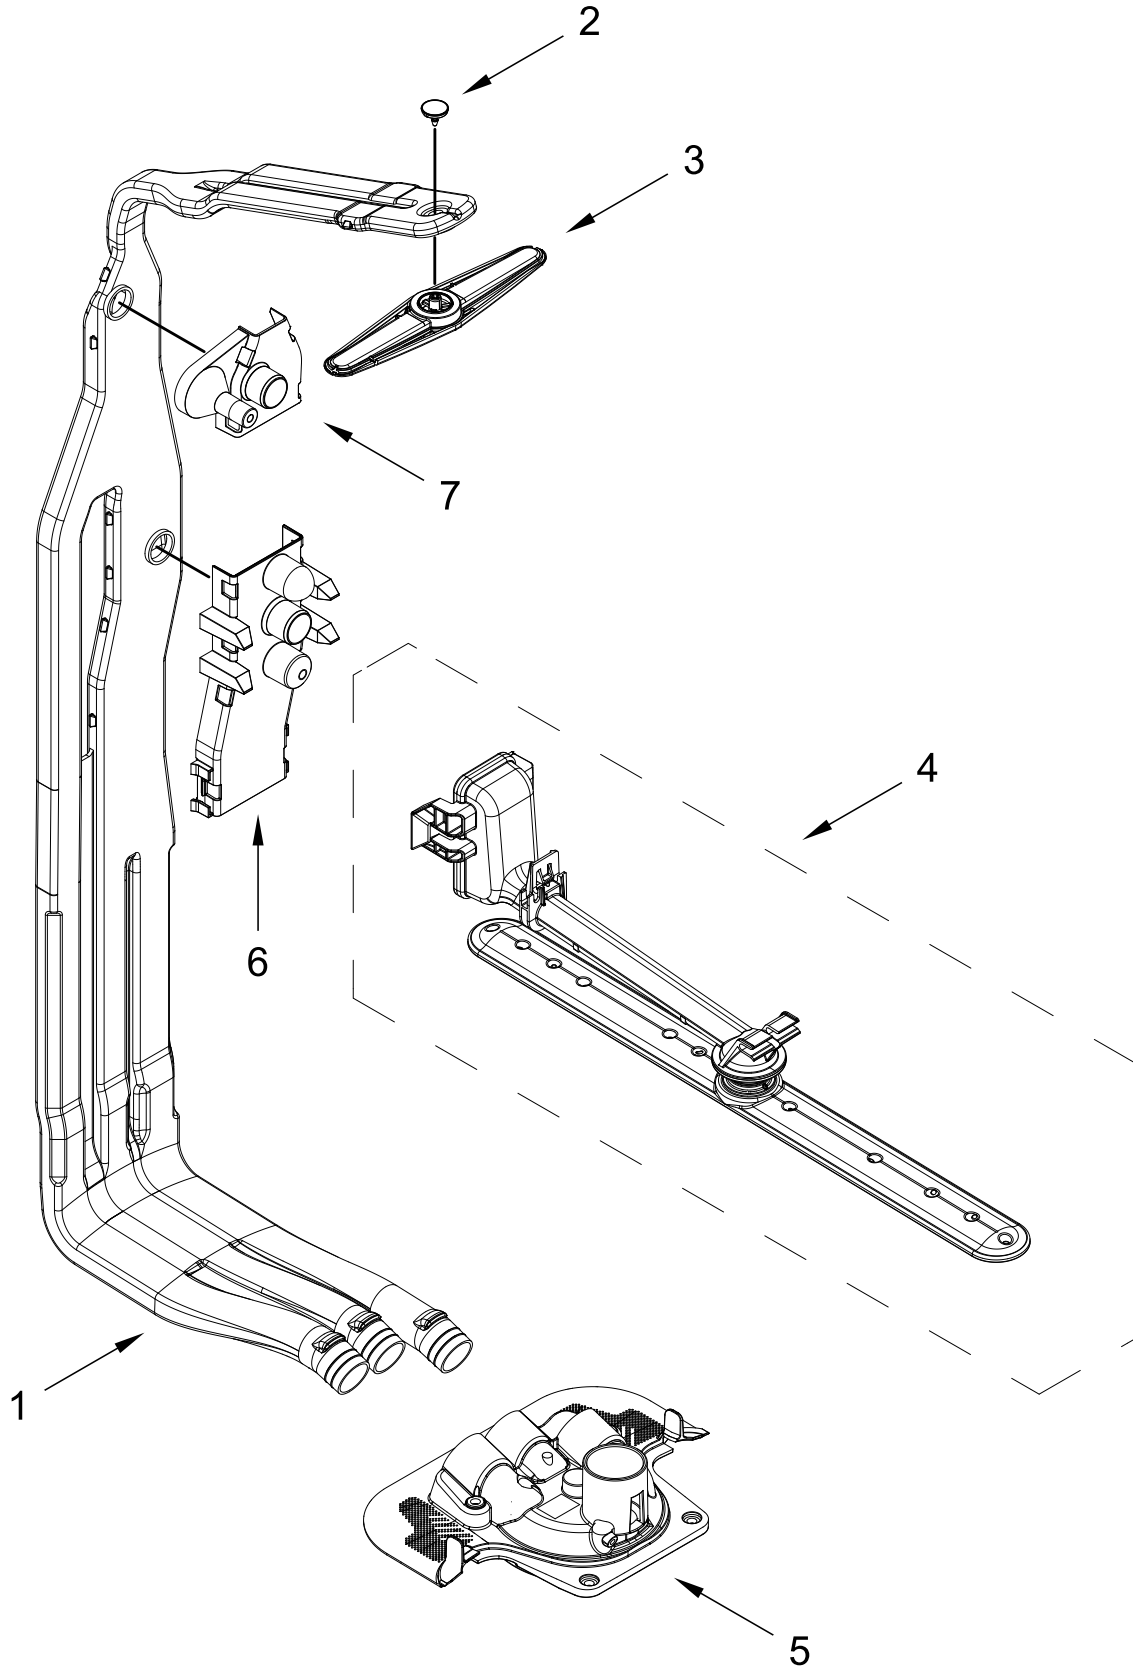

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10872558	Feed Tube Assembly	4	W11174340	Upper Sprayarm Assembly	6	W10892836	Retainer, Docking (2nd Level)
2	W11039888	Retainer	5	W10903465	Cover, Diverter	7	W10892835	Retainer, Docking (3rd Level)
3	W11039869	Sprayarm, Third Level						


UPPER RACK AND TRACK PARTS

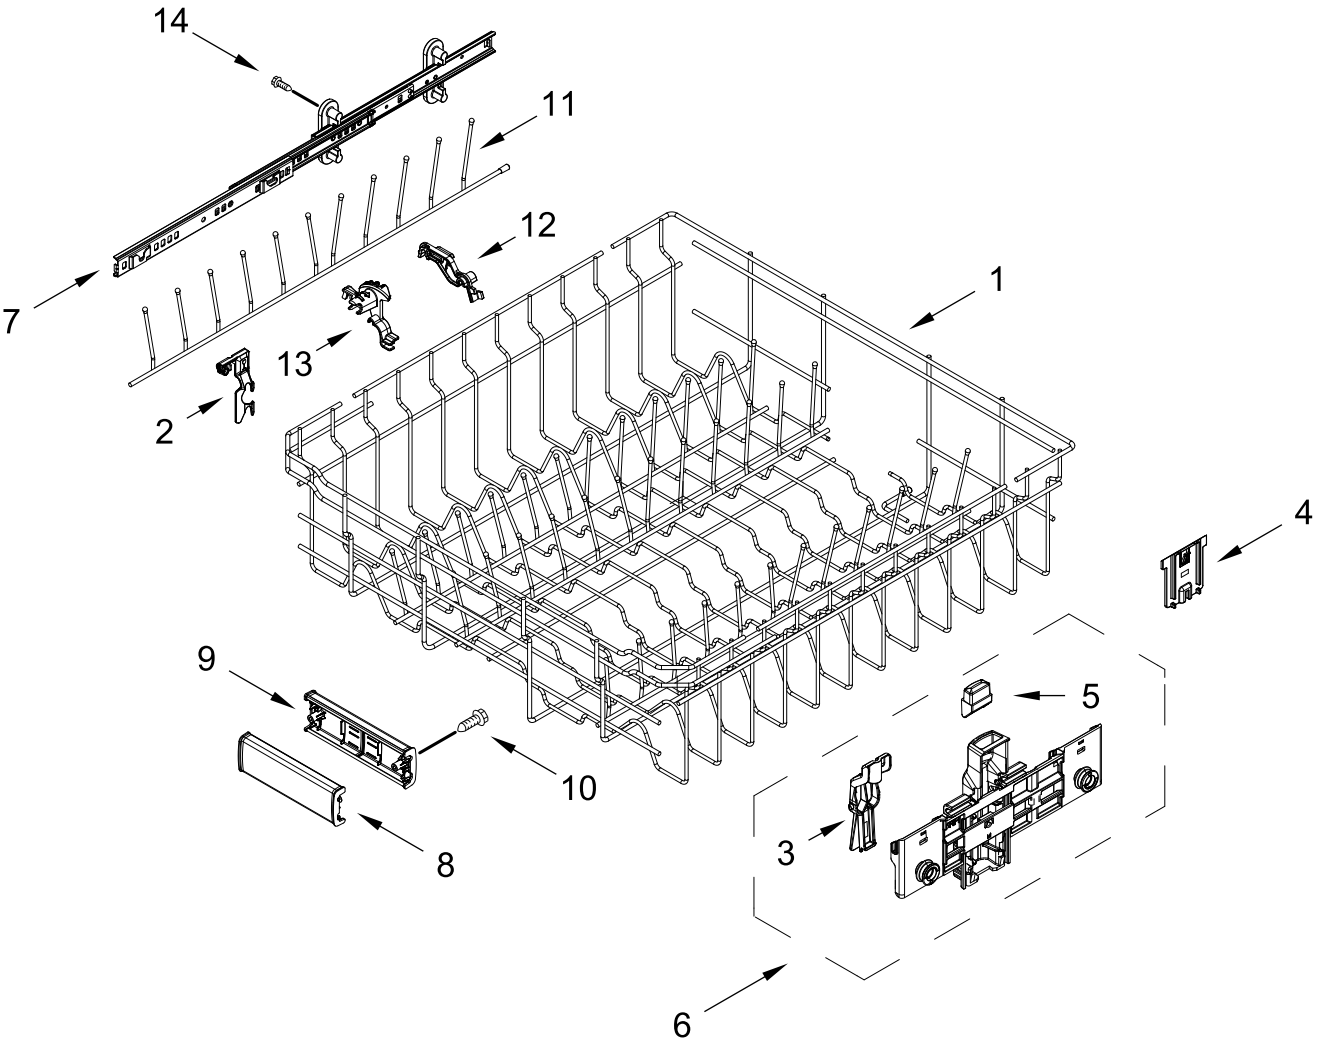

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10847876	Dishrack, Upper	7		Track, Assembly	13	W11179755	Positioner
2	W11310287	Clip, Stemware		W11212732	Left Hand	14	W11170270	Screw
3	W11180178	Leveler, Adjuster Arm		W11212734	Right Hand			
4	W11180605	Clip, Adjuster Arm	8	W11268682	Handle, Dishrack Front			
5	W11267699	Button, Adjuster Arm	9	W11268681	Handle, Dishrack Rear			
6		Adjustment Assembly	10	9741232	Screw			
	W11268082	Left Hand	11	W11186528	Tine Row, Fold Down			
	W11268078	Right Hand	12	W11179753	Clip, Pivot			


LOWER RACK PARTS

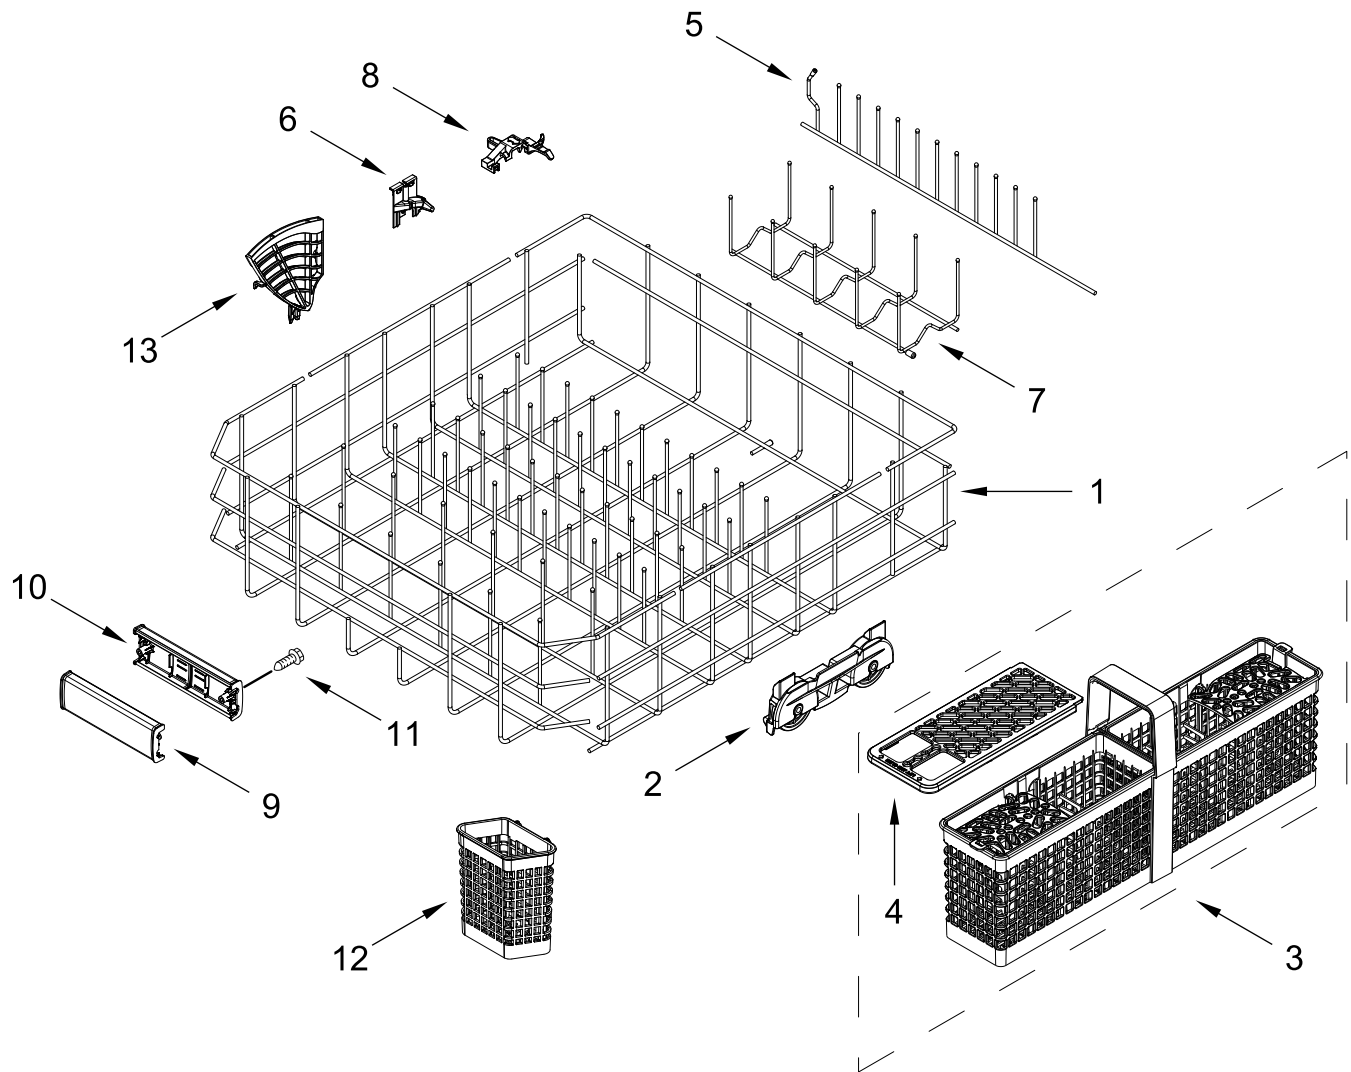

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11224324	Dishrack, Lower	6	W11268658	Retainer, Flex Row	10	W11268681	Handle, Dishrack Rear
2	W11133746	Wheel & Transport Assembly	7	W11505859	Tine Row, Sliding	11	9741232	Screw
3	W11291798	Silverware Basket Assembly	8	W11409979	Retainer, Sliding Tine Row	12	W11267721	Utensil Basket
4	W11267718	Lid, Silverware Basket	9	W11392620	Handle, Dishrack Front	13	W11267722	Knife Holder
5	W10056272	Tine Row, Fold Down						

THIRD LEVEL RACK AND TRACK PARTS

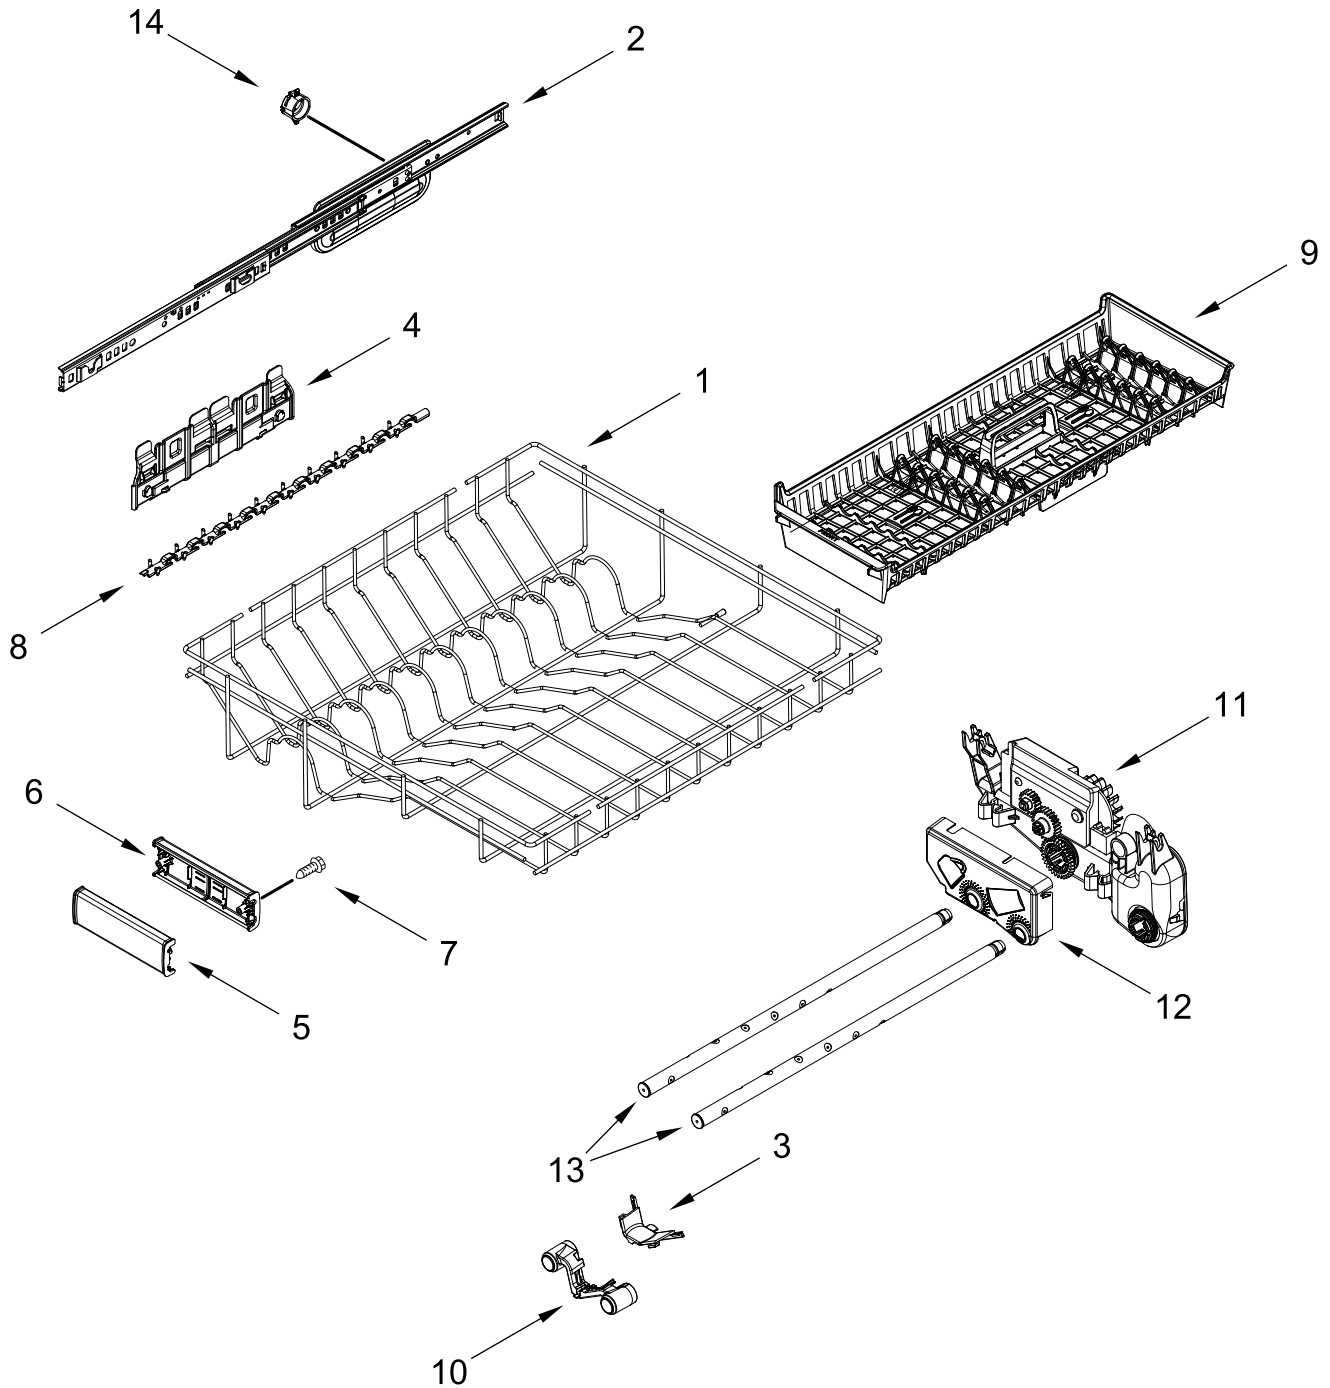

THIRD LEVEL RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11127727	Rack, Third Level	5	W11392620	Handle, Dishrack Front	10	W11226505	Bracket, Front Hanger
2		Track Assembly	6	W11268681	Handle, Dishrack Rear	11	W10830523	Drive Box Assembly, Manifold
	W11047813	Left Hand	7	9741232	Screw	12	W11101860	Cover, Wash Tube
	W11047815	Right Hand	8	W11202101	Cup Guard	13	W10830571	Tube, Wash
3	W11184071	Hanger, Tube	9	W11087823	Silverware Tray	14	W10920244	Nut, Tub
4	W11130709	Mount, Dishrack						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396277	Barrier Kit
	W11381654	External Drain Hose, 12 FT
	W11365011	Power Cord Kit (Straight)
	W11365014	Power Cord Kit (Right Angle)
	4396672	Strain Relief, Power Cord (Metallic)
	W10685193	Compression Hose Fitting, Water Line
	W10278635RP	Fill Hose Kit