


**KitchenAid®**

**GAS RANGE**

**MODELS:**

KFDD500ESS11 (Stainless)


# COOKTOP PARTS

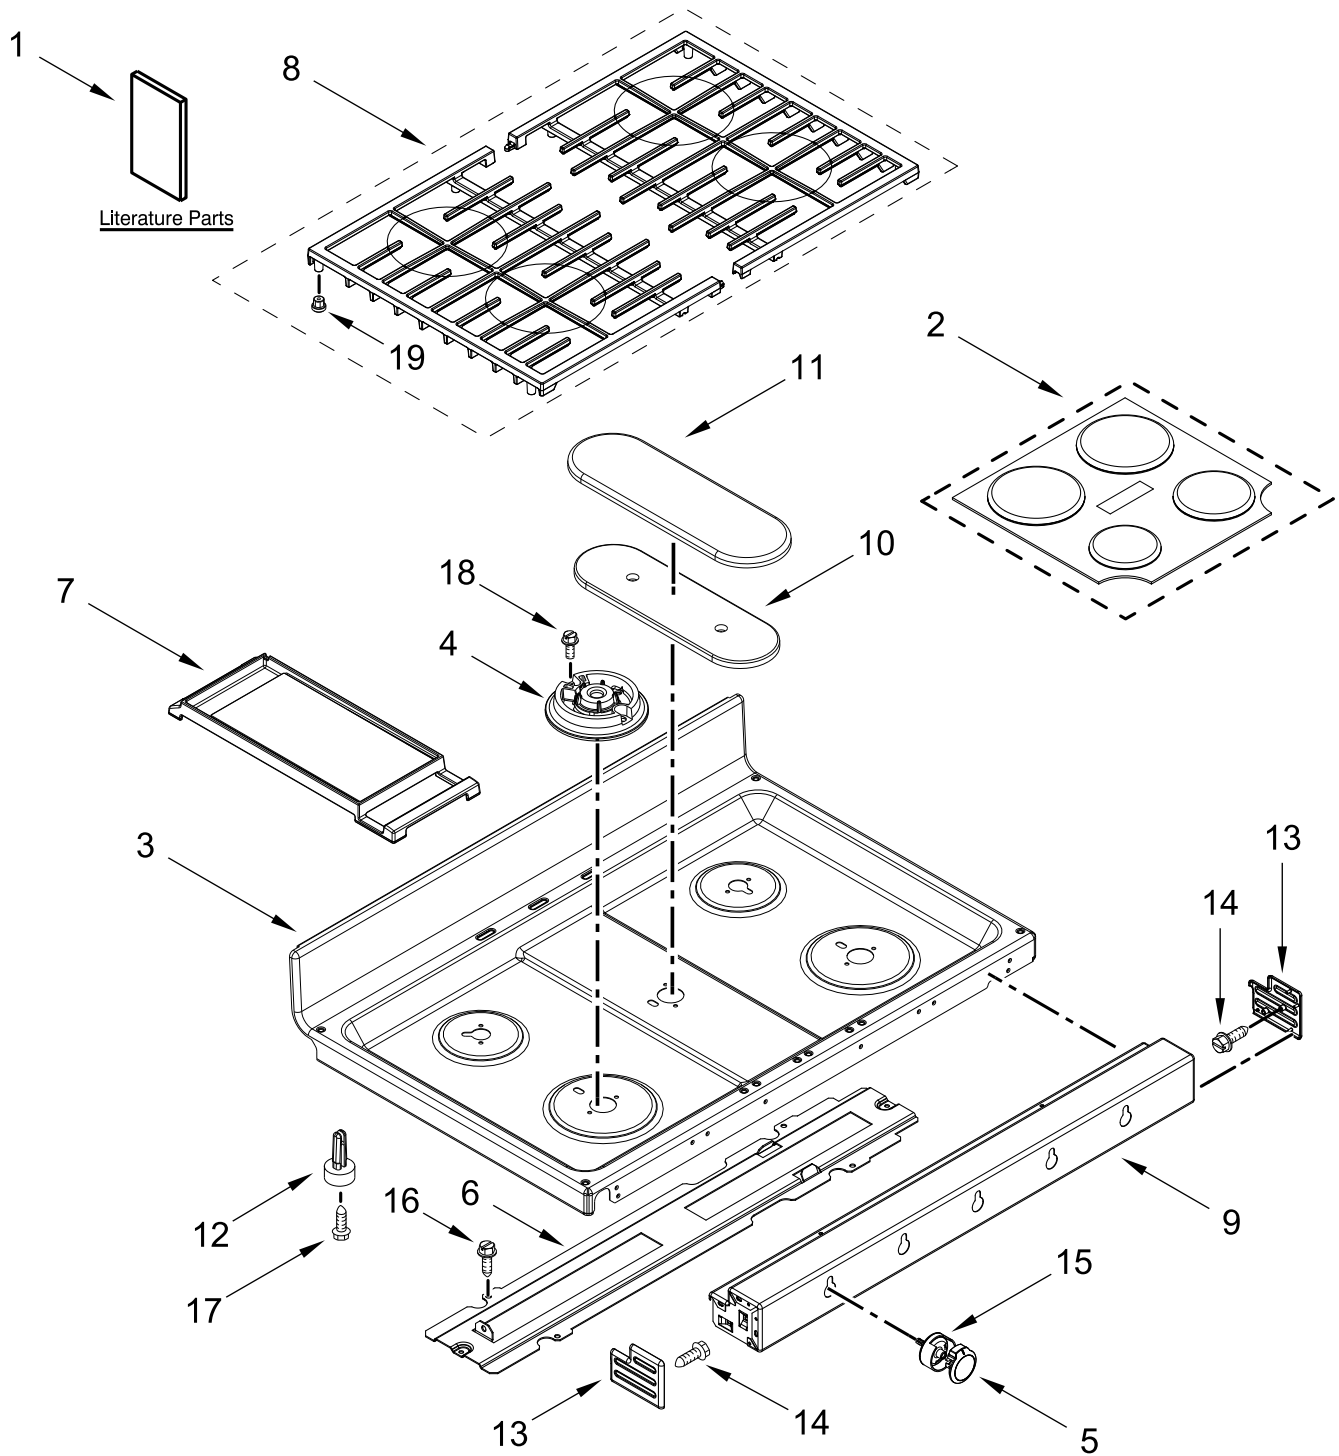

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10518258	Bracket, Cooktop Support	17	3196160	Screw
	W11426601	Owner's Manual				18	3368921	Screw
	W11430266	Quick Start Guide	7	W10432544	Griddle	19	W10465081	Grate, Bumper
	W11508926	Wiring Diagram	8	W11241660	Grate Kit (Includes 2 Grates)			FOLLOWING PARTS NOT ILLUSTRATED
2		Kit, Burner Cap	9		Panel, Manifold	W10745677		Harness, Main
	W10299236	Black		W10711043	Stainless	W11172428		Harness, EOL (DOFSR)
3		Cooktop	10	W10333445	Base, Burner (Fish Burner Only)	W10408058		Harness, Spark
	W10330921	Stainless				W11172531		Harness, Sensor & Locks
4	W10406878	Head, Burner (17.5K) (Left Front)	11		Kit, Burner Cap (Fish Burner Only)	W10624592		Cord, Power
	W10406243	Head, Burner (6K) (Left Rear and Right Rear)		W10171140	Black	7103P027-60		Nut
	W10406797	Head, Burner (12.5K) (Right Front)	12	8016P022-60	Glide, Main Top	8019P026-60		Clip, Wire-Wrap Nylon
	W10336094	Head, Burner (Center)	13		Endcap, Manifold	7111P017-60		Clamp, Wire
				W10823301	Stainless (Left)	W11653357		Kit, LP Conversion
				W10823299	Stainless (Right)	8019P013-60		Clip, Wire Lock
5		Knob, Control	14	7101P634-60	Screw			
	W10643306	Stainless	15		Bezel			
				W10785119	Stainless (Kit of 5)			
			16	7101P376-60	Screw			


# CONTROL PANEL PARTS

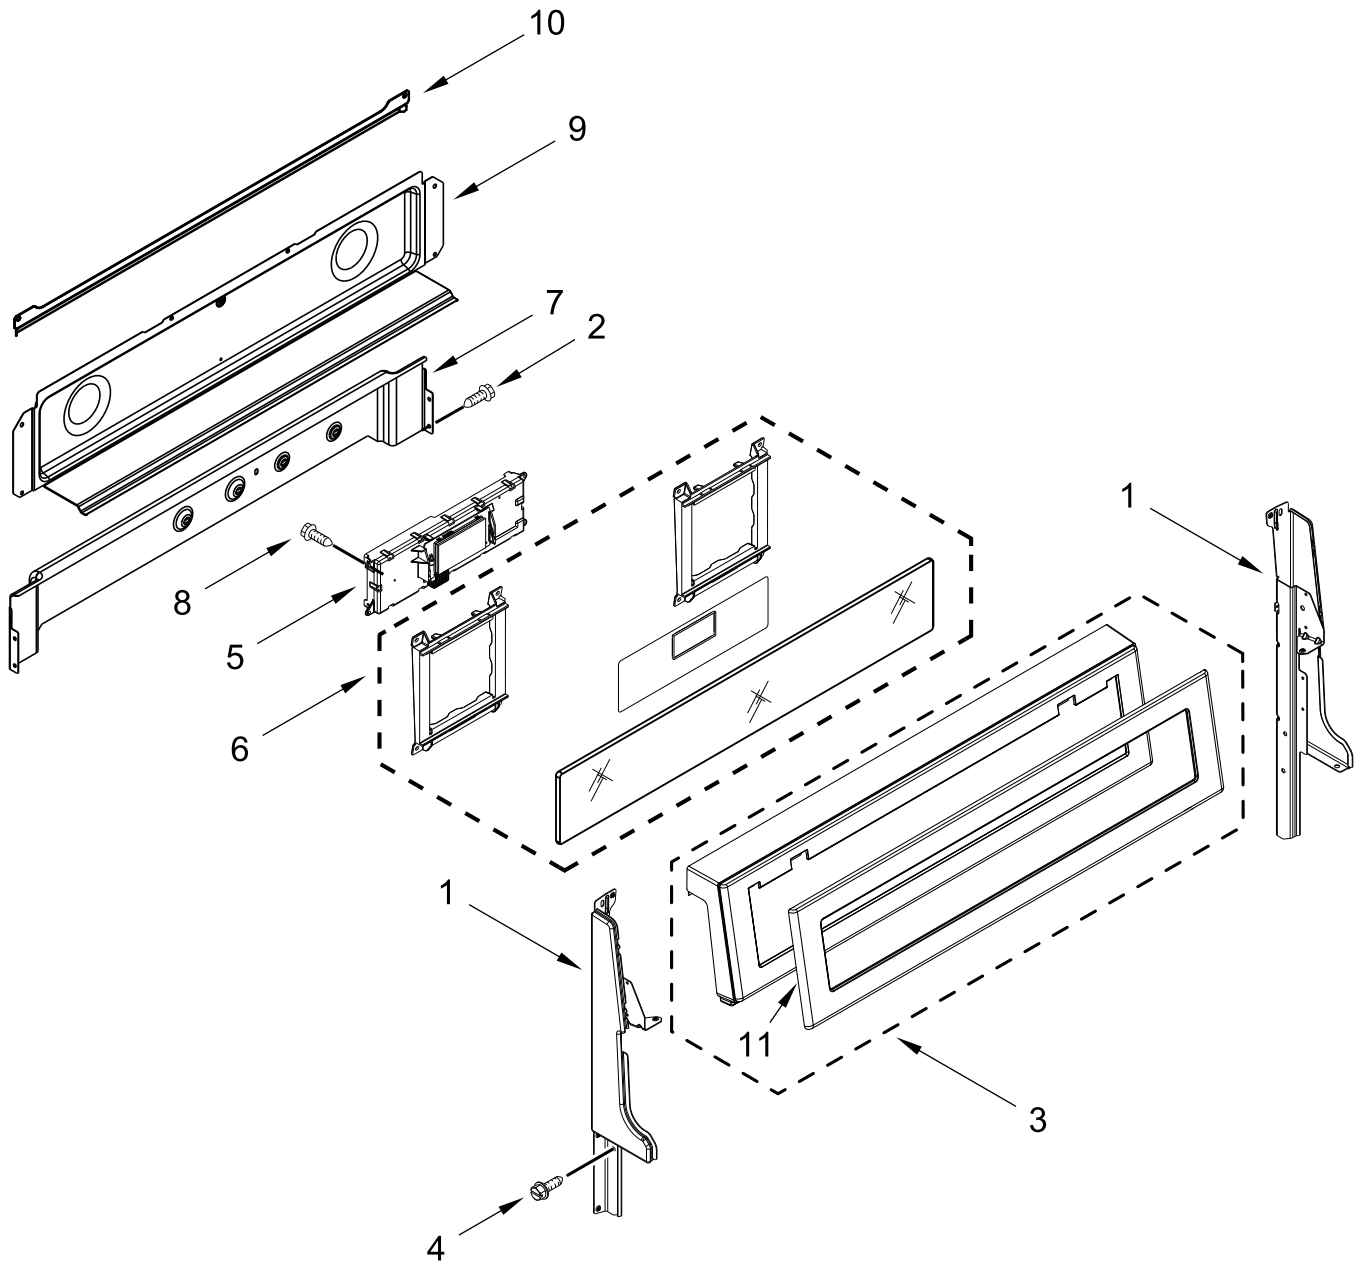

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	4	7101P634-60	Screw	7	W10278697	Shield, Vent
	W10319109	Black (Left)	5	W10895091	Control, Maxwell Electronic	8	9780274	Screw
	W10319111	Black (Right)				9	W10776098	Cover, Backguard
2	7101P426-60	Screw	6		Assembly, User Interface (Includes Light Feature)	10	W10299338	Shield, Wire Cover
3		Console				11		Skin, Control Panel
	W10645848	Stainless		W10692425	Black			(Not Serviced)


# MANIFOLD PARTS

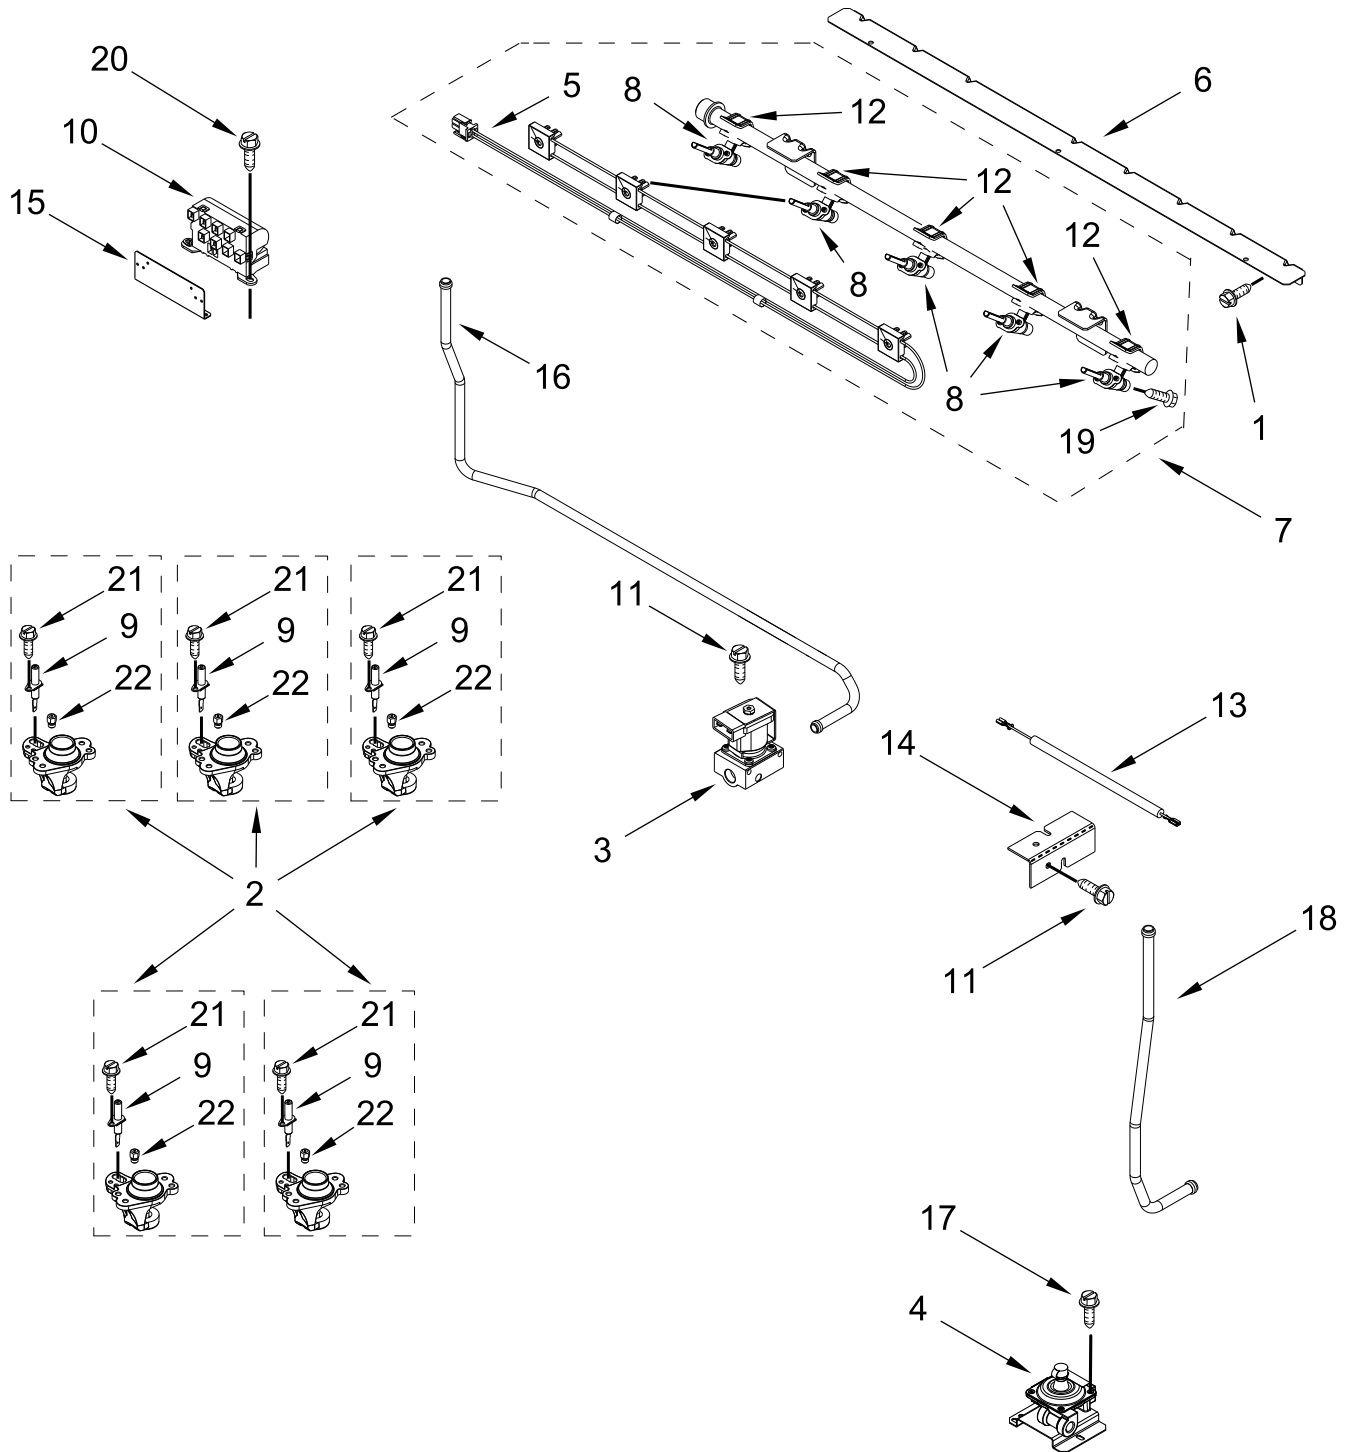

# MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P653-60	Screw	8	W10718180	Valve (17K) (Left Front)	15	W10319059	Bracket, Spark Module
2	W10643268	Holder, Orifice (17K) (Left Front)		W10718182	Valve (5K) (Left Rear and Right Rear)	16	W10642388	Tubing (Supply Shutoff To Manifold)
	W10643269	Holder, Orifice (5K) (Left Rear)		W10718181	Valve (10K) (Right Front and Center)	17	7101P426-60	Screw
	W10643270	Holder, Orifice (10K) (Right Front)				18	W10524331	Tubing (Supply Regulator to Shutoff)
	W10643271	Holder, Orifice (5K) (Right Rear)	9	W10565365	Electrode, Spark (Left Front, Left Rear, Right Front, Right Rear)	19	W10295997	Screw, Valve
	W10643272	Holder, Orifice (7K) (Center)		W10637673	Electrode, Fish (Center)	20	7101P338-60	Screw
3	W10368614	Valve, Shut Off	10	7431P053-60	Module, Spark	21	8273062	Screw
4	W10582429	Regulator, Pressure	11	7101P624-60	Screw	22	W10639161	Orifice (Left Front)
5	W10664240	Harness, Switch	12	W10949105	Bracket, Saddle Valve		W10407673	Orifice (Left Rear and Right Rear)
6	W10276466	Bracket, Manifold (Bottom)	13	W10636384	Extension, Electrode		W10407675	Orifice (Right Front)
7	W10806878	Assembly, Manifold	14	W10324366	Holder, Electrode Extension		W10324014	Orifice (Center)

# CHASSIS PARTS

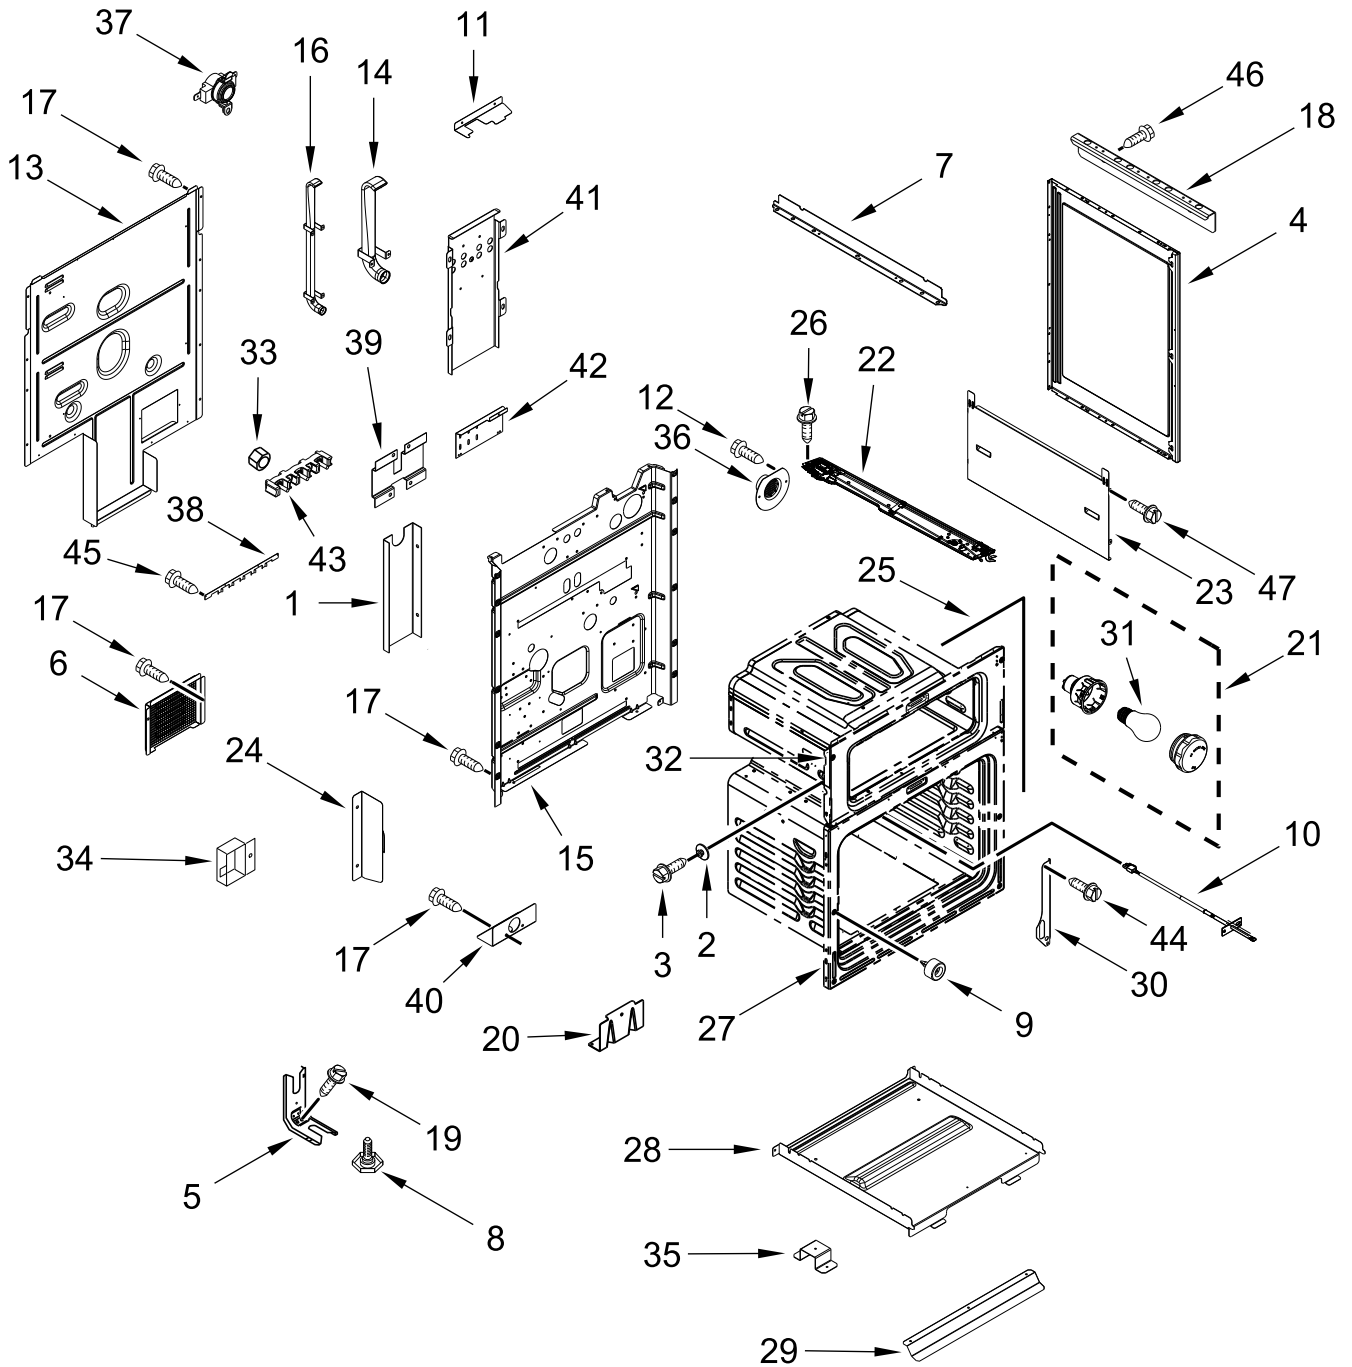




# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	21	W11544370	Light Assembly	38	8036P012-60	Shield, Power Cord
2	W11479123	Spacer, Side Panel	22	W10683517	Lock, Rear Mount	39	7003P104-60	Insulator, Heat Shield
3	W10267456	Screw, Shoulder	23	W10538516	Shield, Side Insulation	40	W10190166	Bracket, Power Supply
4		Panel, Side	24	W10268559	Cover, Lower Wire	41	W10261388	Bracket, Terminal
	W11477310	Black	25	W11491754	Gasket, Oven Door	42	W10332449	Shield, Cord
5	3801F656-51	Bracket, Anti-Tip			(Upper)	43	W10246624	Block, Terminal
6	W10312612	Cover, Access (Terminal Block)		W11491753	Gasket, Oven Door	44	4449743	Screw
					(Lower)	45	489290	Screw
7	W10357697	Bracket, Side Panel	26	7101P375-60	Screw	46	7101P633-60	Screw (Black)
8	W10414238	Foot, Leveler	27	W11515373	Front, Main (Lower)	47	W10443110	Screw
9	W10105790	Bumper & Screw	28	W10548601	Pan, Element			FOLLOWING PARTS NOT ILLUSTRATED
10	7430P044-60	Sensor, Oven	29	W10253470	Bracket, Retaining			
11	W10268558	Cover, Lower Wire	30	W10410463	Cover, Hinge (Left)	W10271637		Insulation, Floor
12	7101P434-60	Screw		W10410461	Cover, Hinge (Right)	W11463064		Insulation, Hidden Bake Pouch
13	W10261386	Cover, Main Wire	31	311255	Bulb, Oven Light	W10204079		Insulation, Middle
14	W10337391	Tube, Vent (Upper)	32	W11515376	Front, Main (Upper)	W10204085		Insulation, Main Front Strip
15	W10668730	Back, Main	33	3400029	Nut	W11462751		Insulation, Wrapper
16	W10323793	Tube, Vent (Lower)	34	8285593	Cover, Connector	W10322111		Insulation, Back
17	7101P426-60	Screw	35	W10260545	Clip, Retaining			
18	W10319087	Bracket, U Channel	36	W10322408	Adapter, Vent Tube			
19	7101P485-60	Screw, Anti-Tip Kit	37	7403P899-60	Switch, High Limit			
20	W10863342	Support, Lower Oven						


# UPPER DOOR PARTS

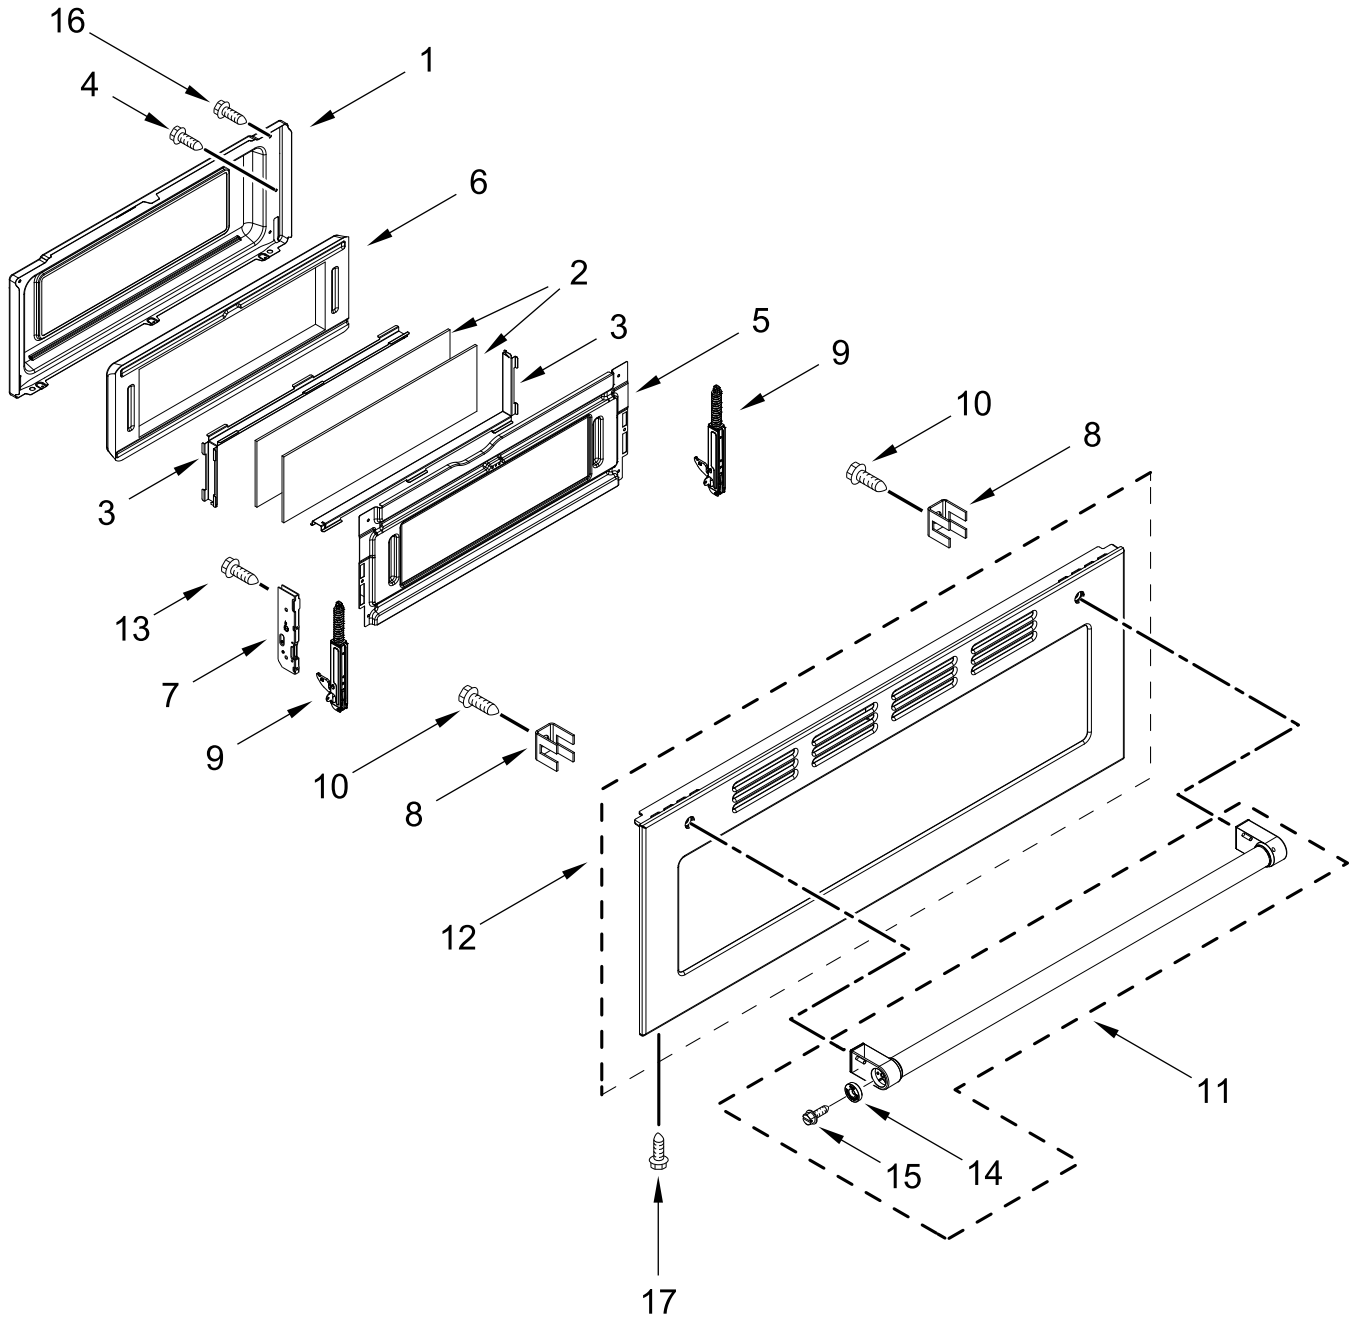

# UPPER DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051041	Lining, Door	9	W10485733	Hinge, Door (Left)	13	W10031780	Screw
2	W11099272	Glass, Inner		W10485732	Hinge, Door (Right)	14	W10551026	Medallion, Handle
3	W10272708	Frame, Glass	10	W10480830	Screw	15	W10656499	Screw
4	W10292297	Screw	11		Assembly, Handle	16	W10317886	Screw
5	W10485723	Retainer, Insulation		W11305107	Black	17	W10284411	Screw with Washer
6	W10321271	Insulation, Door	12		Outer Door Assembly			
7	W10289077	Receiver, Hinge		W10888651	Stainless			
8	W10575917	Spacer, Vent Trim						


# LOWER DOOR PARTS

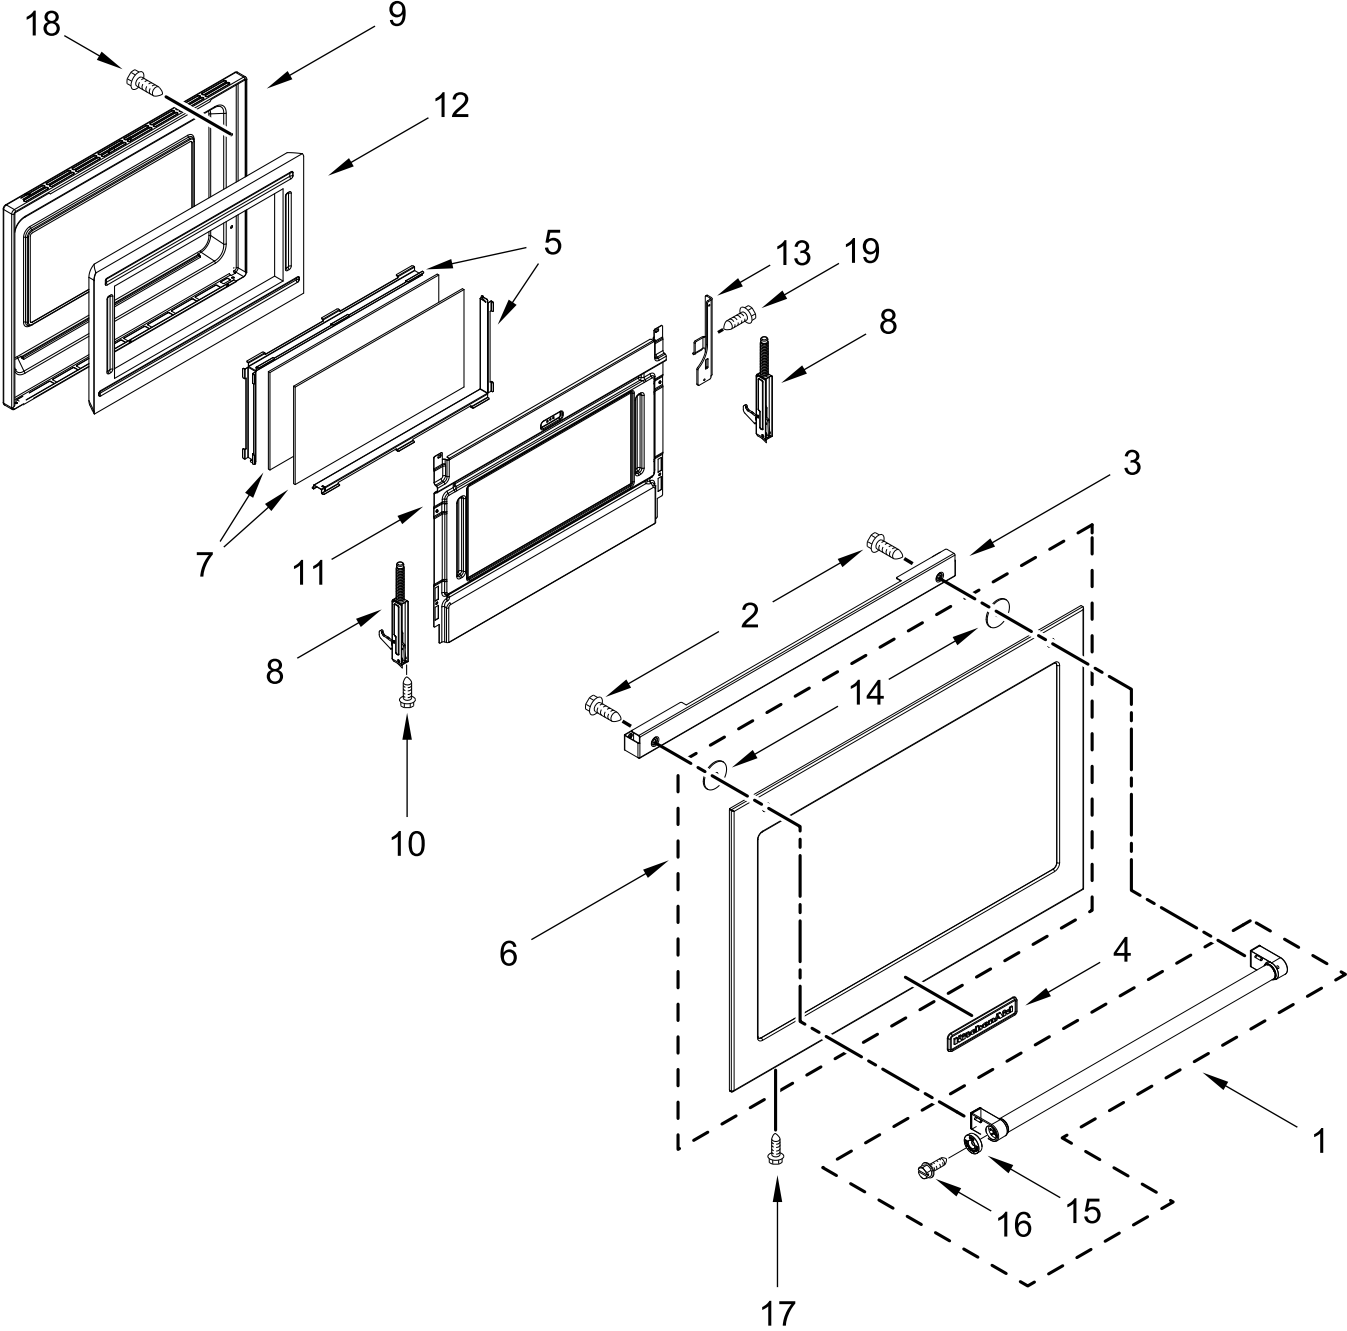

# LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Handle	8	W10335434	Hinge, Door (Left)	14	7109P084-60	Washer, Fiber
	W11305107	Black		W10335433	Hinge, Door (Right)	15	W10551026	Medallion, Handle
2	W10480830	Screw	9	W10292008	Lining, Door	16	W10656499	Screw
3	W10575689	Bracket, Handle	10	W10292297	Screw	17	W10284411	Screw with Washer
4	W10518672	Badge	11	W10340464	Retainer, Insulation	18	W10898280	Screw
5	W10272594	Frame, Glass	12	W10321285	Insulation, Door	19	4449743	Screw
6		Outer Door Assembly	13	W10272329	Receiver (Left)			
	W11493748	Stainless		W10272328	Receiver (Right)			
7	9757706	Glass, Inner						

# INTERNAL OVEN PARTS

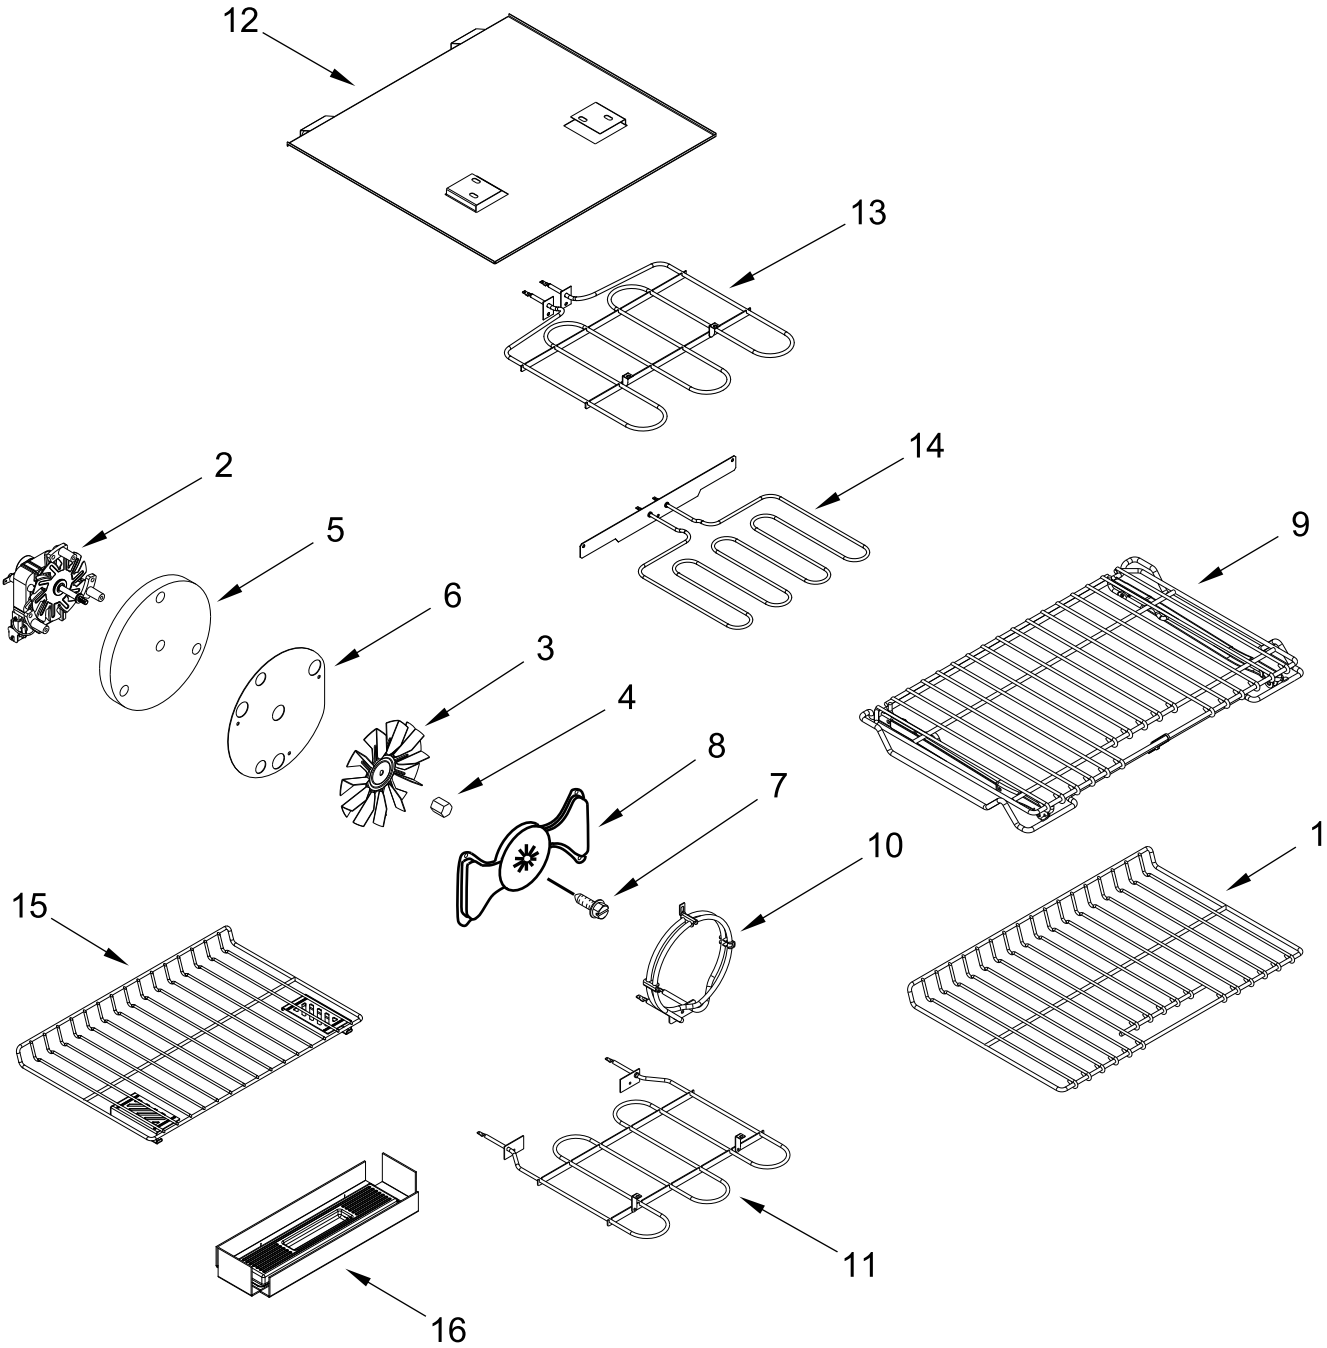

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570887	Rack, Oven	8	8303962BU	Cover, Fan	13	W10317476	Element, Broil (Upper)
2	W11190725	Motor, Convection	9	W10570870	Rack, Oven (Telescoping)	14	W11095935	Bake Element (Upper & Lower)
3	W10631503	Blade, Fan	10	W10271639	Element, Convection (240VAC)	15	W10685968	Rack, Steam
4	W10631504	Nut, Acorn (LH)	11	W10249979	Element, Broil (Lower)	16	W10686408	Kit, Reservoir (Steam Rack)
5	W10274268	Insulation, Convection Motor	12	W10319762	Shield, Broil			
6	W10339476	Plate, Insulation						
7	W10720084	Screw						

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS Medallion, Handle
	W10846205	Chrome
	W10846206	Black
	W10846207	Red