


**KitchenAid®**

**ELECTRIC RANGE**

**MODELS:**

KFEG500EBS7 (Black Stainless)


# COOKTOP PARTS

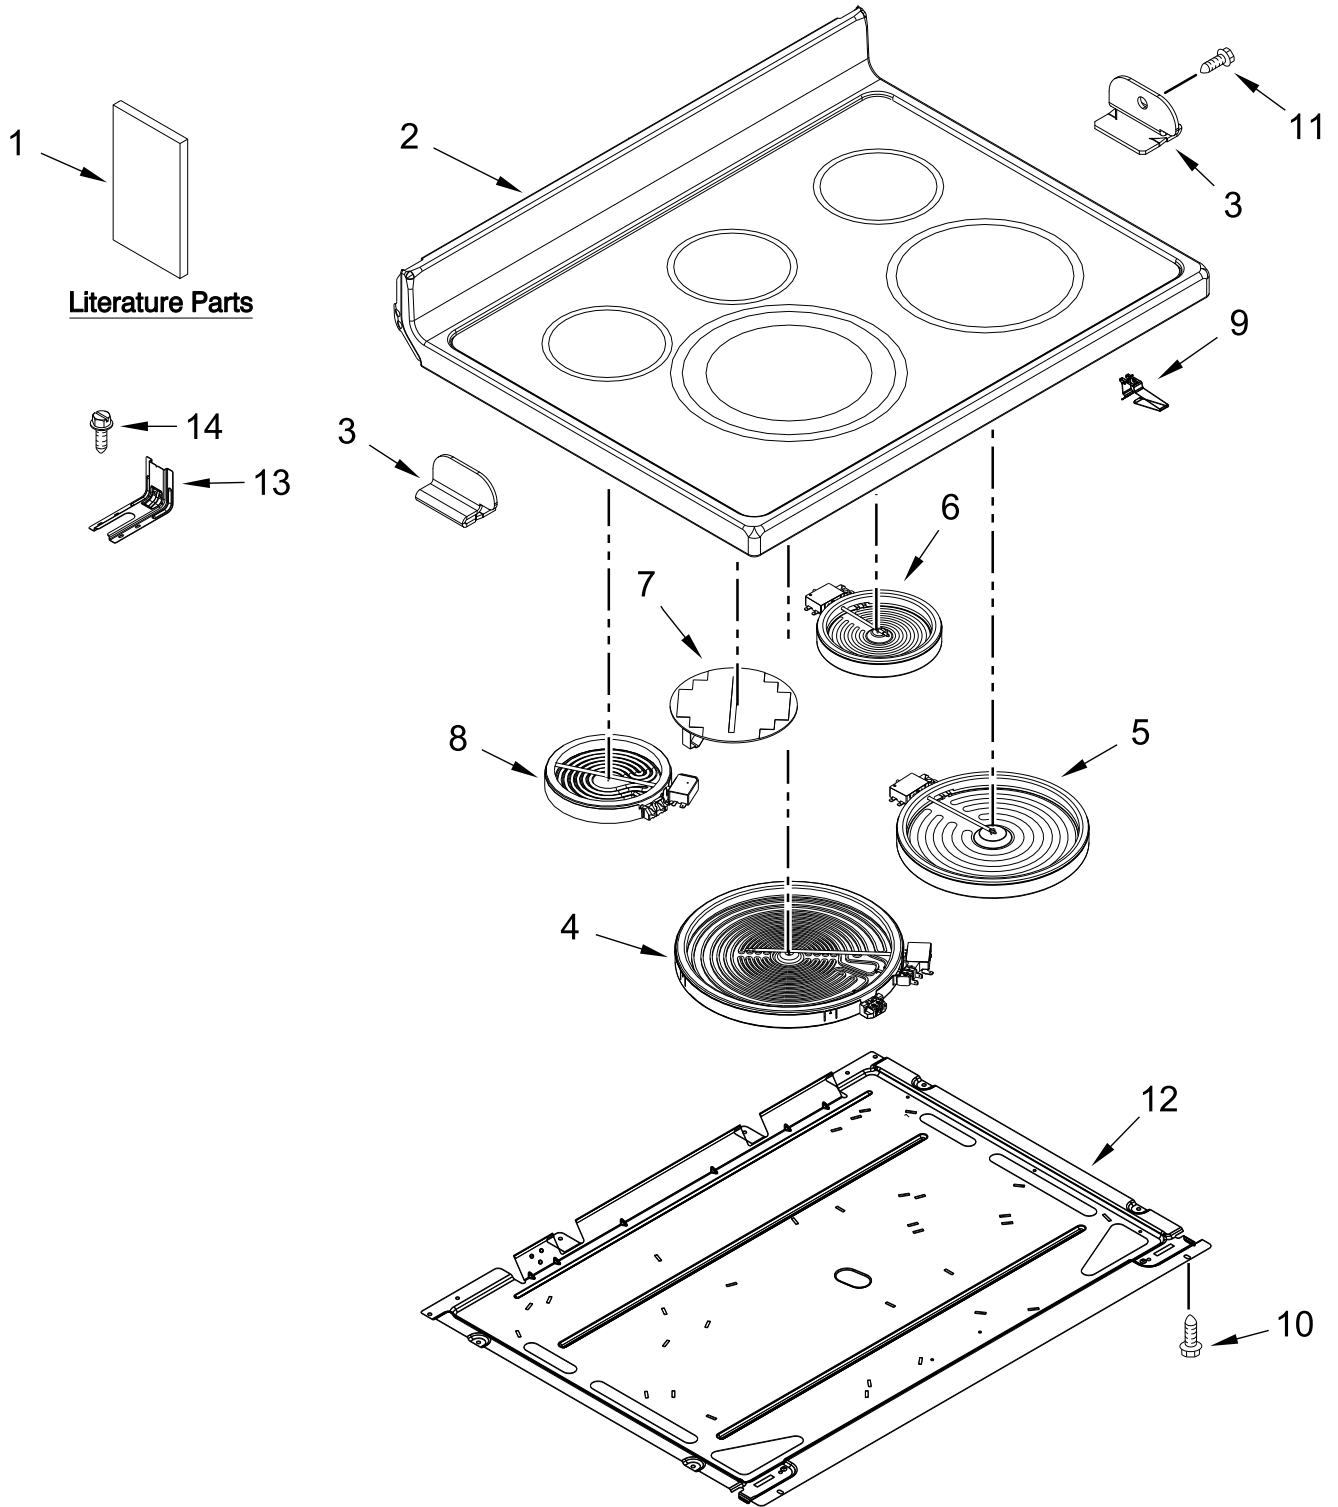

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	12	W10691223	Pan, Radiant Element
	W11509613	Use and Care Guide			(Right Front)	13	W11379945	Bracket, Anti-Tip
	W11489748	Quick Start Guide	6	W10248261	Element (1200W)	14	7101P485-60	Screw, Anti-Tip Kit
	W11393917	Tech Sheet			(Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
2		Cooktop	7	W10799048	Element, Warm Zone			
	W10697351	Black			(Center Rear)		W11188424	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	8	W10342780	Element (1300W)		W11134550	Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)			(Left Rear)		W11454490	Harness, Main
4	W10711900	Element (3000W) (Left Front)	9	W11600012	Spring, Element		W11212183	Harness, Sensor
			10	3196169	Screw		W11134592	Harness, Warm Zone
			11	3196172	Screw			


# CONTROL PANEL PARTS

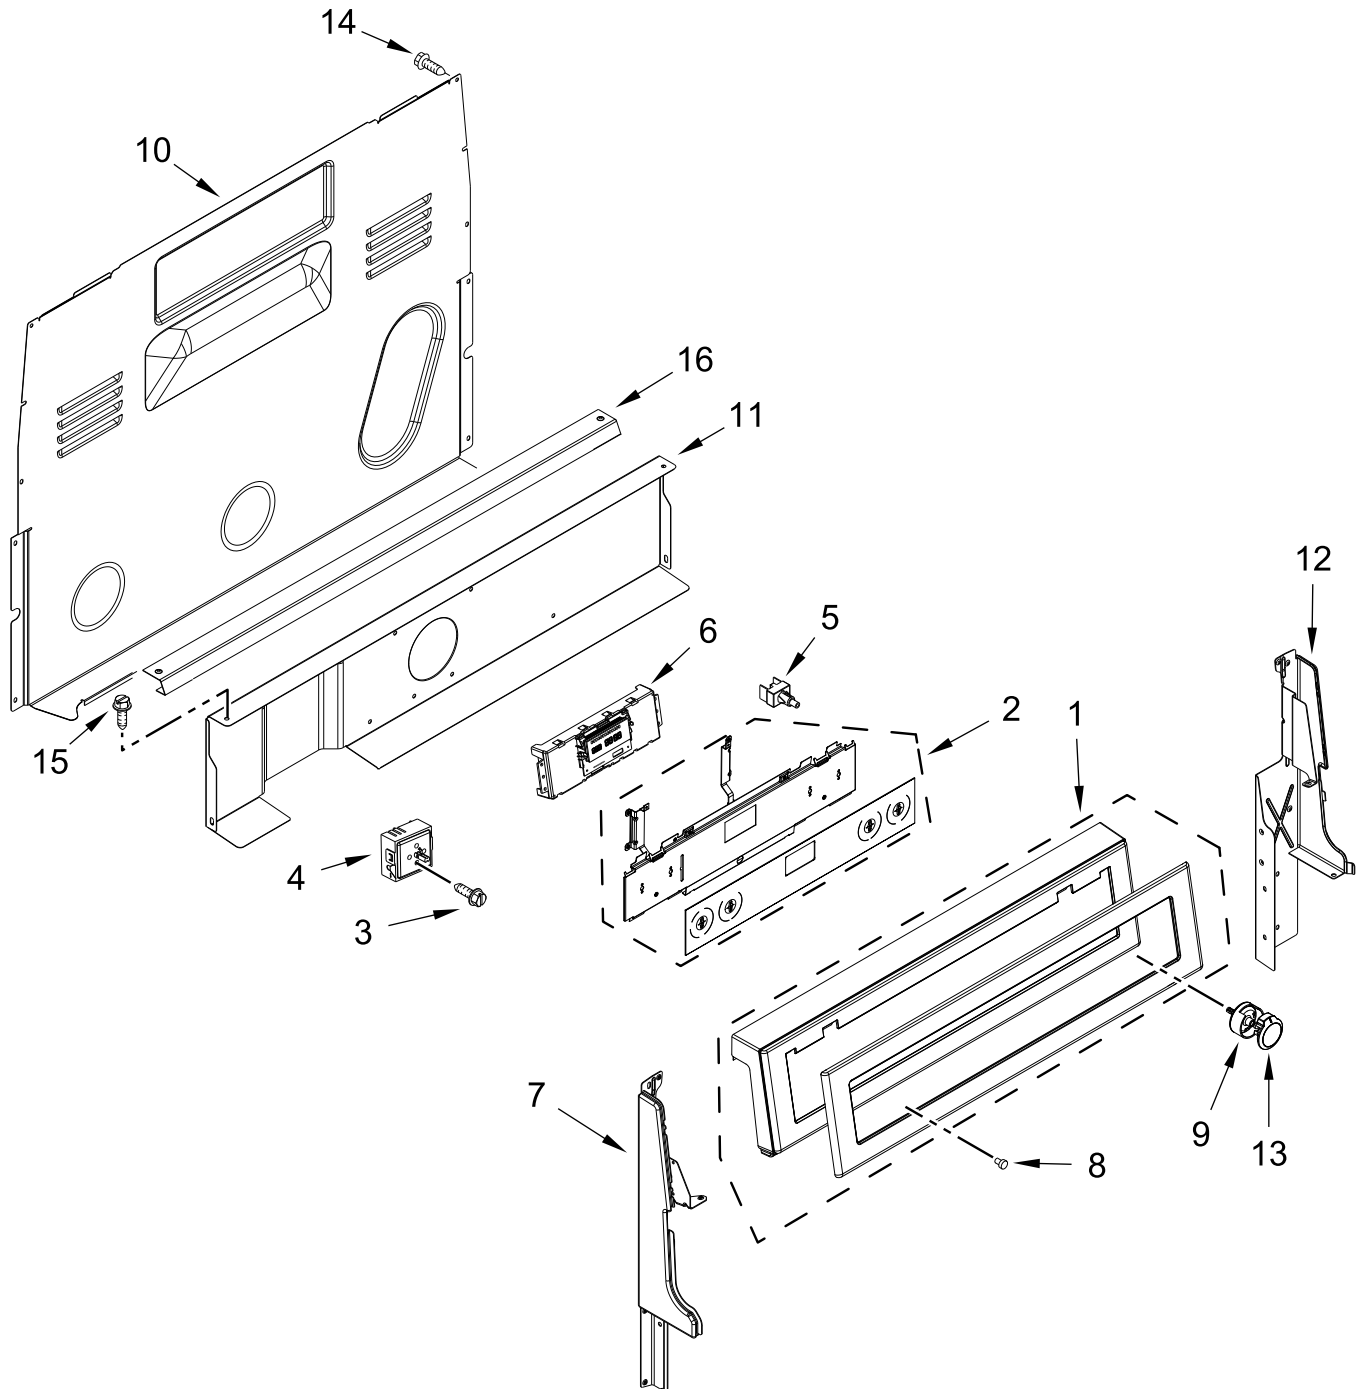

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	8523265	Light, Indicator (125V)	14	3196178	Screw
	W11024860	Black Stainless	6	W10894863	Control, Maxwell	15	W10362924	Screw
2		Assembly, Active Overlay	7		Endcap	16	W10525121	Bracket, Console Mounting
	W11527488	Black		W11130372	Black (Left)			
	W10674068	Screw	8	3196068	Lens, Indicator			
3			9	W10645811	Bezel, Knob			
4	W10437092	Switch, Infinite (Left Front and Right Front)	10	8272473	Cover, Upper Rear			
	W10437094	Switch, Infinite (Left Rear)	11	W10134247	Shield, Heat Endcap			
	W10578768	Switch, Infinite (Right Rear)	12	W11130379	Black (Right)			
			13		Knob			
				W10823535	Stainless			


# CHASSIS PARTS

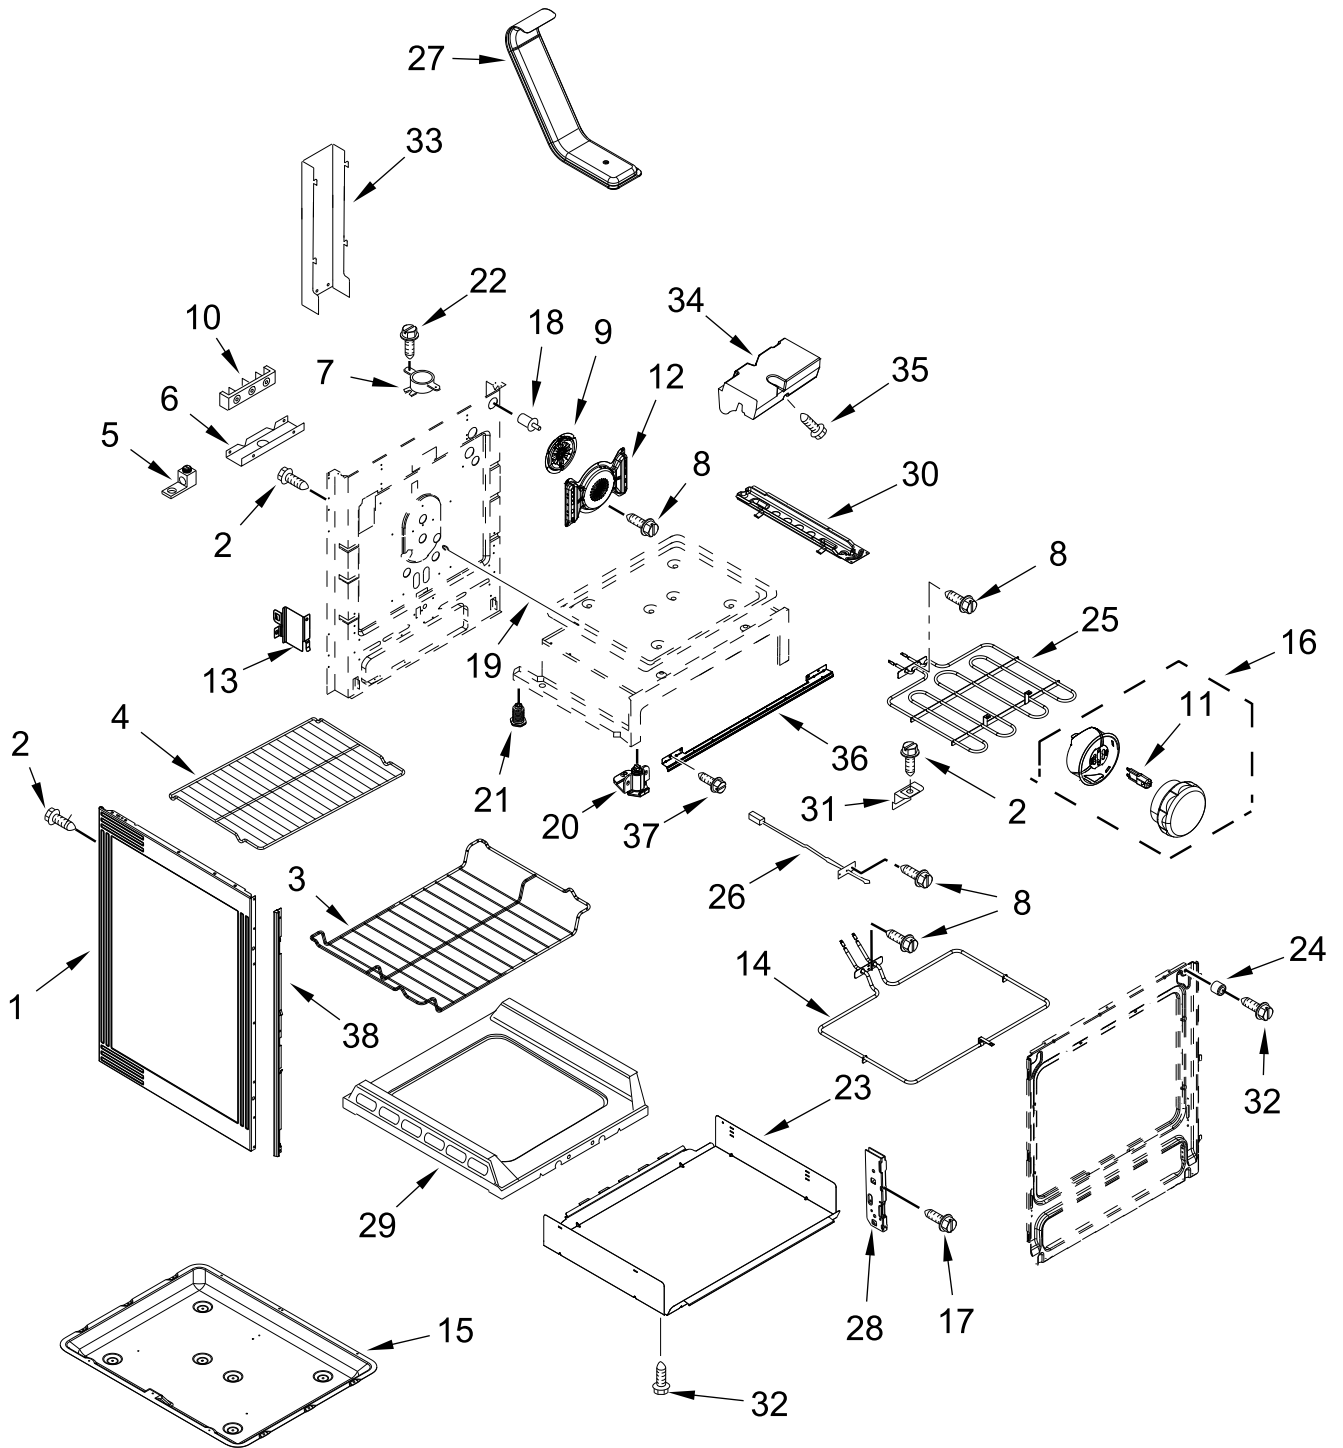

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	15	W11379357	Bake Pan	31	W10035900	Support, Oven Bottom
	W10162245	Black	16	W11634772	Light Assembly	32	W10516115	Screw
2	3196172	Screw	17	W10031780	Screw	33	W10326122	Cover, Terminal Block
3	W10289145	Rack, Oven (Gull-Wing)	18	W11511828	Switch, Door	34	W10910404	Counterweight
4	W10531060	Rack, Oven	19	W10273192	Rod, Door Switch	35	W11034869	Screw
5	W10281322	Kit, Bare Wire Adapter Block	20	W10341186	Front Foot Assembly	36	W11620269	Bracket, Front Frame
6	3186034	Bracket, Service	21	W10058460	Foot, Leveling	37	3196560	Screw
7	3196548	Fuse, Thermal	22	3196172	Screw	38	W11510560	Barrier Rail, Rubber (Left and Right)
8	W10362924	Screw	23	W10726740	Shield, Heat			FOLLOWING PARTS NOT ILLUSTRATED
9	W10756304	Assembly, Convection	24	9758701	Spacer, Door	W10194393		Insulation, Wrap
10	W10246624	Block, Terminal	25	W11095929	Element, Broil	W10225524		Insulation, Back
11	W10571723	Bulb, Halogen 40 Watts	26	W10586204	Sensor	W10225523		Insulation, Bottom
12	W10346153	Baffle, Full Convection	27	W10134285	Tube, Vent	4820F015-59		Insulation, Strap
13	W10273002	Bracket, Oven Support	28	W10289077	Receiver, Hinge			
14	W10774342	Element, Bake	29	W10774446	Bottom, Oven			
			30	W10390008	Base Rail Assembly (Left)			
				W10390007	Base Rail Assembly (Right)			

# DOOR PARTS

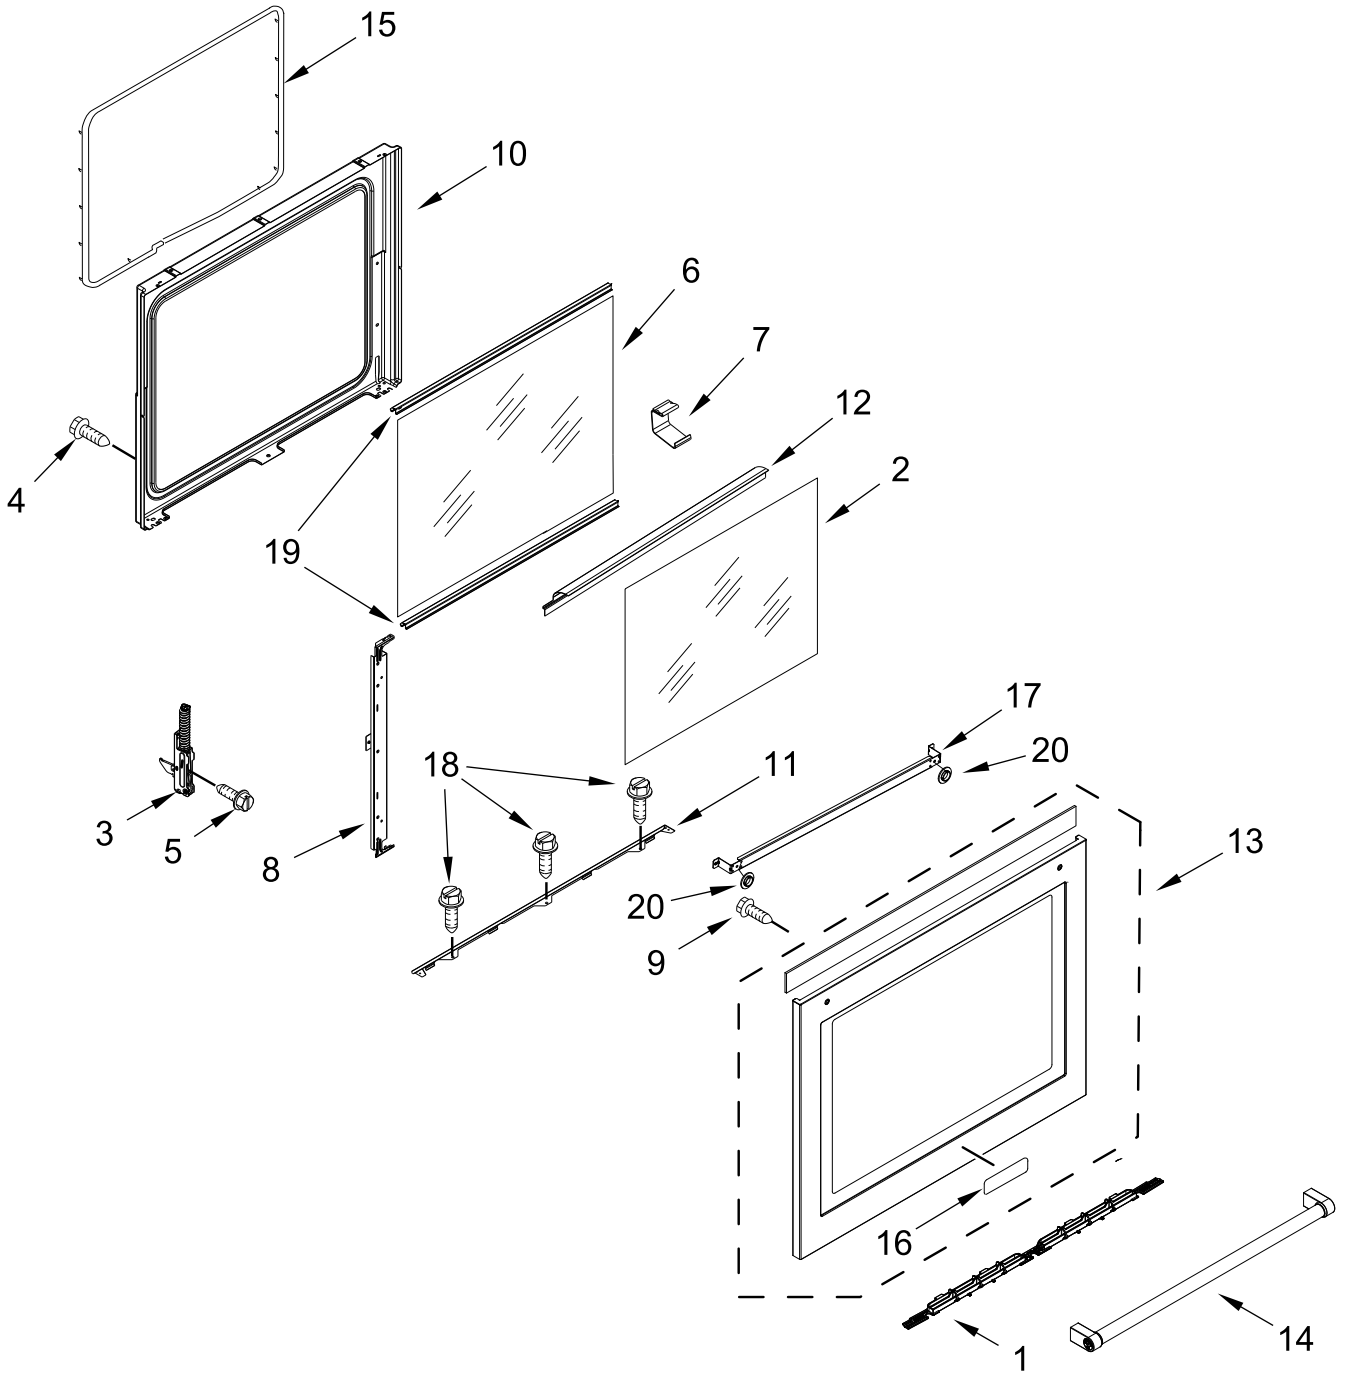




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11440161	Bottom, Door Cover	9	W10241367	Screw	14		Handle, Door
2		Glass, Outer Door	10	W10826568	Liner, Door		W10551000	Stainless
	W10693388	Glass, Outer Door (Stainless)	11	W10813140	Rail, Horizontal Support	15	W11491752	Gasket, Door
3	W10885519	Hinge, Door (Active)	12		Liner, Door Scoop	16	W10518672	Badge
4	W10031790	Screw		W10613791	Black	17	W10541911	Bracket, Glass Upper Handle
5	W10362924	Screw	13		Glass Assembly, Outer Door	18	9780274	Screw
6	W11223202	Glass, Inner		W10861703	Black Stainless	19	W11379948	Glass Spacer
7	W10137382	Clip, Panel				20	W10319024	Washer, Door
8	W10813139	Rail, Vertical Support						

# DRAWER PARTS

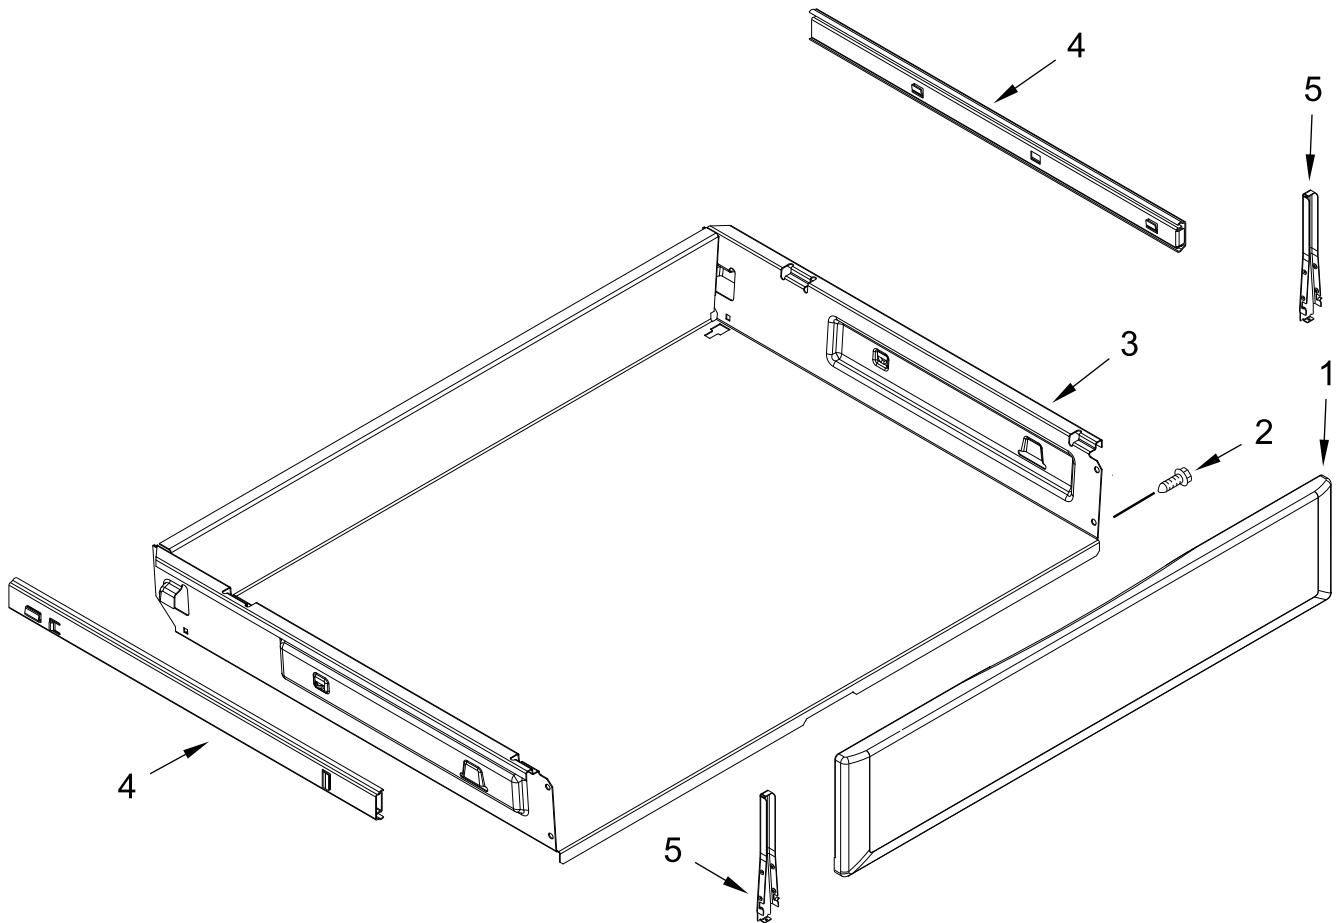

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11190208	Black Stainless
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	350938	Gray Primer
	350942	White Primer

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10432019	Alt Cleaning Kit
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting