


**KitchenAid®**

**GAS RANGE**  
**Includes Griddle**

**MODELS:**

KFGC558JYP07 (Yellow Pepper)


# BURNER BOX AND GRIDDLE PARTS

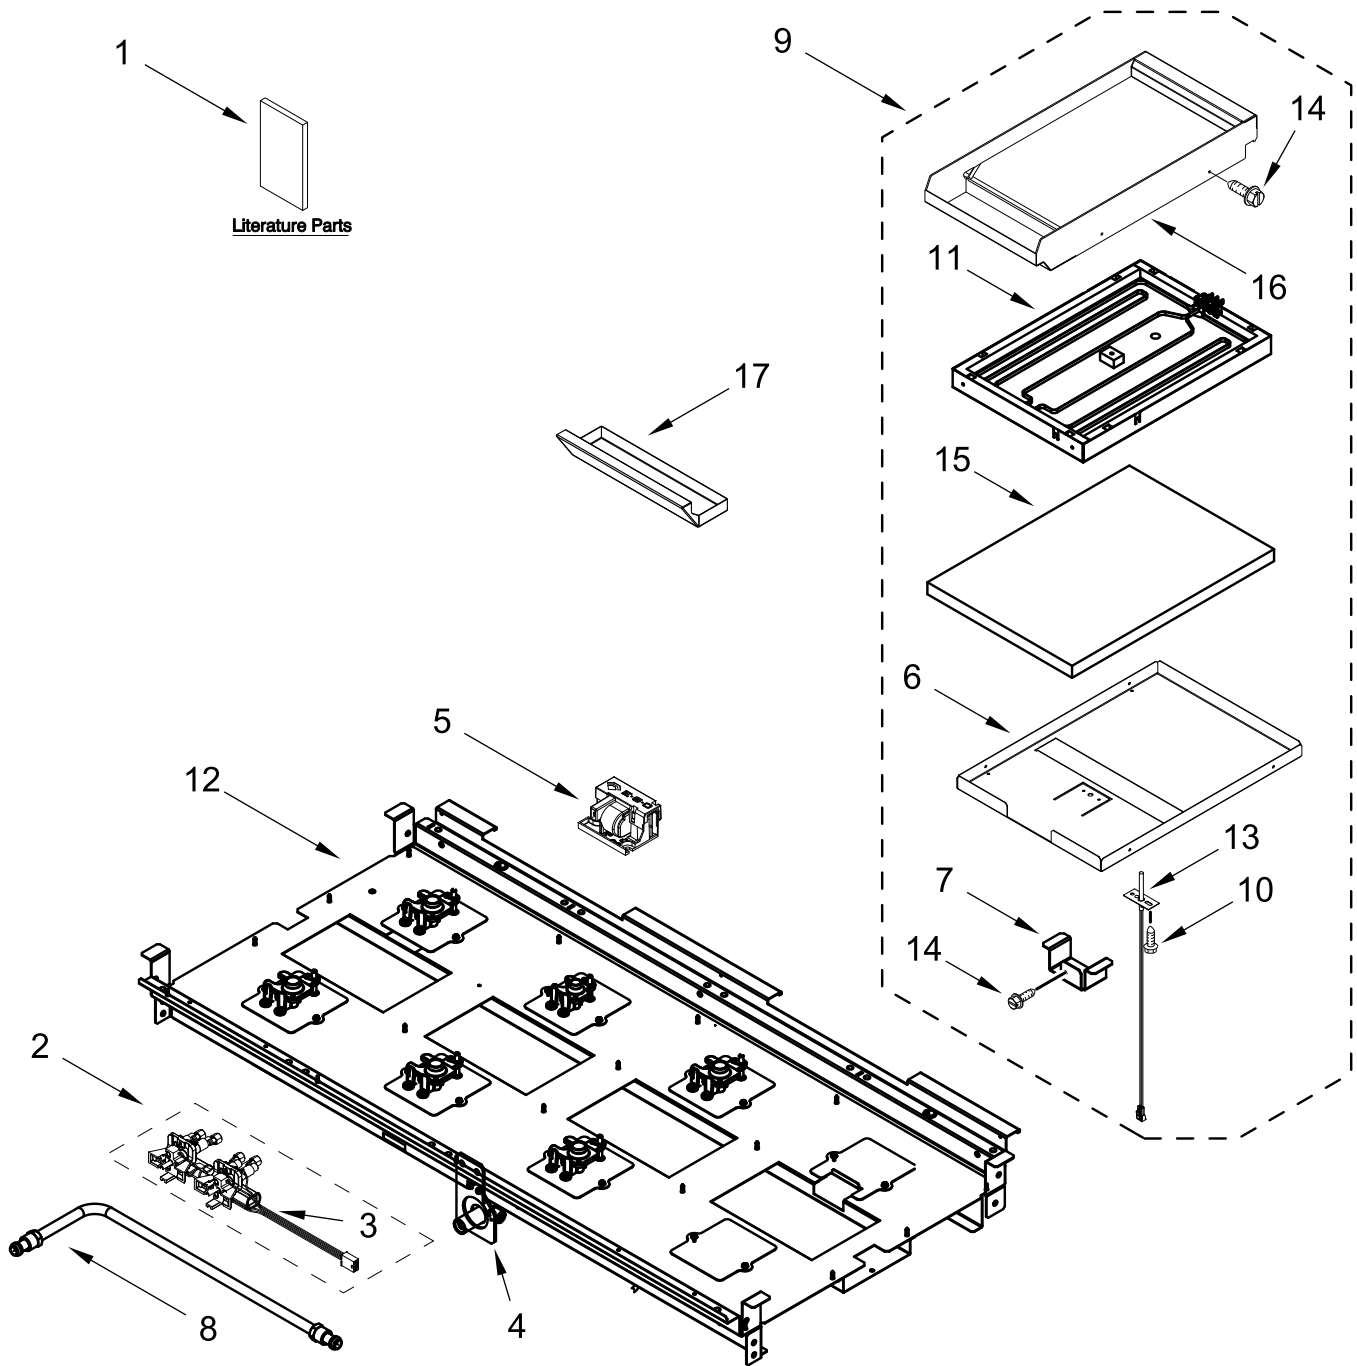

# BURNER BOX AND GRIDDLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	16	W11360151	Module, Griddle
	W11508863	Use and Care Guide	4	W11121194	Bracket, Manifold	17	W10276497	Tray, Griddle Drip
	W11508887	Installation Instructions	5	W11121317	Module, Spark			FOLLOWING PARTS NOT ILLUSTRATED
	W11184759	Guide, Internet Connectivity	6	W11330430	Tray, Griddle Insulation		W11448064	Harness, Main (48 in)
	W11364680	Guide, Quick Start	7	W11121384	Bracket, Griddle-RTD		W10903727	Harness, Griddle
	W11575704	Wiring Diagram (Cooktop)	8	W10892809	Tube, Manifold Supply (Left)		W11200329	Harness, Cooktop
	W11565468	Tech Sheet		W10892804	Tube, Manifold Supply (Left Center)		W10780278	Harness, Door Lock
2	W11183720	Assembly, Valve Manifold (Left Front And Left Rear)		W10892805	Tube, Manifold Supply (Right Center)		W11200318	Harness, Communication
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	9	W11505236	Griddle Module Assembly		W11242785	Harness, WIFI
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	10	3196160	Screw		313438	Clip, Harness
			11	W10891698	Element, Griddle		W10624584	Cord, Power
			12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
			13	W10891584	Sensor, Griddle		W10253333	Bracket, Anti-Tip
			14	W10162096	Screw		7101P485-60	Screw, Anti-Tip Kit
			15	W11121383	Insulation, Griddle		W11238042	Kit, LP Conversion
							W11311196	Ignitor Wire, Wire-Electrode Bake
							W11311197	Ignitor Wire, Wire-Electrode Broil


# COOKTOP, BURNER AND GRATE PARTS

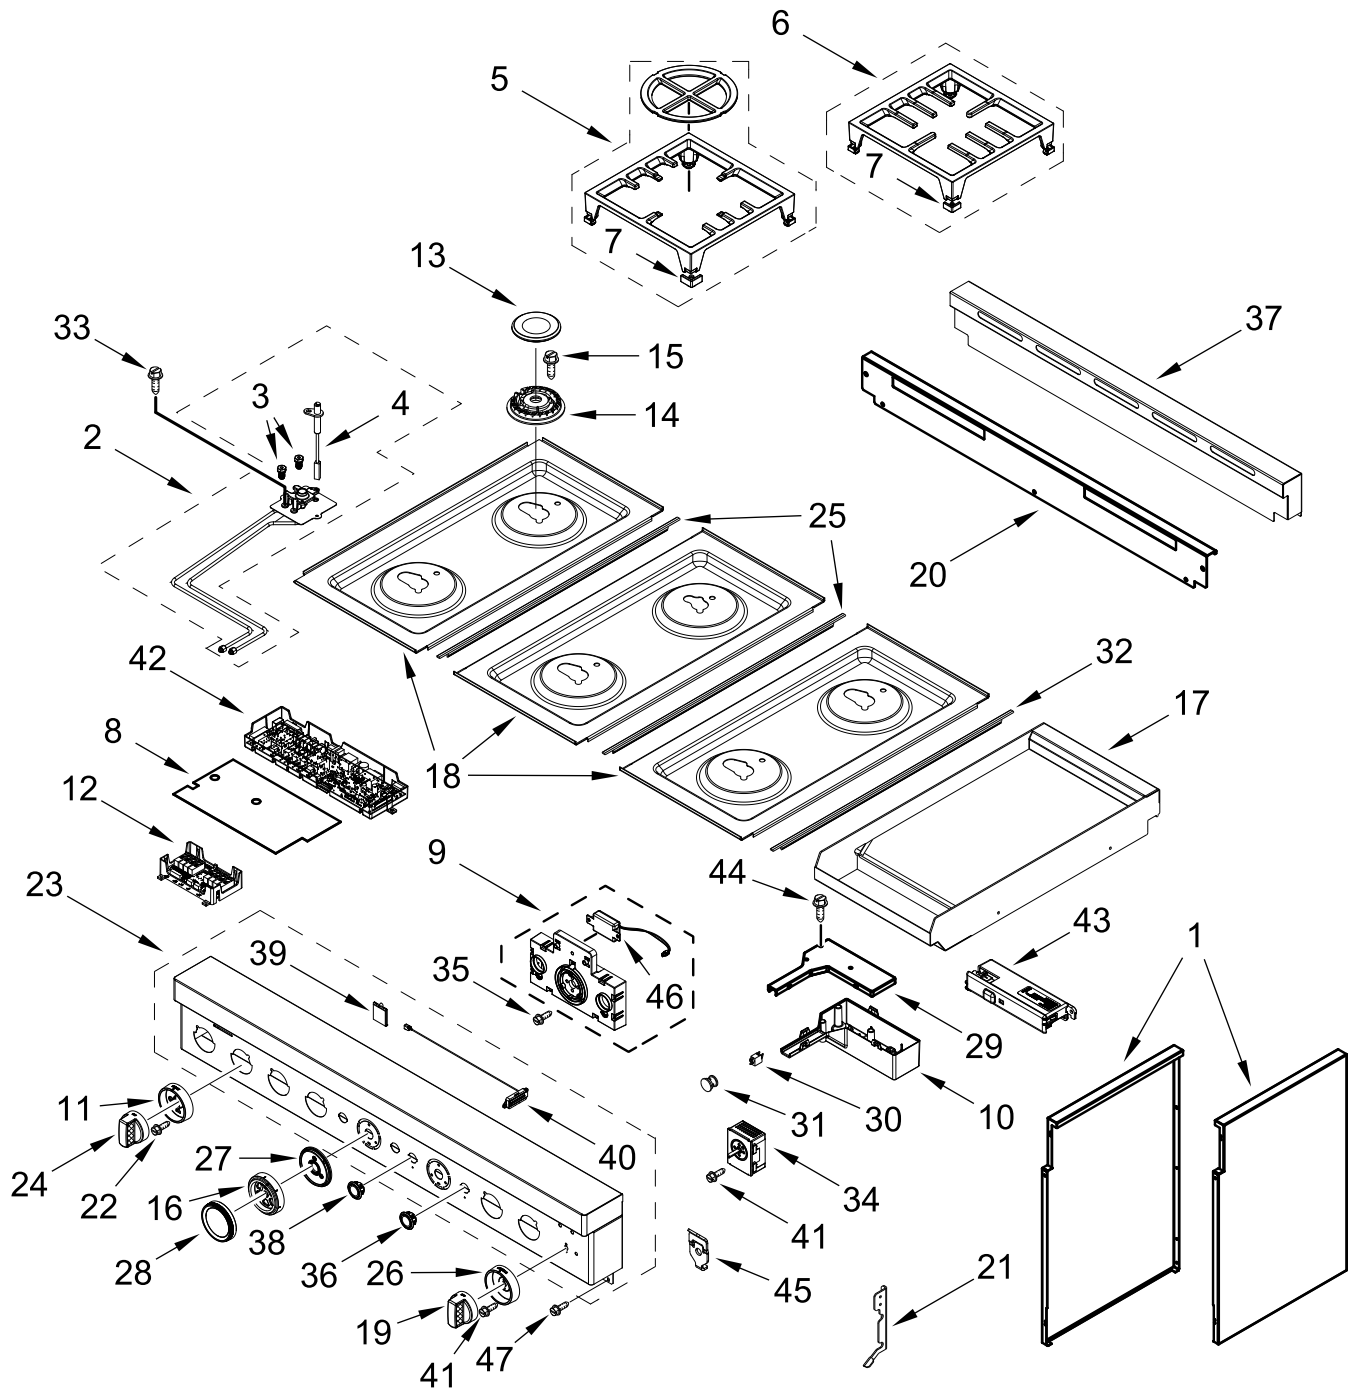

# COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	8	W11281269	Barrier, Appliance Manager	22	W11328357	Screw
	W11111428	Panel, Cabinet Side (Right)	9	W11436336	User Interface	23	W11700786	Panel, Control
2	W10892793	Assembly, Orifice Holder (Left Front)	10	W11205795	Cover, WIFI Outer	24		Knob, Burner
	W10892492	Assembly, Orifice Holder (Left Rear)	11	W10881642	Bezel (Front Burners)	W10912166		Stainless (Left Rear, Left Center Front, Right Center Rear)
	W11159461	Assembly, Orifice Holder (Left Center Front)		W10883433	Bezel (Rear Burners)	W10883172		Stainless (Left Front, Left Center Rear, Right Center Front)
	W10892808	Assembly, Orifice Holder (Left Center Rear)	12	W10871065	Manager, Appliance (Expansion)	25		Trim, T-Strip
	W10892505	Assembly, Orifice Holder (Right Center Front)	13		Cap, Burner	W10271524		Black
	W10892446	Assembly, Orifice Holder (Right Center Rear)		W11121390	Black (Includes 6)	26	W10886700	Bezel, Griddle
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)	14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)	27		Bezel, Oven
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)		W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)	W11500871		Stainless Knob, Oven Temperature
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Center Front)		W10891978	Spreader, Flame (AUX) (Left Center Rear)	W11500869		Stainless (For 18 in Oven)
	W10892438	Orifice, Simmer (5K) (Left Center Rear)	15	W11323261	Screw (8-18 X 1 in)	W11500868		Stainless (For 30 in Oven)
4	W11238757	Igniter (Left Front, Right Center Front)		W11323309	Screw (8-18 X 1/2 in)	29	W11205794	Cover, WIFI Inner
	W11114379	Igniter (Left Rear)	16		Knob, Oven Mode	30	W10116114	Light, Indicator Housing
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)		W11500864	Stainless (For 18 in Oven)	31	W10294500	Lens, Indicator Light
5	W11291183	Burner, Grate (With Wok Ring)		W11500865	Stainless (For 30 in Oven)	32	W10291193	Trim, L-Strip
6	W11291179	Burner, Grate	17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)	33	7101P426-60	Screw
7	W11042504	Bumper, Grate		W11038235	Black (Left)	34	W11033497	Control, Griddle
			18		Panel, Cooktop	35	3400814	Screw
				W11038257	Black (Left Center)	36	W11241510	Button Assembly, Oven Start
				W11038243	Black (Right Center)	37	W11476244	Island Trim
			19		Knob, Griddle	38	W11241511	Button Assembly, Oven Light
				W10912167	Stainless	39	W10896366	Assembly, Light Pipe
			20	W10323252	Trim, Island Insert	40	W11130078	Antenna, WIFI
			21	W10130760	Bracket, Moving Console (Left)	41	W10674068	Screw
				W10130759	Bracket, Moving Console (Right)	42	W11543346	Manager, Powermax Appliance
						43	W11110768	Assembly, WIFI Module
						44	7101P624-60	Screw
						45	W11036559	Spring Clip, Range
						46	W10568405	Assembly, Speaker
						47	3196537	Screw


# CHASSIS PARTS (48 In)

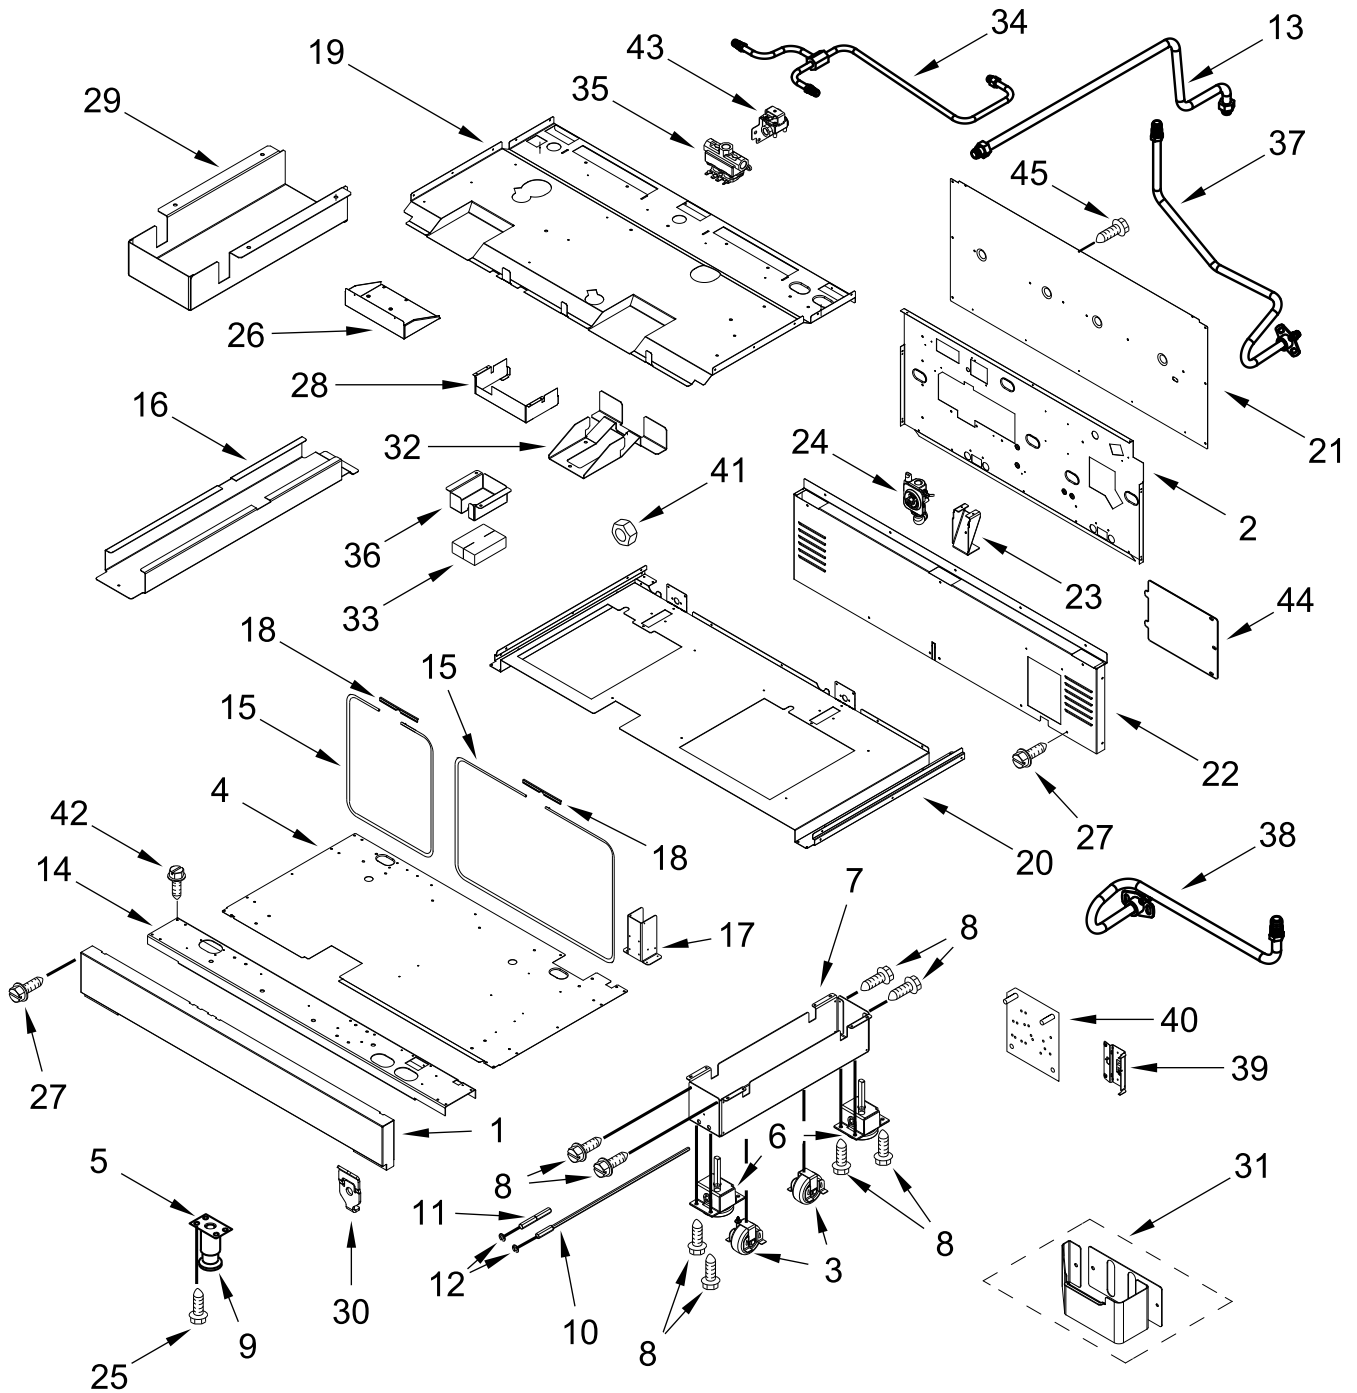

# CHASSIS PARTS (48 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11697050	Kickplate	18	W11362015	Retainer, Gasket (9 in Long)	32	W11190223	Bracket, Bake Alignment
2	W11324987	Back, Chassis	19	W11324984	Top, Chassis	33	W10311009	Insulation, Broil Cover
3	W10138054	Assembly, Roller	20	W11040800	Chassis, Bottom	34	W11112366	Tube, Valve (Double)
4	W11110260	Duct, Bottom (48 in)	21	W11103335	Panel, Back Top	35	W10145680	Valve, Dual
5	9759118	Plate, Mounting	22	W11034123	Panel, Back Bottom	36	W10310985	Cover, Broil
6	9760860	Leveler	23	W11096823	Bracket, Pressure Regulator	37	W11109238	Tube, Broil
7	W10908710	Base, Leveling Leg	24	W10896959	Regulator, Pressure	38	W11106980	Tube, Bake
8	4449743	Screw	25	3400518	Screw	39	W10145362	Bracket-Board, DSI
9	9759117	Foot, Dual Fuel	26	W11106341	Drawer, Appliance Manager	40	W10511278	Module, Spark DSI
10	W10115869	Shaft, Long	27	7101P426-60	Screw	41	112432	Nut, Hex
11	W10115793	Shaft, Short	28	W11369237	Cabinet, Appliance Manager	42	3196560	Screw
12	489504	E-Ring	29	W11368831	Channel, Wire	43	W10311268	Valve, Single
13	W11181648	Tube, Pressure Regulator	30	W11036559	Spring Clip, Range	44	W10115843	Cover, Ignition
14	W11369238	Support, Channel	31	W11199181	Cover, Foot (Left)	45	7101P338-60	Screw
15	W11115328	Gasket, Cavity (30 In)		W11199178	Cover, Foot (Right)			
	W11115326	Gasket, Cavity (18 In)						
16	W11050145	Duct-Chassis, Rear						
17	W10115819	Column, Central						

# OVEN PARTS (30 In)

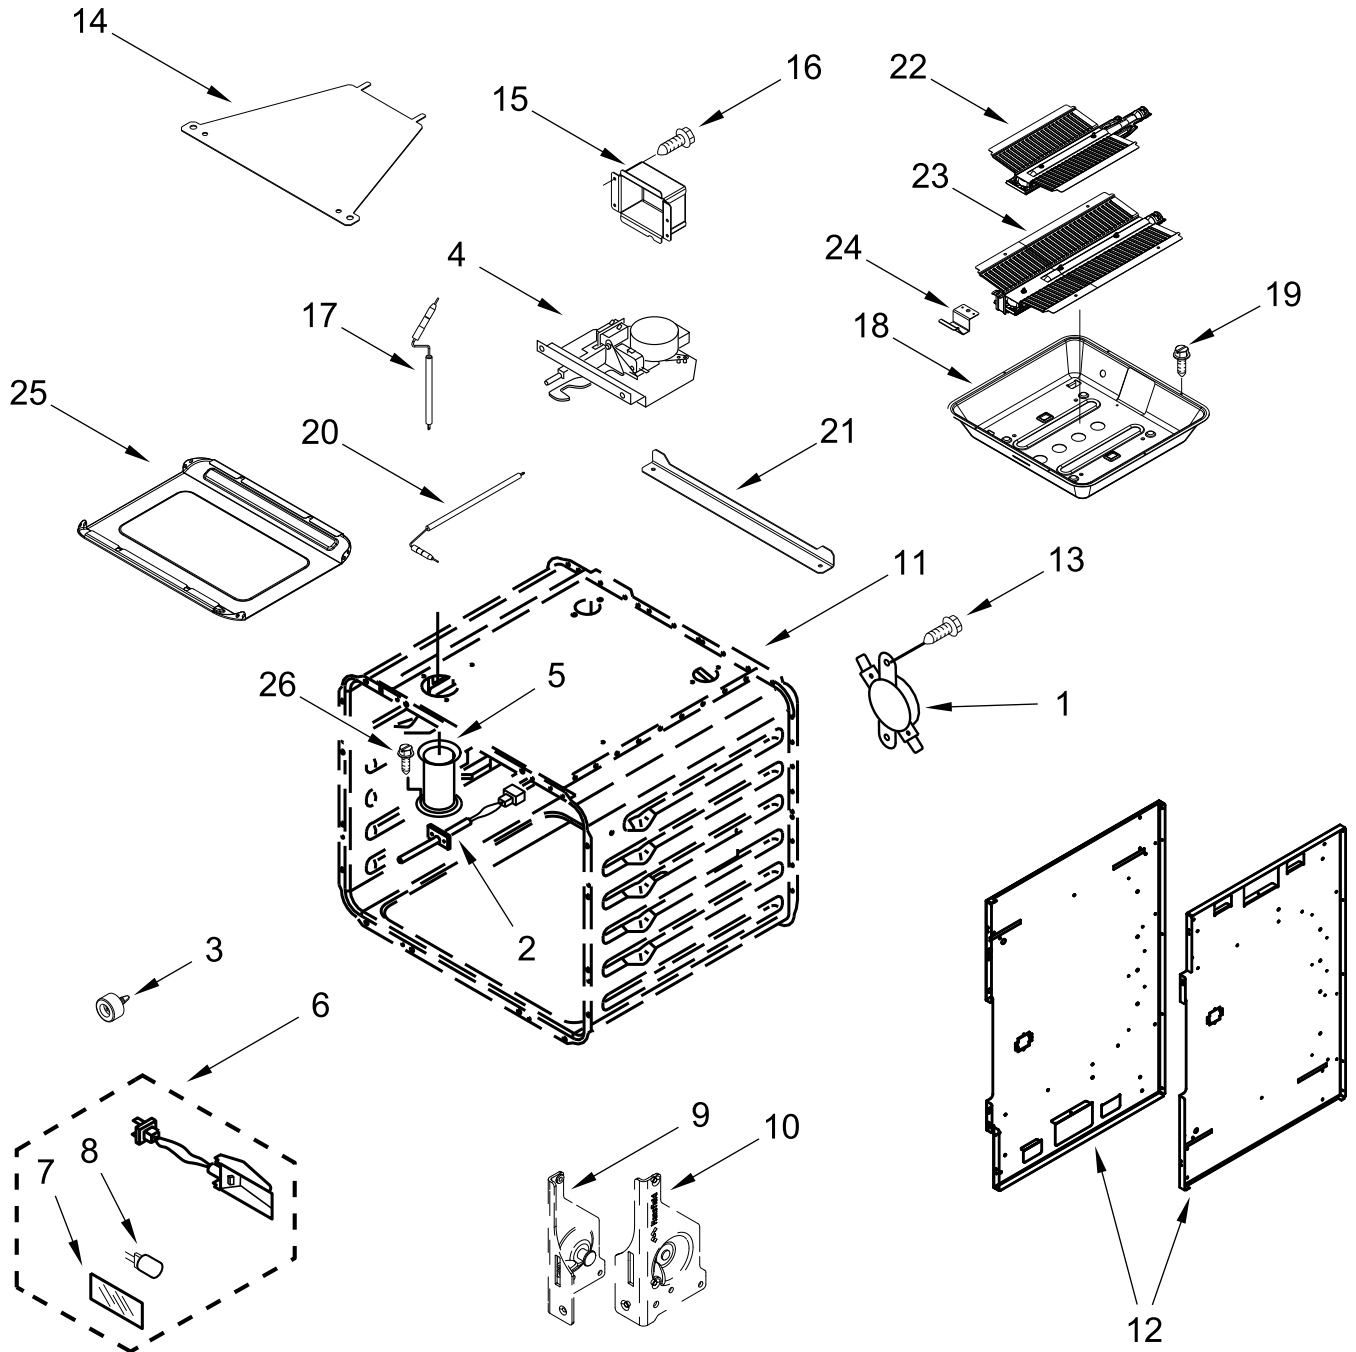




# OVEN PARTS (30 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	13	7101P426-60	Screw	26	3196176	Screw
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	15	W10308051	Box, Broil			
4	W10830016	Latch, Motorized	16	7101P434-60	Screw	W10282810		Insulation, Wrap (30 In)
5	W10145743	Tube, Vent	17	W11182863	Electrode, Broil	W11109145		Insulation, Back (30 in)
6	W11223932	Assembly, Oven Light	18	W10145744	Support, Bake Pan	W10299354		Insulation, Bottom
7	W10169756	Lens, Light	19	12992902	Screw	3400968		Nut
8	W10169757	Bulb, Light	20	W11205400	Electrode, Bake			
9		Receiver, Hinge (Not Serviced)	21	W10317437	Bracket, Broil Standoff			
10		Receiver, Hinge (Not Serviced)	22	W10878504	Burner, Bake			
11		Liner, Oven (Not Serviced)	23	W10311335	Burner, Broil			
			24	W10308040	Bracket, Bake Burner			
12	W11102297	Chassis, Side (Left)	25	W10496809	Pan, Oven Bottom			
	W11102296	Chassis, Side (Right)						


# OVEN PARTS (18 In)

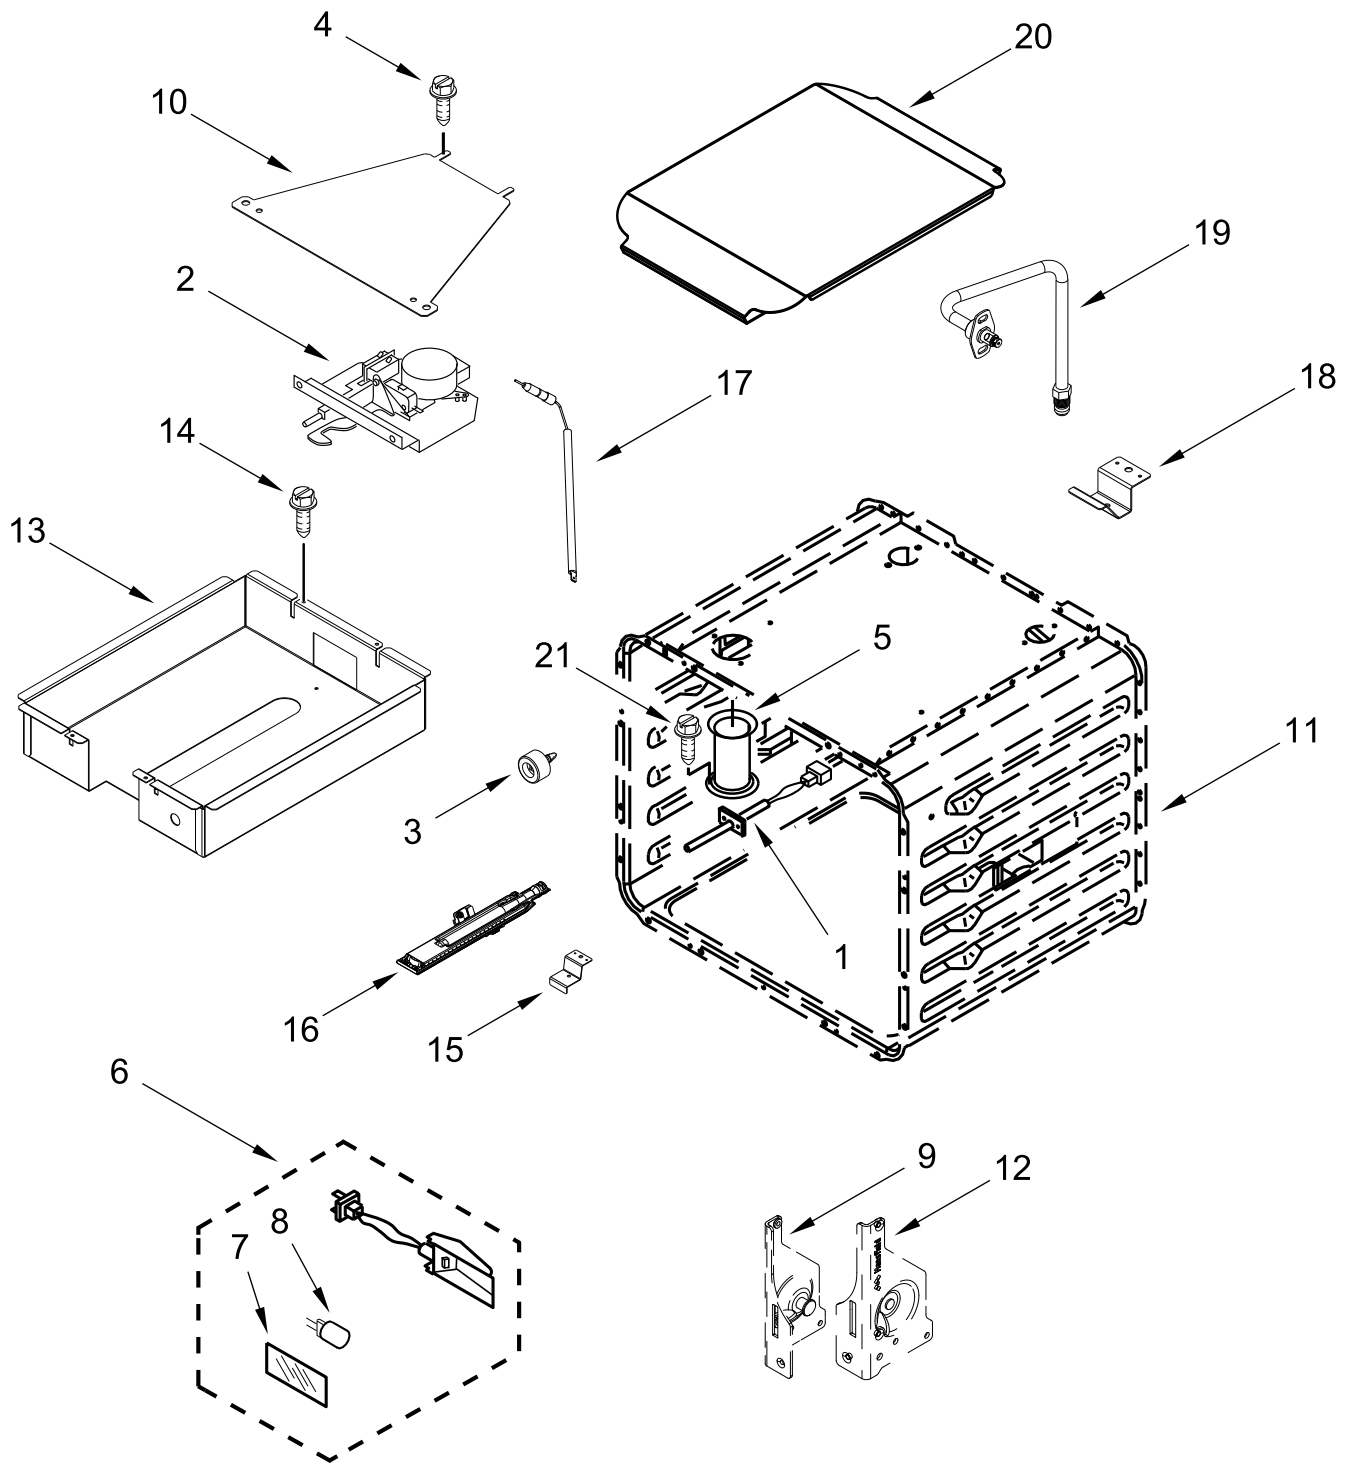

# OVEN PARTS (18 In)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12		Receiver, Hinge (Not Serviced)	21	3196176	Screw
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	13	W10145651	Support, Bake Pan			
4	7101P426-60	Screw	14	12992902	Screw	W10282820		Insulation, Wrap (18 in)
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner (18 in Cavity)	W10299353		Insulation, Back, 18 in
6	W11223932	Assembly, Oven Light	16	W10878505	Burner, Bake W/O Spreader	W10299355		Insulation, Bottom
7	W10169756	Lens, Light	17	W11205400	Electrode, Bake	3400968		Nut
8	W10169757	Bulb, Light	18	W10308040	Bracket, Bake Burner			
9		Receiver, Hinge (Not Serviced)	19	W10145706	Tube, Bake			
10	W10160858	Cover, Latch	20	W11211936	Cover, Bake			
11		Liner, Oven (Not Serviced)						


# VENTING PARTS

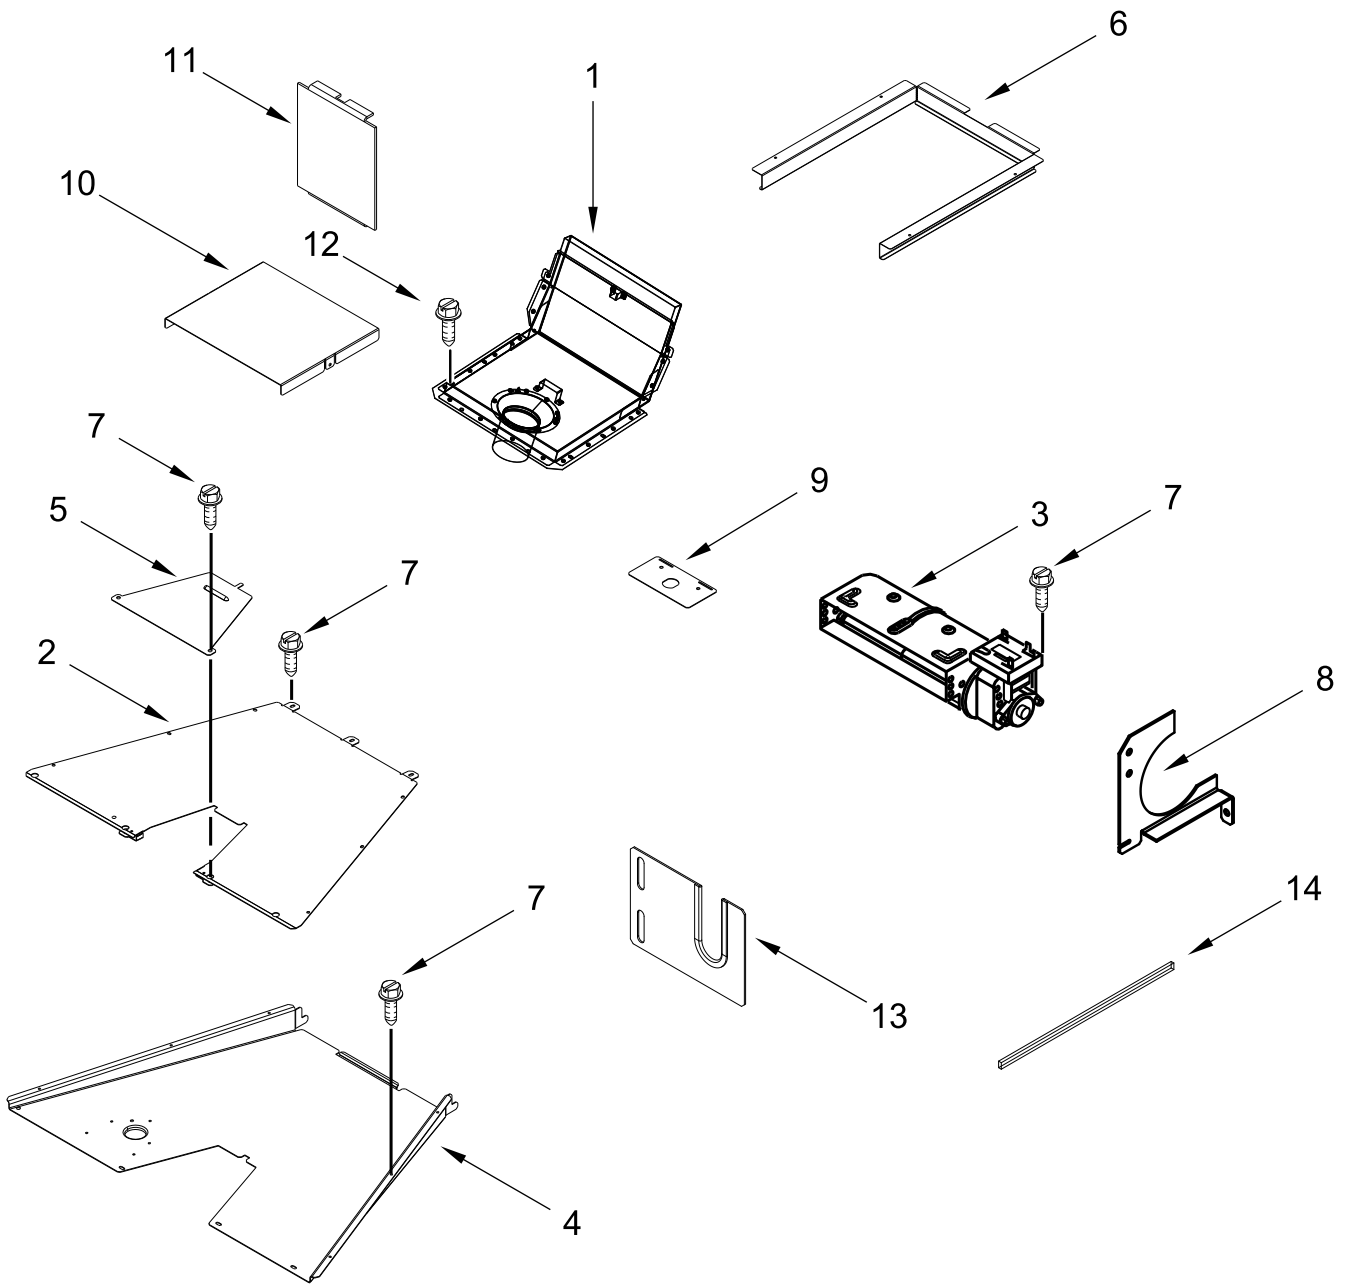

# VENTING PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	4	W11091676	Vent, Cooling Bottom (30 in)	7	7101P426-60	Screw
	W11476247	Vent, Chimney Box (18 in)		W11113377	Vent, Cooling Bottom (18 in)	8	W11047754	Bracket, Blower Mount
2	W11105221	Vent, Cooling Top (30 in)	5	W11109518	Plate, Cooling Latch	9	W10115855	Holder, Strain Relief
	W11113379	Vent, Cooling Top (18 in)	6	W10145363	Duct, Primary Air (30 in)	10	W10246086	Retainer, Insulation
3	W11200129	Blower		W10145364	Duct, Primary Air (18 in)	11	W10246087	Insulation, Chimney
						12	3400805	Screw (Zinc)
						13	W11106956	Cover, Channel
						14	W10919715	Gasket


# OVEN DOOR PARTS (30 In)

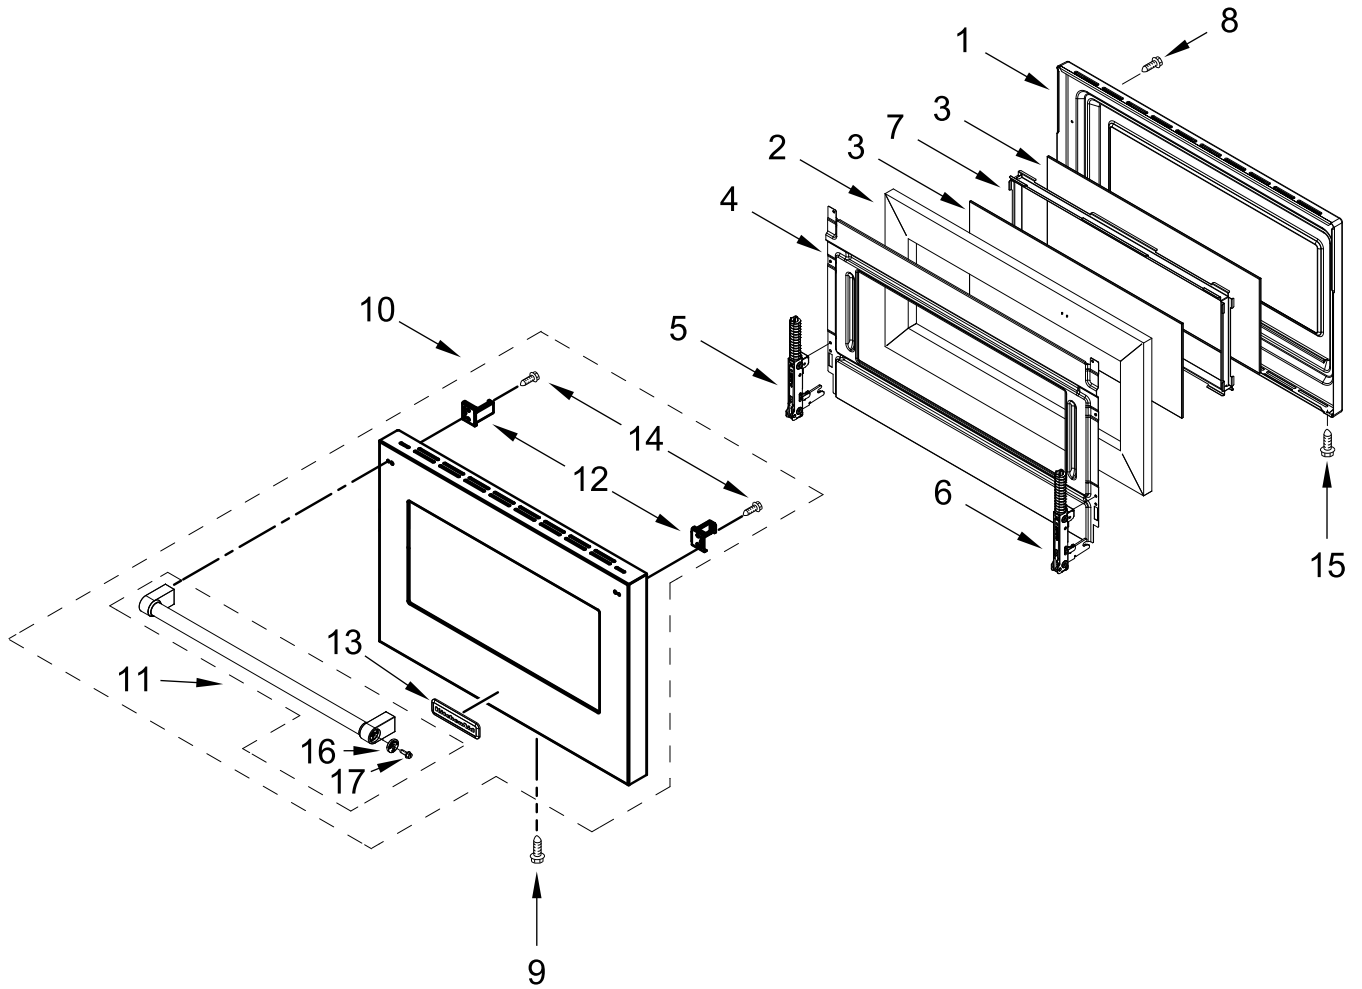

# OVEN DOOR PARTS (30 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10162096	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11712131	Outer Door Assembly (Includes Handle)	15	W10607120	Screw
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	16	W11361074	Medallion, Handle
6	W11390124	Hinge, Dual (Right)				17	W10656499	Screw

# OVEN DOOR PARTS (18 In)

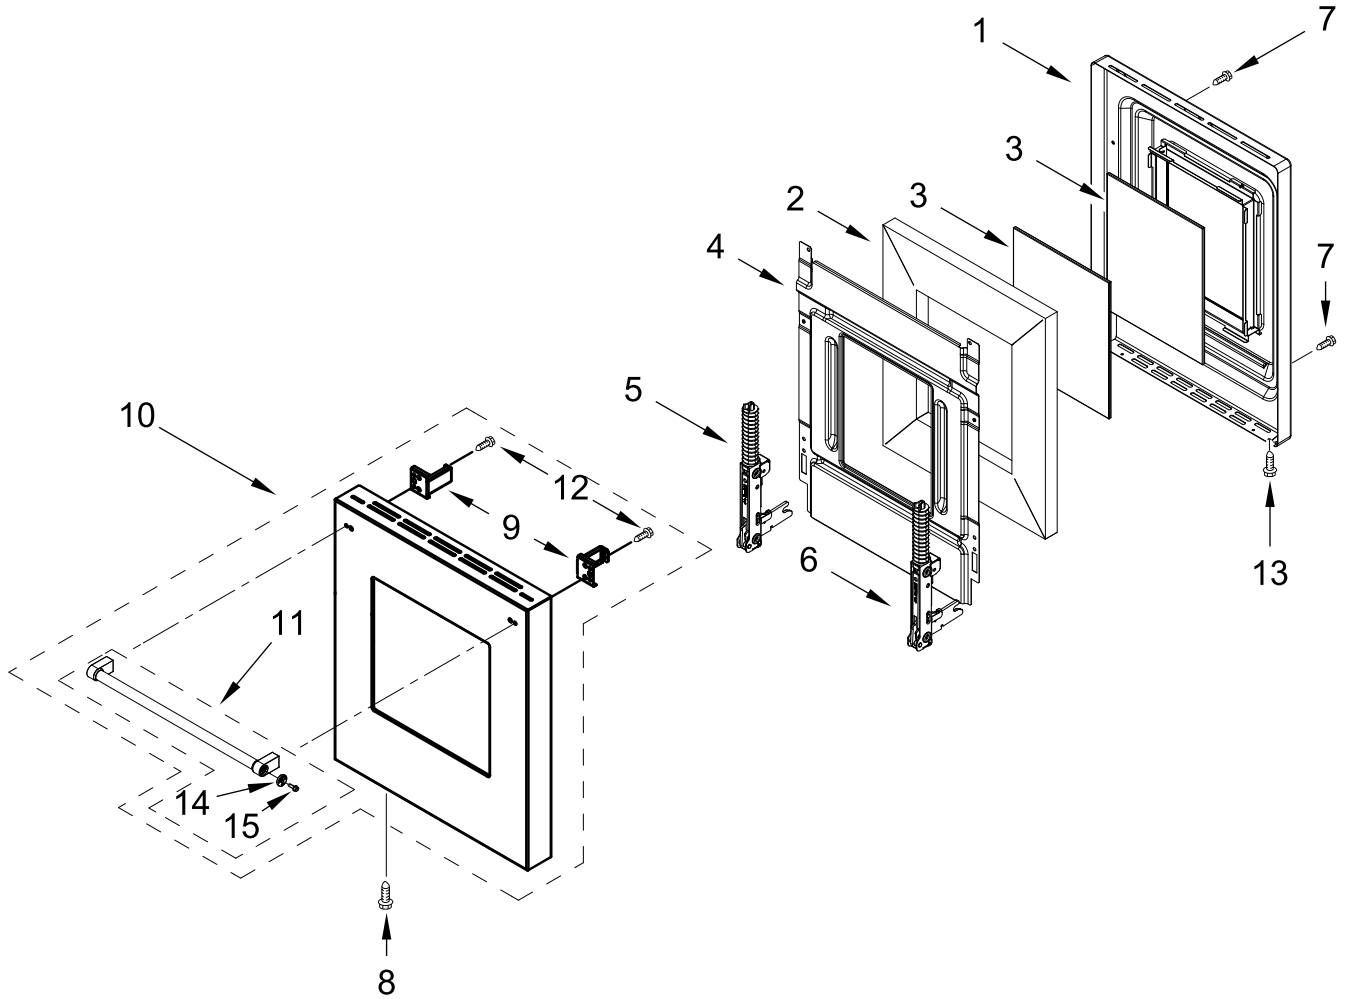




# OVEN DOOR PARTS (18 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W10276043	Screw
2	W10884821	Insulation, Door	8	W10162096	Screw	13	W10607120	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	14	W11361074	Medallion, Handle
4	W11194818	Retainer, Glass	10	W11712122	Outer Door Assembly (Includes Handle)	15	W10656499	Screw
5	W11390106	Hinge, Door (Left)	11	W11362703	Handle Assembly			
6	W11390125	Hinge, Door (Right)						


# INTERNAL OVEN PARTS (30 In)

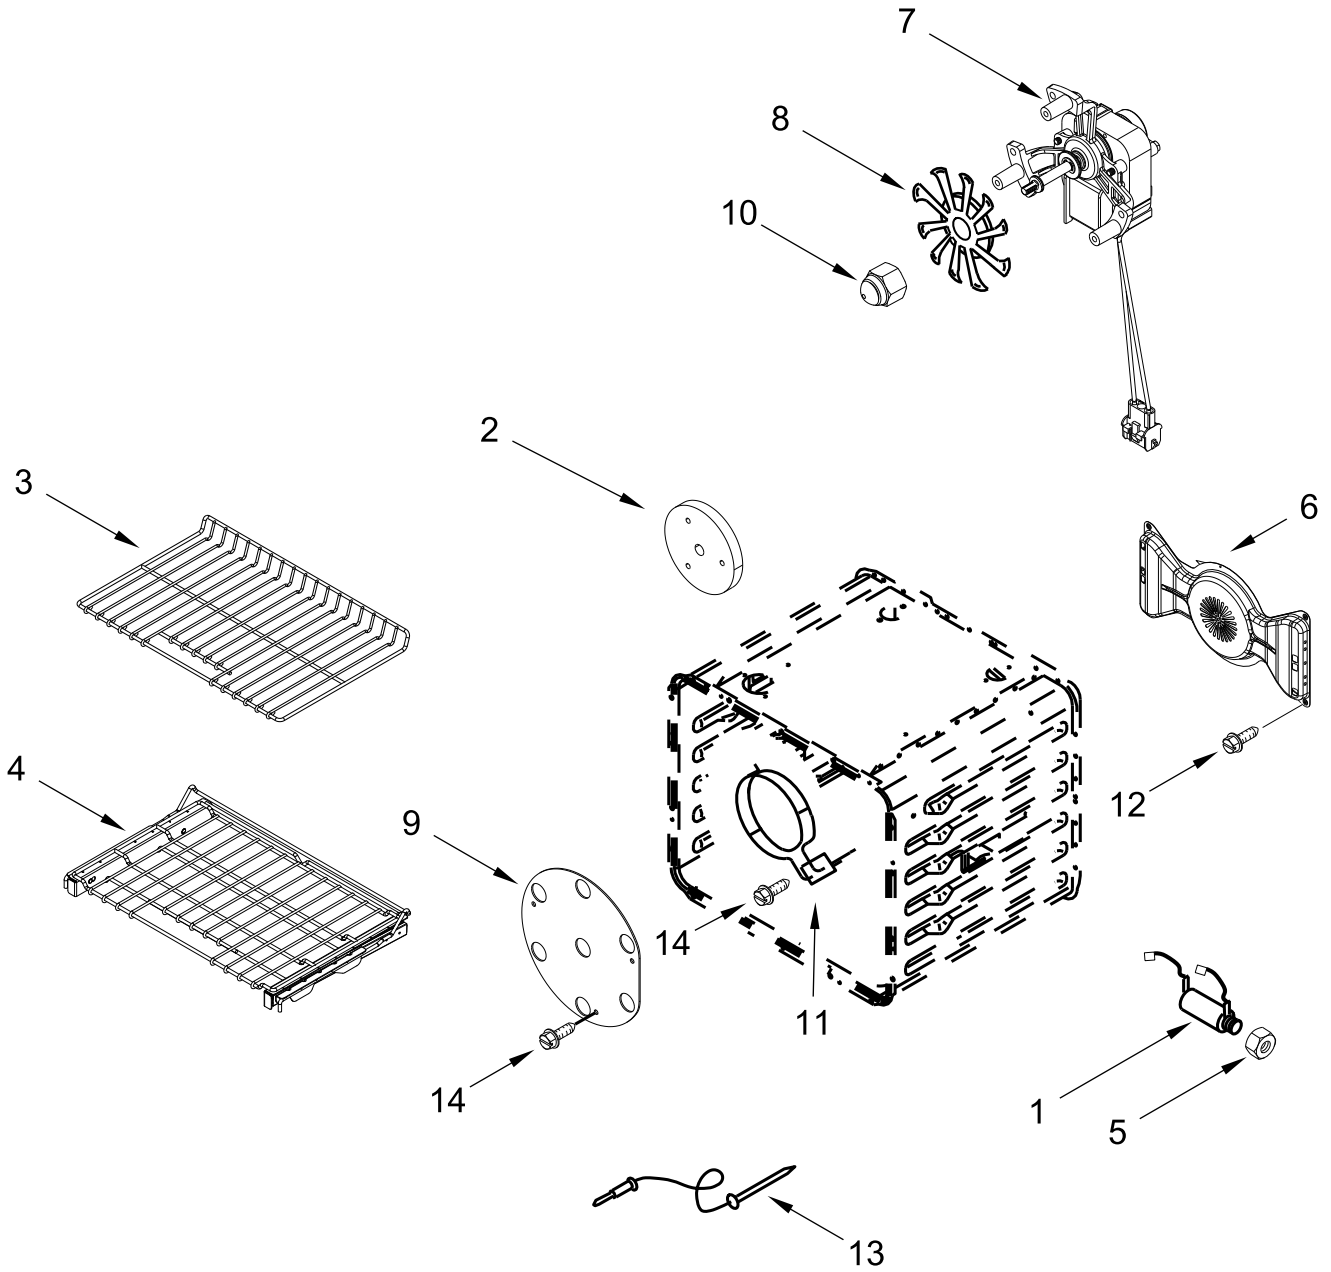

# INTERNAL OVEN PARTS (30 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	4449154	Screw
3	W10570887	Rack, Oven	9	W10261523	Plate, Fan			
4	W11496977	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)			
5	9755546	Nut, Hidden	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	W10739592	Screw			

# INTERNAL OVEN PARTS (18 In)

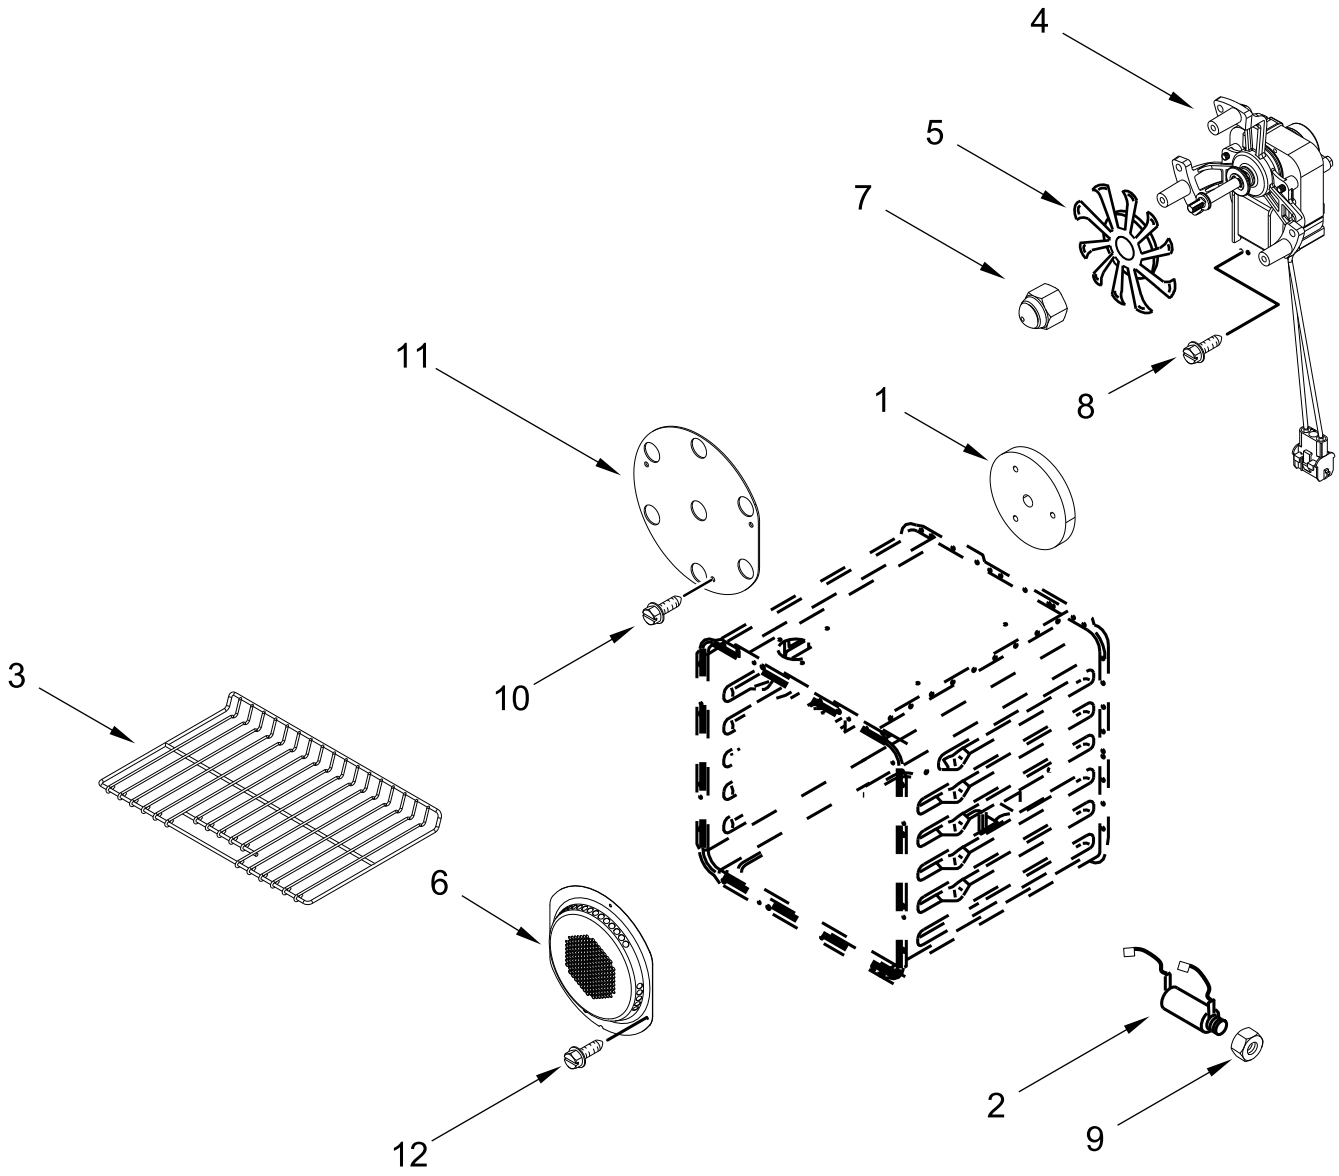

# INTERNAL OVEN PARTS (18 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W10631503	Blade, Fan	10	W10720084	Screw
2	9755543	Jack, Meat Probe	6	W11211948	Cover, Fan	11	W10261523	Plate, Fan
3	W10570879	Rack, Oven (18 in)	7	W10631504	Nut, Acorn (LH)	12	W10739592	Screw
4	W10631506	Motor, Convection	8	4449154	Screw			
			9	9755546	Nut, Hidden			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10355051	Cleaner, Cooktop Backsplash
	W10285449	48-In With Shelf Medallion, Handle
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze