


KitchenAid®

MICROWAVE





MODELS:

KMBP100ESS03 (Stainless)

OVEN PARTS

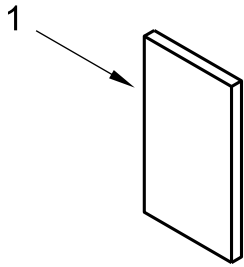


Literature Parts

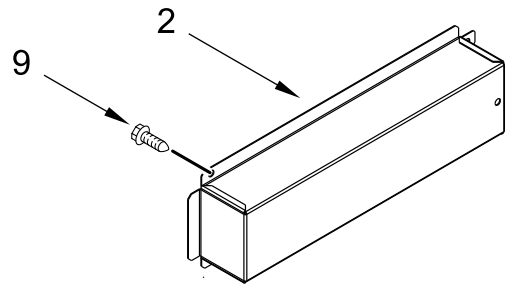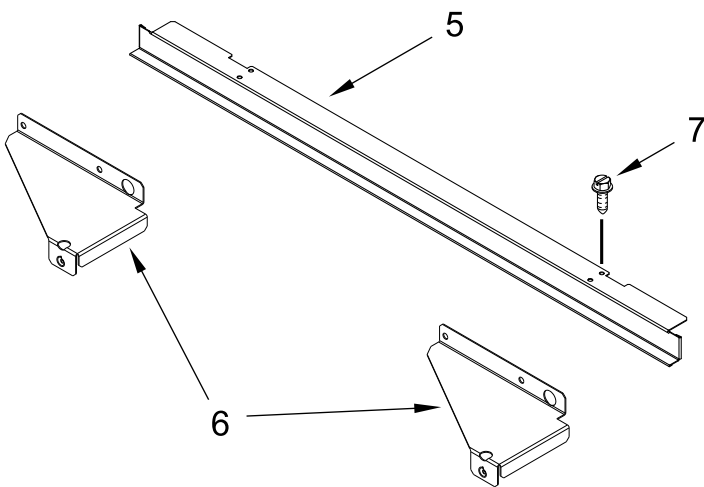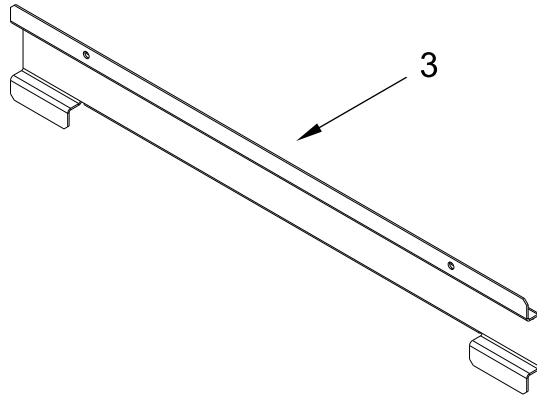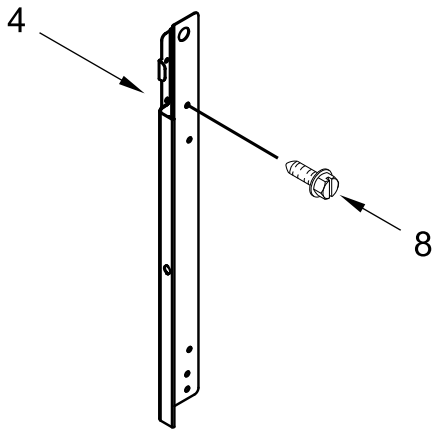

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P653-60	Screw	9	7101P426-60	Screw
	W11091153	Instructions, Installation						FOLLOWING PARTS NOT ILLUSTRATED
	W10643473	Guide, Use & Care (Microwave Oven)					W11356969	Harness, Interlock
	W10756613	Sheet, Tech					W11454022	Harness, Fan and Turntable
2	W10239155	Box, Conduit					W11356968	Harness, Inverter
3	W10420960	Support, Microwave Module					W11356986	Harness, Communication
4	W11460675	Rail, Side (Left)					W11356977	Harness, Cable Tree Assembly
	W11460672	Rail, Side (Right)					W11356987	Jumper Harness, Communication
5		Trim, Bottom					W10513362	Bag, Hardware
	W11359268	Stainless					4450800	Screw, Grounding
6	W10239156	Bracket, Lower (Left)					W11226264	Strap, Ground
	W10239157	Bracket, Lower (Right)					W11356992	Conduit
7	3400832	Screw (Black)						


CONTROL PANEL PARTS

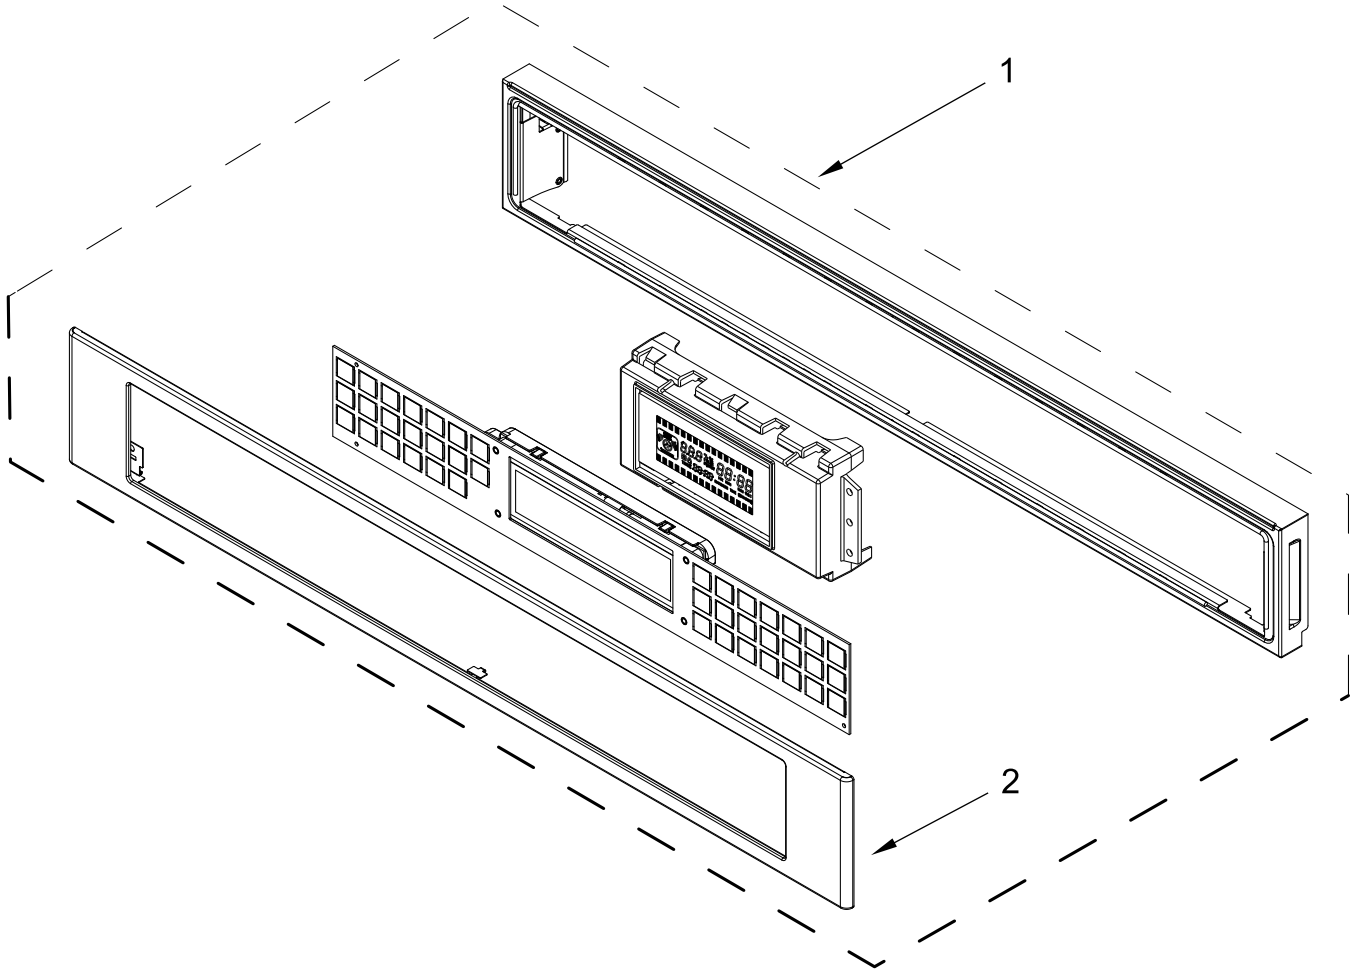

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Control Panel	2		Skin, Control Panel
	W10588761	Stainless		W10588740	Stainless


MICROWAVE DOOR PARTS

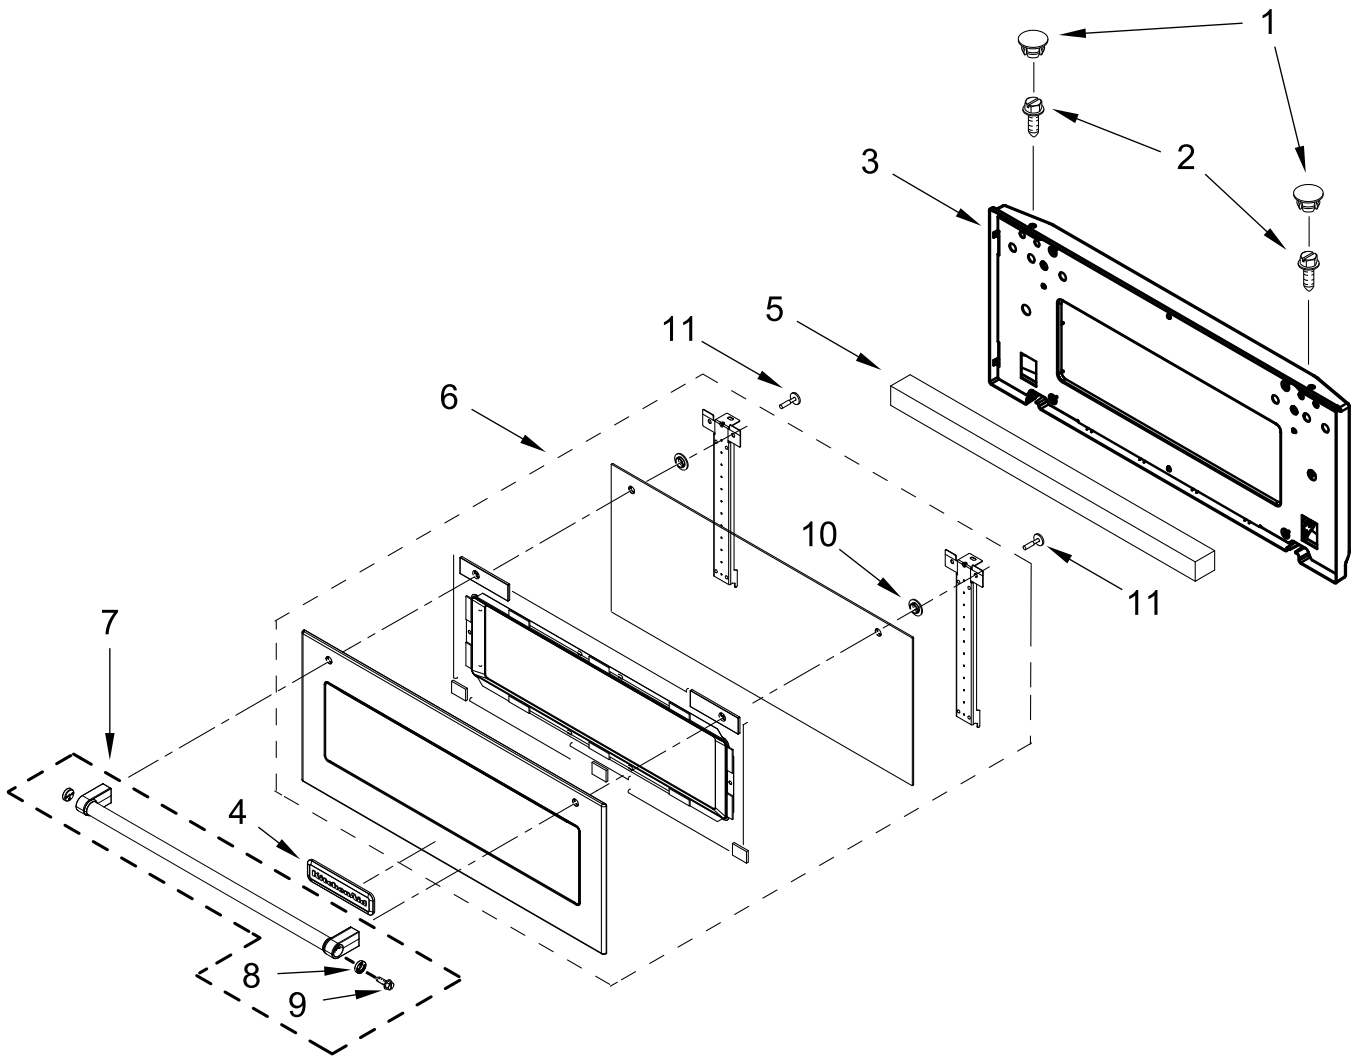

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6		Assembly, Outer Door	8	W10551026	Medallion, Handle
2	7101P338-60	Screw		W10615372	Stainless	9	W10656499	Screw
3	W10687342	Assembly, Inner Door	7		Assembly, Door Handle	10	W10319024	Washer, Door
4	W10518672	Badge				11	W10480830	Screw
5	W10359769	Foam, Door Handle		W11241572	Stainless			


CABINET AND STIRRER PARTS

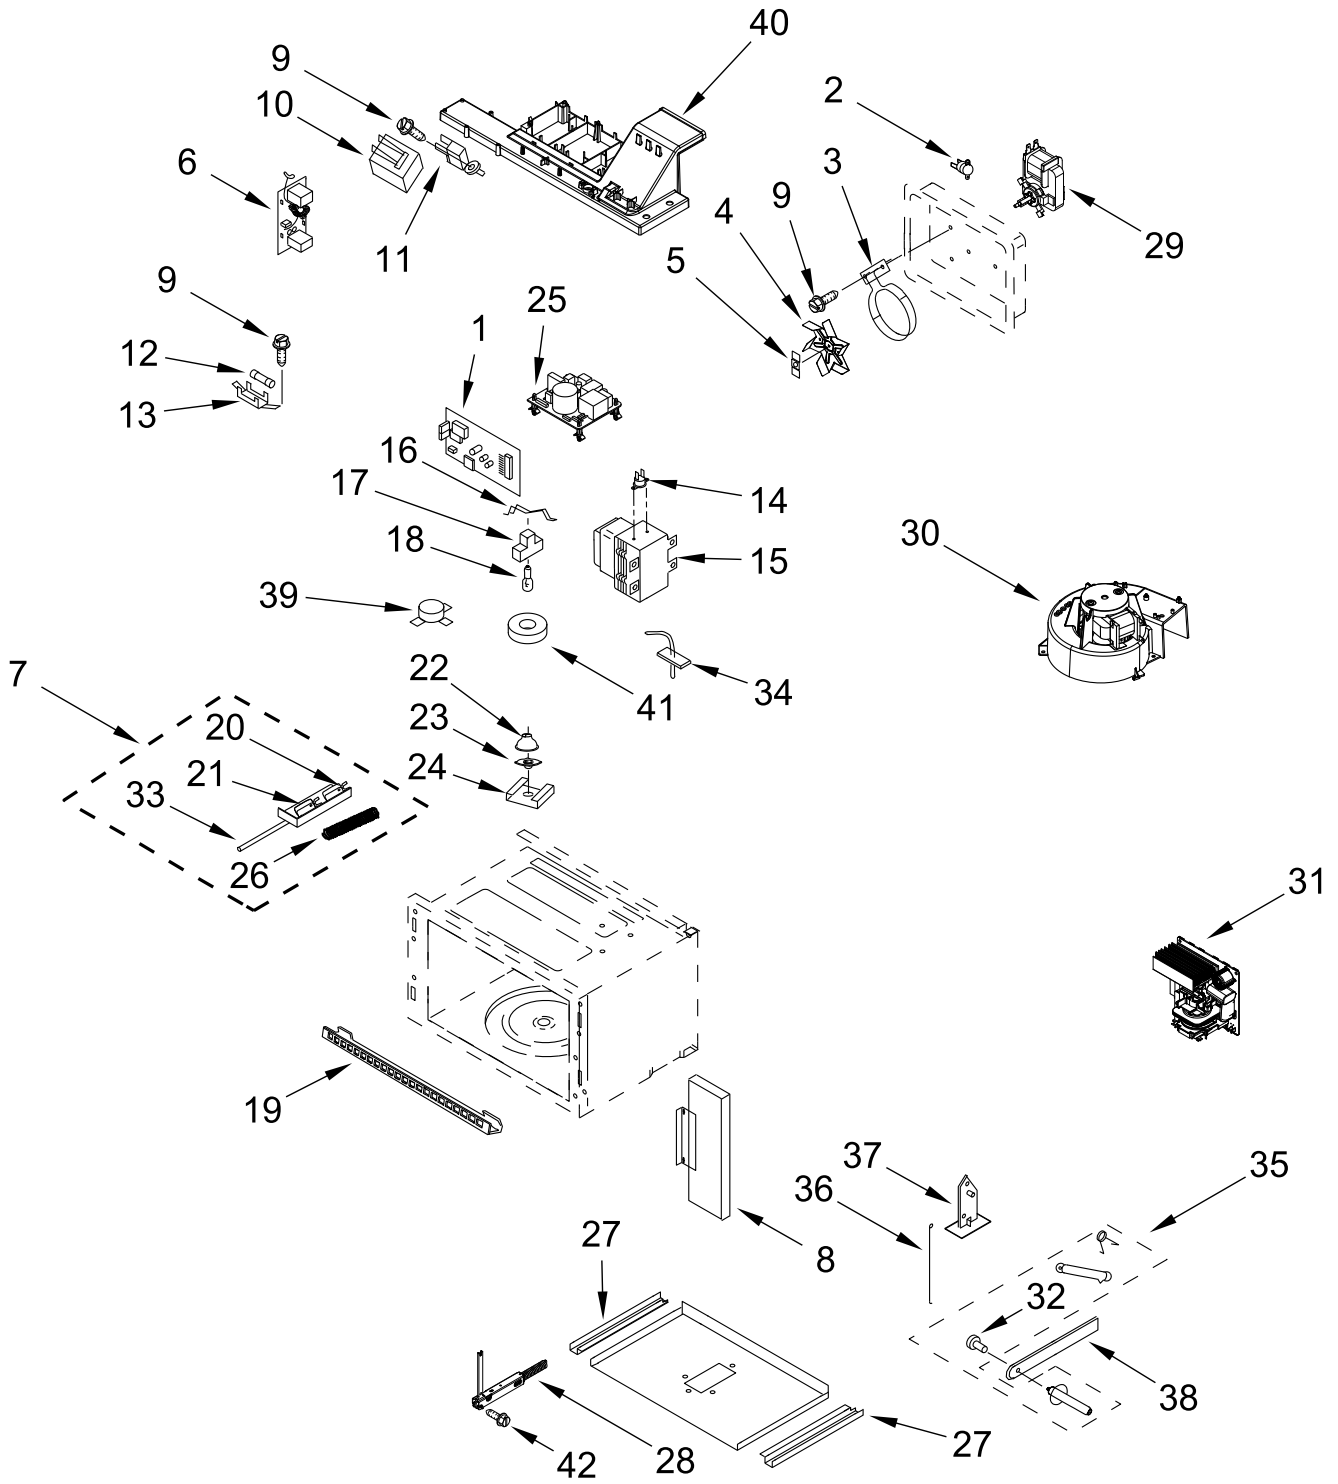

CABINET AND STIRRER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11289998	Manager, Appliance	14	461967846741	Thermostat, Magnetron	30	W11131760	Cooling Fan Assembly
2	423107845441	Sensor, Convection	15	W11226473	Magnetron	31	W11237240	Inverter
3	461967848711	Heater, Convection Element	16	W10465869	Spring, Lamp	32	461967510191	Bushing
4	W11453899	Blade, Fan	17	W10490593	Holder, Lamp	33	461967750464	Rod, Push
5	W10120233	Nut, Speed	18	W10795595	Lamp, Halogen	34	241960100002	Sensor, Temperature
6	W10692851	Filter, Noise	19	461968973241	Vent, Top Microwave	35	W10128850	Assembly, Sliding Arm
7	W10358241	Assembly, Interlock Switch	20	461967848881	Switch	36	461967570351	Spring, Torsion
8	461967017491	Trim, Side (Left)	21	W10876593	Holder, Switch	37	461967750494	Support
	461967017481	Trim, Side (Right)	22	423107022541	Reflector	38	461967750483	Arm, Sliding
9	461967825321	Screw	23	423107720491	Lens, Lamp	39	W10460457	Sensor, Humidity
10	461967848621	Transformer, Light (20V)	24	W11440819	Clip, Spring	40	461967754821	Duct, Magnetron
11	461967842541	Thermoactuator	25	W10260060	Board, Power Supply	41	W10769147	Sealing, Lamp
12	241908600053	Fuse	26	423107570871	Spring, Release Rod	42	461967825781	Screw (Shoulder)
13	4375231	Block, Fuse	27	461967008461	Support, Bottom			
			28	461968979601	Hinge, Door			
			29	W11233698	Motor, Convection Fan			

INTERNAL MICROWAVE PARTS

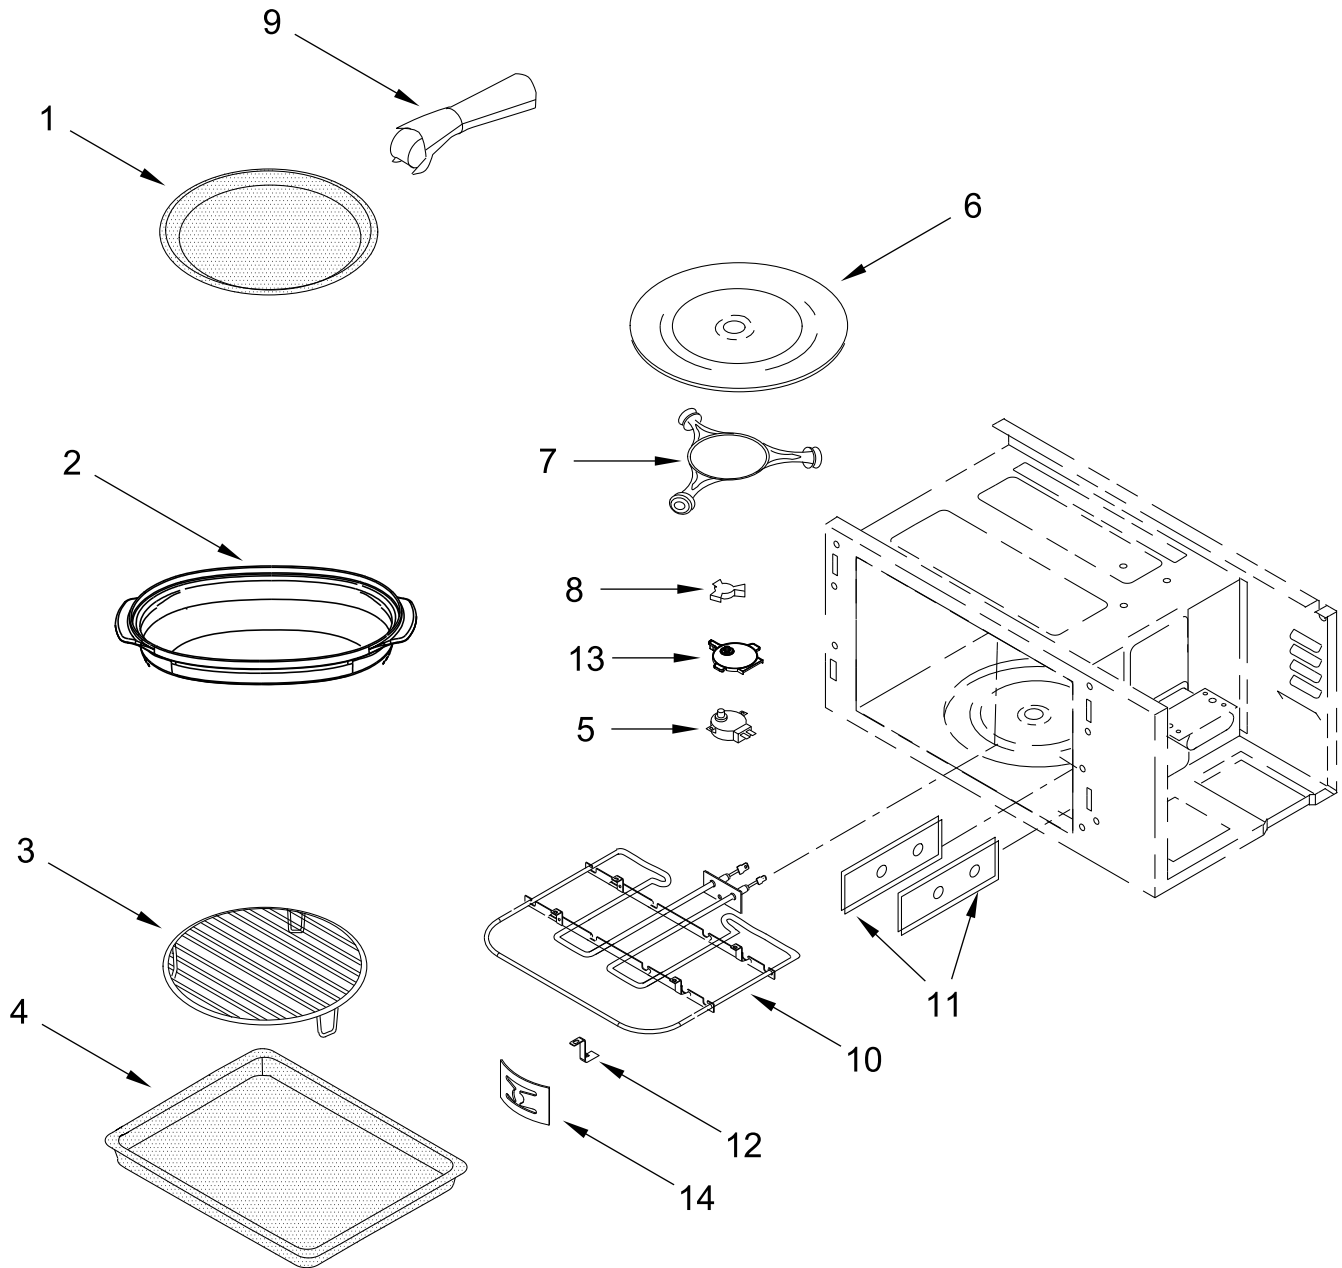

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp	7	W10367316	Ring, Turntable	13	461967753742	Adapter, Turntable Motor
2	W10796139	Steamer	8	W10545578	Drive, Turntable	14	252262898008	Support, Spring Lock Grill
3	W10748279	Rack, Low Convection	9	461968929542	Handle, Pan			
4	W10750839	Plate, Baking	10	W10387651	Element, Grill			
5	461967848971	Motor, Turntable	11	461967451001	Plate, Cover			
6	W11340343	Turntable	12	461967753871	Support, Element			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
W11042467		Spray, Stainless Steel Cleaning
W10660052		Container, Microwave Steaming
W10187336A		Crisping Tray with Handle
W10752697		30 In Vent Trim Kit Medallion, Handle
W10846205		Chrome
W10846206		Black
W10846207		Red
		FOLLOWING PARTS NOT ILLUSTRATED
482338		Sealer, Silastic PAINT, TOUCH-UP (1/2oz.)
72017		White
261869		Cord Brown
72032		Black PAINT, SPRAY
350930		White
261900		Citrine White
830864		Black