


KitchenAid®

MICROWAVE

MODELS:

KMBP107ESS20 (Stainless)


OVEN PARTS

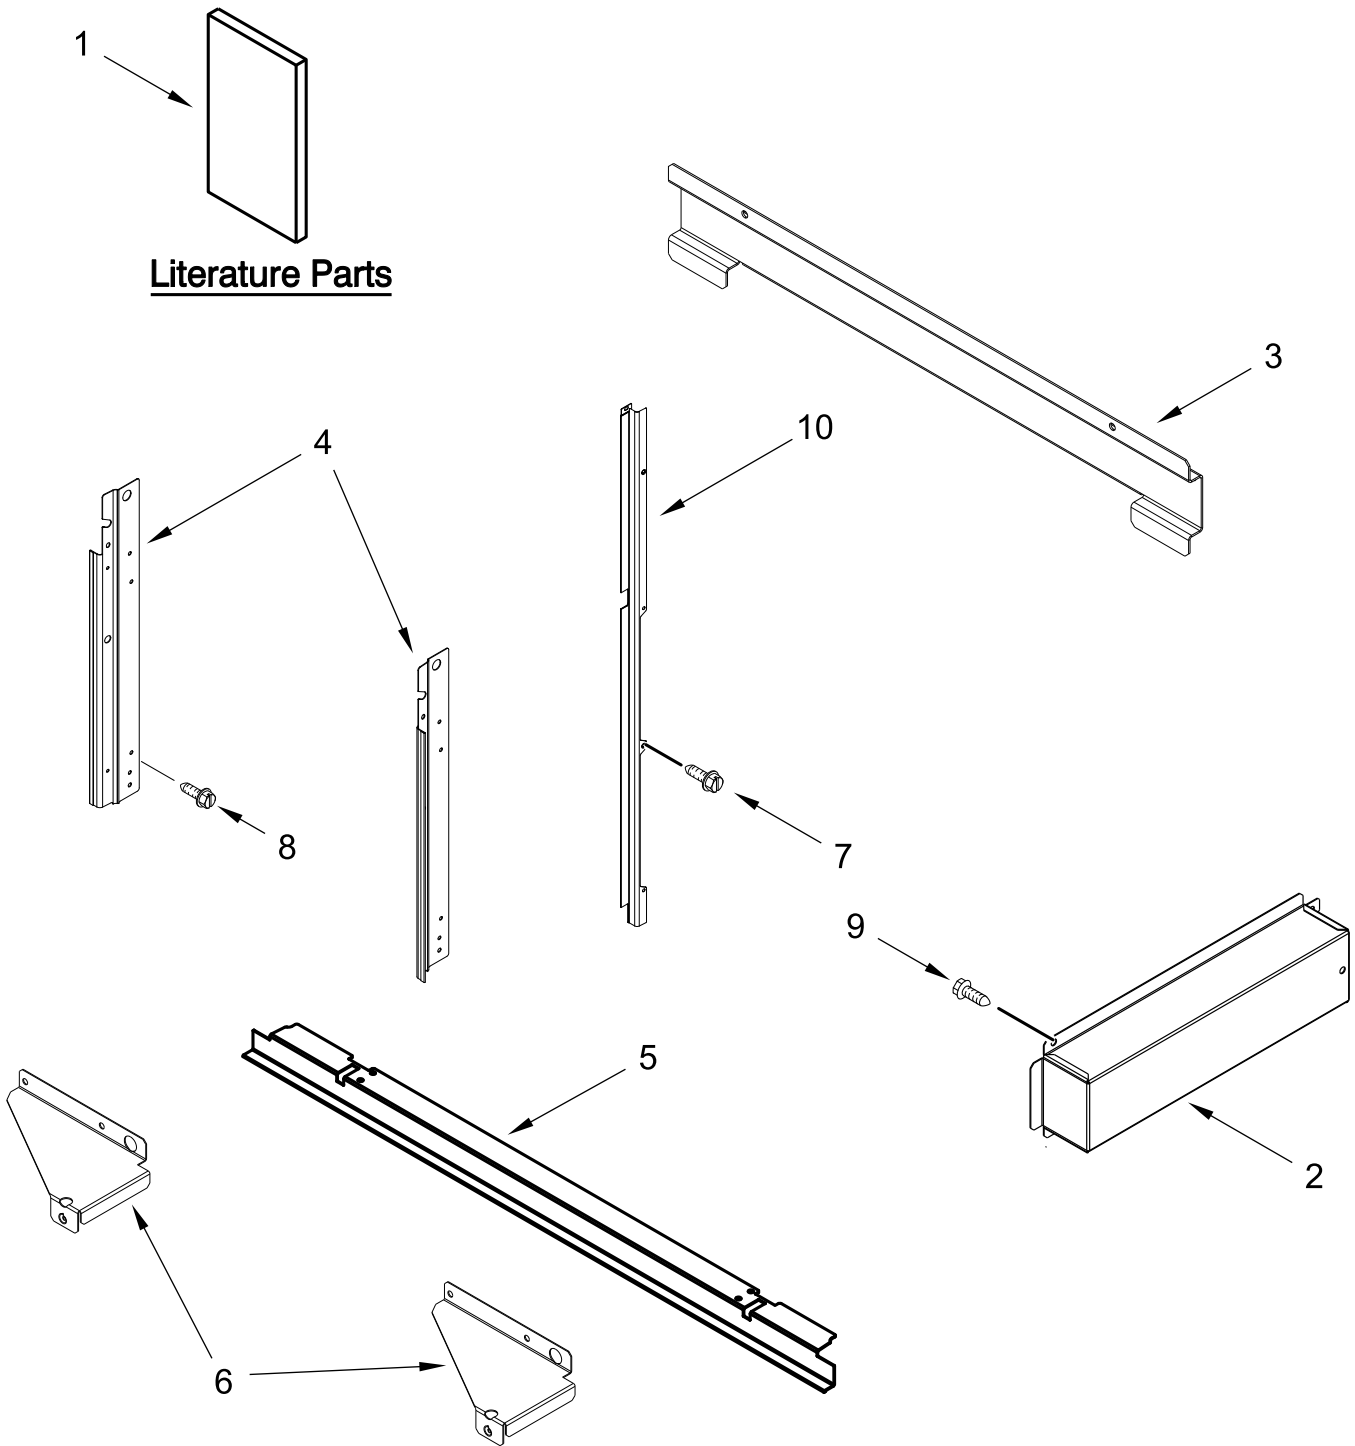

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W11340506	Quick Start Guide
	W11382174	Owner's Manual
	W11382176	Tech Sheet
2	W10239155	Box, Conduit
3	W10420960	Support, Microwave Module
4	W11235470	Rail, Side (Left)
	W11235471	Rail, Side (Right)
5	W11312229	Trim, Bottom
6	W10239158	Bracket, Lower (Left)
	W10239159	Bracket, Lower (Right)
7	W11404000	Screw
8	7101P653-60	Screw
9	7101P426-60	Screw
10	W11239807	Trim, Bended Side (Left)
	W11239805	Trim, Bended Side (Right)
		FOLLOWING PARTS NOT ILLUSTRATED
	W11555168	Harness, Interlock
	W11454022	Harness, Fan and Turntable
	W11539494	Harness, Inverter
	W11356986	Harness, Communication
	W11539527	Jumper Harness, Communication
	W11226264	Strap, Ground
	4450800	Screw, Grounding
	W11394925	Bag, Hardware
	W11356992	Conduit


CONTROL PANEL PARTS

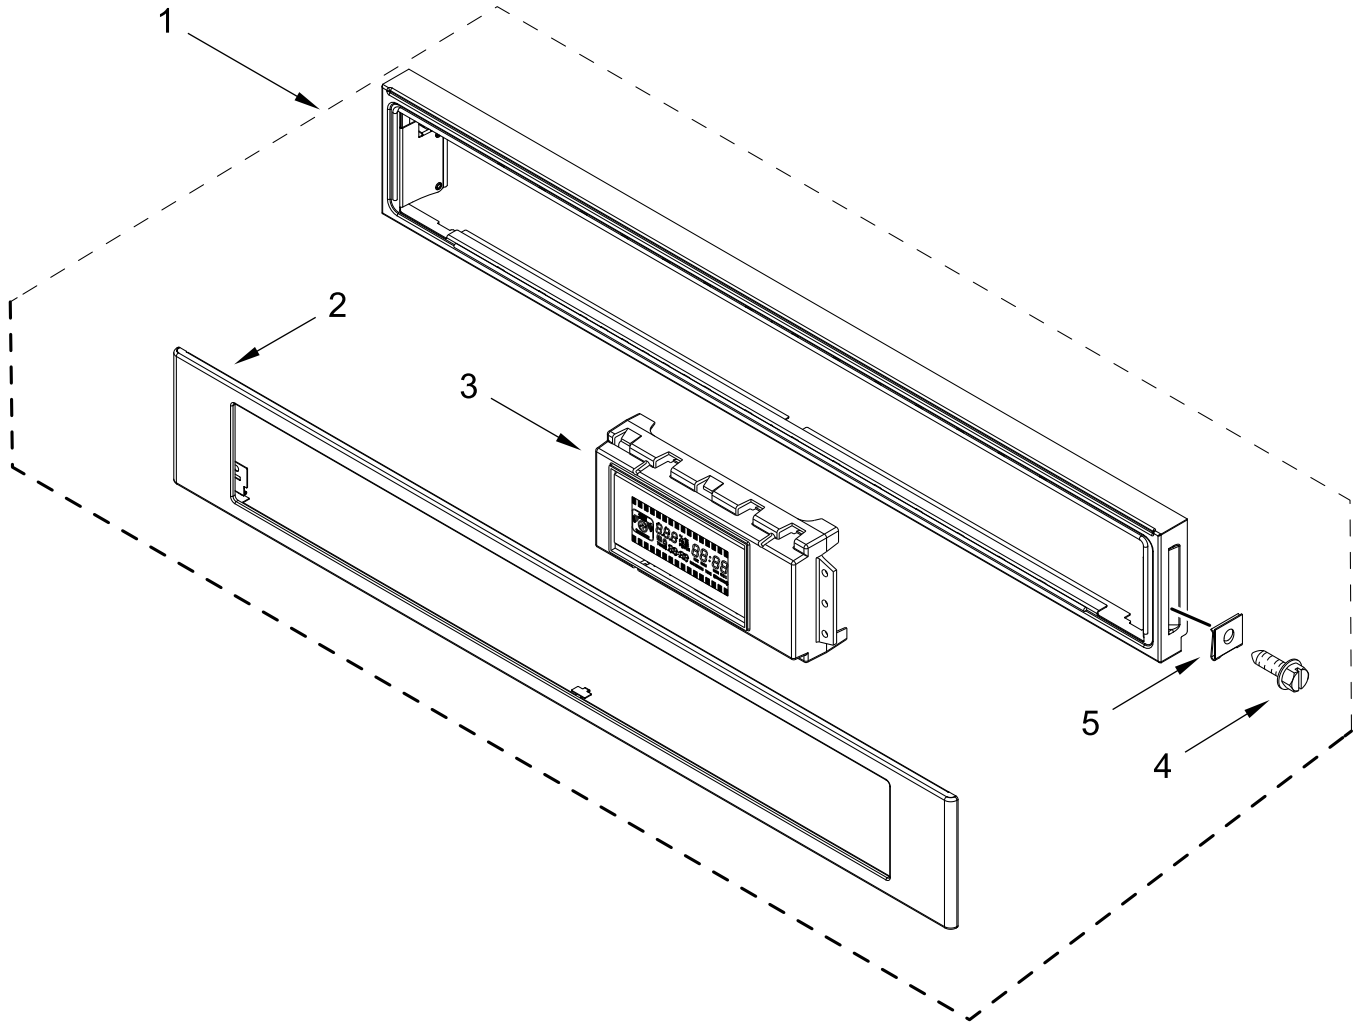

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Control Panel	2		Skin, Control Panel	4	W11339492	Screw (Black)
				W10588741	Stainless	5	4450118	Nut
	W11304130	Stainless	3	W11440274	Interface, User			


MICROWAVE DOOR PARTS

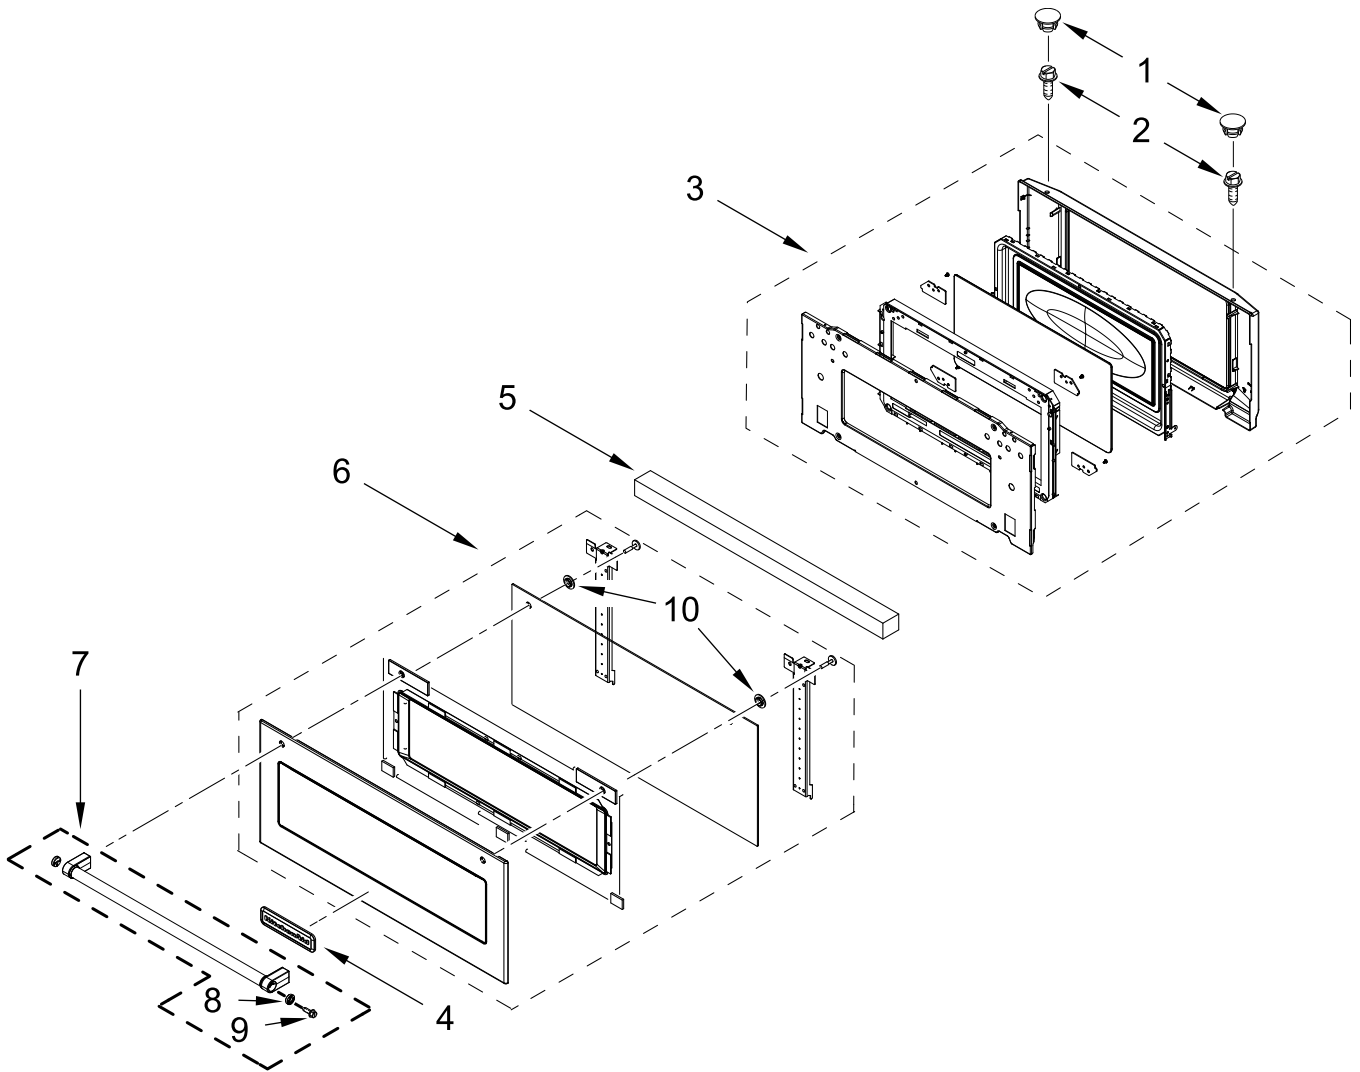

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6		Assembly, Outer Door	8	W10551026	Medallion, Handle
2	7101P338-60	Screw		W11300493	Stainless	9	W11317731	Screw (Black)
3	W11328749	Inner Door Assembly	7		Assembly, Door Handle	10	W10319024	Washer, Door
4	W10518672	Badge						
5	W10359769	Foam, Door Handle		W11241574	Stainless			


CABINET AND STIRRER PARTS

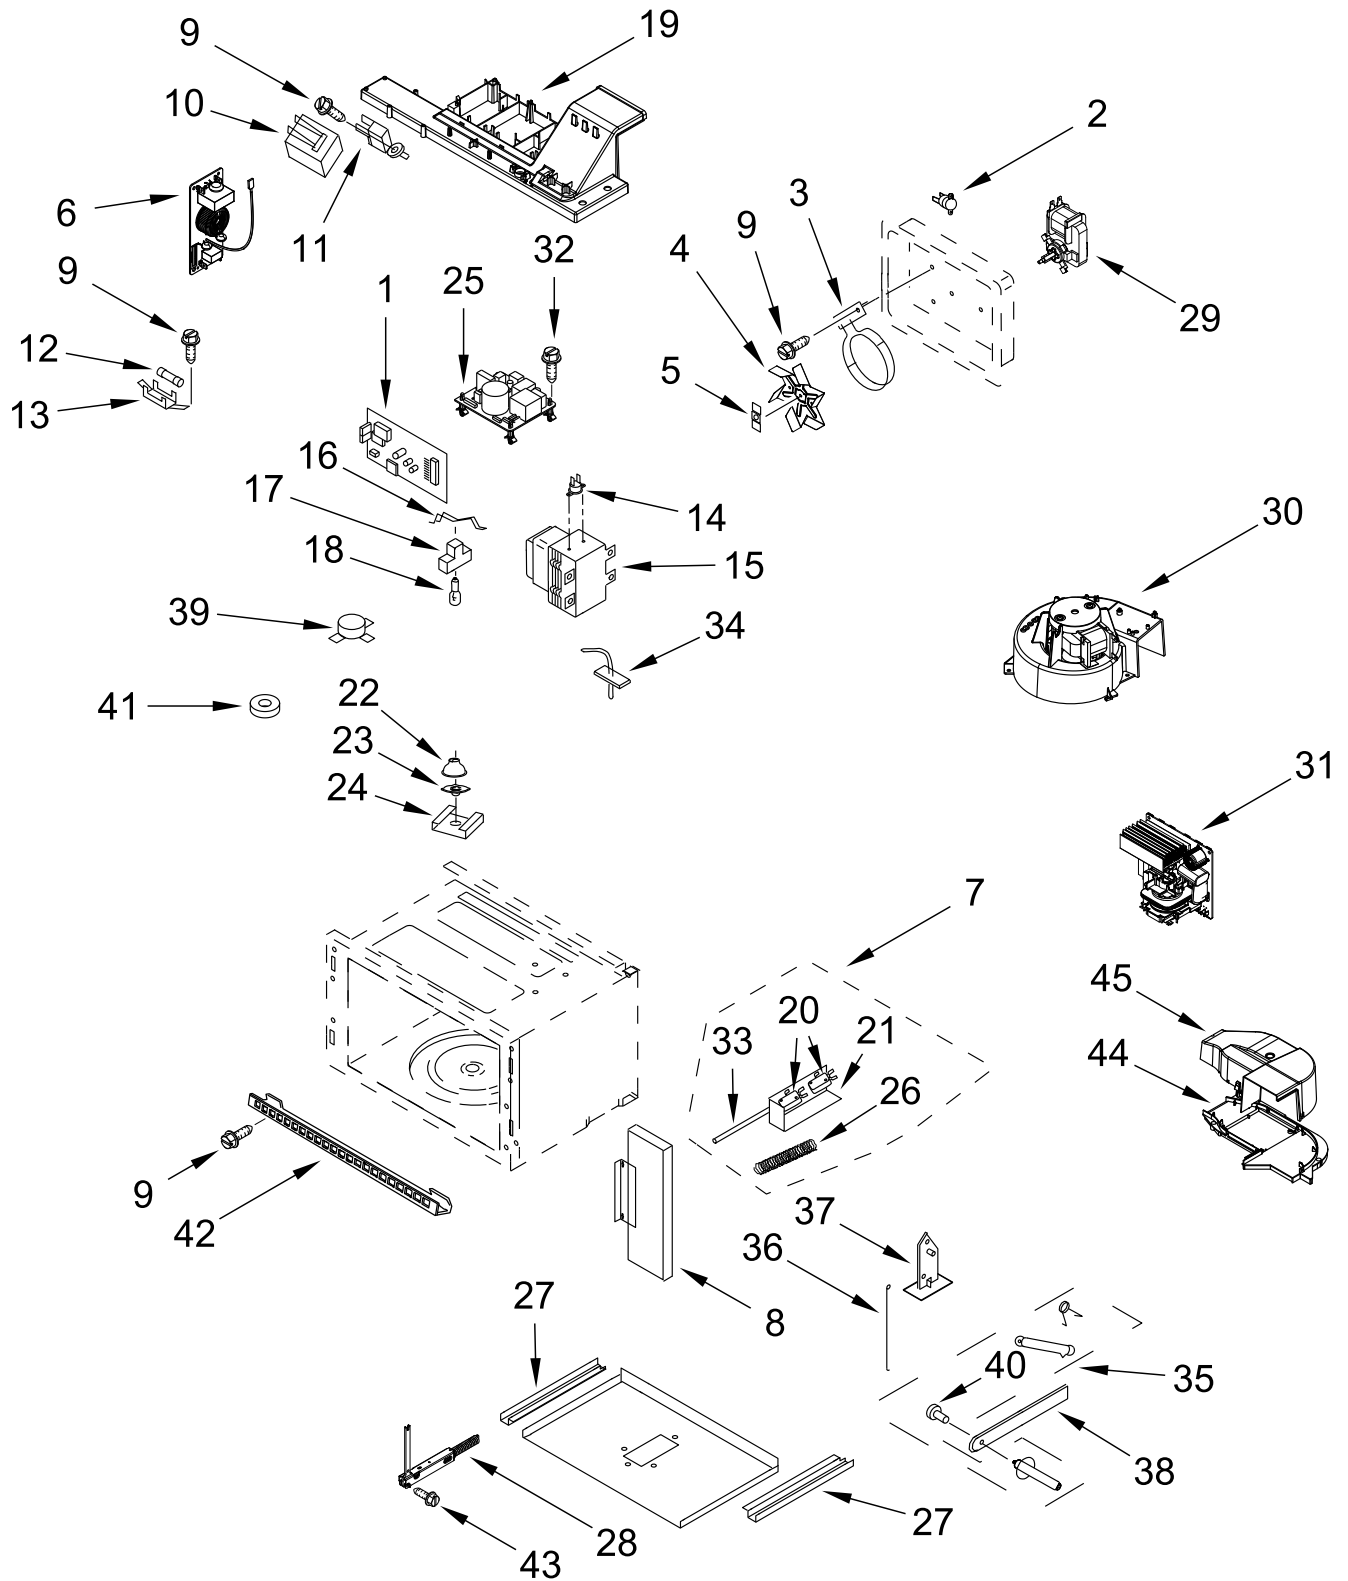

CABINET AND STIRRER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11289998	Manager, Appliance	15	W11504545	Magnetron	33	461967750464	Rod, Push
2	423107845441	Sensor, Convection	16	W10465869	Spring, Lamp	34	241960100002	Sensor, Temperature
3	461967848711	Heater, Convection Element	17	W10490593	Holder, Lamp	35	W10128850	Assembly, Sliding Arm
4	W11453899	Blade, Fan	18	W10795595	Lamp, Halogen	36	461967570351	Spring, Torsion
5	W10120233	Nut, Speed	19	461967754821	Duct, Magnetron	37	461967750494	Support
6	W11505129	Filter, Noise	20	461967848881	Switch	38	W11213889	Arm, Sliding
7	W10358241	Assembly, Interlock Switch	21	W10876593	Holder, Switch	39	W10460457	Sensor, Humidity
8	461967017511	Trim, Side (Left)	22	423107022541	Reflector	40	461967510191	Bushing
	W11044584	Trim, Side (Right)	23	423107720491	Lens, Lamp	41	W10769147	Sealing, Lamp
9	461967825321	Screw	24	W11440819	Clip, Spring	42	W11334717	Vent, Top
10	461967848621	Transformer, Light (20V)	25	W10260060	Board, Power Supply	43	461967825781	Screw (Shoulder)
11	461967842541	Thermoactuator	26	423107570871	Spring, Release Rod	44	W11591018	Housing, Lower Inverter
12	241908600053	Fuse	27	461967008461	Support, Bottom	45	W11591019	Housing, Upper Inverter
13	4375231	Block, Fuse	28	W11319465	Hinge, Door			
14	461967846741	Thermostat, Magnetron	29	W11233698	Motor, Convection Fan			
			30	W11131760	Cooling Fan Assembly			
			31	W11504539	Inverter			
			32	7101P426-60	Screw			

INTERNAL MICROWAVE PARTS

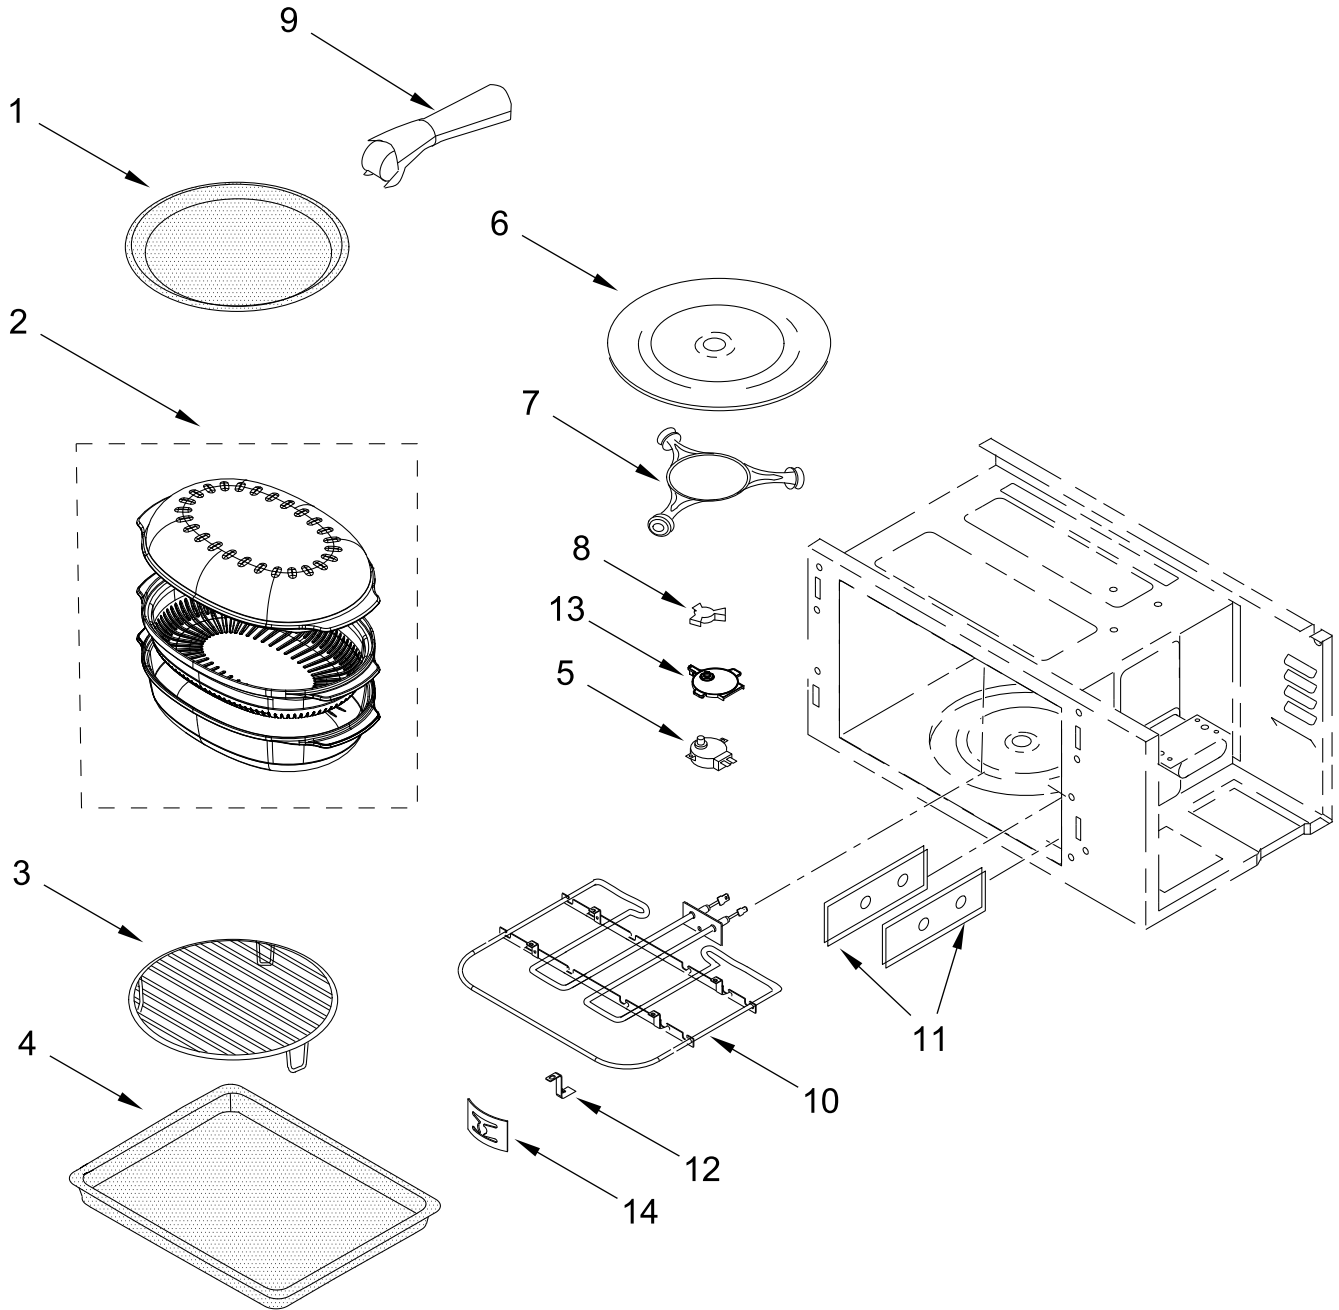

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp	7	W10367316	Ring, Turntable	13	461967753742	Adapter, Turntable Motor
2	W10796139	Steamer	8	W10545578	Drive, Turntable	14	252262898008	Support, Spring Lock Grill
3	W10748279	Rack, Low Convection	9	461968929542	Handle, Pan			
4	W10750839	Plate, Baking	10	W10387651	Element, Grill			
5	461967848971	Motor, Turntable	11	461967451001	Plate, Cover			
6	W11340343	Turntable	12	461967753871	Support, Element			

OPTIONAL PARTS (NOT INCLUDED)

OPTIONAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	261869	Cord Brown
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

FOLLOWING PARTS NOT ILLUSTRATED

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic