


KitchenAid®

ELECTRIC RANGE

MODELS:

KSEB900ESS7 (Stainless)


COOKTOP PARTS

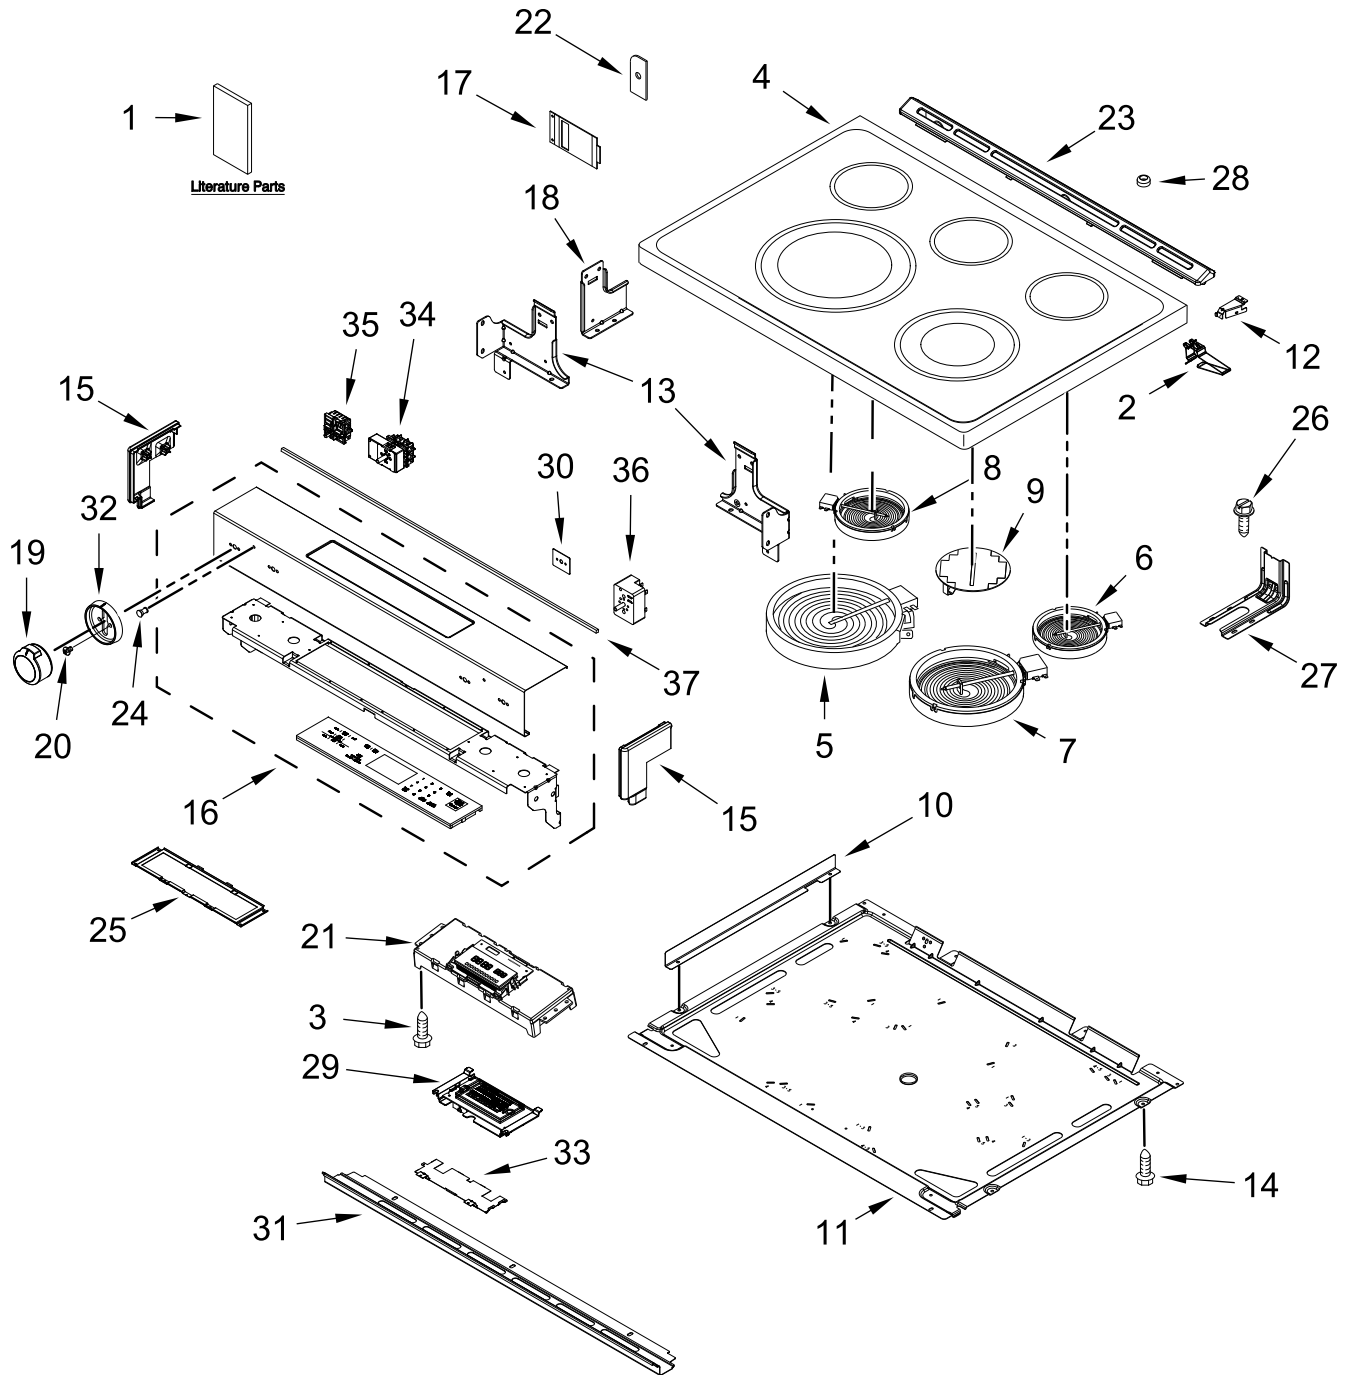

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	16		Console	32		Bezel
	W11509603	Owners Manual		W10901121	Stainless		W10663809	Stainless
	W11326876	Tech Sheet	17	W11355689	Keypad Shield	33	W10558372	Bracket, Control
	W11435572	Quick Start Guide	18	W10598048	Bracket, Console (Center)	34	W10437097	Switch, Infinite (Left Front)
2	W11600012	Spring, Element	19		Knob	35	W10437094	Switch, Infinite (Right Front and Left Rear)
3	3196178	Screw		W10823543	Stainless (Right Rear)	36	W10578768	Switch, Infinite (Right Rear)
4		Cooktop		W10823541	Stainless (Left Rear)	37	W10612719	Gasket, Console and Cooktop
	W10536296	Stainless		W10823538	Stainless (Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
5	W11318371	Element (3000W) (Left Front)		W10823536	Stainless (Left Front)		W11454502	Harness, Main
6	W10248261	Element (1200W) (Right Rear)	20	3400882	Screw		W10575120	Harness, Keypad
7	W10251108	Element (3200W) (Right Front)	21	W10759277	Control, MRC2		W11172426	Harness, Display
8	W10342780	Element (1300W) (Left Rear)	22	W10882900	Gasket		W11172417	Harness, Console
9	W10799048	Element, Warm Zone (Center Rear)	23		Vent, Trim Top		W10664316	Clip, Harness (Cooktop)
10	W11175271	Bracket, Radiant		W10636529	Stainless		W11172530	Harness, Bake Drawer
11	W10536275	Pan, Radiant	24	3196068	Lens, Indicator		W11134658	Harness, Cooktop
12	W10162253	Brace, Corner (Left)	25	W10555923	Bracket, User Interface		3196520	Clip, Wire
	W10162252	Brace, Corner (Right)	26	7101P485-60	Screw, Anti-Tip Kit		313438	Clip, Harness
13	W10289169	Support, Cooktop (Right)	27	W11379947	Bracket, Anti-Tip			
	W10289170	Support, Cooktop (Left)	28	W10854253	Bumper			
14	3196173	Screw	29	W10759323	Assembly, Display			
15		Endcap	30	7201P077-60	Gasket, Infinite Switch			
	W10555937	Stainless (Left)	31		Console, Lower Panel			
	W10555940	Stainless (Right)		W10555934	Stainless			


CHASSIS PARTS

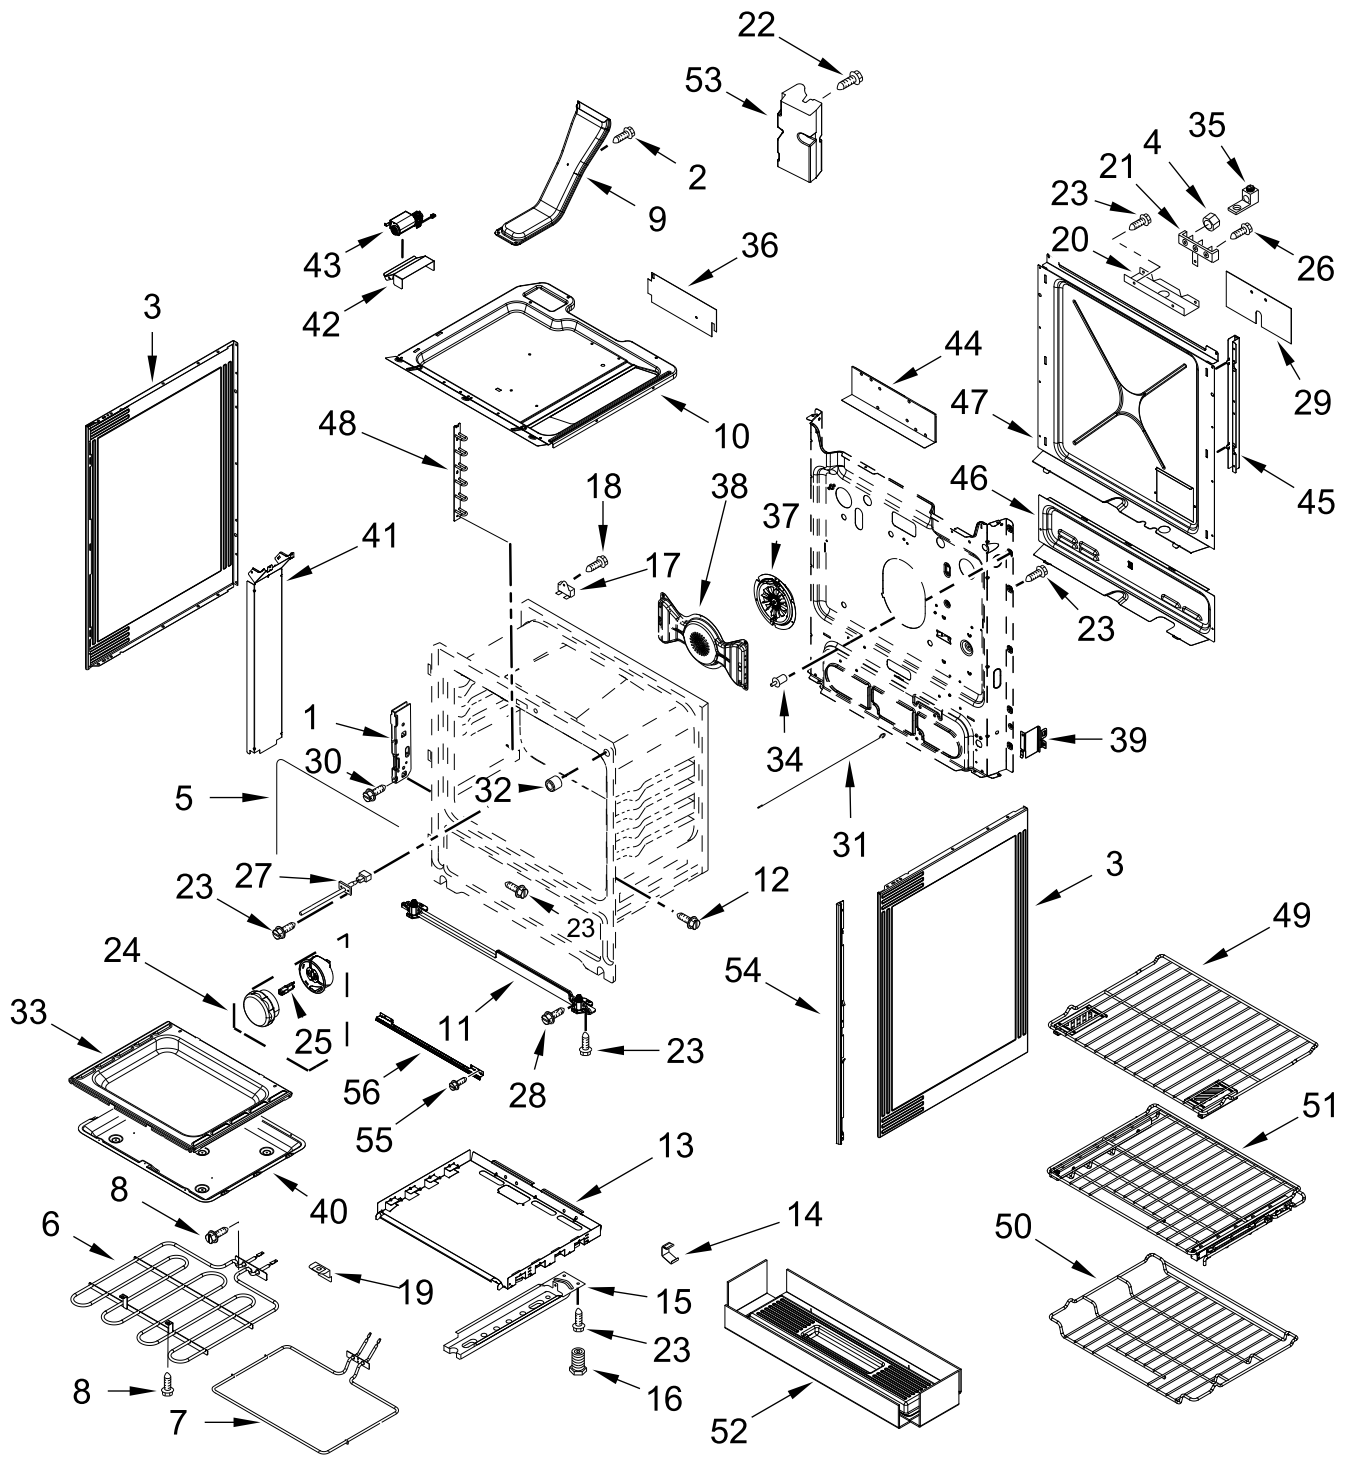

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	24	W11634772	Light Assembly	48	W10603482	Rack, Ladder
2	W10362924	Screw	25	W10571723	Bulb, Halogen 40 Watts	49	W10554007	Rack, Steam
3		Panel, Side	26	3400016	Screw	50	W10554006	Rack, Maximum Capacity
	W10162245	Black	27	W10586204	Sensor	51	W10911366	Rack, Sliding
4	3400029	Nut	28	3196169	Screw	52	W10686408	Kit, Reservoir (Steam Rack)
5	W11491752	Gasket, Door	29	W10655441	Shield, Power Cord	53	W10914589	Counterweight
6	W10544952	Element, Broil	30	W10031780	Screw	54	W11510561	Barrier Rail, Rubber (Front Left)
7	W10774342	Element, Bake	31	W10273192	Rod, Door Switch		W11510562	Barrier Rail, Rubber (Front Right)
8	W10362924	Screw	32	9758701	Spacer, Door	55	3196560	Screw
9	W11122085	Assembly, Flue	33	W10774446	Bottom, Oven	56	W11620269	Bracket, Front Frame
10	W10289168	Box, Burner SI	34	W11511828	Switch, Door			FOLLOWING PARTS NOT ILLUSTRATED
11	W11456179	Front Foot Assembly	35	W10281322	Kit, Bare Wire Adapter Block		W10655489	Insulation, Wrapper
12	W10067840	Screw	36	W11117035	Shield, Wire		W10575374	Insulation, Bottom
13	W10541959	Shield, Bake	37	W11353932	Convection Assembly		4820F015-59	Insulation, Strap
14	W10137382	Clip, Panel	38	W10346153	Baffle, Full Convection		W10655490	Insulation, Main Back
15	W10390008	Base Rail Assembly (Left)	39	W10273002	Bracket, Oven Support		W10655442	Insulation, Heat Shield
	W10390007	Base Rail Assembly (Right)	40	W11379357	Bake Pan		7111P017-60	Clamp, Wire
16	W10058460	Foot, Leveling	41	W10162255	Duct, Cover			
17	3196548	Fuse, Thermal	42	W10162254	Duct, Cooling			
18	3196172	Screw	43	W11467246	Cooling Fan			
19	W10035900	Support, Oven Bottom	44	W10162260	Shield, Heat			
20	3186034	Bracket, Service	45	W10162241	Channel, Rear			
21	W10245259	Block, Terminal	46	W10162248	Cover, Wire			
22	W11034869	Screw	47	W11379354	Cover, Back			
23	3196178	Screw						

DOOR PARTS

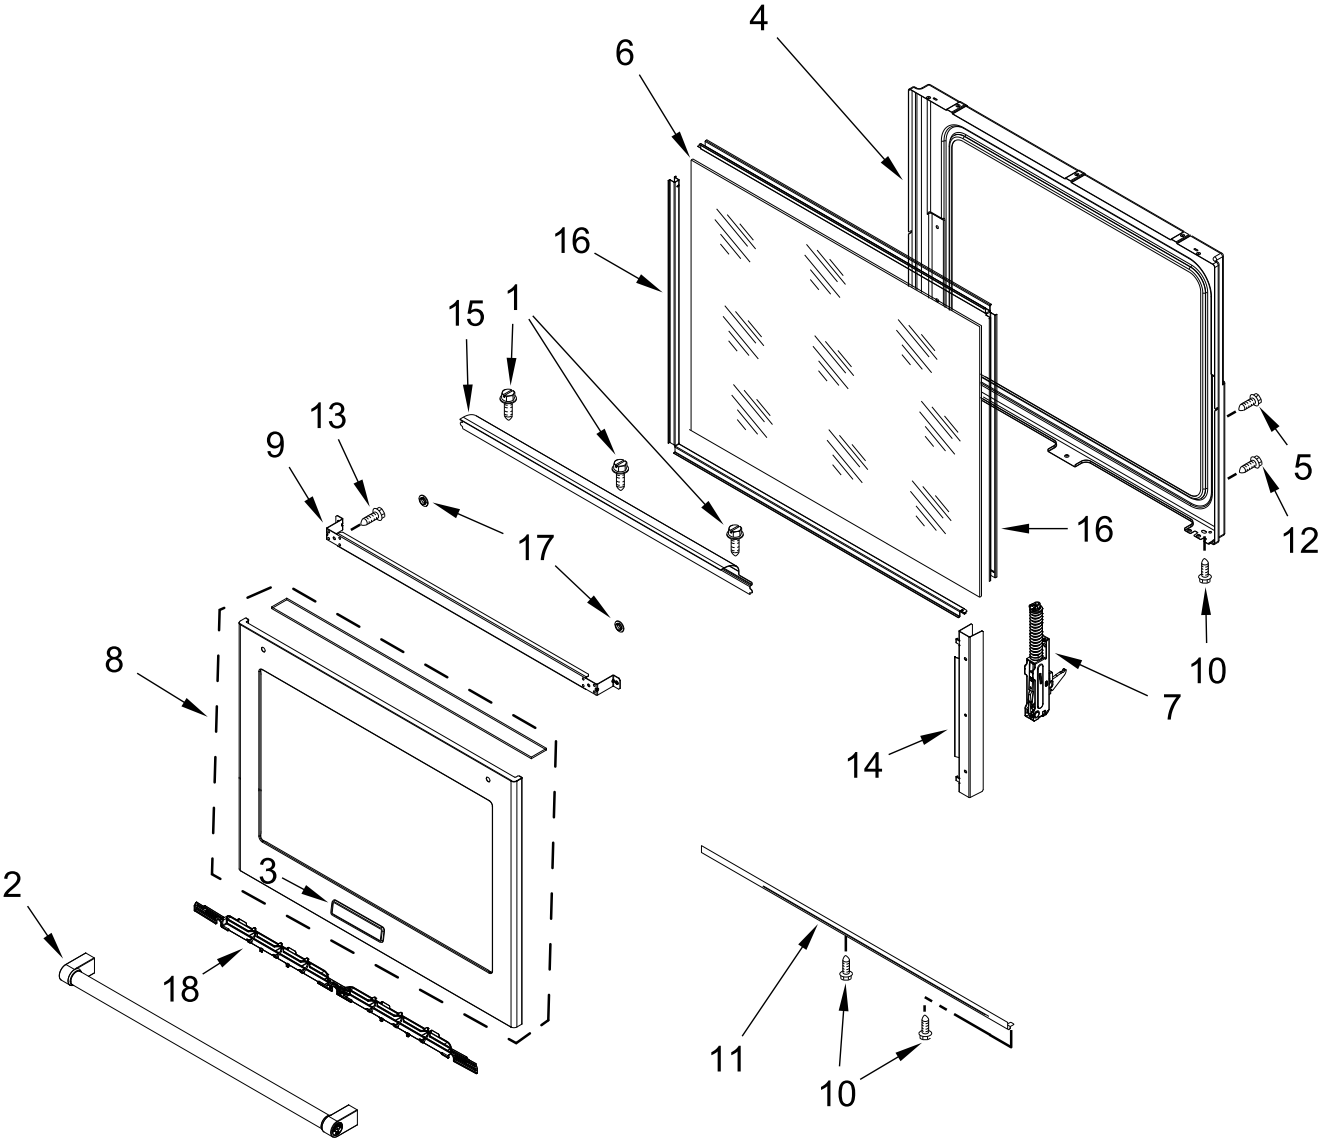


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	9780274	Screw
2		Assembly, Door Handle
	W11669501	Stainless
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11223202	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8		Assembly, Outer Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10031780	Screw
13	8533988	Screw
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10613791	Black
16	W11379948	Glass Spacer
17	W10319024	Washer, Door
18	W11440161	Bottom, Door Cover

DRAWER PARTS

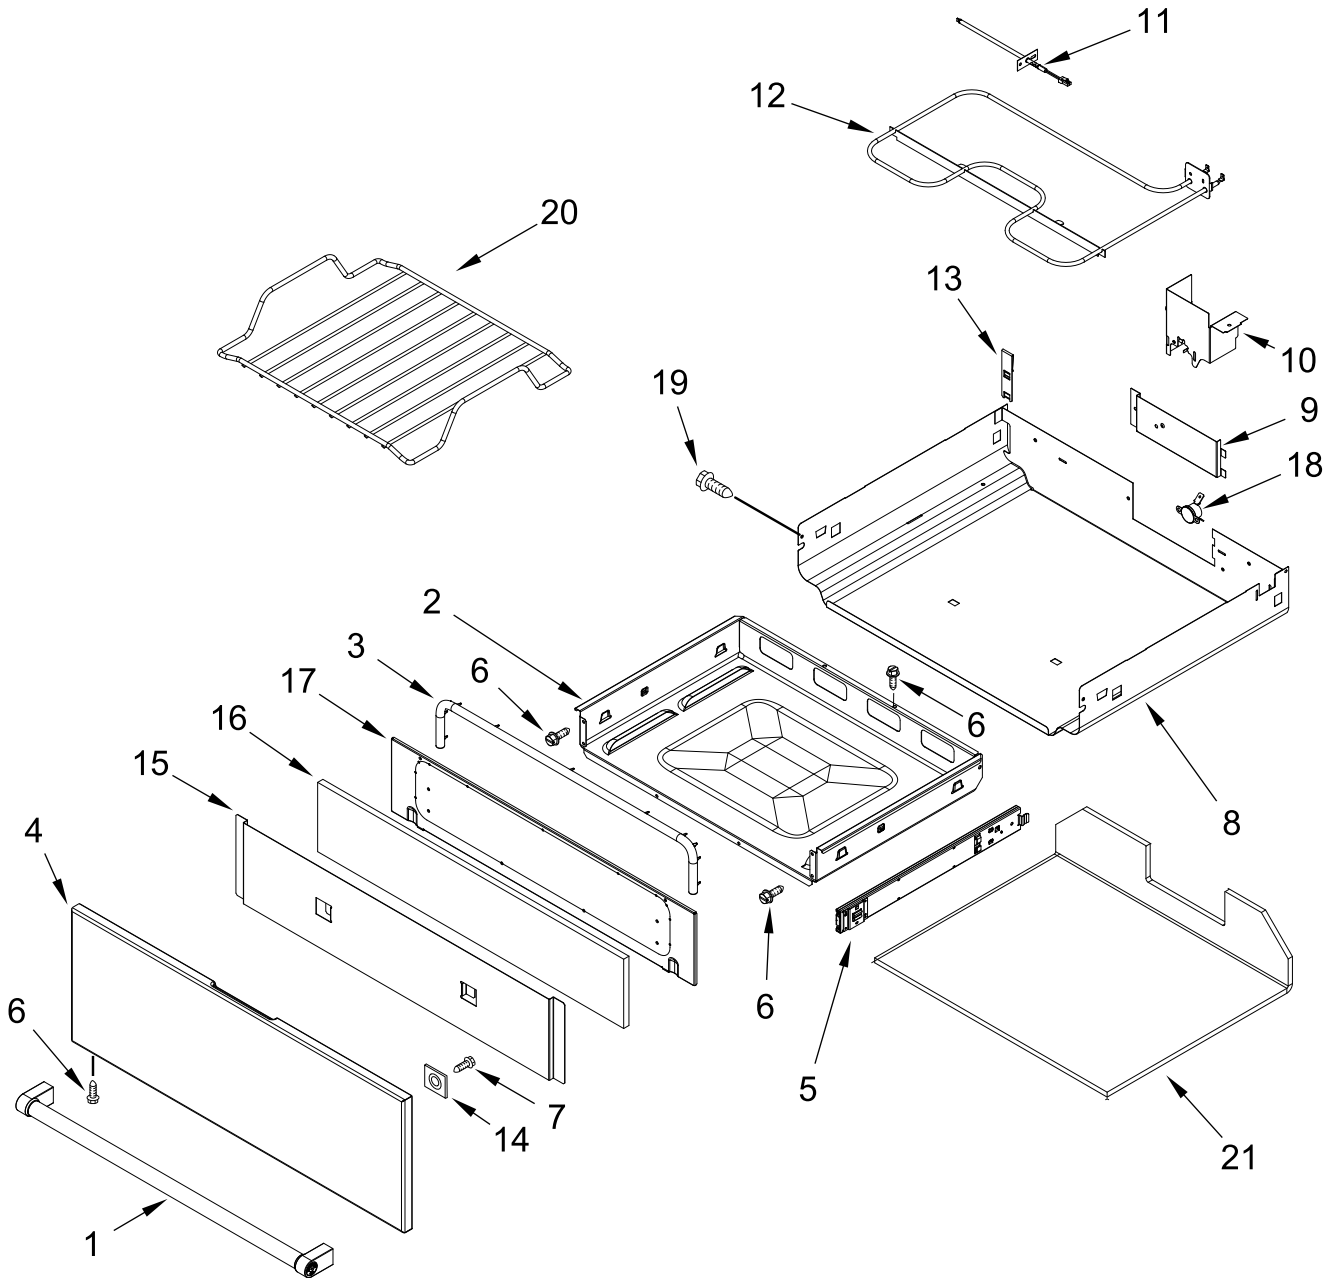

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	6	W10327235	Screw	15	W10551018	Insulation, Drawer Front
	W11669501	Stainless	7	3400882	Screw	16	W10550982	Insulation, Drawer
2	W10757442	Drawer,Bake	8	W10634260	Enclosure, Warming	17	W10541947	Panel, Front Inner
3	W10550987	Seal, Drawer	9	W10727084	Cover, Gas Valve	18	W10729897	Fuse, Thermal
4		Panel, Drawer Front	10	W10634259	Cover, Wire	19	3196560	Screw
	W10541954	Stainless	11	W10720530	Sensor	20	W10602493	Rack, Bake Drawer
5	W11399928	Slide, Drawer (Left)	12	W10541944	Element, Bake	21	W10551011	Insulation, Bake Drawer Bottom
	W11399929	Slide, Drawer (Right)	13	W10551019	Cover, Side			
			14	3823F017-45	Spacer, Handle			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS AND POLISHES
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint