


KitchenAid®

24" DOUBLE DRAWER REFRIGERATOR

MODELS:

KUDF204KSB00 (Stainless)

CABINET PARTS

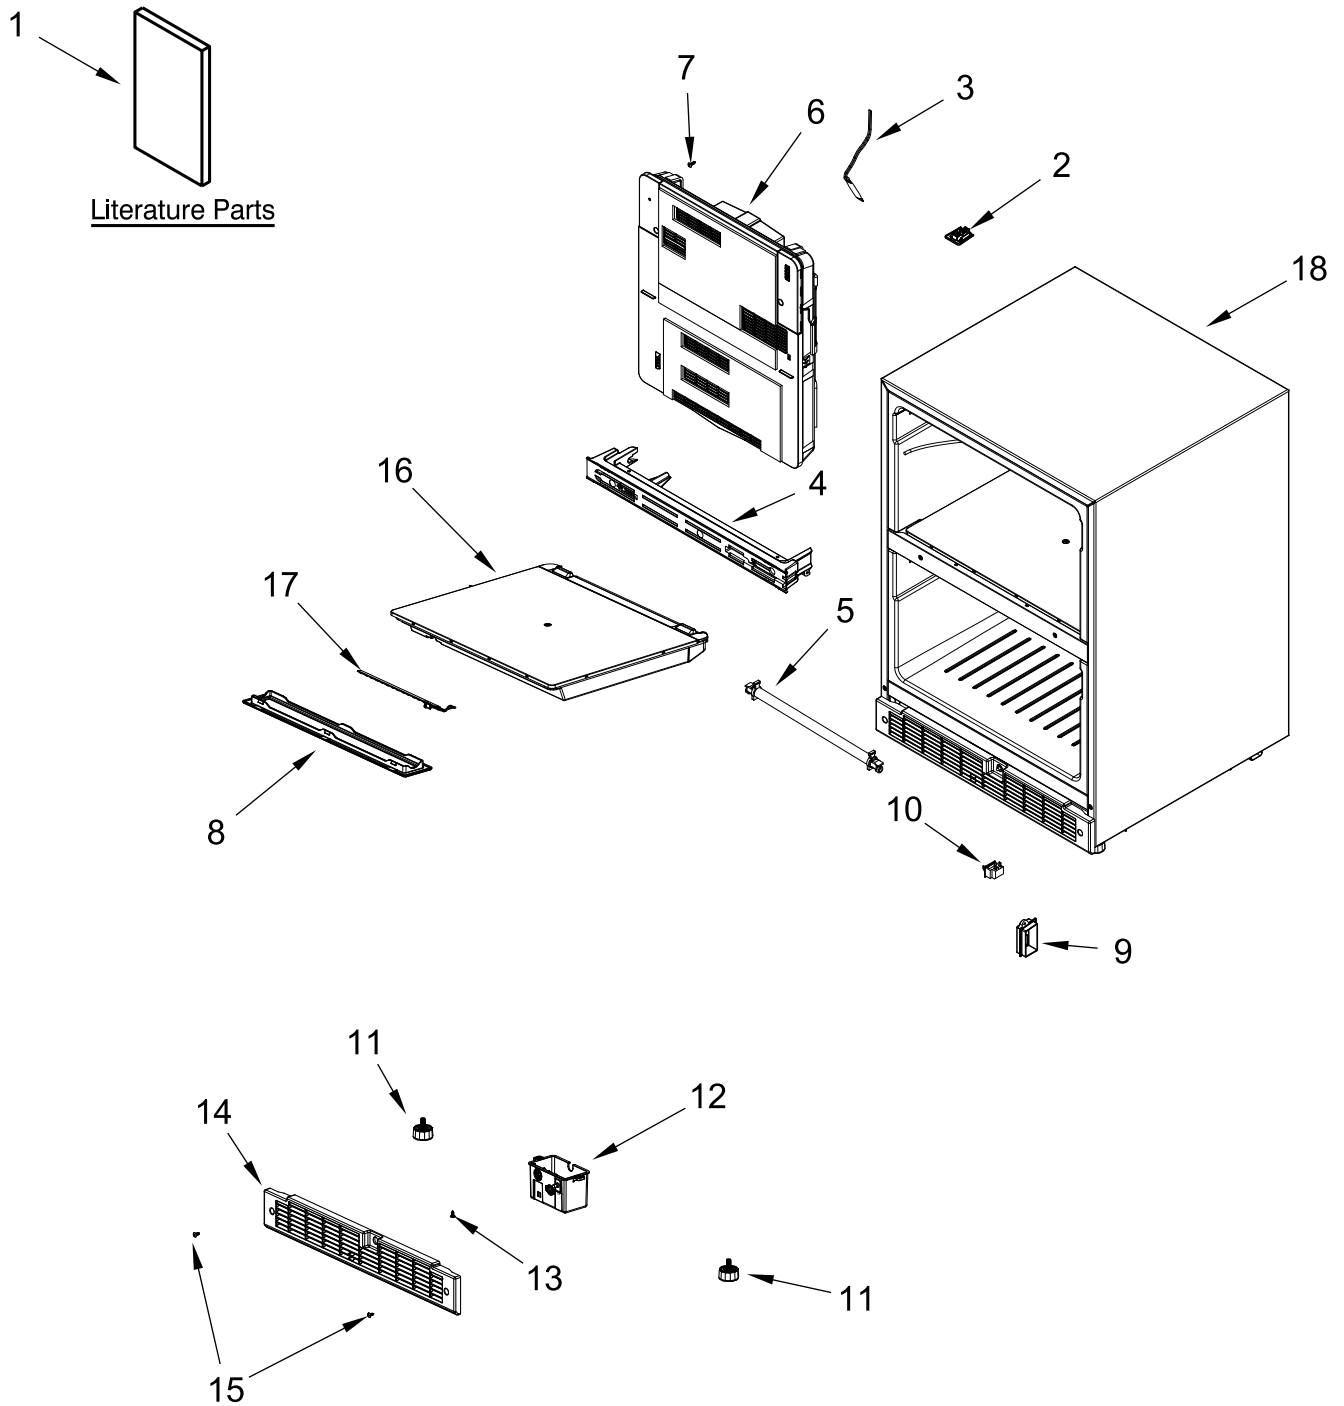


CABINET PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W11533205	Use & Care Guide
	W11537003	Energy Guide
2	W11580230	Connector, Cover
3	W11359415	Fuse, Temperature
4	W11580232	Assembly, Trim
5	W11580231	Defrost Holder and Heater

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6	W11580229	Cover Assembly, Evaporator
7	W11375760	Screw
8	W11312450	Cover, LED
9	W11568783	Switch, Case
10	W11568786	Switch, Door
11	4344763	Leg, Leveling
12	W11568794	Main PCB Box

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W11371097	Screw
14	W11580233	Kick Plate
15	W11371095	Screw
16	W11580290	Assembly, Separator
17	W11568950	LED
18		Cabinet (Not a Servicable Part)


UPPER DRAWER PARTS

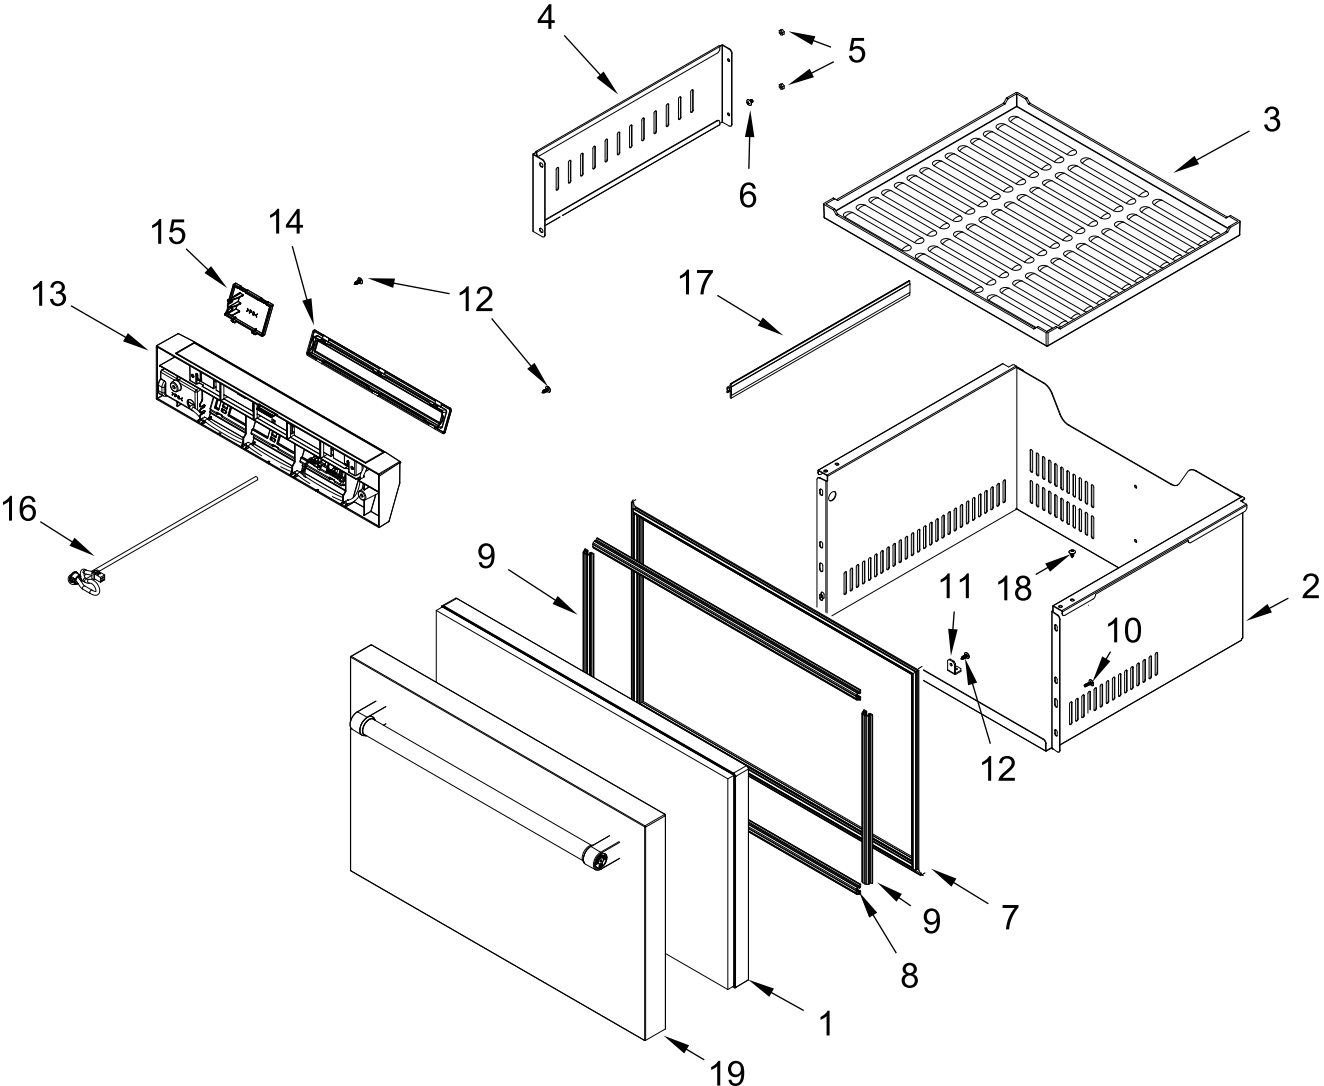

UPPER DRAWER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11580271	Top Foamed Door Assembly	8	W11360665	Gasket, Sash (Top/Bottom)	15	W11568841	Lamp Cover
2	W11580278	Drawer Box Assembly, Upper	9	W11568838	Door Gasket, Short	16	W11576360	Harness
3	W11568835	Mat, Upper Drawer	10	W10204808	Screw	17	W11568842	Support, Lead Wire
4	W11568836	Drawer Partition	11	W11568839	Plate, Door Handle	18	W11422709	Screw
5	W10204920	Nut	12	W11371095	Screw	19	W11568932	Wrap, Stainless
6	W10204810	Screw	13	W11580275	Control Panel Assembly			FOLLOWING PARTS NOT ILLUSTRATED
7	W11568837	Gasket, Door	14	W11312450	Cover, LED		W11576386	Complete, Door Assembly


LOWER DRAWER PARTS

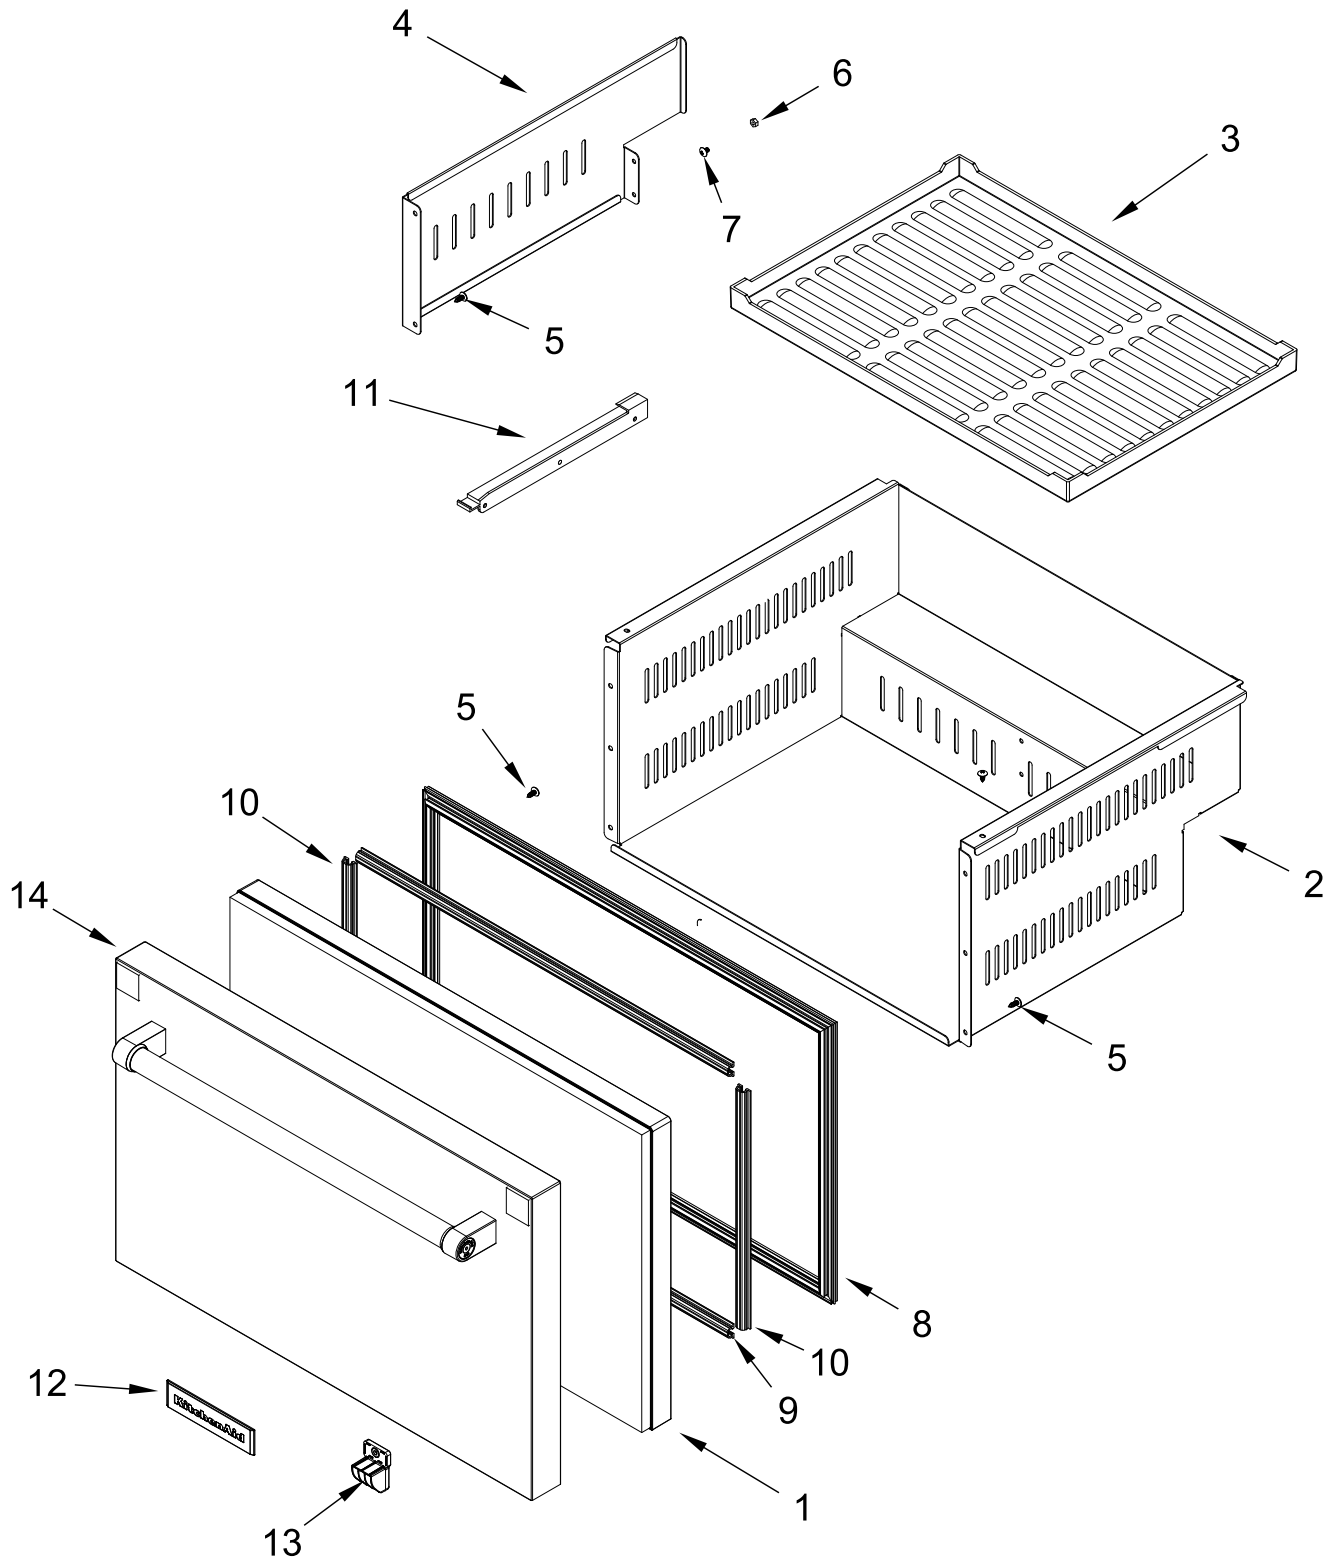

LOWER DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11580280	Door Assembly, Lower	8	W11568947	Gasket	14	W11568932	Wrap, Stainless
2	W11592371	Drawer Box Assembly, Bottom	9	W11360665	Gasket, Sash (Top/Bottom)			FOLLOWING PARTS NOT ILLUSTRATED
3	W11568945	Mat, Lower Drawer	10	W11568838	Door Gasket, Short	W11580279		Complete, Door Assembly
4	W11568946	Bottom Drawer Partition	11		Rail, Side			
				W11568762	Left Hand			
				W11568764	Right Hand			
5	W10204809	Screw	12	W10772910	Nameplate			
6	W10204920	Nut	13	W11568796	Plate, Push			
7	W10204810	Screw						


UNIT PARTS

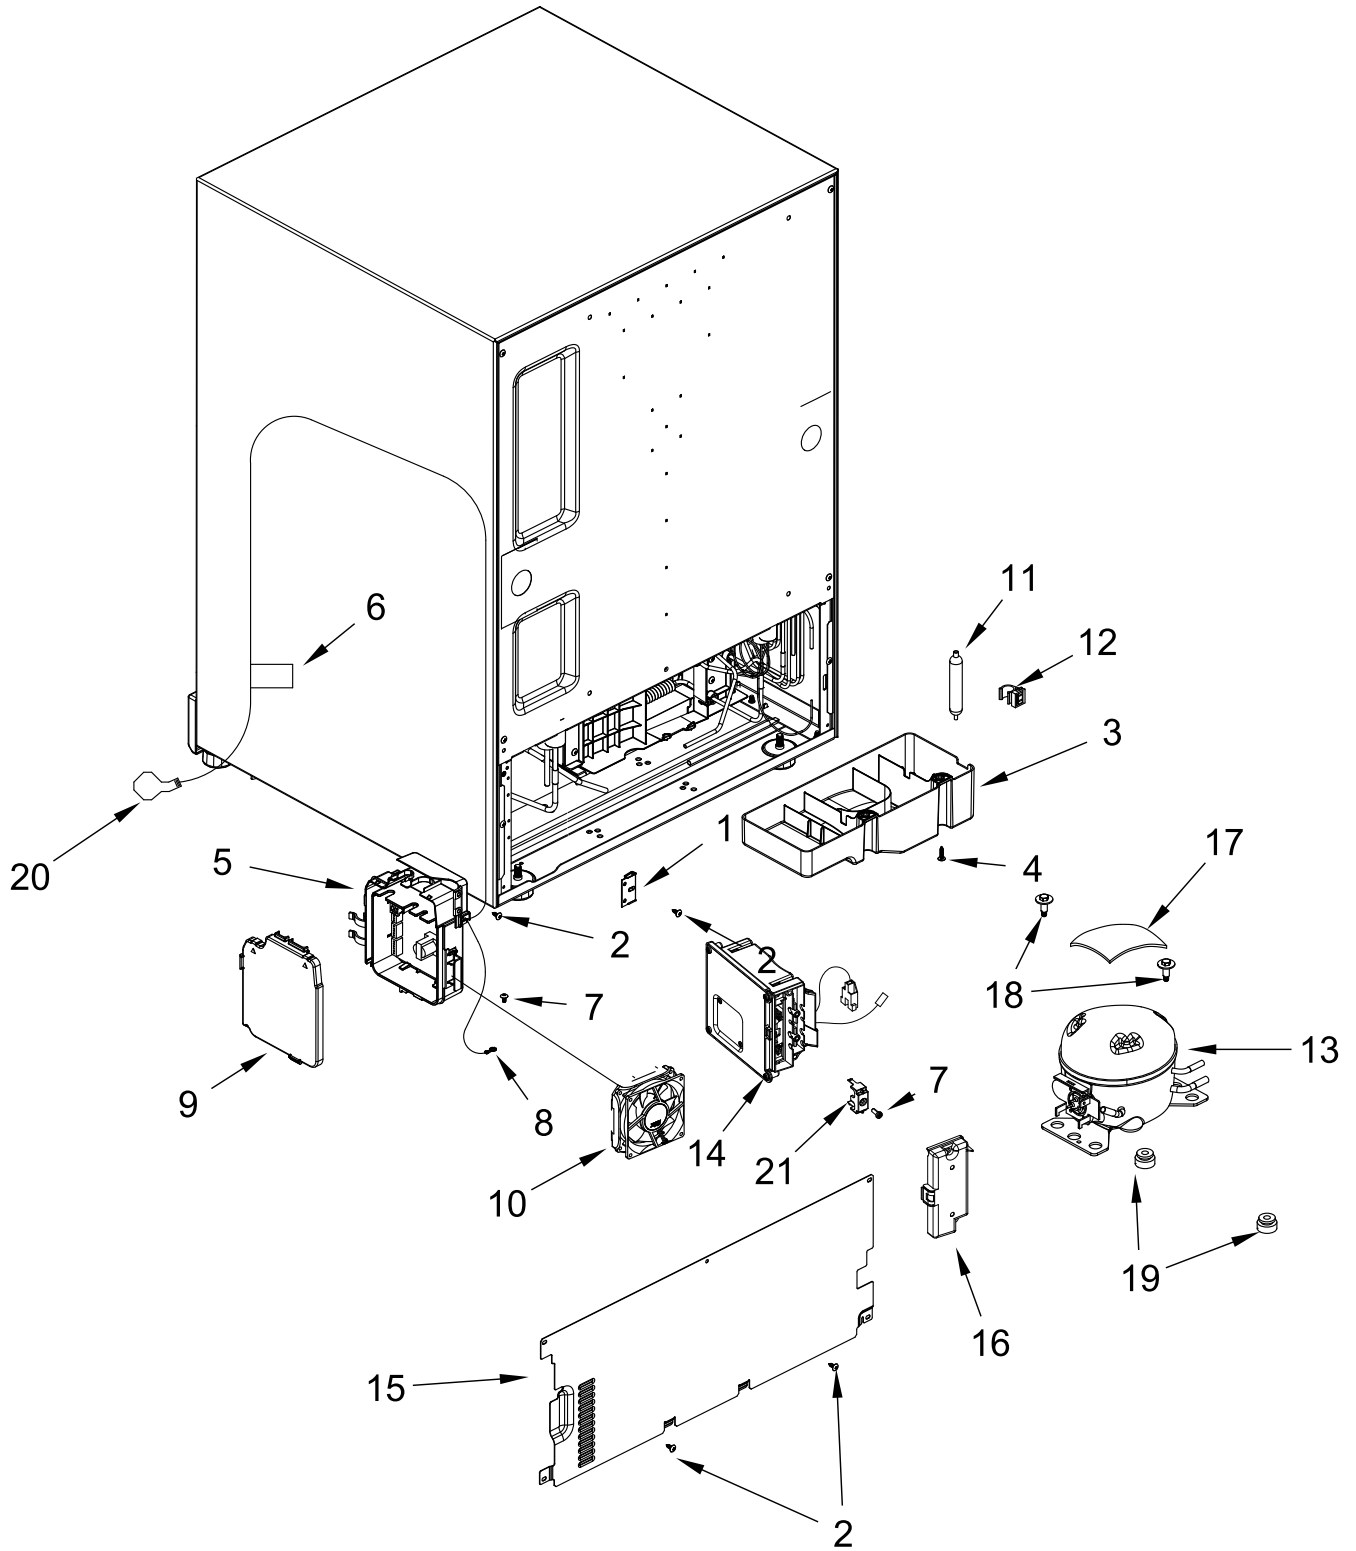

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11576947	Clamp, Cord	10	W11360536	Assembly, Fan Motor	19	W11360596	Mount, Compressor
2	W11371097	Screw	11	W10163273	Drier	20	W11498145	Cord, Power
3	W11360241	Water Pan, Evaporator	12	W11265569	Clamp	21	W11360592	Stopper
4	W11375763	Screw	13	W11580235	Compressor			REFRIGERANT
5	W11580234	Main PCB	14	W11580236	IB Box Assembly			CHARGE
6	W11577175	Tag, Power Cord	15	W11580243	Cover, Panel			52 grams (R600a)
7	4344826	Screw	16	W11360590	Cover, Side			
8	W11265570	Washer	17	W11360595	Compressor, Rubber			
9	W11313206	Cover, PCB	18	W11375771	Bolt			

ICEMAKER PARTS

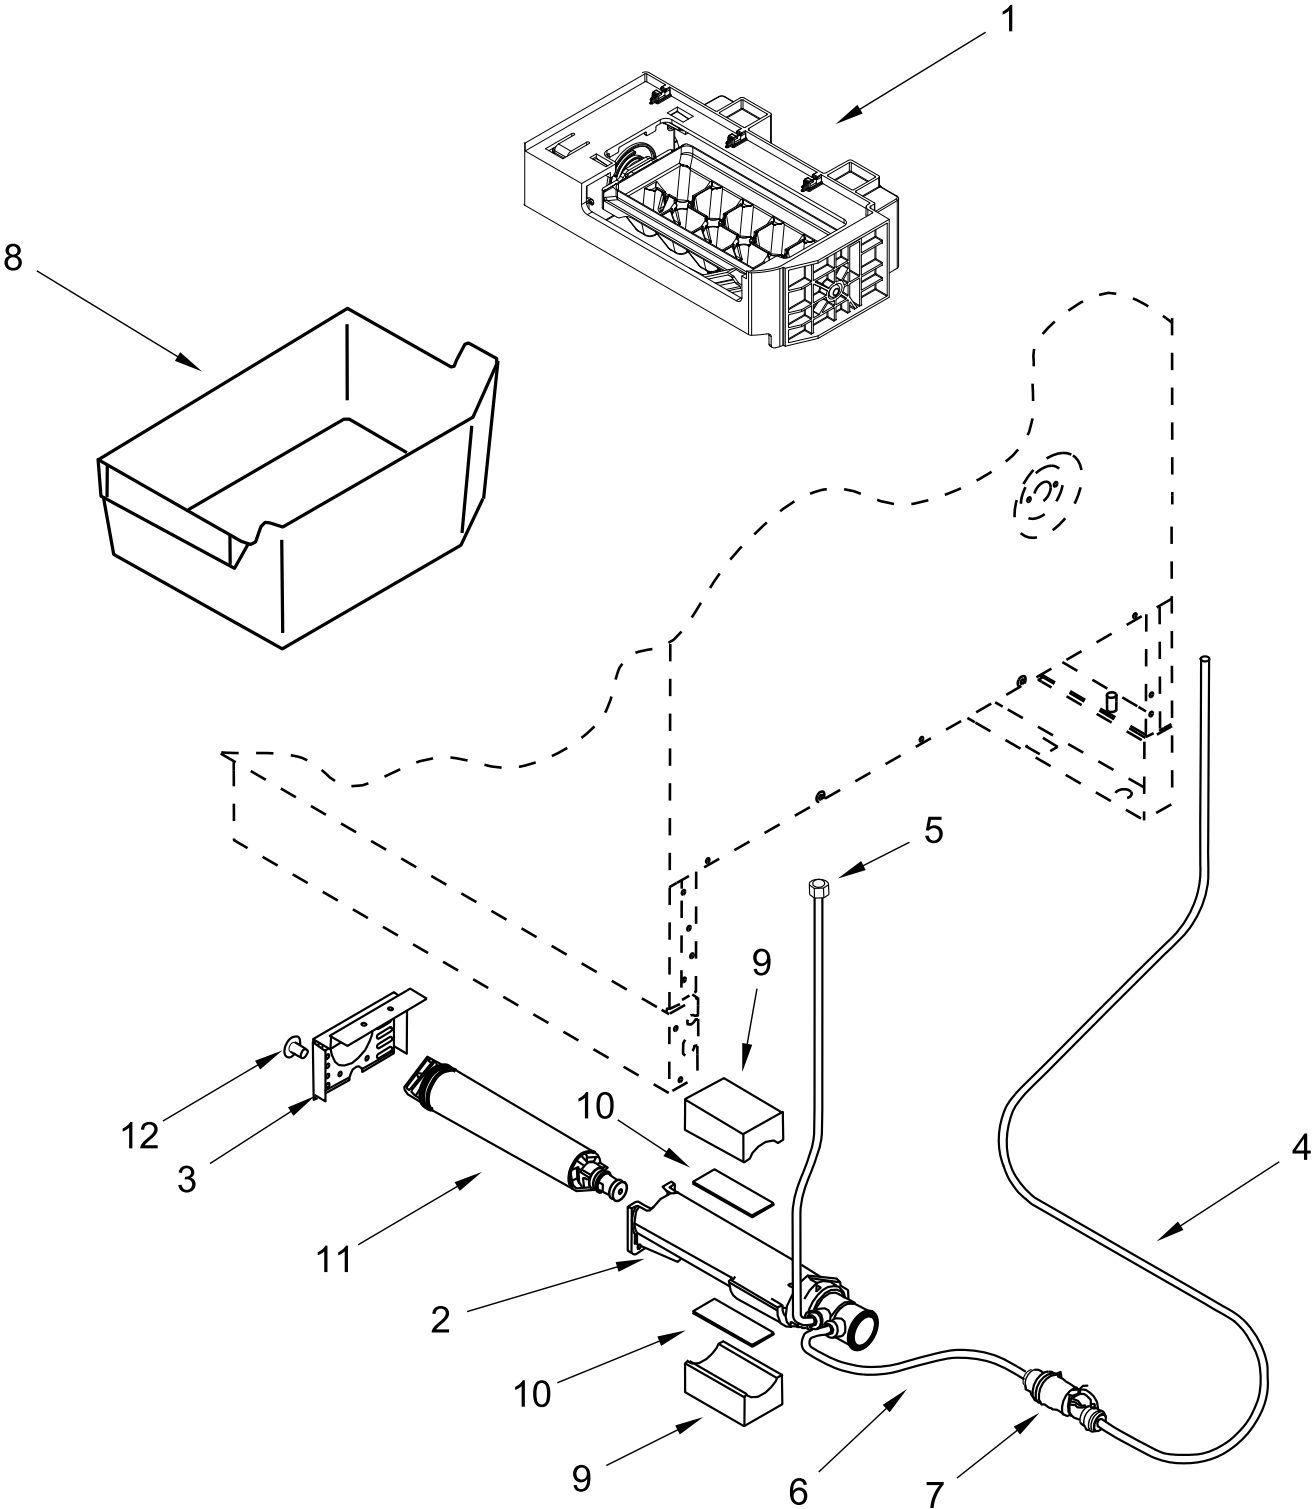

ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11580297	Icemaker	5	W11580305	Tube, Inlet	9	W11580302	Block, Filter
2	W11580299	Housing, Filter	6	W11580307	Tube, Water	10	W10281589	Tape, Filter
3	W11580300	Bracket, Filter	7	W11580309	Assembly, Water Valve	11	W10281560	Water Filter
4	W11580303	Tube, Water	8	W11580283	Bin, Ice	12	W11371345	Screw