




## **ELECTRIC COOKTOP**

### **MODELS:**

MEC8830HB01 (Black)

MEC8830HS01 (Stainless)

# COOKTOP PARTS

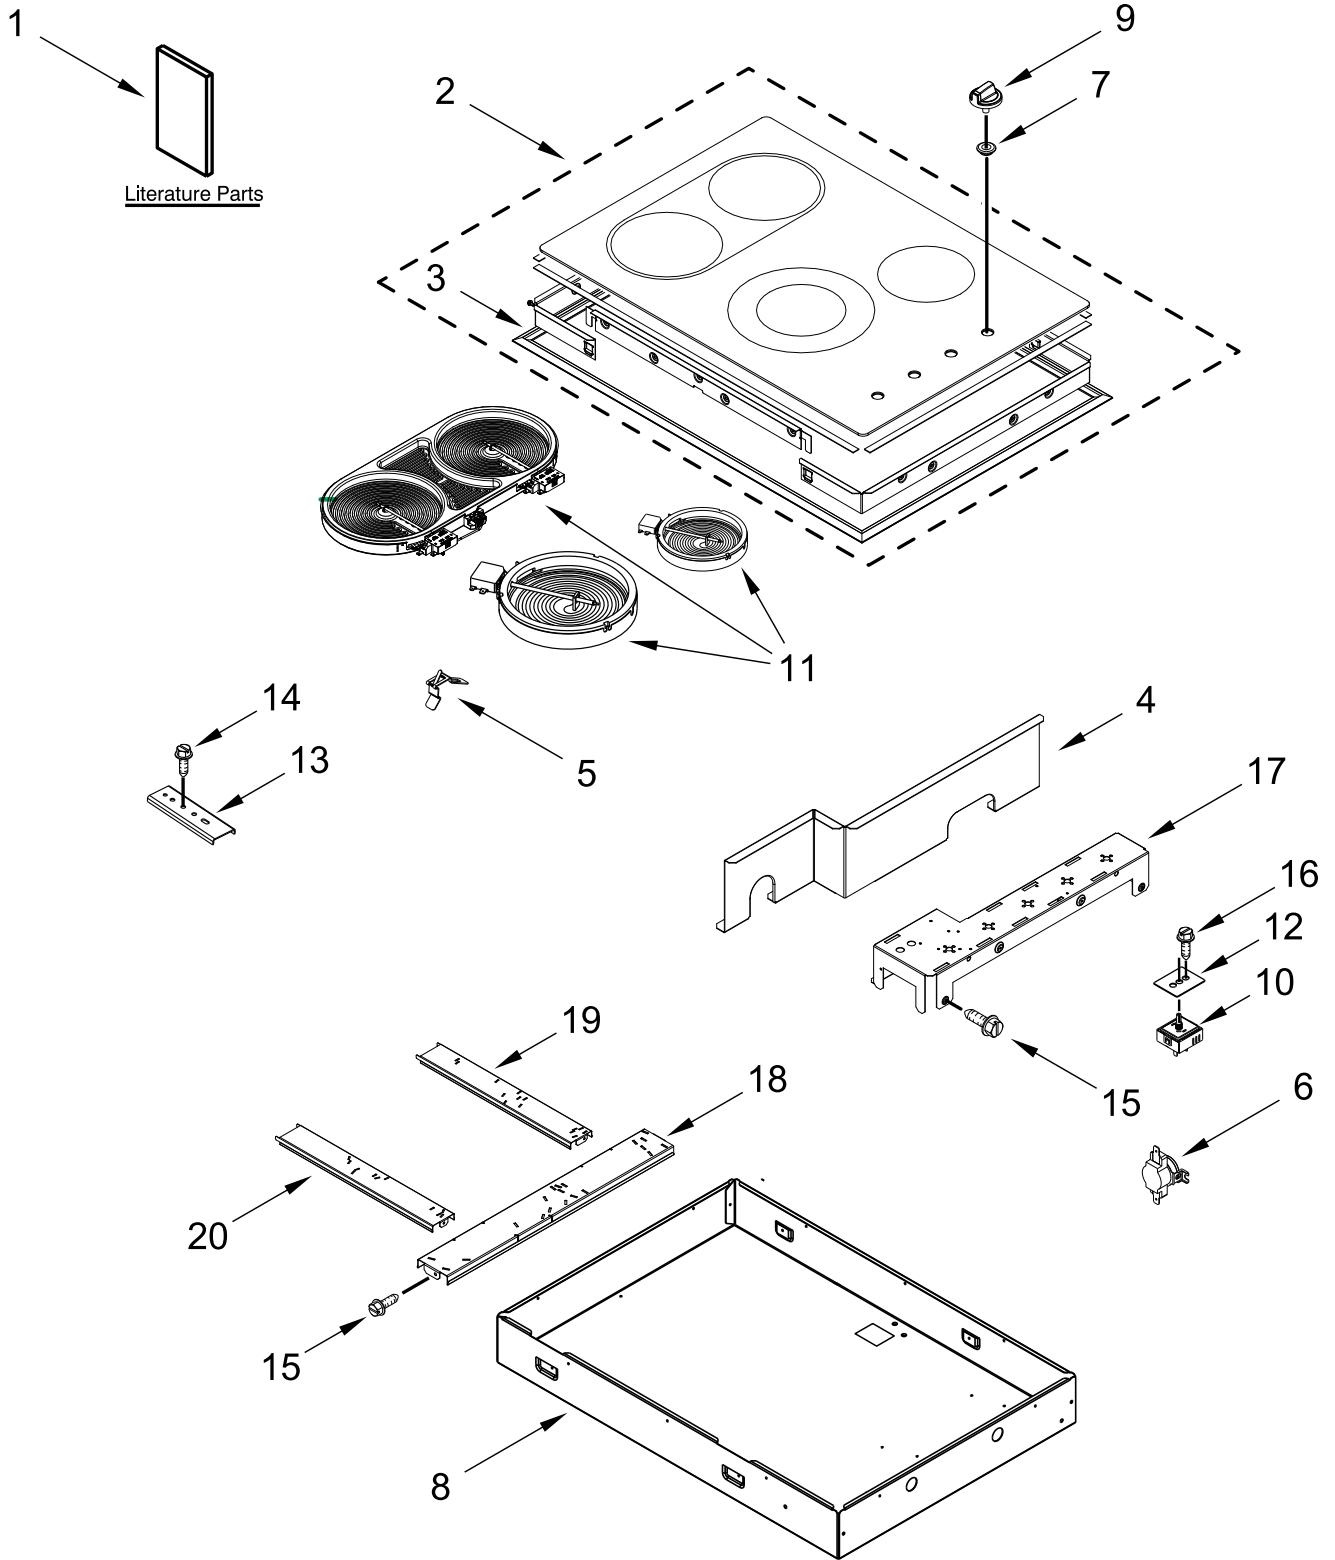

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9		Knob, Control	13	4455917	Bracket, Cooktop Mounting
	W11439185	Installation Instructions		W10895122	Black	14	3400093	Screw
	W11245478	Instructions, Undercounter Installation	10	W10437092	Switch, Infinite (Left Front and Right Front)	15	7101P426-60	Screw
	W11255747	Use & Care Guide		W10843843	Switch, Infinite (Left Rear)	16	7101P309-60	Screw
	W11238363	Diagram, Wiring		W10578768	Switch, Infinite (Right Rear)	17	W11215835	Plate, Switch
2		Cooktop		W10248259	Element, Bridge (Left Front and Left Rear)	18	W11102042	Rail, Vertical
	W11120984	Black		W10275048	Element (3000 and 1400W) (Right Front)	19	W11106009	Rail, Horizontal Rear
	W11120985	Stainless	11	8273994	Element (1200W) (Right Rear)	20	W11110714	Rail, Horizontal Front
3		Trim, Stainless (Not Serviced)		3183956	Seal, Switch Cover			FOLLOWING PARTS NOT ILLUSTRATED
4	W11110724	Shield, Switch					W11110551	Harness, Main
5	W10225448	Spring, Element					3400015	Screw, Grounding
6	W10464566	Switch, TOD High Limit					7101P520-60	Screw
7		Grommet					7103P027-60	Nut
	W10293874	Black					3192439	Seal, Limiter
8		Box, Burner (Not Serviced)					8286642	Tape, Foam
							W11161211	Insulation, Cooktop (Knob)

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

FOLLOWING PARTS  
NOT ILLUSTRATED

ACCESSORIES

W10355051	Cleaner, Cooktop
-----------	------------------

W11042470	Cooktop Cleaning Kit
-----------	----------------------