




**ELECTRIC RANGE**

**MODELS:**

MER6600FZ6 (Stainless)


# COOKTOP PARTS

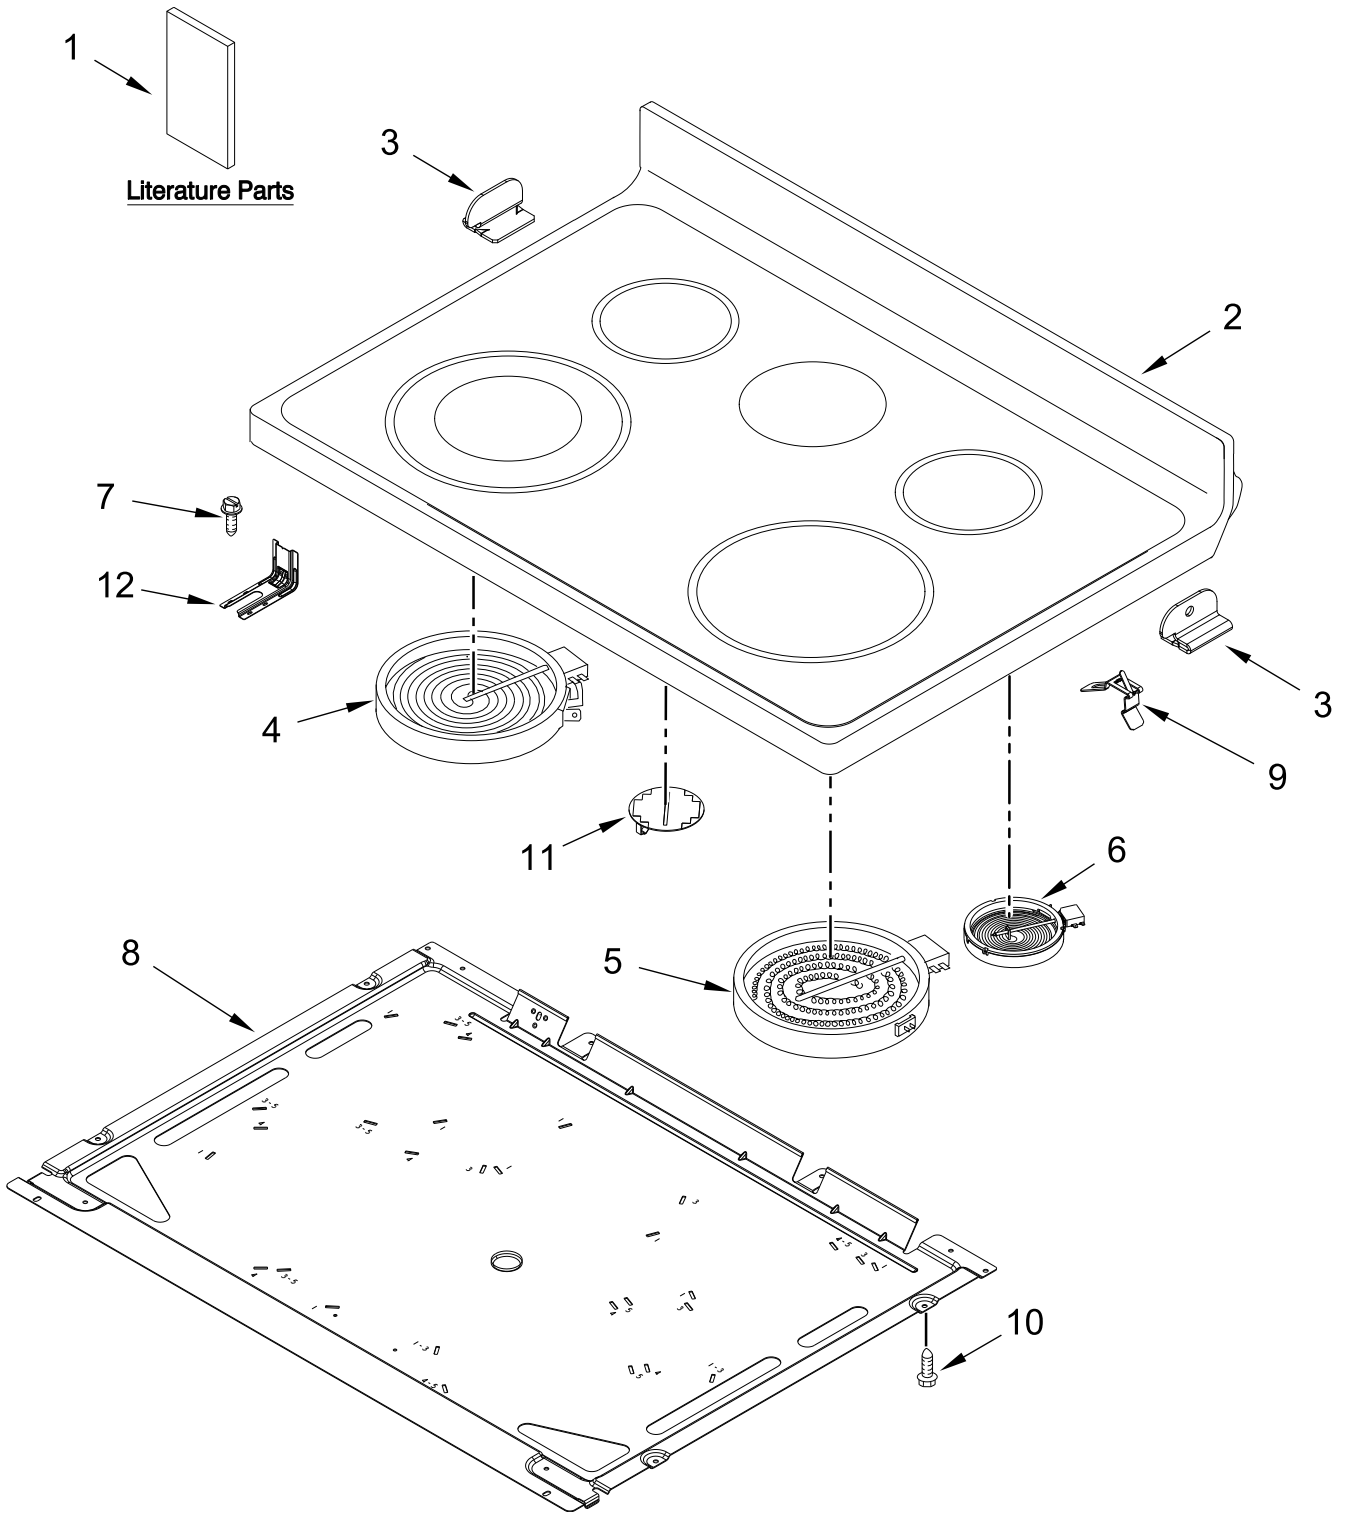

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	8273992	Element (2500W) (Right Front)	12	W11379945	Bracket, Anti-Tip
	W11509598	User Instructions	6	8273994	Element (1200W) (Left Rear and Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11435574	Quick Start Guide					W11452625	Harness, Main
	W11326824	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit		W11134603	Harness, Cooktop (Left)
2		Cooktop	8	W10691223	Pan, Radiant Element		W11134551	Harness, Cooktop (Right)
	W11022824	Black	9	W11600012	Spring, Element		W11598759	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)	10	3196165	Screw		W11172528	Harness, Hidden Bake
	W10607642	Bracket, Cooktop (Right)	11	W11668631	Element, Warm Zone		W10281322	Kit, Bare Wire Adapter Block
4	W10275048	Element (3000 and 1400W)  (Left Front)						


# CONTROL PANEL PARTS

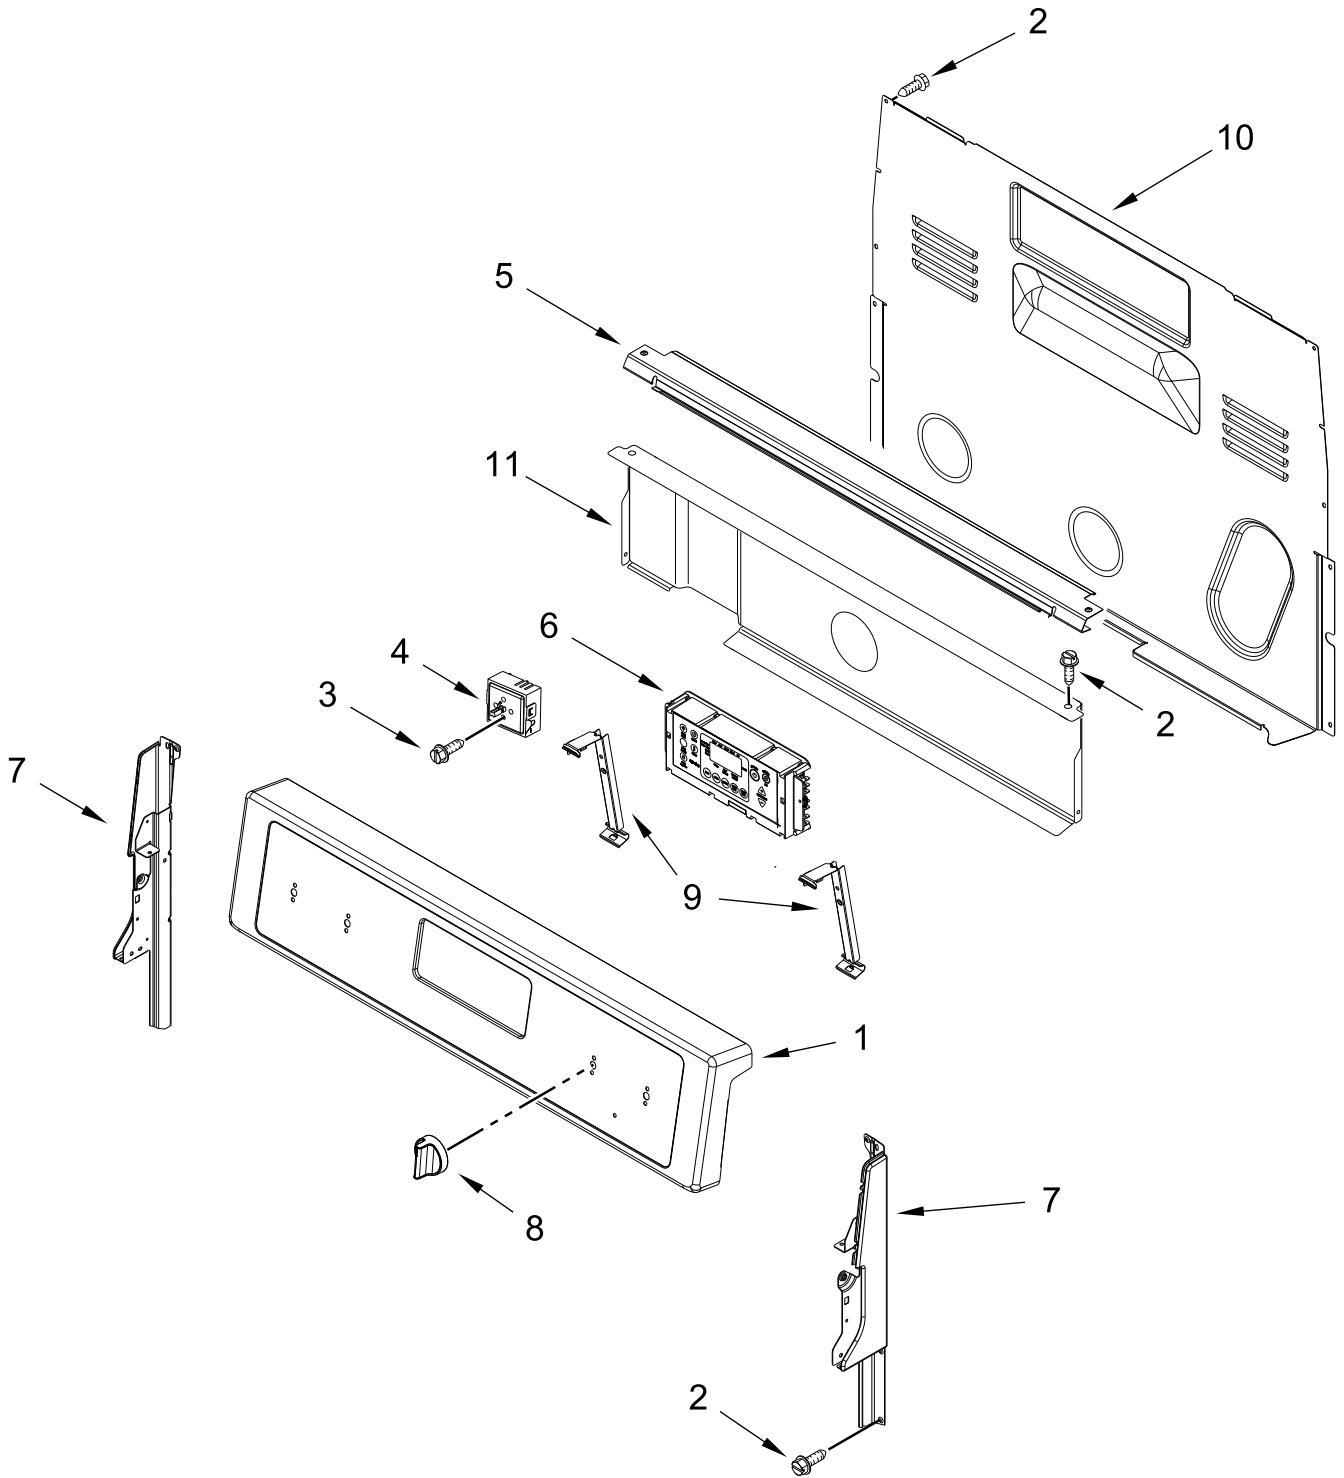

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	W10525121	Bracket, Console Mounting	10	8272473	Cover, Upper Rear
	W10885607	Stainless				11	W10134247	Shield, Heat
2	3196178	Screw	6		Board, Control			
3	3400882	Screw		W11515115	Black			
4	W10434452	Switch, Infinite (Dual)	7		Endpost, Console			
		(Left Front)		W11130372	Black (Left)			
	3148951	Switch, Infinite		W11130379	Black (Right)			
		(Left Rear and Right Rear)	8		Knob			
	3148954	Switch, Infinite		W10858250	Stainless			
		(Orange)	9	W10695491	Bracket, Control			
		(Right Front)						


# CHASSIS PARTS

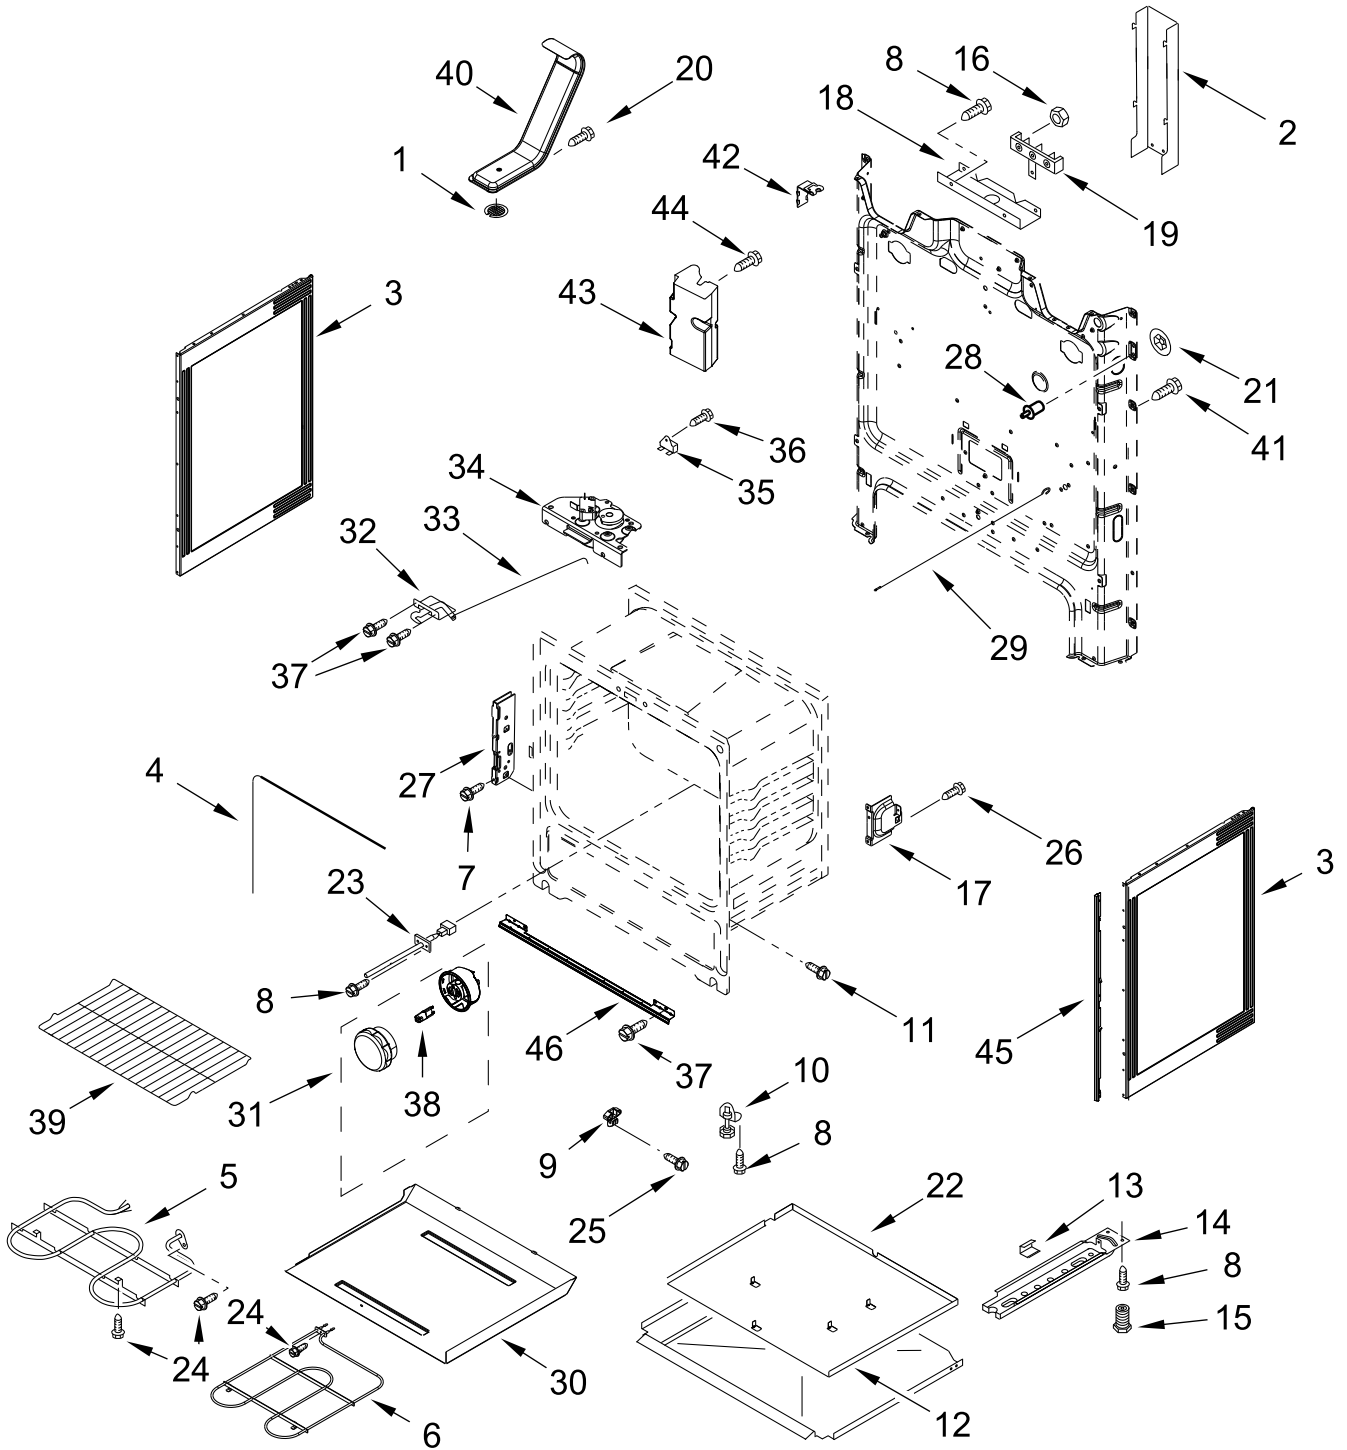

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	18	3186034	Bracket, Service	37	3196560	Screw
2	W10326122	Cover, Terminal Block	19	W10245259	Block, Terminal	38	W10571723	Bulb, Halogen 40 Watts
3		Panel, Side	20	W10362924	Screw	39	W11173792	Rack, Oven
	W10162245	Black	21	3400968	Nut	40	W10134285	Tube, Vent
4	W11491751	Seal, Door	22	W10134125	Shield, Heat	41	3400016	Screw
5	9757340	Element, Broil	23	W10181986	Sensor, Oven	42	W10183541	Clip, Spring Steel
6	9755770	Element, Bake	24	3196154	Screw	43	W10910404	Counterweight
7	W10031780	Screw	25	3400080	Screw	44	W11034869	Screw
8	3196178	Screw	26	3196169	Screw	45	W11510560	Barrier Rail, Rubber (Left and Right)
9	W10674705	Glide, Drawer Front	27	W10289077	Receiver, Hinge	46	W11464547	Bracket, Front Frame
10	W10341186	Front Foot Assembly	28	W11511828	Switch, Door			FOLLOWING PARTS NOT ILLUSTRATED
11	W10067840	Screw	29	9757239	Rod, Door Switch			
12	W10134121	Tray, Insulation	30	W10183712	Tray, Hidden Bake			
13	W10137382	Clip, Panel	31	W11634772	Light Assembly			
14	W10390007	Base Rail Assembly (Right)	32	9761013	Front Door Latch Assembly		3196520	Clip, Wire
	W10390008	Base Rail Assembly (Left)	33	W10078380	Rod, Latch		W10646923	Card, Insulator
			34	W10107820	Rear Door Latch Assembly		W10774939	Insulation, Wrap
15	W10058460	Foot, Leveling					W11127324	Insulation, Back
16	3400029	Nut	35	3196548	Fuse, Thermal		W10333344	Insulation, Flue
17	W10404688	Clip, Oven Support	36	3196172	Screw			

# DOOR PARTS

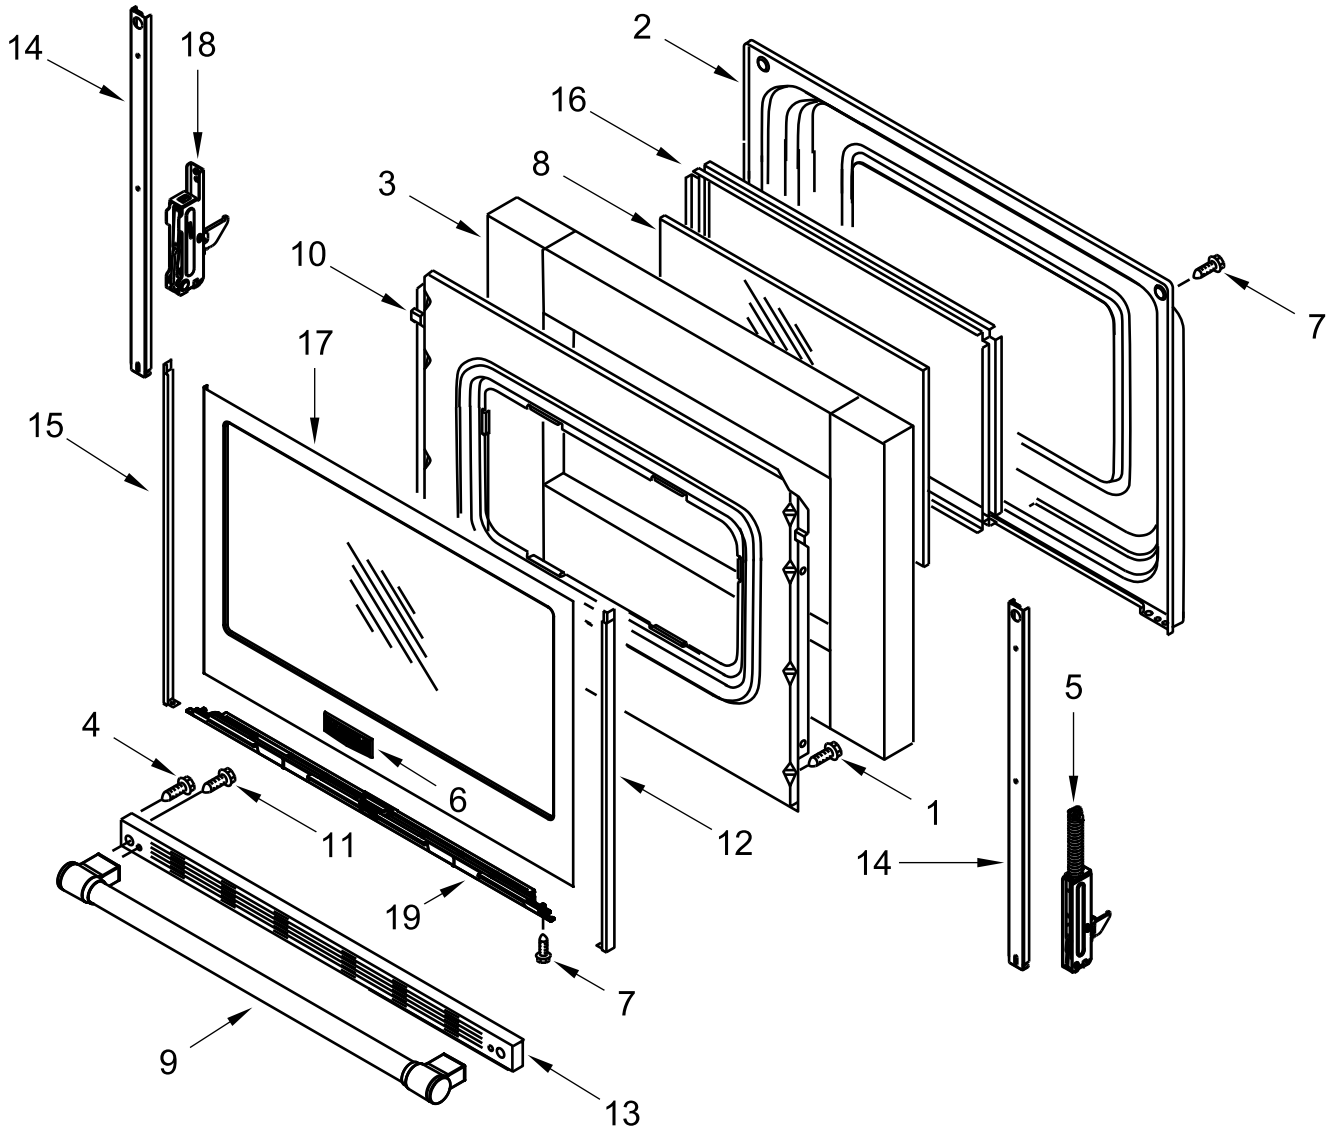




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	10	W11380222	Retainer, Insulation	17		Glass Assembly, Outer Door
2	9761344	Liner, Door	11	W10480830	Screw			
3	W10278991	Insulation, Door Strip	12		Trim, Door		W11167878	Stainless
4	W10200660	Screw		W10746435	Black (Right)	18	W10299227	Hinge, Door (Passive)
5	W10299224	Hinge, Active (With Spring)	13		Trim, Oven Door Vent	19	W11440159	Trim, Bottom Door
6	W10612925	Badge		W11047800	Stainless			
7	W10327235	Screw	14	W11379944	Strap, Door			
8	9758162	Glass, Inner	15		Trim, Door			
9		Handle, Oven Door		W10746436	Black (Left)			
	W10834521	Stainless	16	W10316950	Frame, Glass			

# DRAWER PARTS

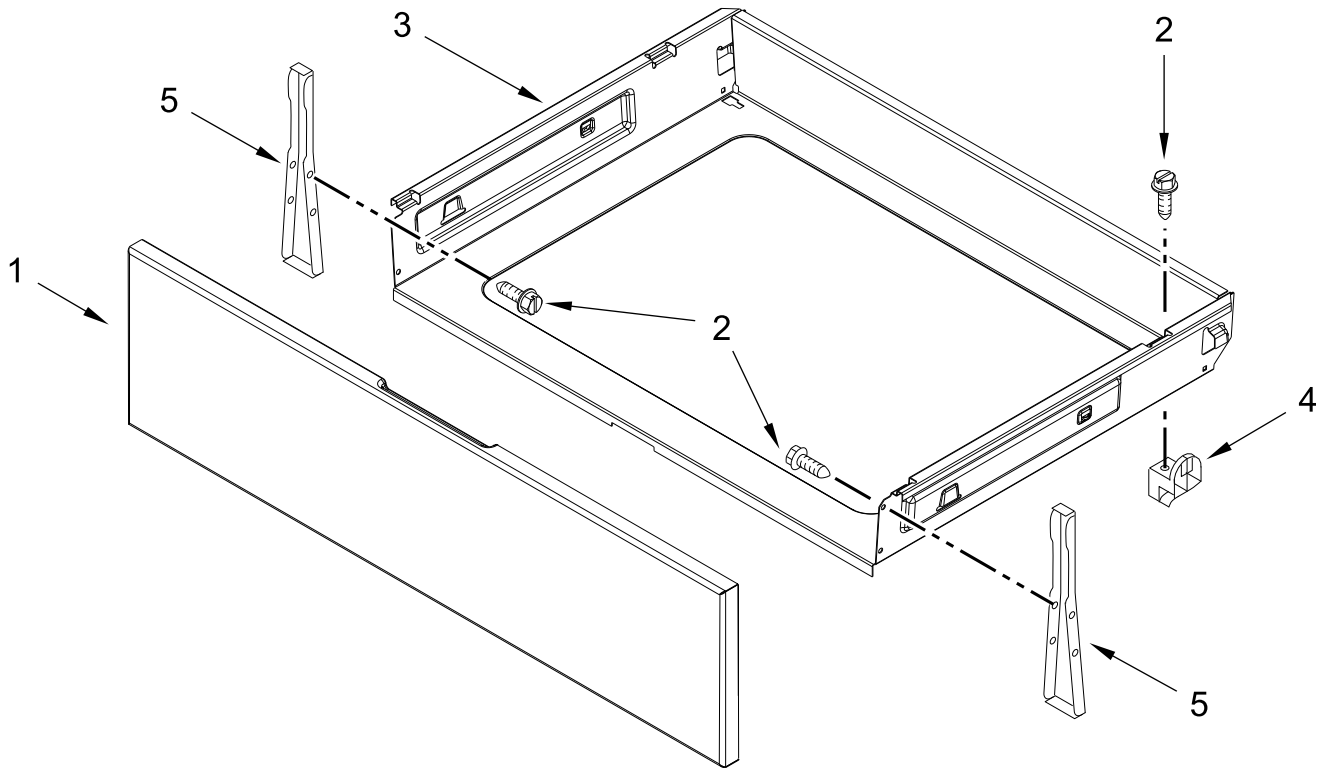

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11449698	Stainless
2	3196165	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	W10462910	Bracket, Mounting Drawer

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10268578	Rack, Oven
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting