




**GAS RANGE
(Fingerprint Resistant)**

MODELS:

MGT8800FZ10 (Stainless)


COOKTOP PARTS

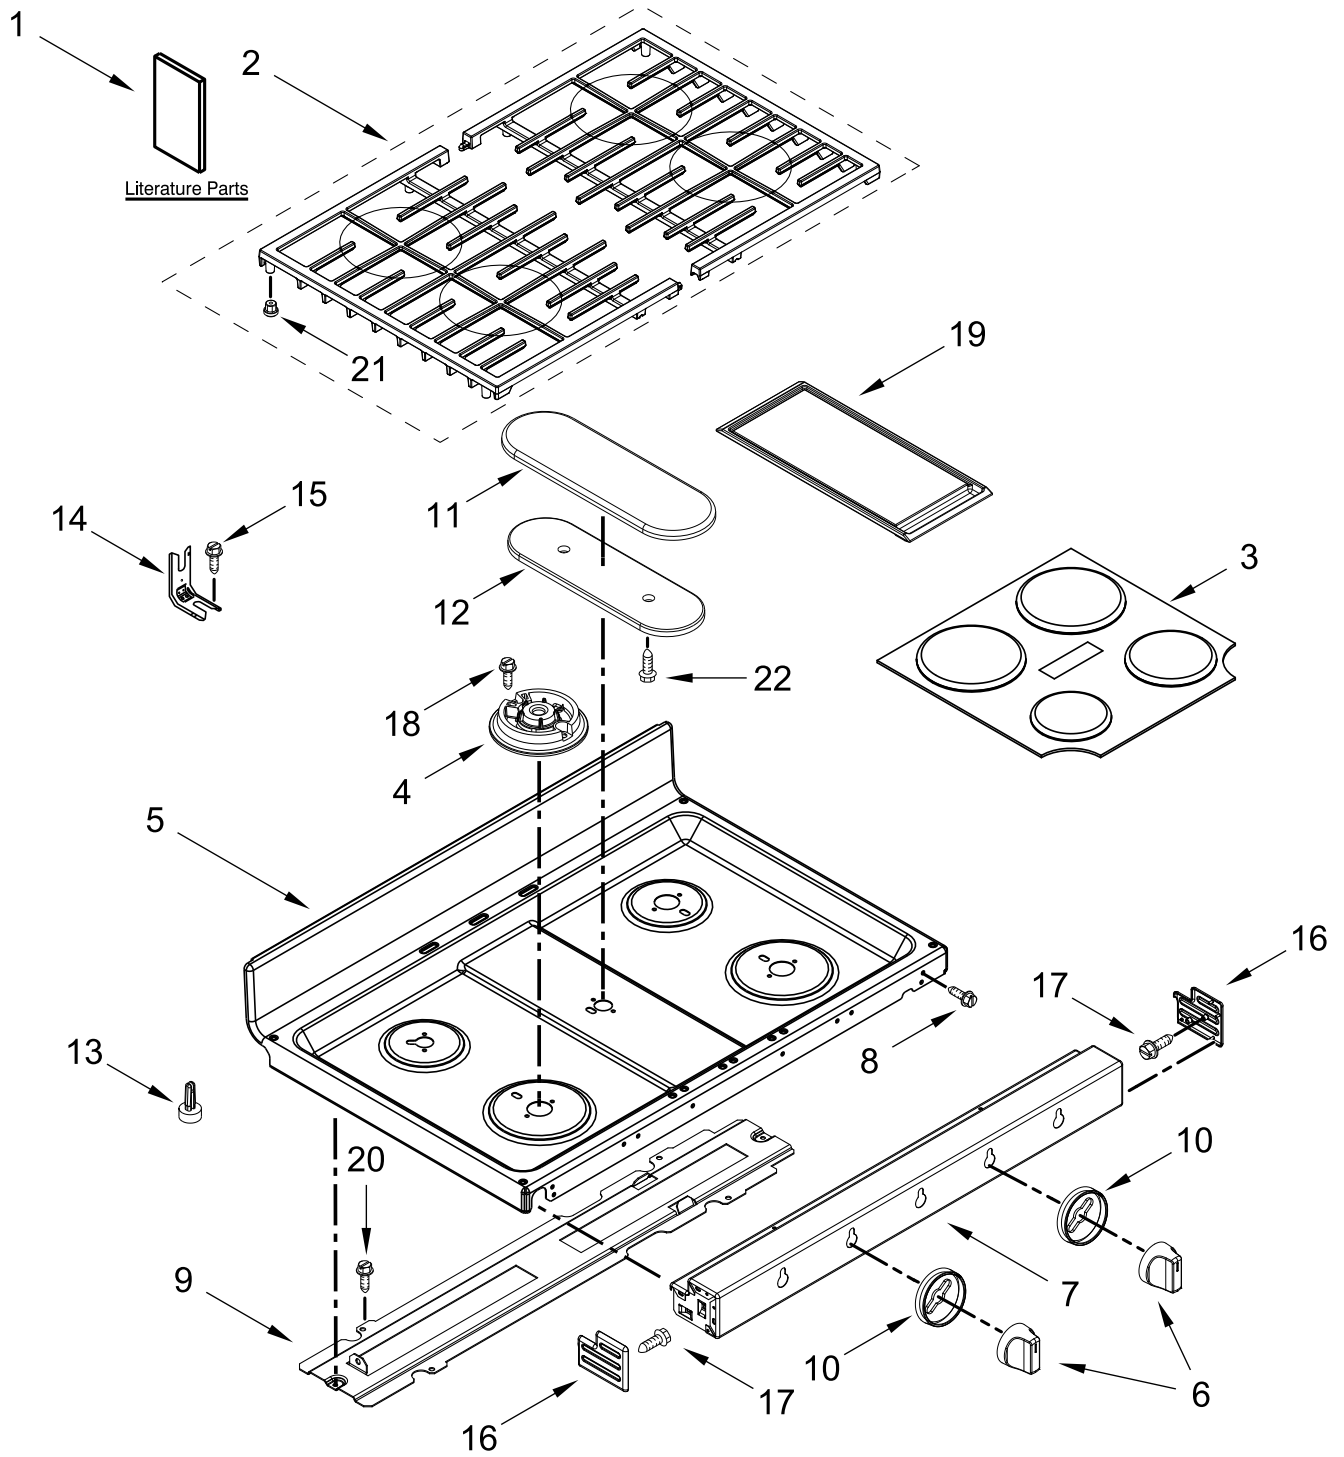

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6		Knob	18	3368921	Screw
	W11426601	Owner's Manual		W10886658	Stainless	19	W10432544	Griddle
	W11430267	Quick Service Guide	7		Panel, Manifold	20	7101P376-60	Screw
	W11565449	Tech Sheet		W10711043	Stainless	21	W10465081	Grate, Bumper
2	W11241660	Grate Kit (Includes 2 Grates)	8	7101P633-60	Screw (Black)	22	4449154	Screw
3		Kit, Burner Cap	9	W10518258	Bracket, Cooktop Support			FOLLOWING PARTS NOT ILLUSTRATED
	W10299236	Black	10	W10850043	Bezel	W11448060		Harness, Main
4	W10406878	Head, Burner (17.5K)	11		Set, Fish Burner Cap	W11172428		Harness, EOL (DOFSR)
		(Left Front)		W10171140	Black	W10408058		Harness, Spark
	W10406243	Head, Burner (6K)	12	W10333445	Base, Burner (Fish Burner Only)	W11172531		Harness, Sensor & Locks
		(Left Rear and Right Rear)	13	8016P022-60	Glide, Main Top	7101P027-60		Screw, Ground
	W10336094	Head, Burner (Center)	14	3801F656-51	Bracket, Anti-Tip	7111P017-60		Clamp, Wire
	W10406797	Head, Burner (12.5K)	15	7101P485-60	Screw, Anti-Tip Kit	8019P026-60		Clip, Wire-Wrap Nylon
		(Right Front)	16		Cap, End	7109P084-60		Washer, Fiber
5		Cooktop		W10823301	Stainless (Left)			
	W10260169	Black		W10823299	Stainless (Right)			
			17	7101P634-60	Screw			


CONTROL PANEL PARTS

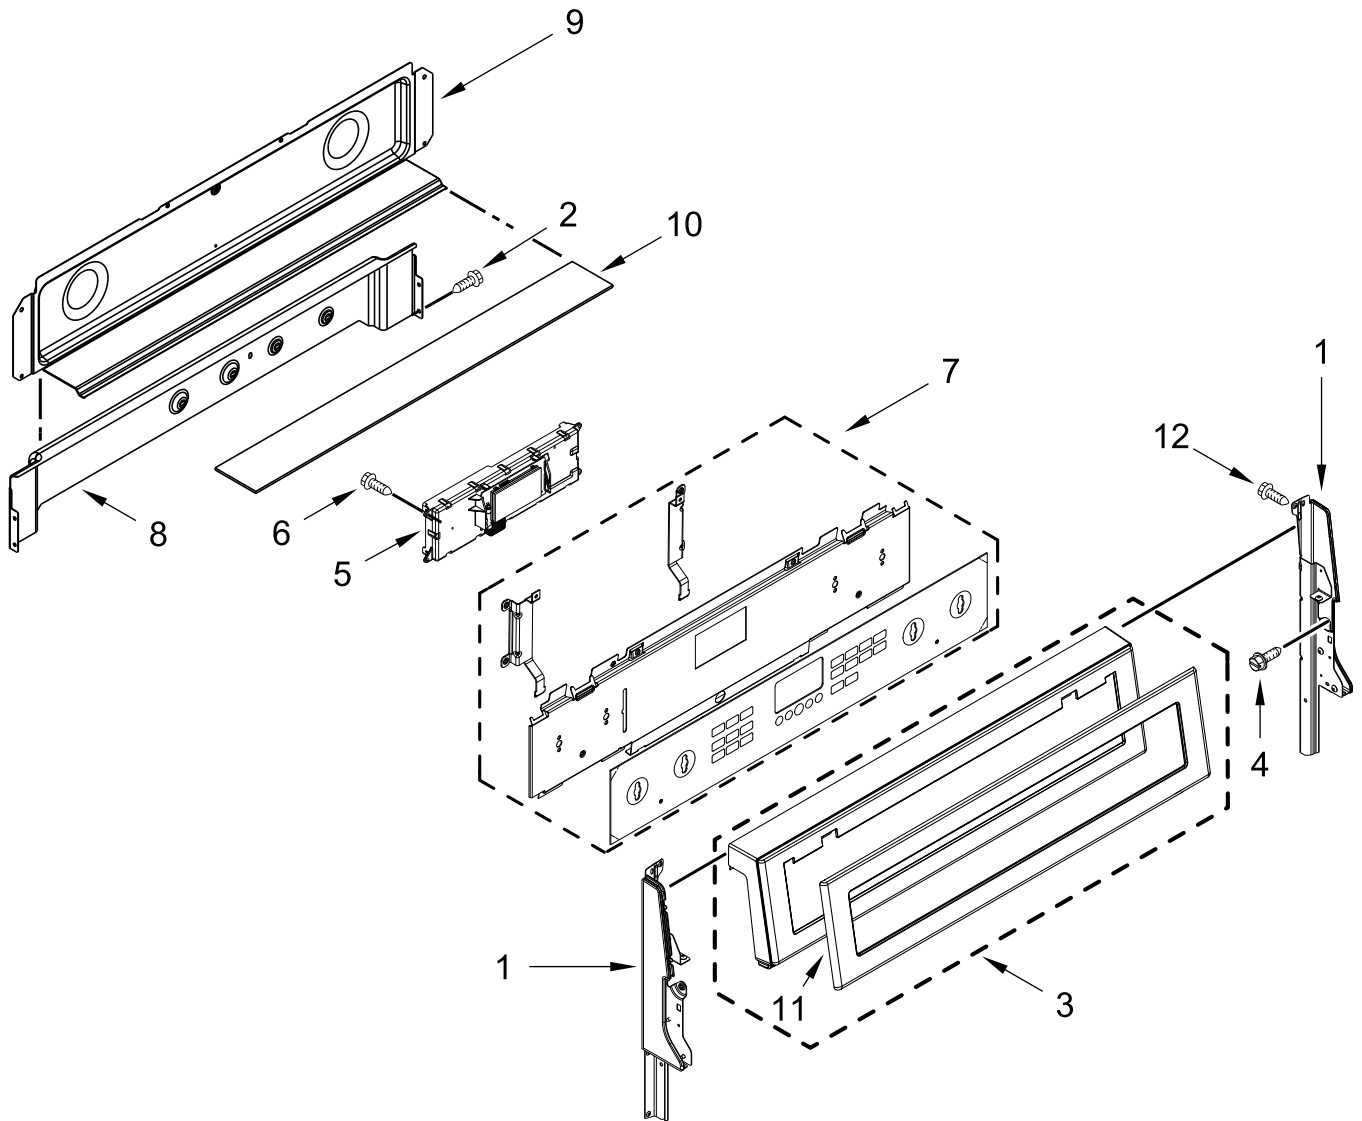

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	4	9780274	Screw	9	W10776098	Cover, Backguard
	W10319109	Black (Left)	5	W11541199	Control, Maxwell	10	W10309232	Insulation, Wire Cover
	W10319111	Black (Right)	6	7101P434-60	Screw	11		Skin, Console (Not Serviced)
2	7101P426-60	Screw	7		Assembly, Membrane (Including Bracket)	12	W10241367	Screw
3		Assembly, Console		W10903066	Stainless			
	W11024861	Stainless	8	W10278697	Shield, Vent			


MANIFOLD PARTS

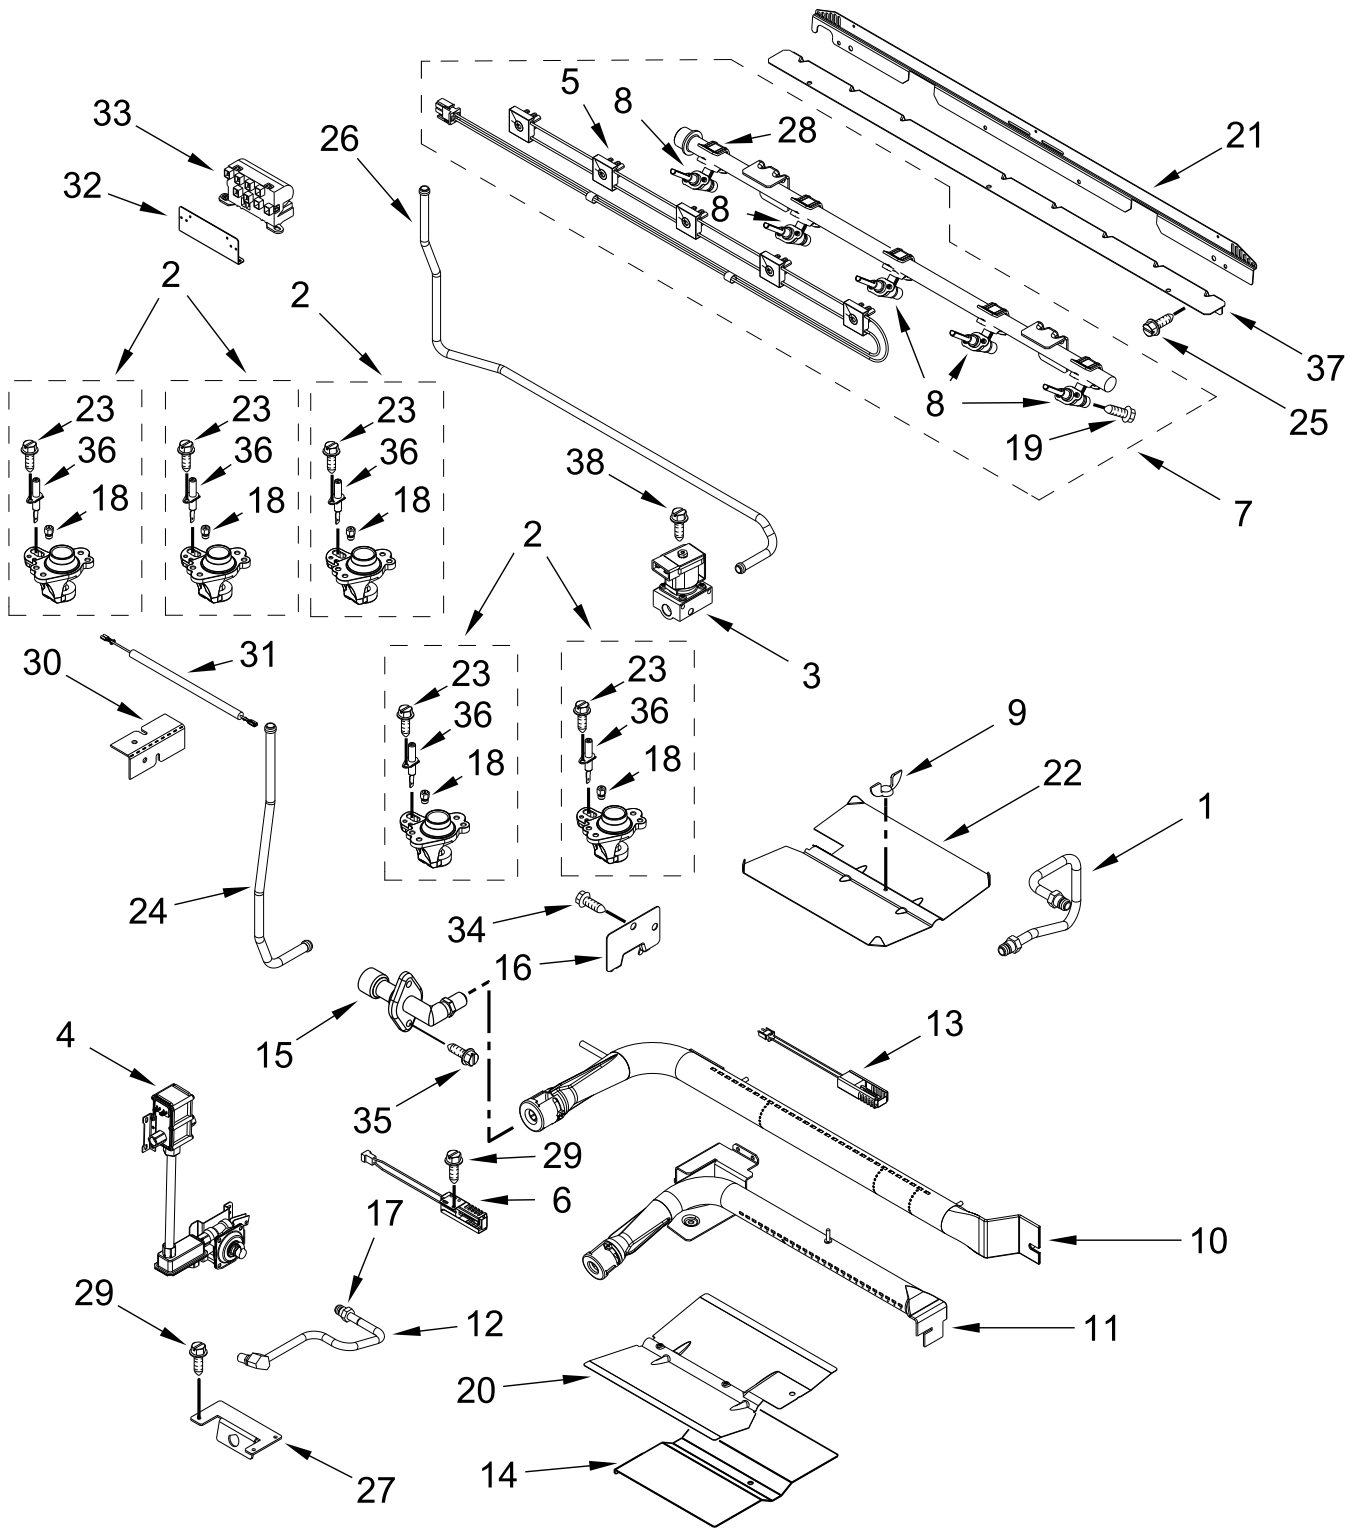

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10319002	Tubing, Broil	12	W10342662	Orifice, Bake (Upper)	27	W10272520	Bracket, Orifice
2	W10643268	Holder, Orifice (17K) (Left Front)		W10342661	Orifice, Bake (Lower)	28	W10949105	Bracket, Saddle Valve
	W10643269	Holder, Orifice (5K) (Left Rear)	13	7432P143-60	Ignitor, Bake	29	7101P282-60	Screw
	W10643272	Holder, Orifice (7K) (Center)	14	W10298865	Shield, Bake	30	W10324366	Holder, Electrode Extension
	W10643270	Holder, Orifice (10K) (Right Front)	15	W10292293	Fitting, Broiler	31	W10636384	Extension, Electrode
	W10643271	Holder, Orifice (5K) (Right Rear)	16	4005F421-45	Cover, Ignitor Wire	32	W10319059	Bracket, Spark Module
3	W10368614	Valve, Shut Off	17	7103P195-60	Nut, Mounting	33	7431P053-60	Module, Spark
4	W10546238	Valve/Regulator	18	W10639161	Orifice (Left Front)	34	7101P434-60	Screw
5	W10664240	Harness, Switch		W10407673	Orifice (Left Rear and Right Rear)	35	7101P502-60	Screw
6	W10324738	Ignitor, Gas		W10324014	Orifice (Center)		W10637673	Electrode, Fish (Center)
7	W10806878	Assembly, Manifold		W10407675	Orifice (Right Front)	37	W10276466	Bracket, Manifold (Bottom)
8	W10718180	Valve (17K) (Left Front)	19	W10295997	Screw, Valve	38	7101P624-60	Screw
	W10718182	Valve (5K) (Left Rear and Right Rear)	20	W10272528	Baffle, Bake			FOLLOWING PARTS NOT ILLUSTRATED
	W10718181	Valve (10K) (Right Front and Center)	21	W10343062	Bracket, Manifold Rear Cover		W10591270	Kit, LP Conversion
			22	3601F358-45	Baffle, Broil Burner		W10324646	Insulation, Orifice
			23	8273062	Screw			
			24	W10524331	Tubing (Supply Regulator to Shutoff)			
9	7103P030-60	Nut, Wing	25	7101P653-60	Screw			
10	W11191260	Burner, Broiler	26	W10642388	Tubing (Supply Shutoff To Manifold)			
11	W11105585	Burner, Bake						


CHASSIS PARTS

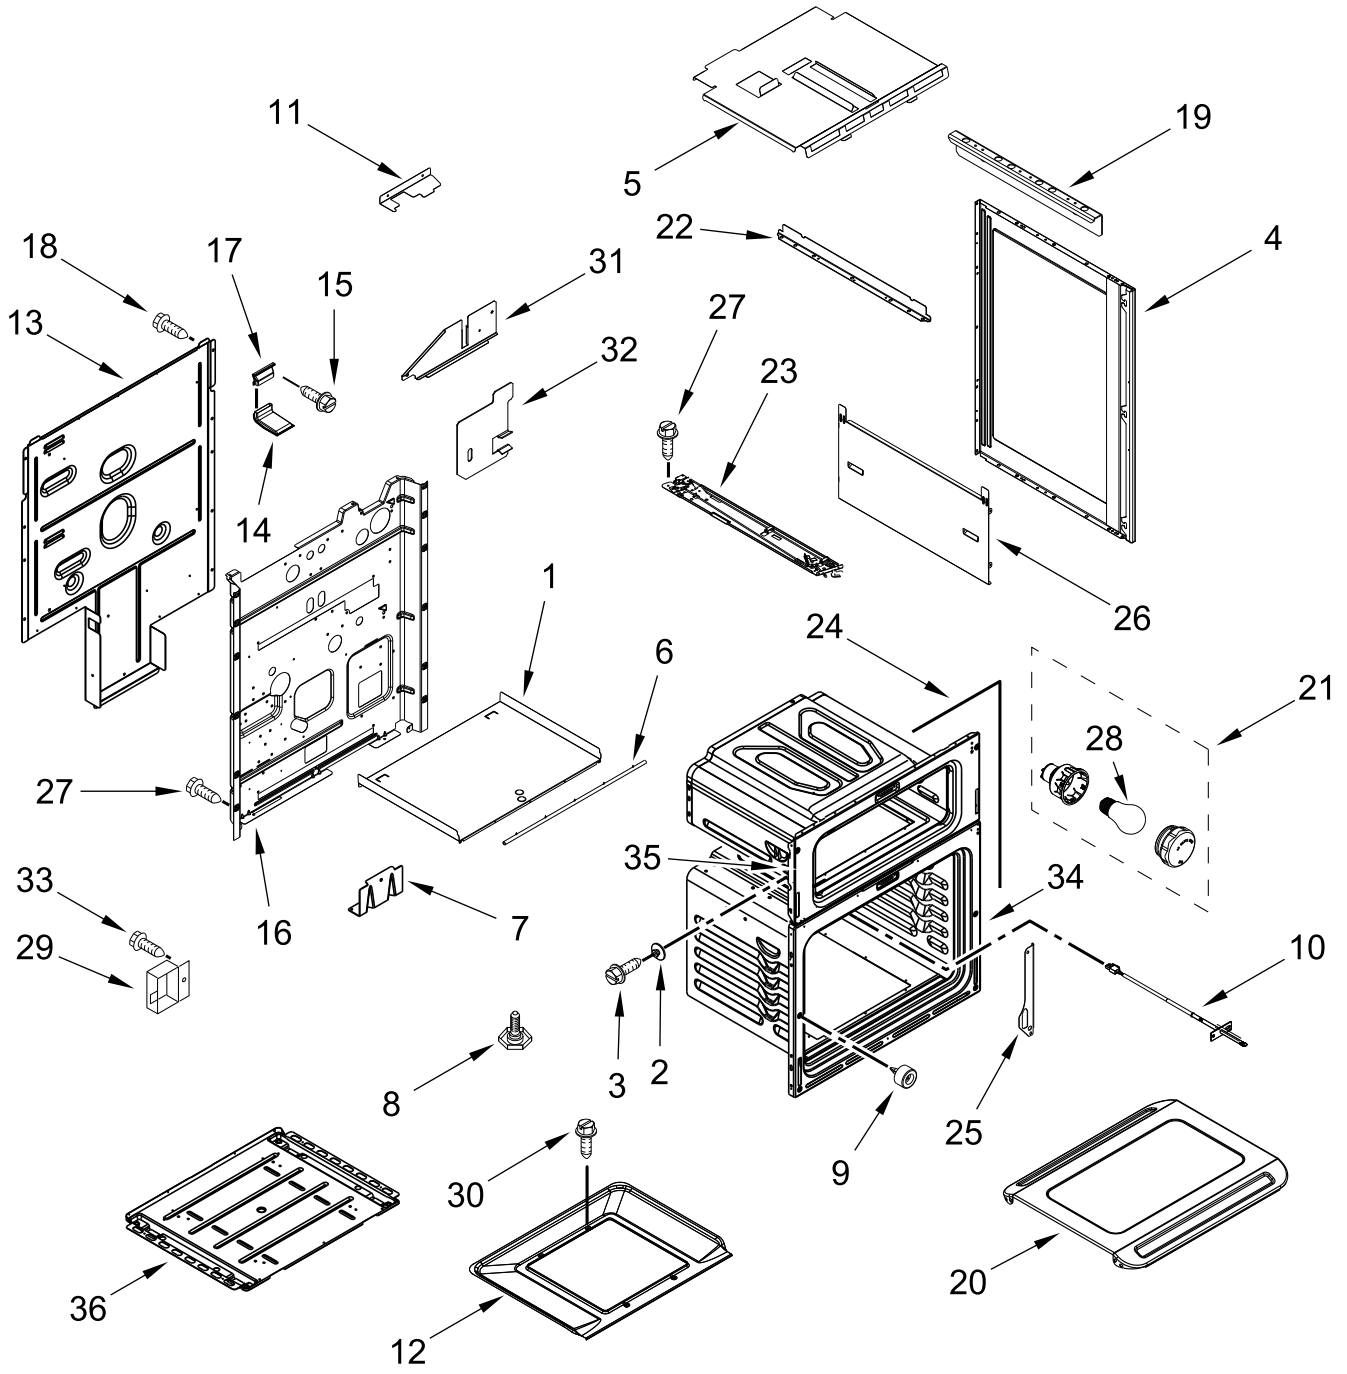

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10319038	Shield, Gemini	17	W10321446	Assembly, Outlet Flue (Upper)	30	12992902	Screw
2	W11479123	Spacer, Side Panel		W10321445	Assembly, Outlet Flue (Lower)	31	W10626077	Cover, Inner Main Back
3	W10267456	Screw, Shoulder	18	4449040	Screw	32	W10626078	Cover, Outer Main Back
4	W11532477	Panel, Side Black	19	W10319087	Bracket, U Channel	33	7101P338-60	Screw
5	W10324643	Support, Insulation	20	W10272546	Bottom, Oven	34	W11515372	Front, Main (Lower)
6	W10319000	Gasket, Gemini Oven Shield	21	W11544370	Light Assembly	35	W11515375	Front, Main (Upper)
7	W10863342	Support, Lower Oven	22	W10357697	Bracket, Side Panel	36	W11509400	Base, Chassis INSULATION
8	7101P507-60	Foot, Leveler	23	W10683517	Lock, Rear Mount		W10344586	Insulation, Floor
9	W10105790	Bumper & Screw	24	W11507143	Gasket, Oven Door (Upper)		W10318910	Insulation, Wrapper (Upper)
10	7430P044-60	Sensor, Oven		W11491753	Gasket, Oven Door (Lower)		W10318918	Insulation, Back (Upper)
11	W10268558	Cover, Lower Wire	25	W10410463	Cover, Hinge (Left)		W10318911	Insulation, Wrapper (Lower)
12	W10777398	Bottom, Oven Drip		W10410461	Cover, Hinge (Right)		W10204081	Insulation, Back (Lower)
13	W10261387	Cover, Main Wire	26	W10538516	Shield, Side Insulation			
14	W11040249	Assembly, Flue (Upper)	27	7101P426-60	Screw			
	W10272519	Assembly, Flue (Lower)	28	311255	Bulb, Oven Light			
15	7101P434-60	Screw	29	8285593	Cover, Connector			
16	W10668728	Back, Main						


UPPER DOOR PARTS

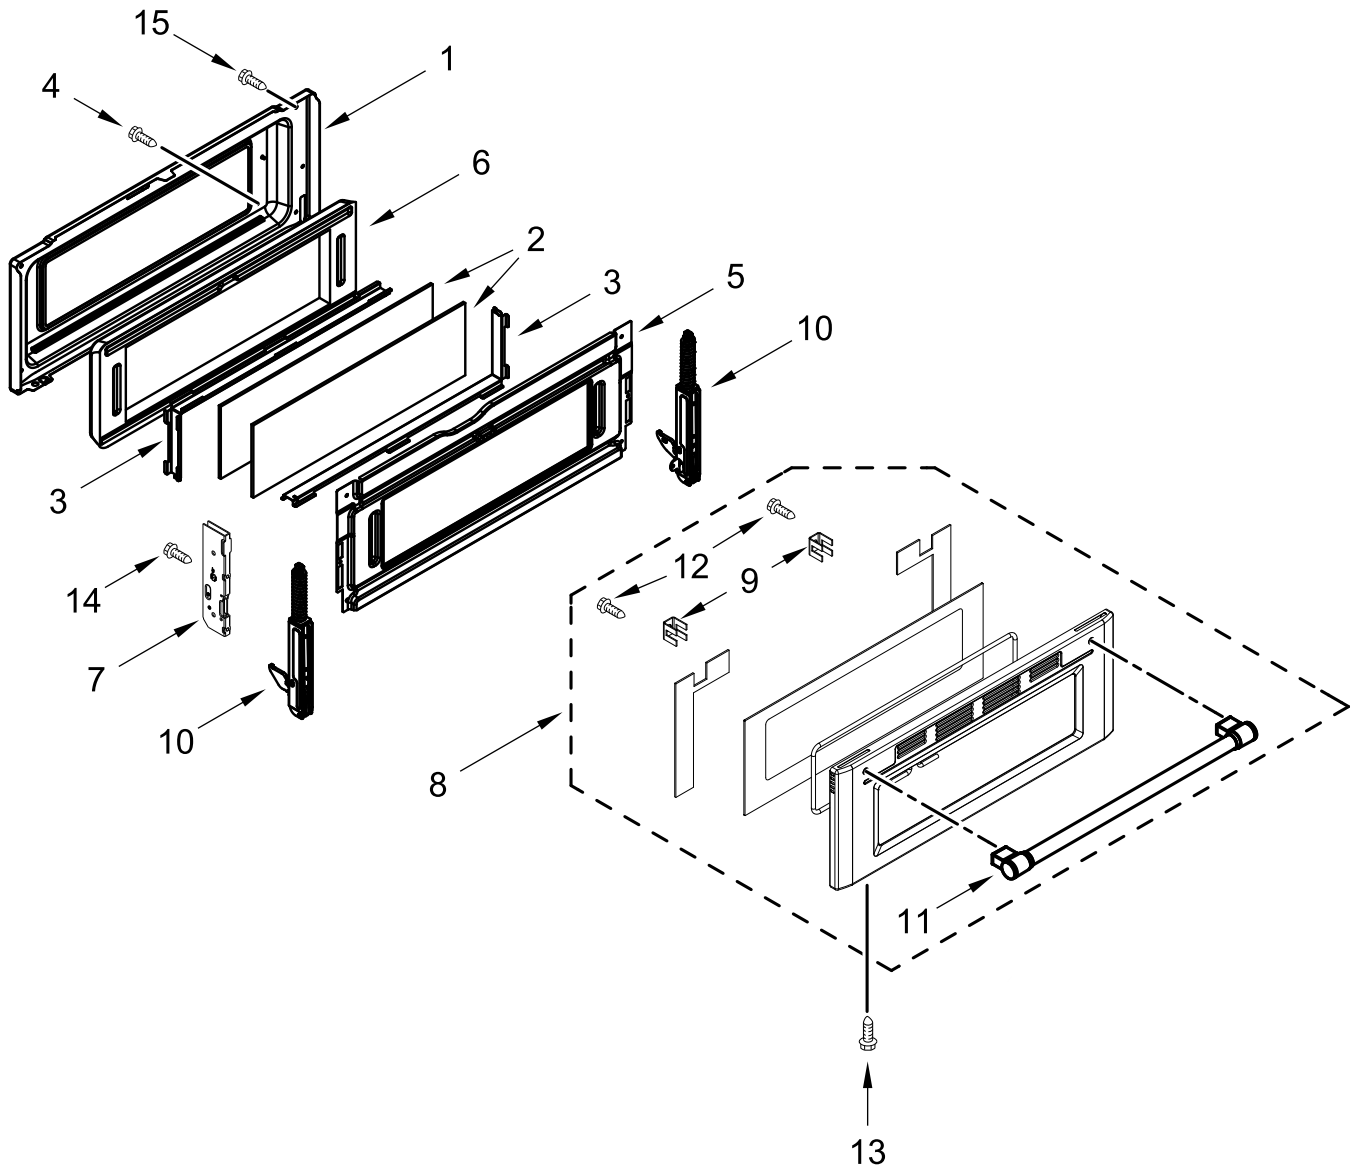

UPPER DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051040	Lining, Door	8		Upper Outer Door Assembly	11		Assembly, Door Handle
2	W11099272	Glass, Inner		W10888652	Stainless		W10904974	Stainless
3	W10272708	Frame, Glass	9	W10575917	Spacer, Vent Trim	12	W10480830	Screw
4	W10292297	Screw	10	W10485733	Hinge, Door (Left)	13	W10284411	Screw with Washer
5	W10485723	Retainer, Insulation		W10485732	Hinge, Door (Right)	14	W10031780	Screw
6	W10321271	Insulation, Door				15	W10317886	Screw
7	W10289077	Receiver, Hinge						


LOWER DOOR PARTS

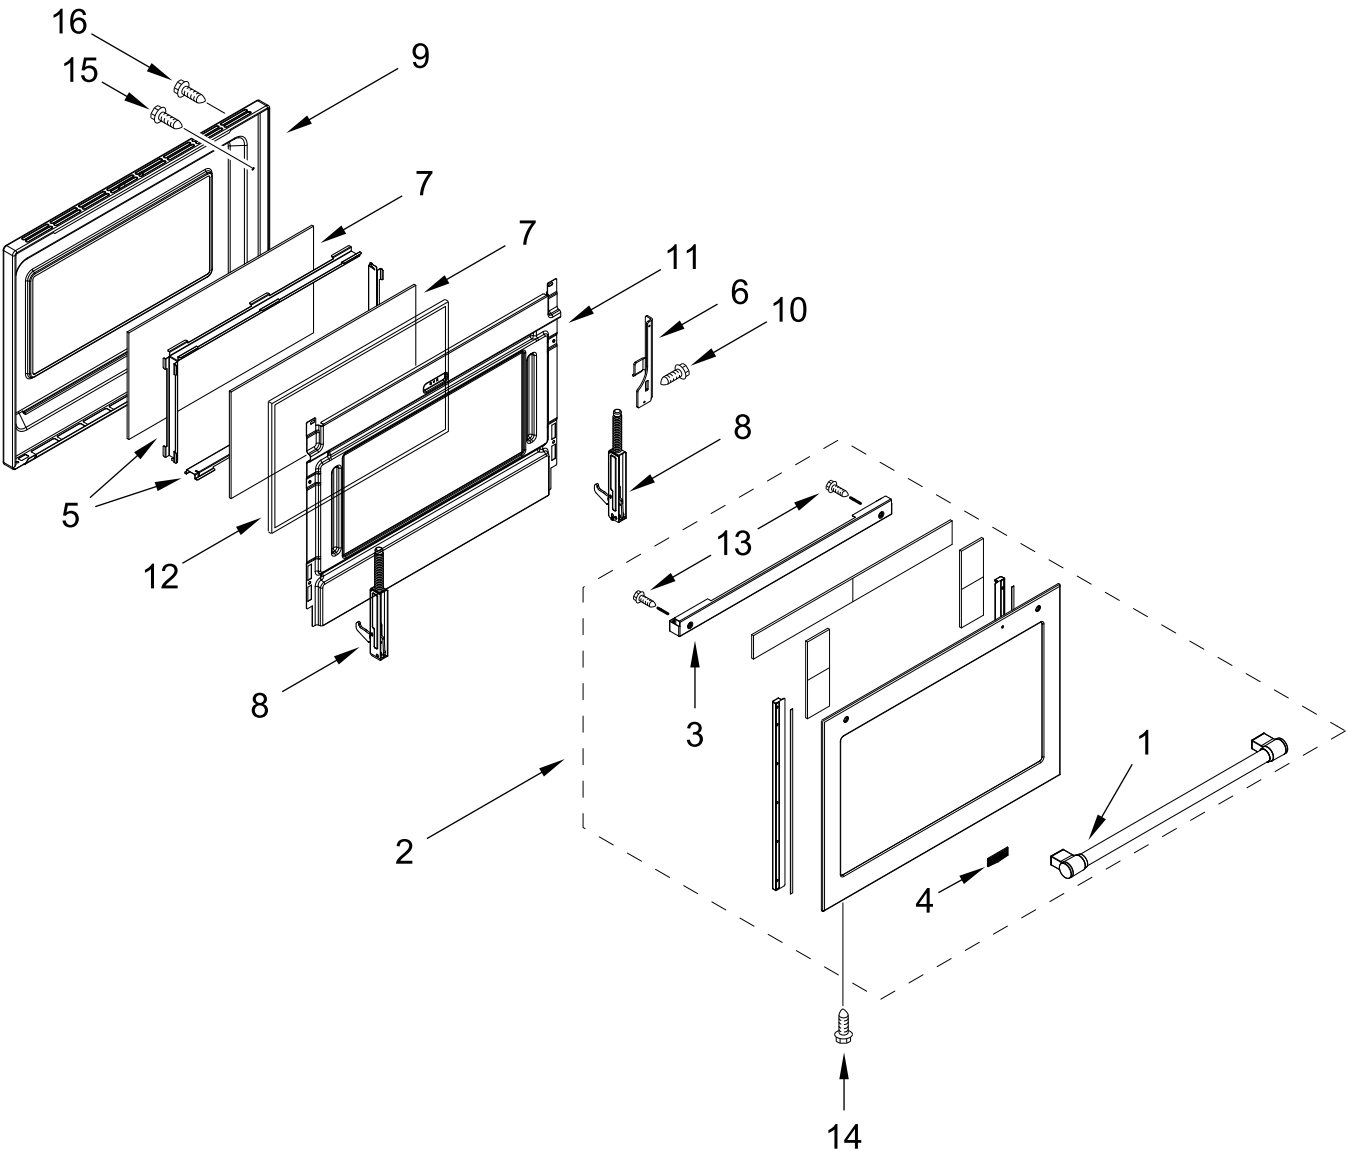

LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle	5	W10272594	Frame, Glass	10	4449040	Screw
	W10904974	Stainless	6	W10272329	Receiver (Left)	11	W10340464	Retainer, Insulation
2		Lower Outer Door Assembly		W10272328	Receiver (Right)	12	W10321285	Insulation, Door
	W11528791	Stainless	7	9757706	Glass, Inner	13	W10480830	Screw
3	W10575689	Bracket, Handle	8	W10335434	Hinge, Door (Left)	14	W10284411	Screw with Washer
4	W10612925	Badge		W10335433	Hinge, Door (Right)	15	W10292297	Screw
			9	W10272698	Lining, Door	16	W10898280	Screw

INTERNAL OVEN PARTS

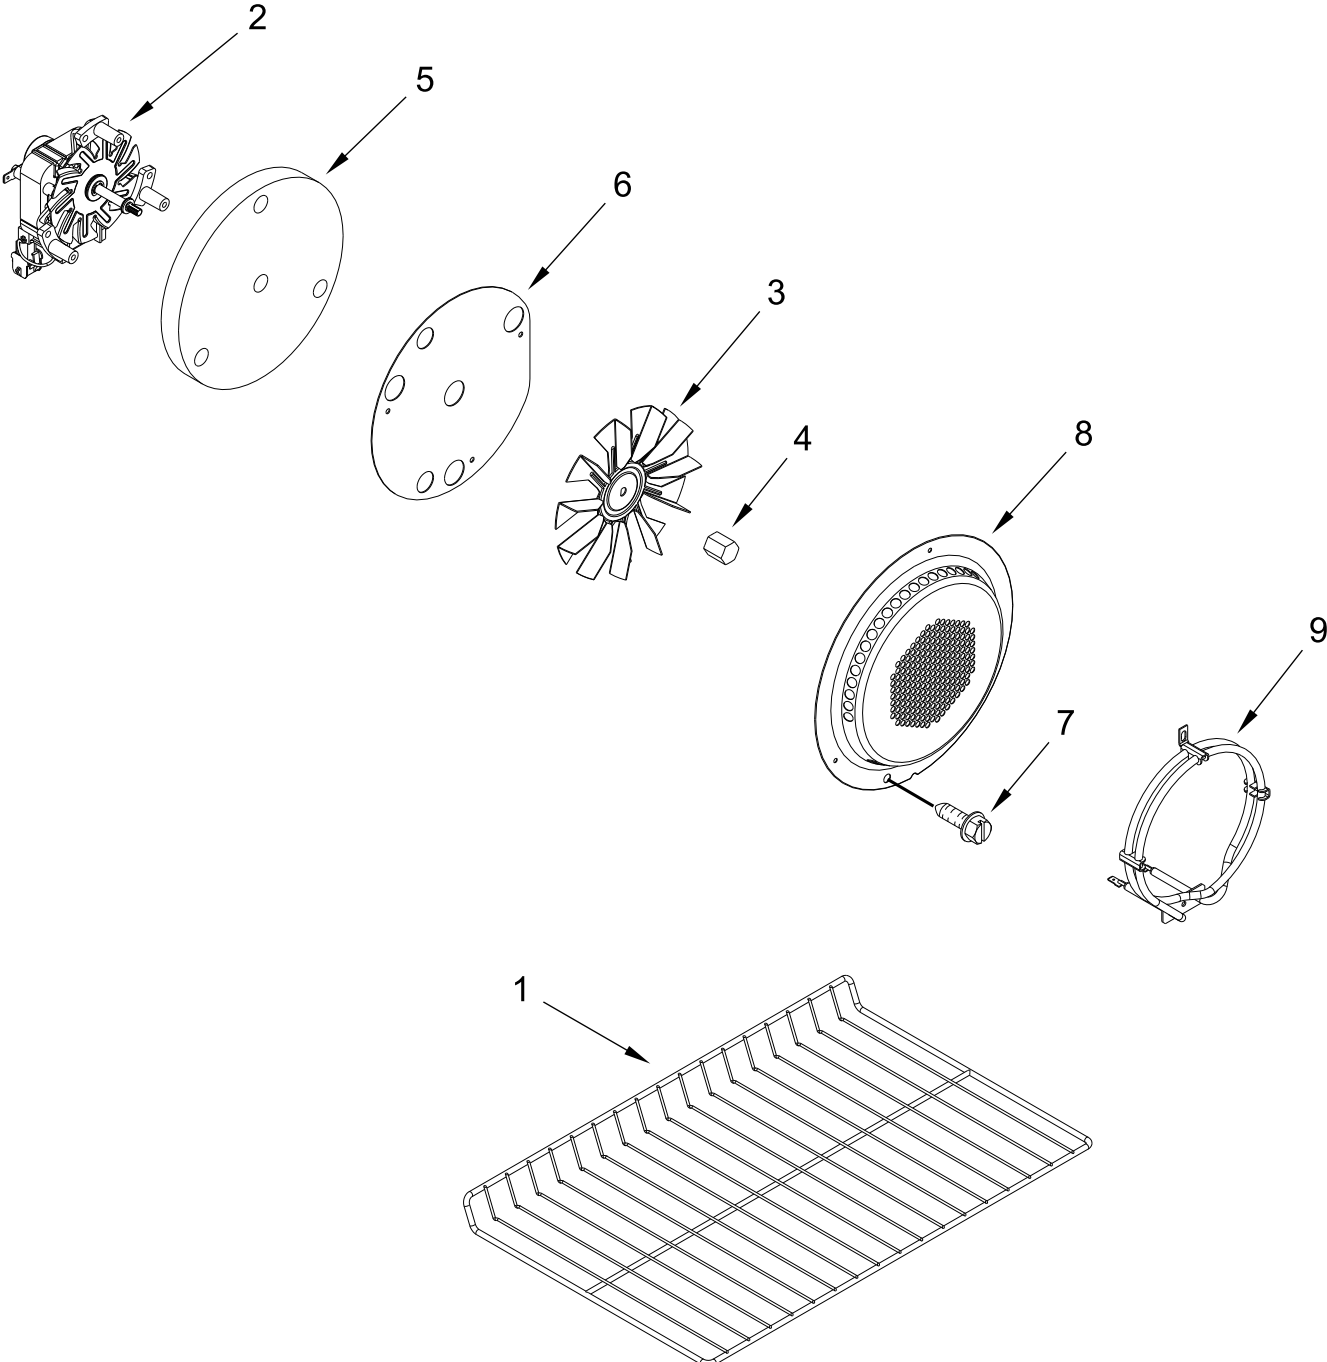

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10179152	Rack, Oven	6	W10339476	Plate, Insulation	8	4448988	Cover, Fan
2	W10631506	Motor, Convection	7	W10720084	Screw	9	W10249980	Element, Convection (120 VAC)
3	W10631503	Blade, Fan						
4	W10631504	Nut, Acorn (LH)						
5	W10274268	Insulation, Convection Motor						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PART
		Trim Kit
W10675028		Stainless