


20" ELECTRIC BUILT-IN COOKTOP

MODELS:

RCS2012RS10 (Stainless)

COOKTOP PARTS

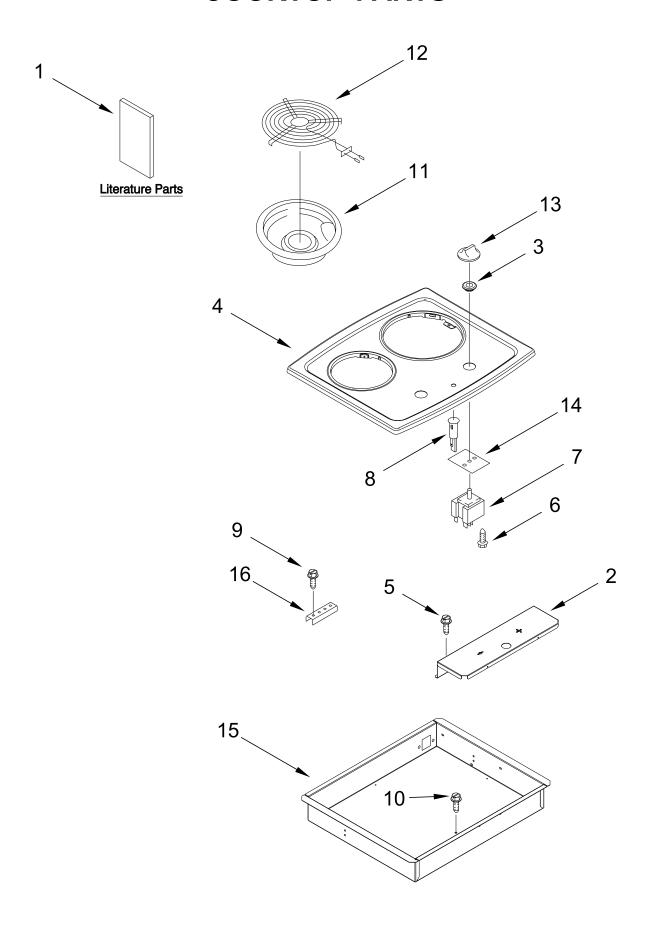

COOKTOP PARTS

Illus. No.	Part No.	<u>Description</u>	Illus. No.	Part No.	<u>Description</u>	Illus. No.	Part No.	Description
1	8286310	Literature Parts Installation, Instructions	8 9 10	4456181 3400093 3196537	Light, Indicator Screw Screw	16	4455917	Bracket, Cooktop Mounting FOLLOWING PARTS
	8304571	Instructions, Undercounter	11	3195208	Bowl, Drip (6") (Left)		W11172415	NOT ILLUSTRATED Harness, Wiring (Main)
2	W11235895 W10414016	Guide, Use and Care Bracket, Switch Mounting	12	3195209 W11364018	Bowl, Drip (8") (Right) Element, Coil Heating (1500W)		7101P426-60	,
3 4 5	8286452 W10140169 3196160	Grommet Cooktop Screw		W11364019	(Left) Element, Coil Heating (2400W)		W11190492 3400015	Harness, Wiring (Includes Conduit) Screw, Grounding
6 7	7101P309-60 W10392436	Screw (Right) 4455805 Switch, Infinite 13 8286043BL Knob, Control 313438 (Use With 6" Element) 14 3183956 Seal, Switch Cover Switch, Infinite 15 W10391085 Box, Burner		Grommet, Harness Clip, Harness				
	4454537		15	W10391085	Box, Burner			

OPTIONAL PARTS (NOT INCLUDED)

No.	Part No.	Description
		ACCESSORIES
	242905	Kit, Canning Unit
	31462	Cleaner, Stainless Steel
	31662	Cleaner, All-Purpose Appliance
	31617	Cleaner, Gas Grate & Drip Pan
	31605	Kit, Cooktop Care