



30" ELECTRIC BUILT-IN COOKTOP


MODELS:

WCE77US0HB01 (Black)

WCE77US0HW01 (White)

WCE77US0HS01 (Stainless)

COOKTOP PARTS

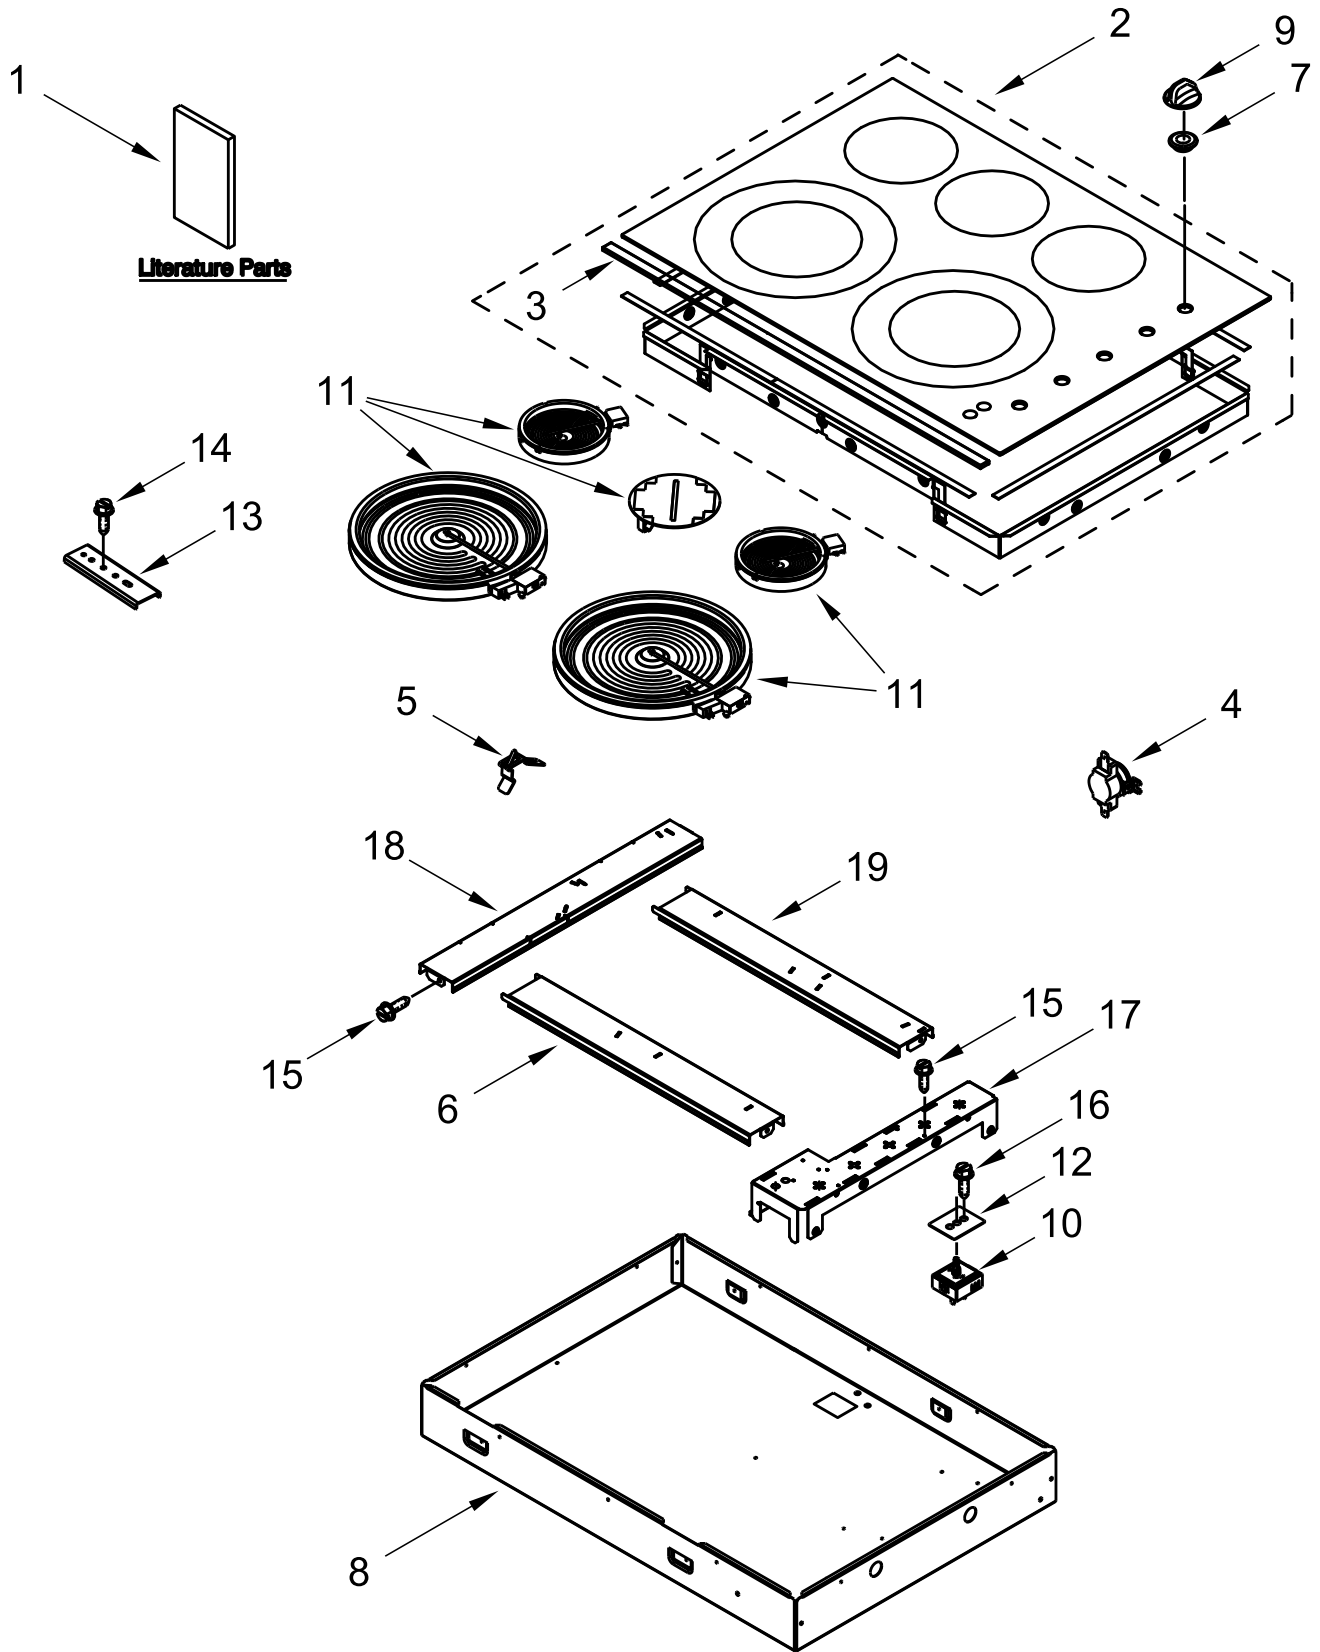

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9		Knob, Control	13	4455917	Bracket, Cooktop Mounting
	W11206696	Instructions, Installation		W11130625	Black	14	3400093	Screw
	W11245478	Instructions, Undercounter Installation		W11130629	White	15	7101P426-60	Screw
	W11255746	Guide, Use & Care	10	W10437092	Switch, Infinite (Left Front & Right Front)	16	7101P309-60	Screw
	W11206667	Diagram, Wiring		W10578768	Switch, Infinite (Left Rear & Right Rear)	17	W11215835	Plate, Switch
2		Cooktop		W10888698	Switch, Warm Zone (Center Rear)	18	W11102042	Rail, Vertical
	W11120977	Black		W10275048	Element (3000/1400W) (Left Front & Right Front)	19	W11106009	Rail, Horizontal Rear
	W11120979	White	11					FOLLOWING PARTS NOT ILLUSTRATED
	W11120978	Stainless					W11111810	Harness, Main
3		Trim, Front Stainless (Not Serviced)					7101P520-60	Screw
4	W10464566	Switch, TOD High Limit					7103P027-60	Nut
5	W10225448	Spring, Element		8273994	Element (1200W) (Left Rear & Right Rear)		3400015	Screw, Grounding
6	W11110714	Rail, Horizontal Front		W10799048	Element, Warm Zone (Center Rear)		3192439	Seal, Limiter
7		Grommet					8286642	Tape, Foam
	W10293874	Black						
	W10372006	Grey						
8		Box, Burner (Not Serviced)	12	3183956	Seal, Switch Cover			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	WA906B	Scraper, Cooktop
W10355051		Cleaner, Cooktop
	31464	Cleaner, Cooktop
	31463	Protectant, Cooktop
	242905	Kit, Canning Unit
	31605	Kit, Cooktop Care