




ELECTRIC RANGE

MODELS:

WEC310S0LS3 (Stainless)


COOKTOP PARTS

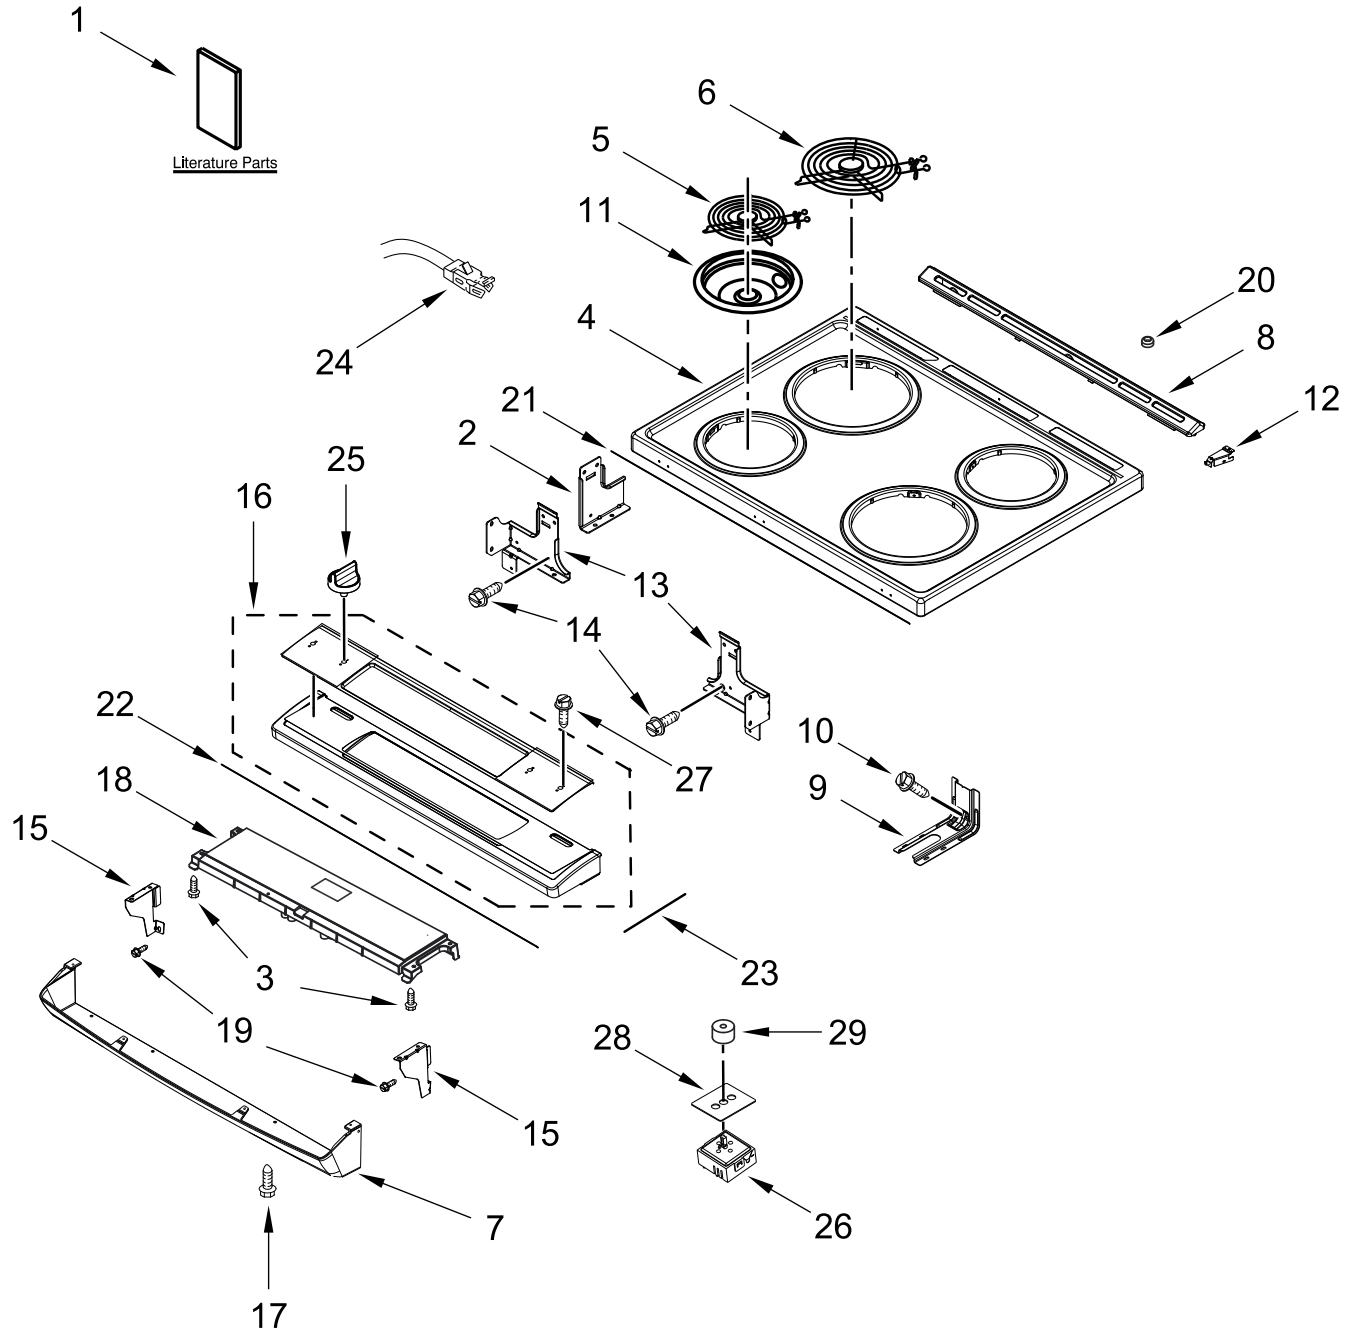

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12	W10162253	Brace, Corner (Left)	25		Knob
	W11509605	Owners Manual		W10162252	Brace, Corner (Right)		W10850027	Stainless
	W11508915	Quick Start Guide	13	W10814303	Support, Cooktop (Left)	26	W10843843	Switch, Infinite (Left Front and Right Rear)
	W11508780	Tech Sheet		W10814304	Support, Cooktop (Right)		W10600015	Switch, Infinite (Left Rear and Right Front)
2	W10814305	Bracket, Console (Center)	14	3196169	Screw	27	W10674068	Screw
3	9780274	Screw	15	W10547960	Bracket, Console (Left)	28	7201P077-60	Gasket, Infinite Switch
4		Cooktop		W10547961	Bracket, Console (Right)	29	W10702912	Gasket, Switch Stem
	W10536327	Black	16		Assembly, Console			FOLLOWING PARTS NOT ILLUSTRATED
5	W11364018	Element, Coil Heating (1500W) (Left Front and Right Rear)		W11512193	Stainless		W11453734	Harness, Main
6	W11364019	Element, Coil Heating (2400W) (Left Rear and Right Front)	17	W10516115	Screw		W11190435	Harness, Cooktop
7		Panel, Front	18	W11546962	Electronic, Control (LCX)		W10800451	Harness, Console
	W10816943	Black	19	3196178	Screw		313438	Clip, Harness
8		Vent, Trim Top	20	W10854253	Bumper		7111P017-60	Clamp, Wire
	W10636528	Black	21	W10612719	Gasket, Console and Cooktop		W10664316	Clip, Harness (Cooktop)
9	W11379947	Bracket, Anti-Tip	22	W10689101	Gasket, Console			
10	7101P485-60	Screw, Anti-Tip Kit	23	W10689102	Gasket, Console Short			
11	W10196405	Bowl, Drip (8 in)	24	814399	Receptacle, Element			
	W10196406	Bowl, Drip (6 in)						


CHASSIS PARTS

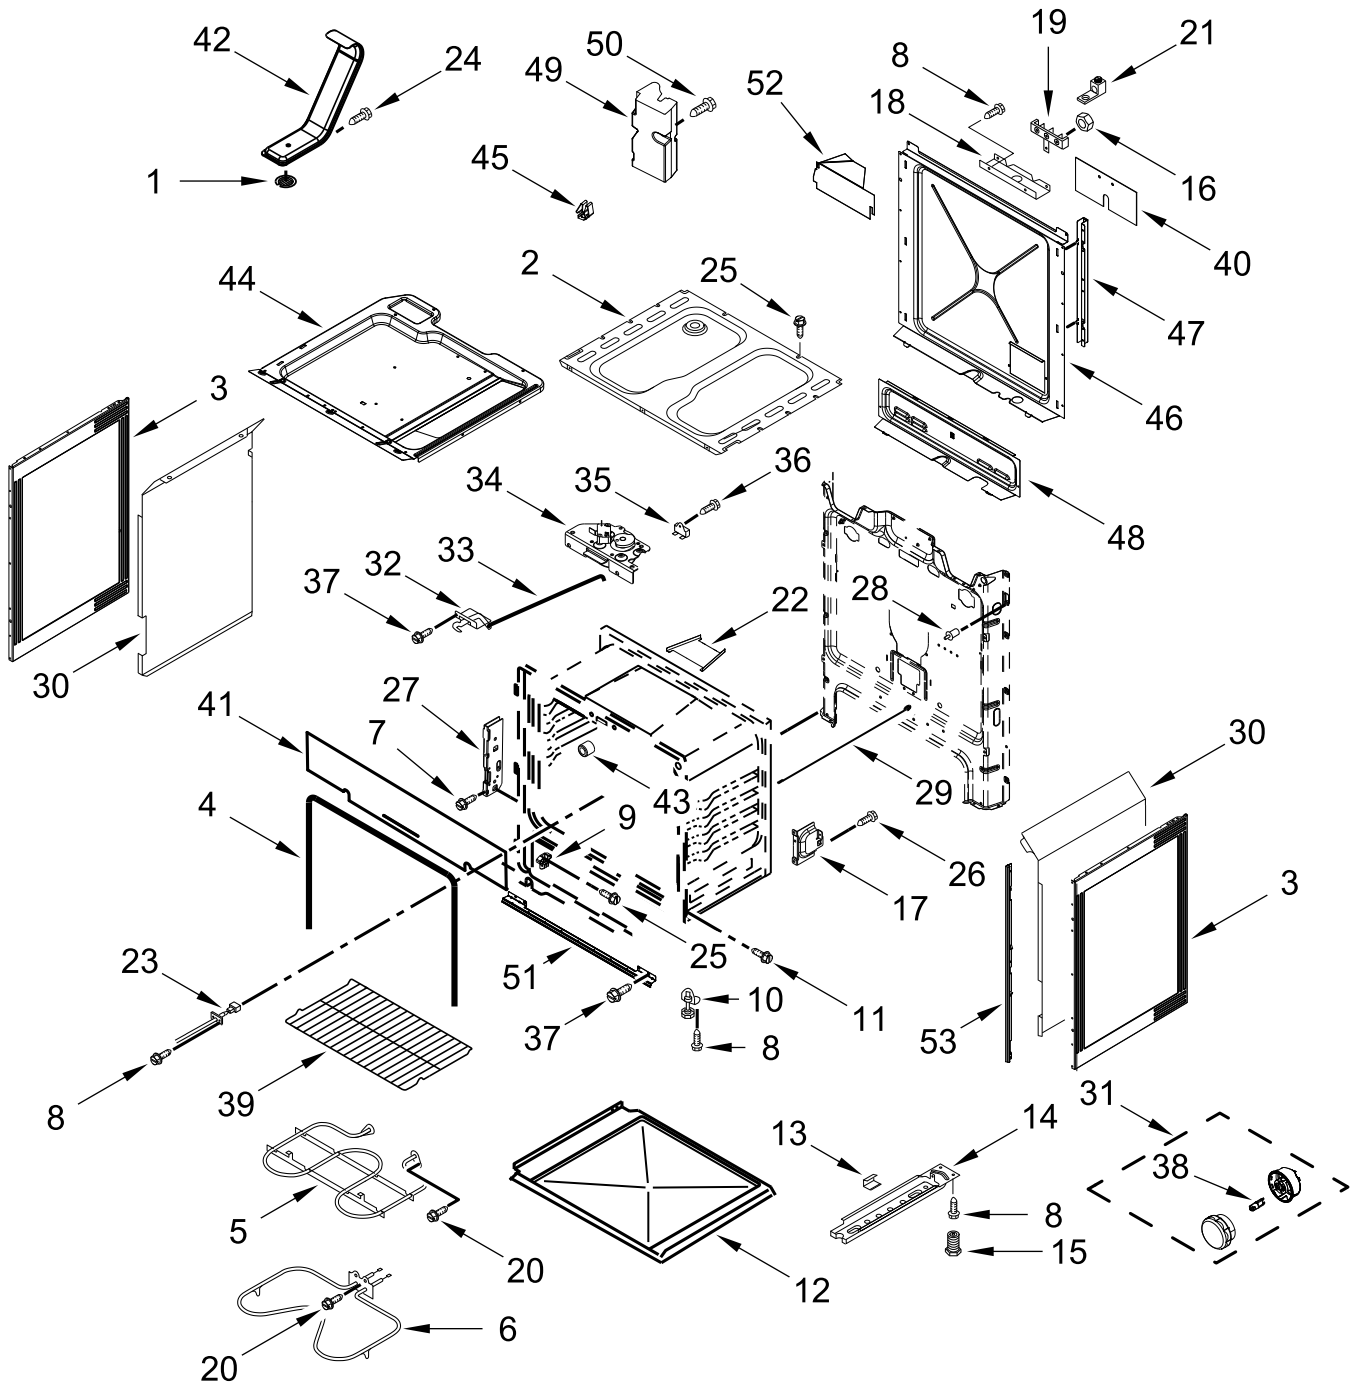

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	22	W10853400	Baffle, Upper Chassis	41	W10848443	Chassis, Upper Insulation
2	W10536273	Burner Box	23	W10586204	Sensor	42	W11122085	Assembly, Flue
3		Panel, Side	24	W10362924	Screw	43	9758701	Spacer, Door
	W10162245	Black	25	3400080	Screw	44	W10814301	Chassis, Support Upper
4	W11491751	Seal, Door	26	3196169	Screw	45	W10866583	Clip-Panel, Ratcheting
5	W10583047	Element, Broil	27	W10289077	Receiver, Hinge	46	W11379354	Cover, Back
6	W10535148	Bake, Element	28	W11511828	Switch, Door	47	W10162241	Channel, Rear
7	W10031780	Screw	29	9757239	Rod, Door Switch	48	W10162248	Cover, Wire
8	3196178	Screw	30	W11379353	Retainer, Insulation (Left)	49	W10914589	Counterweight
9	W10674705	Glide, Drawer Front		W11379943	Retainer, Insulation (Right)	50	W11034869	Screw
10	W10341186	Front Foot Assembly	31	W11634772	Light Assembly	51	W11464547	Bracket, Front Frame
11	W10067840	Screw	32	9761013	Front Door Latch Assembly	52	W10818358	Shield, Wire
12	W10312471	Tray, Insulation	33	W10078370	Rod, Push Latch	53	W11510561	Barrier Rail, Rubber (Front Left)
13	W10137382	Clip, Panel	34	W10107820	Rear Door Latch Assembly		W11510562	Barrier Rail, Rubber (Front Right)
14	W10390007	Base Rail Assembly (Right)	35	3196548	Fuse, Thermal			FOLLOWING PARTS NOT ILLUSTRATED
	W10390008	Base Rail Assembly (Left)	36	3196172	Screw	W10830993		Insulation, Wrap
15	W10058460	Foot, Leveling	37	3196560	Screw	W10815385		Insulation, Back
16	3400029	Nut	38	W10571723	Bulb, Halogen 40 Watts			
17	W10355173	Bracket, Oven Support	39	W11173792	Rack, Oven			
18	3186034	Bracket, Service	40	W10655441	Shield, Power Cord			
19	W10245259	Block, Terminal						
20	3196154	Screw						
21	W10281322	Kit, Bare Wire Adapter Block						

DOOR PARTS

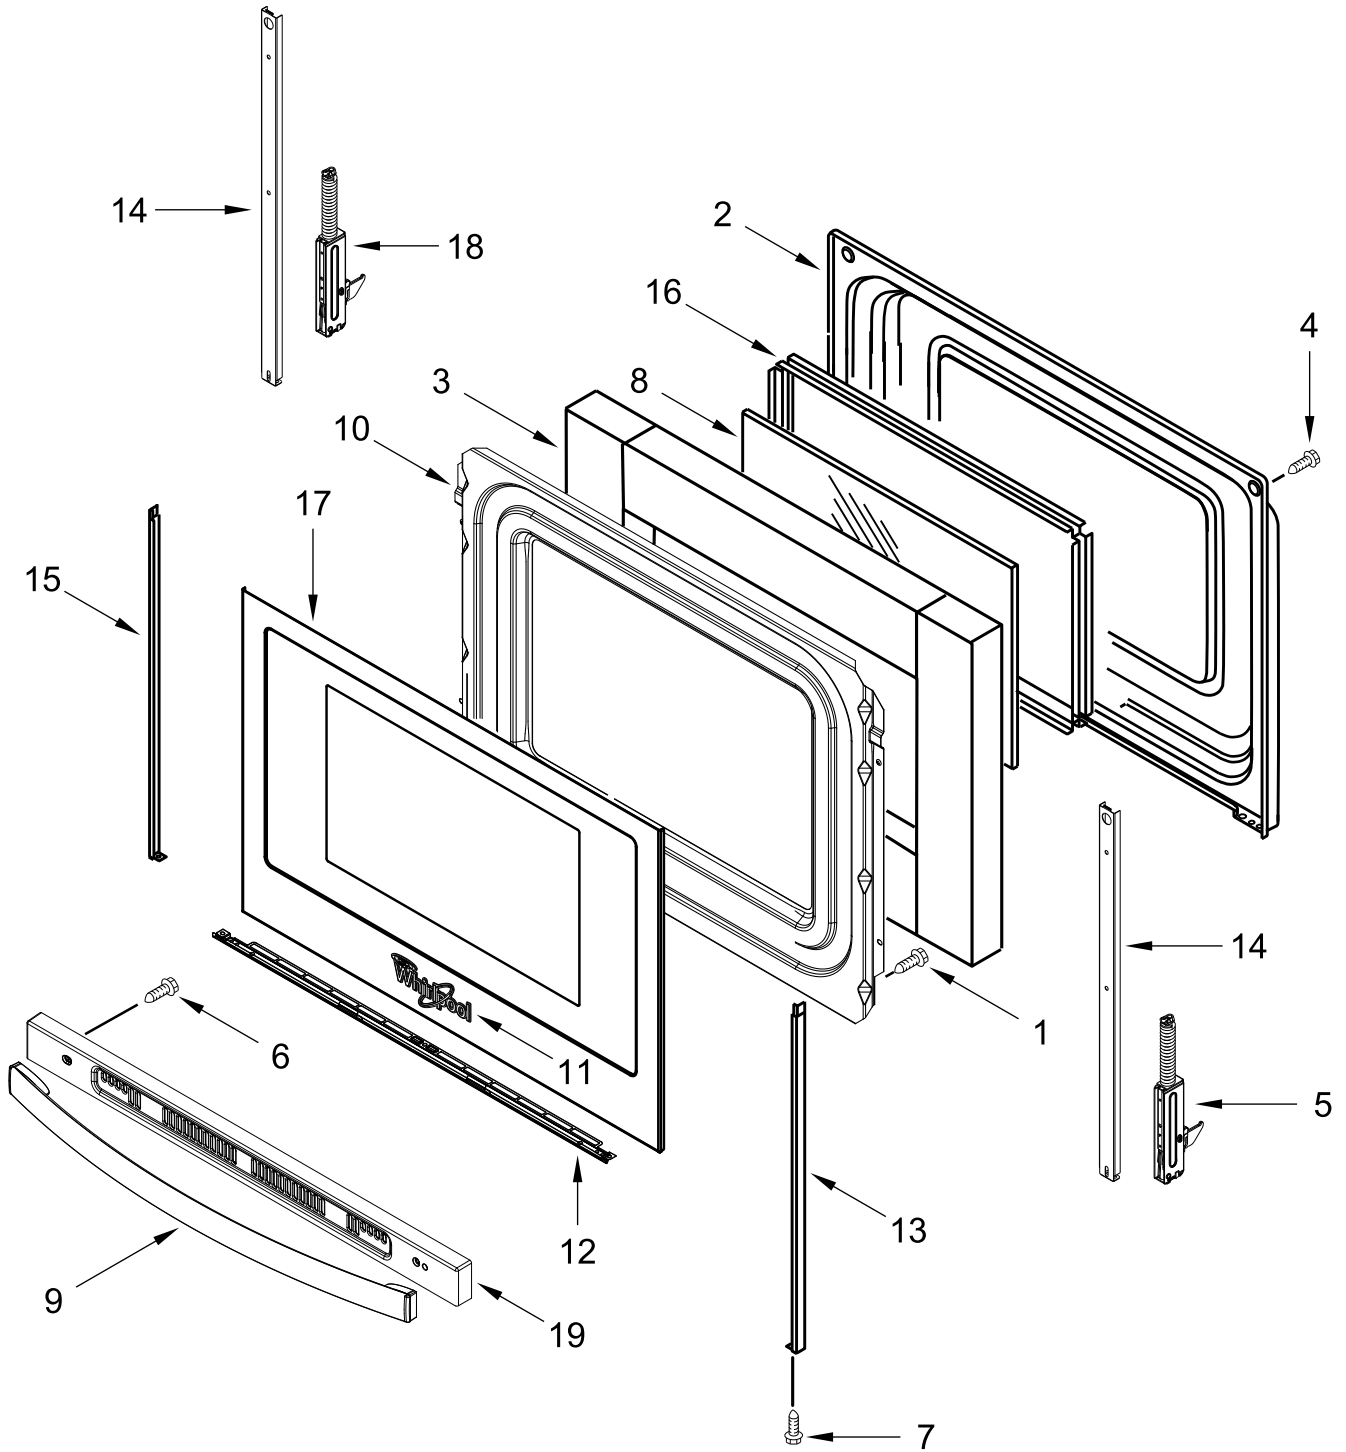


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw
2	9761344	Liner, Door
3	W10278991	Insulation, Door Strip
4	W10200660	Screw
5	W10388635	Hinge, Door (Active)
6	W10480830	Screw
7	W10327235	Screw
8	9758162	Glass, Inner
9		Handle (Includes Standoff)
	W11039070	Stainless

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W11380222	Retainer, Insulation
11	W10884775	Badge
12		Trim, Lower Door
	W11444043	Black
13		Trim, Door
	W10746435	Black (Right)
14	W11379944	Strap, Door
15		Trim, Door
	W10746436	Black (Left)
16	W10316950	Frame, Glass

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
17		Glass, Outer Door
	W11687920	Black
18	W10440013	Hinge, Door (Active)
19		Trim, Oven Door Vent
	W10310922	Black

DRAWER PARTS

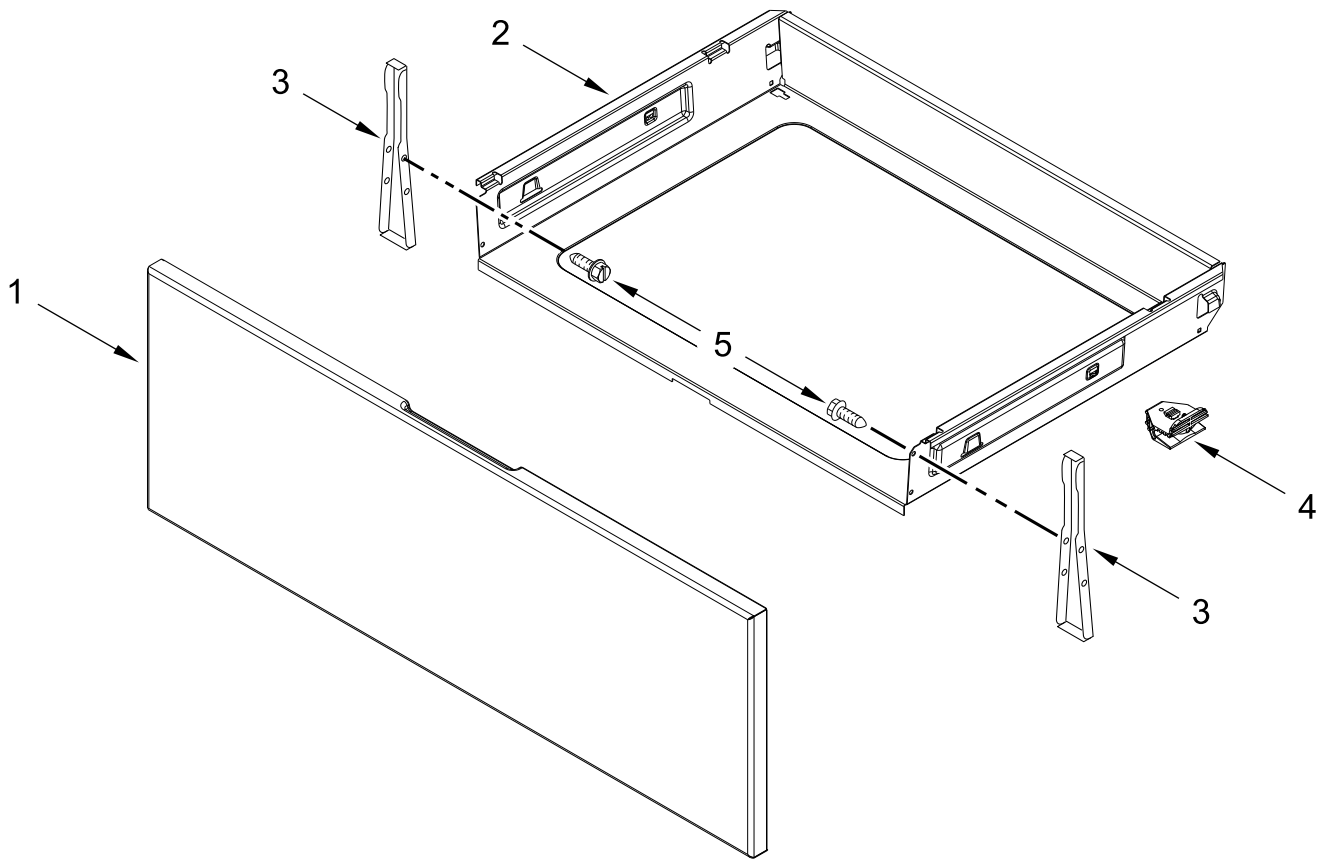

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11190207	Panel, Front Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
2	W10688022	Drawer, Storage
3	W10462909	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting