




GAS DRYER

MODELS:

WGD5605MW1 (White)


TOP AND CONSOLE PARTS

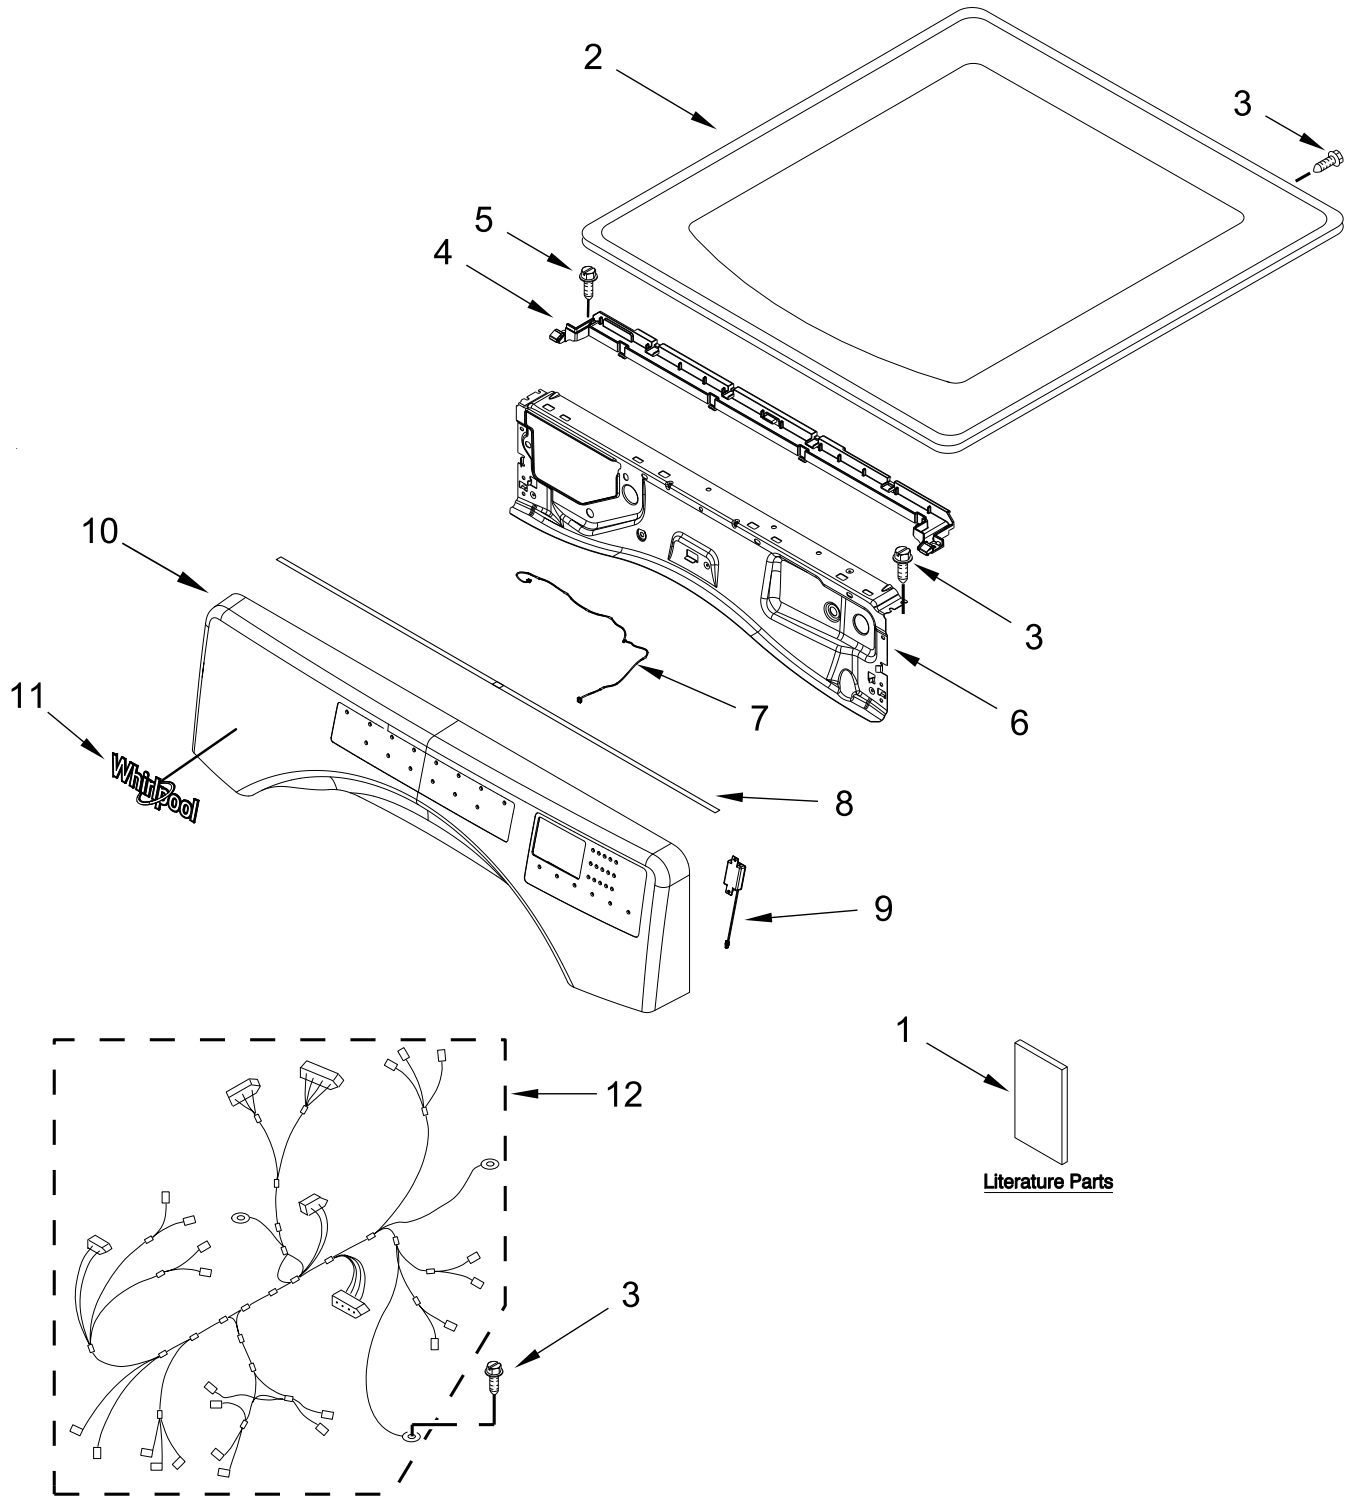

TOP AND CONSOLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	693995	Screw	9	W10568405	Assembly, Speaker
	W11361424	Owners Manual	4	W11255768	Channel, Water	10		Console Assembly
	W11457204	Wiring Diagram	5	12990702	Screw		W11531673	White
	W11550663	Quick Start Guide	6	W11480682	Bracket, Console	11	W10884773	Badge
	W11459719	Tech Sheet	7	W11160620	Harness, User Interface	12	W11157863	Harness, Main Wiring
2		Top	8	W11231800	Seal			
	W10208383	White						


CABINET PARTS

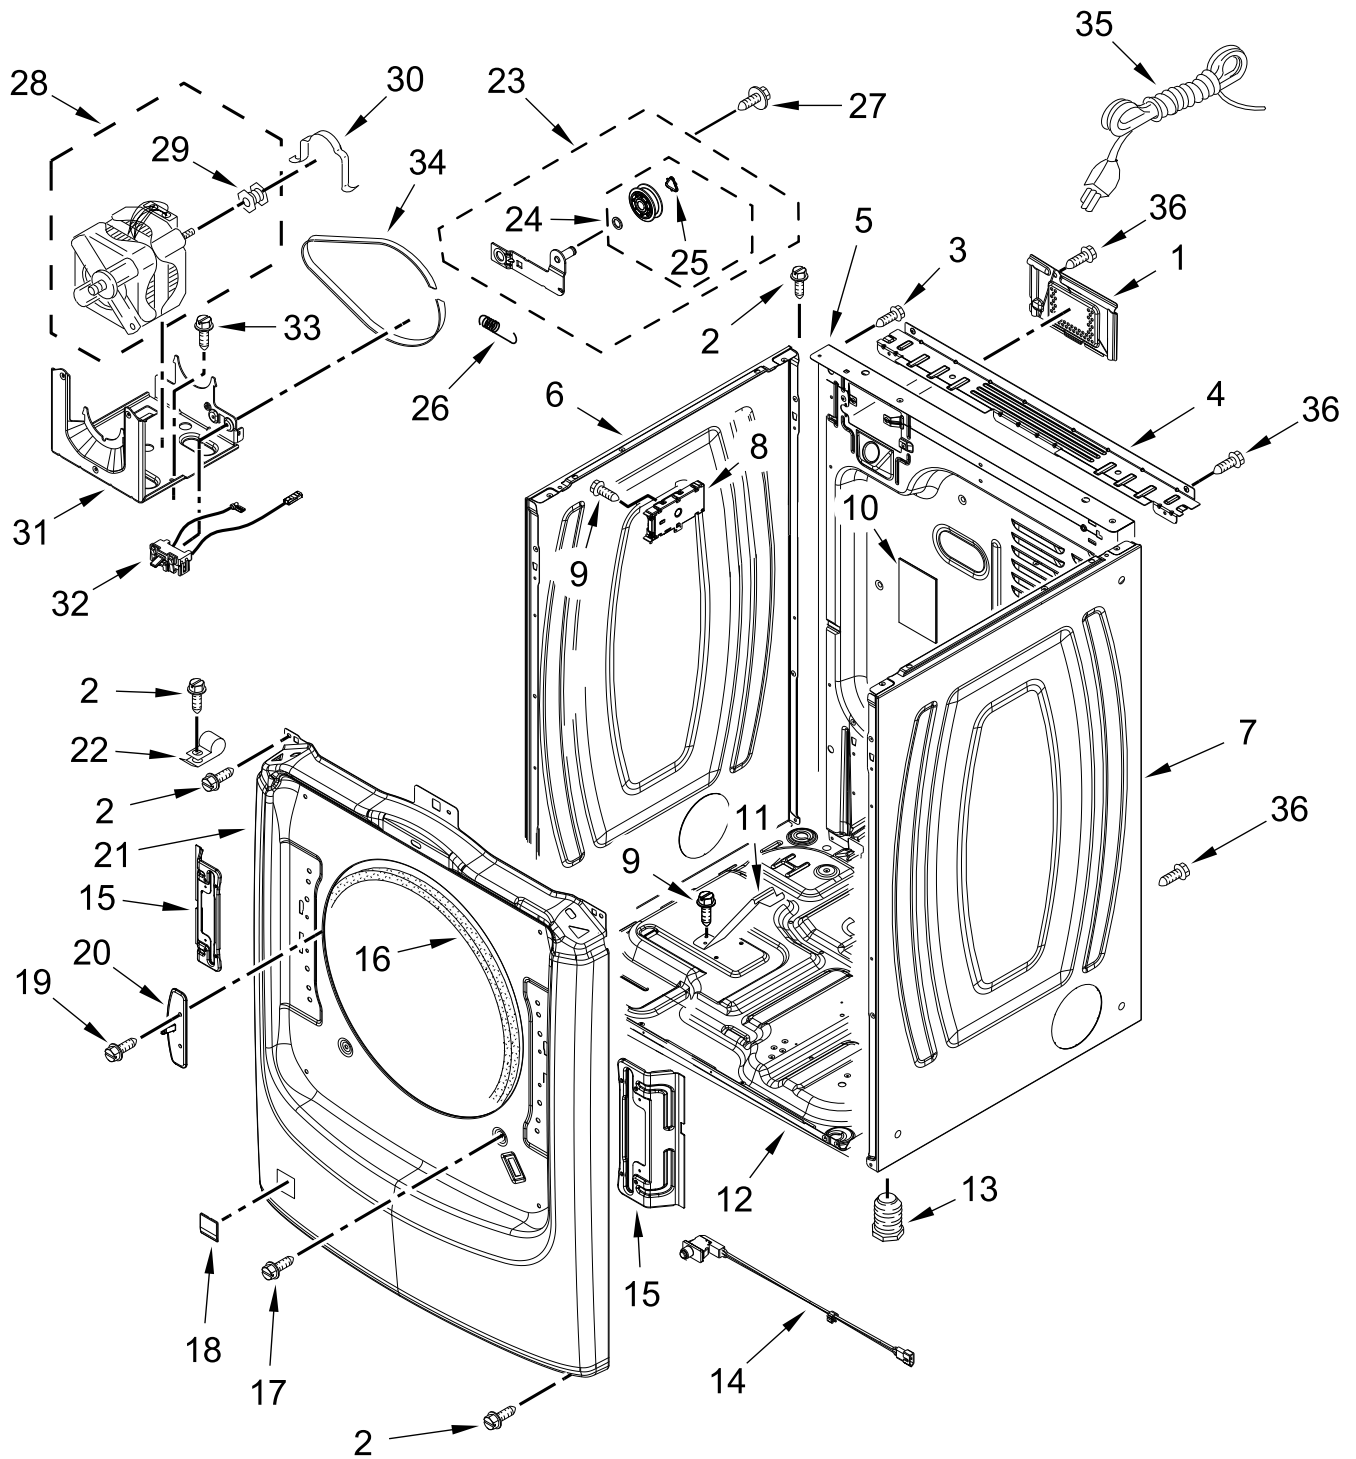

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8317339	Cover, Terminal Block	14	W11307535	Assembly, Door Switch	27	3389420	Screw
2	3390647	Screw	15	W11084215	Bracket, Hinge	28	W11322192	Assembly, Motor
3	W10773242	Screw	16	3387242	Seal, Front Panel	29	8066184	Pulley, Motor
4	W10208382	Bracket, Rear	17	3357011	Screw	30	W10121316	Clamp, Motor Mount
5	W10487431	Panel, Rear	18		Plug, Front Panel	31	W11404905	Bracket, Motor Mounting
6		Panel, Side (Left)		8564457	White	32	W10774832	Switch, Broken Belt
	W11177568	White	19	W10288126	Screw	33	343641	Screw
7		Panel, Side (Right)	20	W11126752	Strike, Door	34	W11575710	Belt, Drive
	W11177569	White	21		Panel, Front	35	W11308561	Cord, Power
8	W11585493	Appliance Control Unit (ACU)		W11413344	White	36	489463	Screw
9	693995	Screw	22	3978776	Bracket, Gas Pipe			DRYER EXHAUST KIT NOT INCLUDED
10	W10504381	Pad, Foam	23	W10547287	Assembly, Idler	W10323246		Kit, 4-Way Vent
11	8529757	Bracket, Burner	24	W10468057	Assembly, Pulley			
12	8565046	Base, Cabinet	25	W10512946	Washer, Tri Ring			
13	3392100	Foot, Dryer	26	W10446781	Spring, Idler			


BULKHEAD PARTS

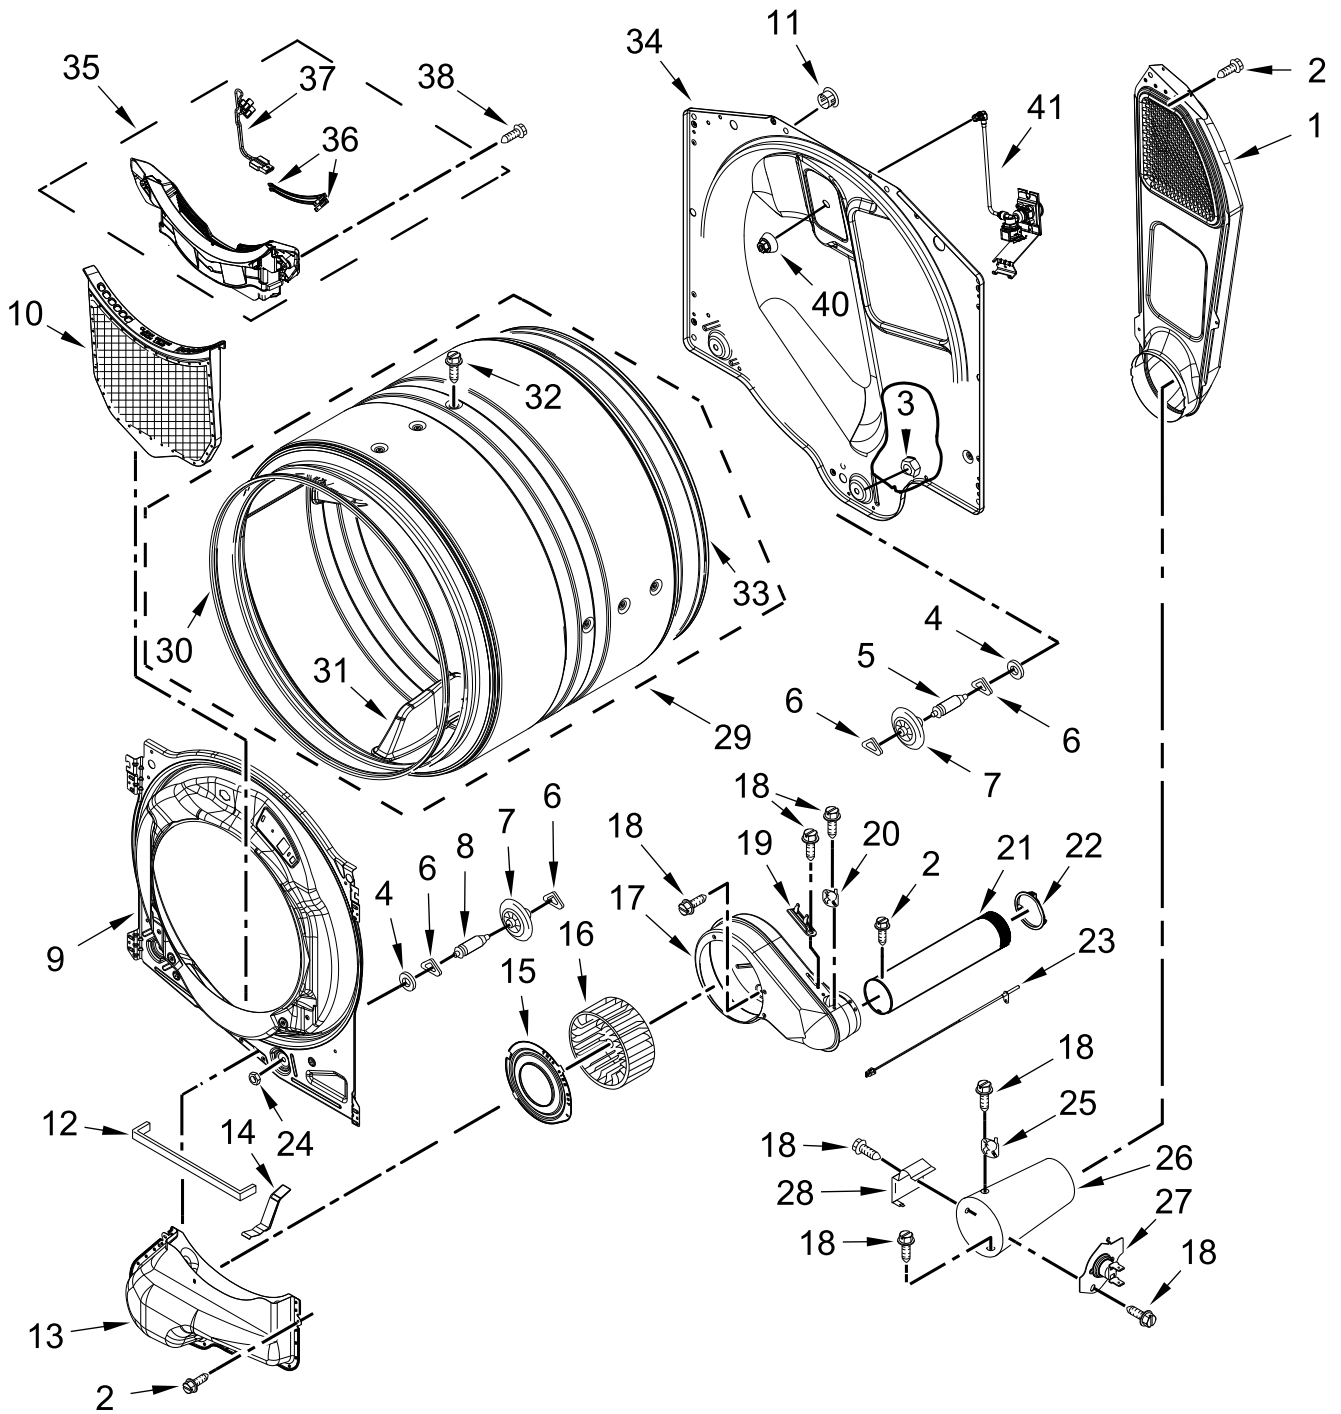

BULKHEAD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10293765	Assembly, Air Duct	13	W10211896	Assembly, Lint Duct	27	8573713	Cut-Off, Thermal
2	3390647	Screw	14	W10414388	Clip, Lint Duct	28	338906	Sensor, Radiant
3	W10001120	Nut, Hex (Left Hand Thread)	15	W11655534	Assembly, Collar (Includes Seal)	29	W10508188	Assembly, Drum (Complete)
4	3387459	Washer	16	697772	Wheel, Blower	30	W10521122	Seal, Drum Front
5	W10359271	Shaft, Drum Roller - Right Hand Thread	17	W10211911	Housing, Blower	31	W10416098	Baffle, Drum
6	W10512946	Washer, Tri Ring	18	693995	Screw	32	W10219342	Screw
7	W10314171	Roller, Support	19	W10693363	Fuse, Thermal (91C)	33	W10521118	Seal, Drum
8	W10359272	Shaft, Drum Roller - Left Hand Thread	20	8577274	Thermistor	34	W11162462	Bulkhead, Rear
9	W10673493	Bulkhead, Front	21	W10342188	Exhaust Pipe	35	W10672683	Assembly, Outlet Grill and Housing
10	W10516085	Lint Screen	22	W10344699	Collar, Duct	36	3387223	Sensor, Electrode
11	8529007	Plug, Rear Bulkhead	23	W10623852	Thermistor, Gas Inlet	37	W10298258	Harness, Sensor
12	W10211950	Seal, Housing Outlet	24	3934666	Nut, Hex	38	3387230	Screw

DOOR PARTS

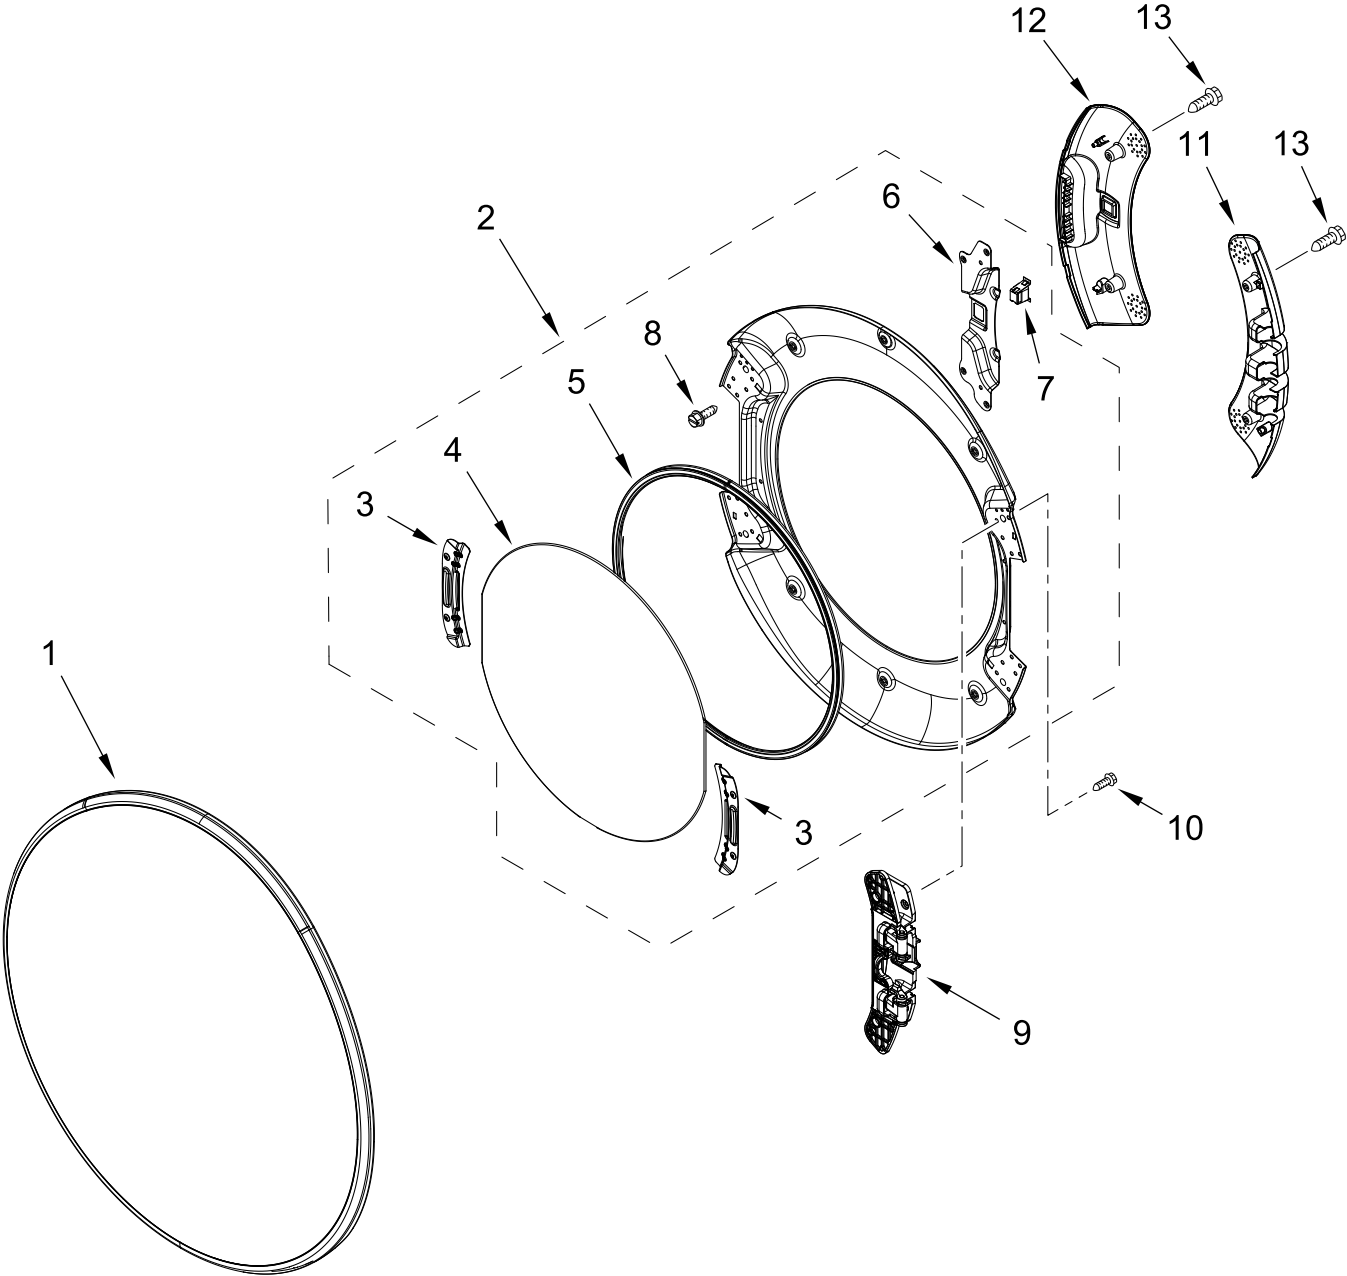


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Outer Door	6	W11050690	Bracket, Door Catch	11	W11607789	Cover, Hinge
	W11320106	Black	7	W10208401	Assembly, Spring Catch	12	W11607784	Cover, Handle
2	W11606588	Assembly, Inner Door	8	W10288126	Screw	13	9742177	Screw
3	W11100789	Bracket, Glass	9	W11114011	Hinge Assembly			
4	W10891207	Glass, Door	10	8540479	Screw, Grounding			
5	W11183899	Seal, Glass						

BURNER ASSEMBLY PARTS

USE WITH TYPE 1 - NATURAL,
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

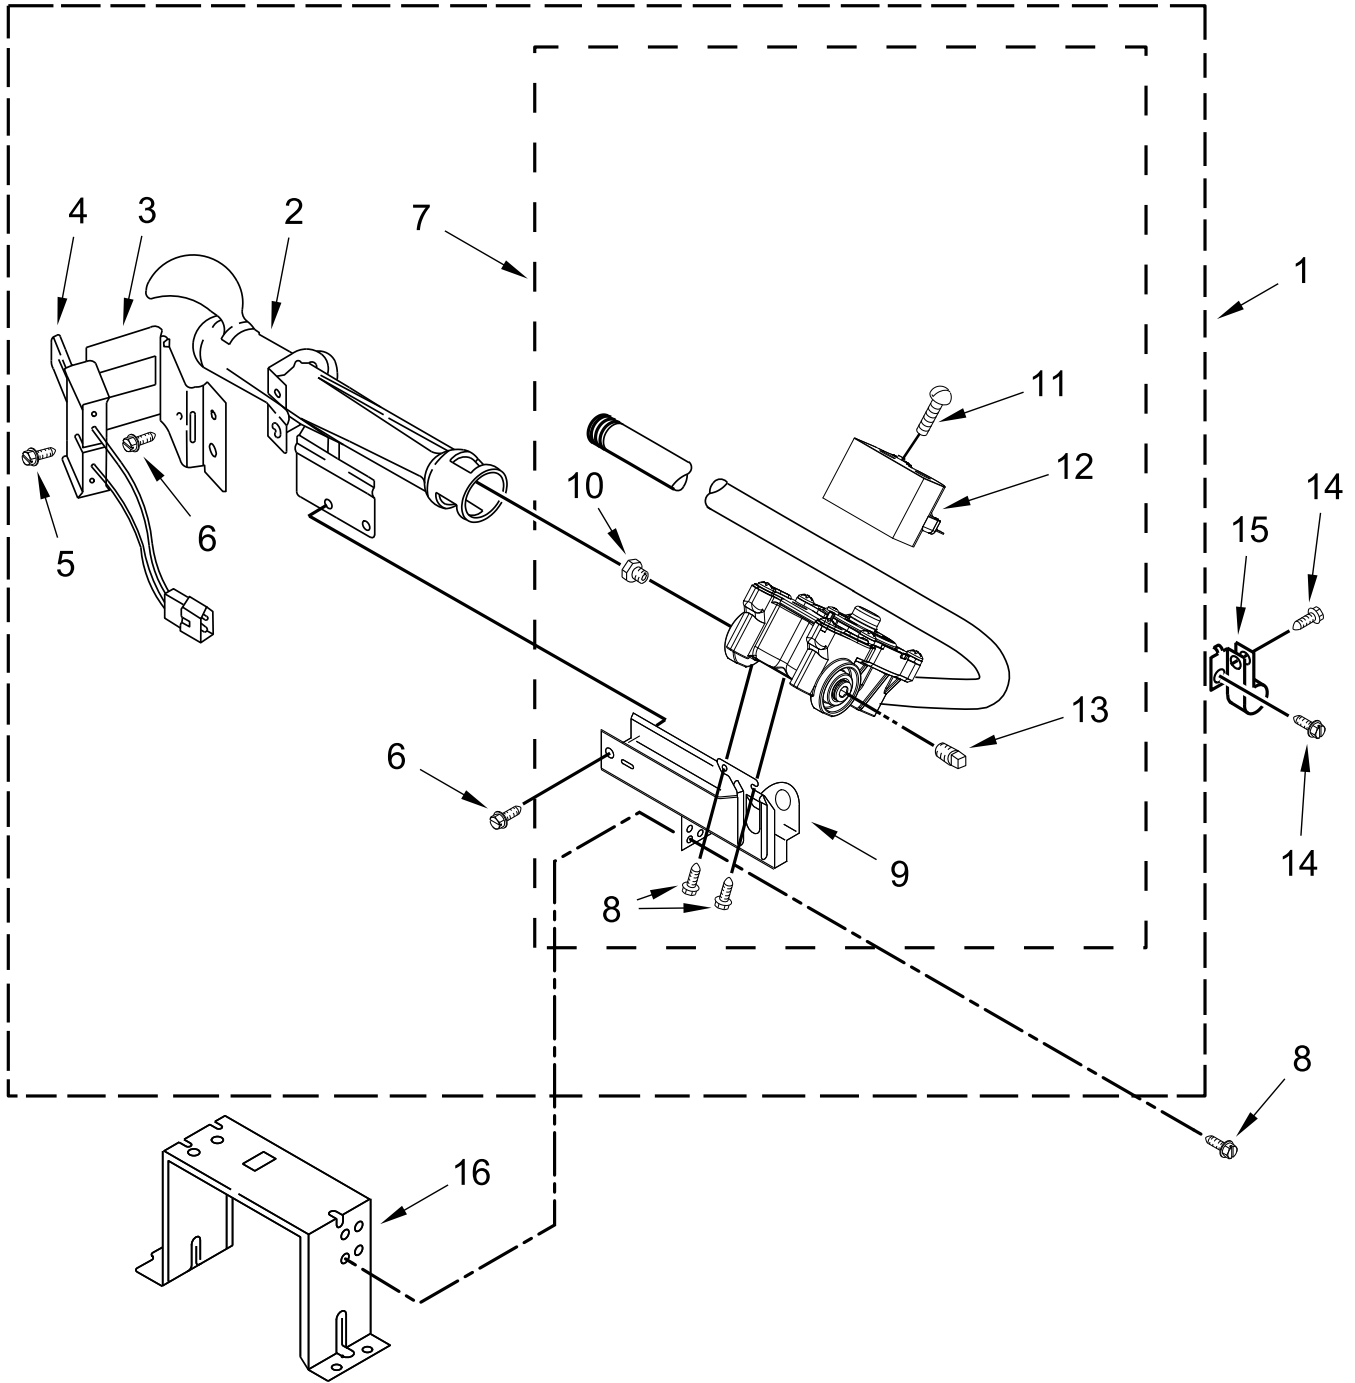

BURNER ASSEMBLY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11564941	Burner Assembly 60 Hz.	8	3387057	Screw	15	3387561	Clamp, Pipe
2	688617	Tube, Burner	9	3389871	Base, Burner	16	3389889	Bracket, Support
3	694298	Bracket, Ignitor	10		Orifice, Burner			Following Parts Not Illustrated
4	686590	Ignitor		15418	Type 1 (Natural)			
5	W10366705	Screw	11	326049536	Screw		W11581317	Kit, LP Gas Dryer Conversion
6	343641	Screw	12	W10328463	Coil (60 Hz)			
7	W11564944	Valve, Gas 60 Hz. (Complete)	13	W10295523	Pipe Plug			
			14	3390647	Screw			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	W10446202	Chrome Shadow

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	80047	Kit, Dryer Repair
	346764	Kit, Hold Down
	W10315283	Kit, Door Reversing
	8522199	Kit, Dryer Vent Testing
	W10869845	Kit, Stack
	W10886894	Dry Rack
	W10782875	Inlet Hose, 5 ft (Cold Water)
	W10044609	Hose Kit for Steam Dryer
	W10623830	Kit, Dryer - Premium Steam Hose (Includes (1) 2' hose and (1) 5' hose, (1) Y adapter and (5) rubber washers.)
	W10676169	BAG ASSEMBLY, INCLUDES THE FOLLOWING:
	W10439655	Hose, Inlet (2')
	3976300	Washer, Inlet Hose
	W10336486	Connector, Hose -"Y"
	W10242307	Washer, Hose