




ELECTRIC COMBO WALL OVEN

MODELS:

WOEC7030PZ01 (Stainless)

WOEC7030PV01 (Black Stainless)


CONTROL PANEL PARTS

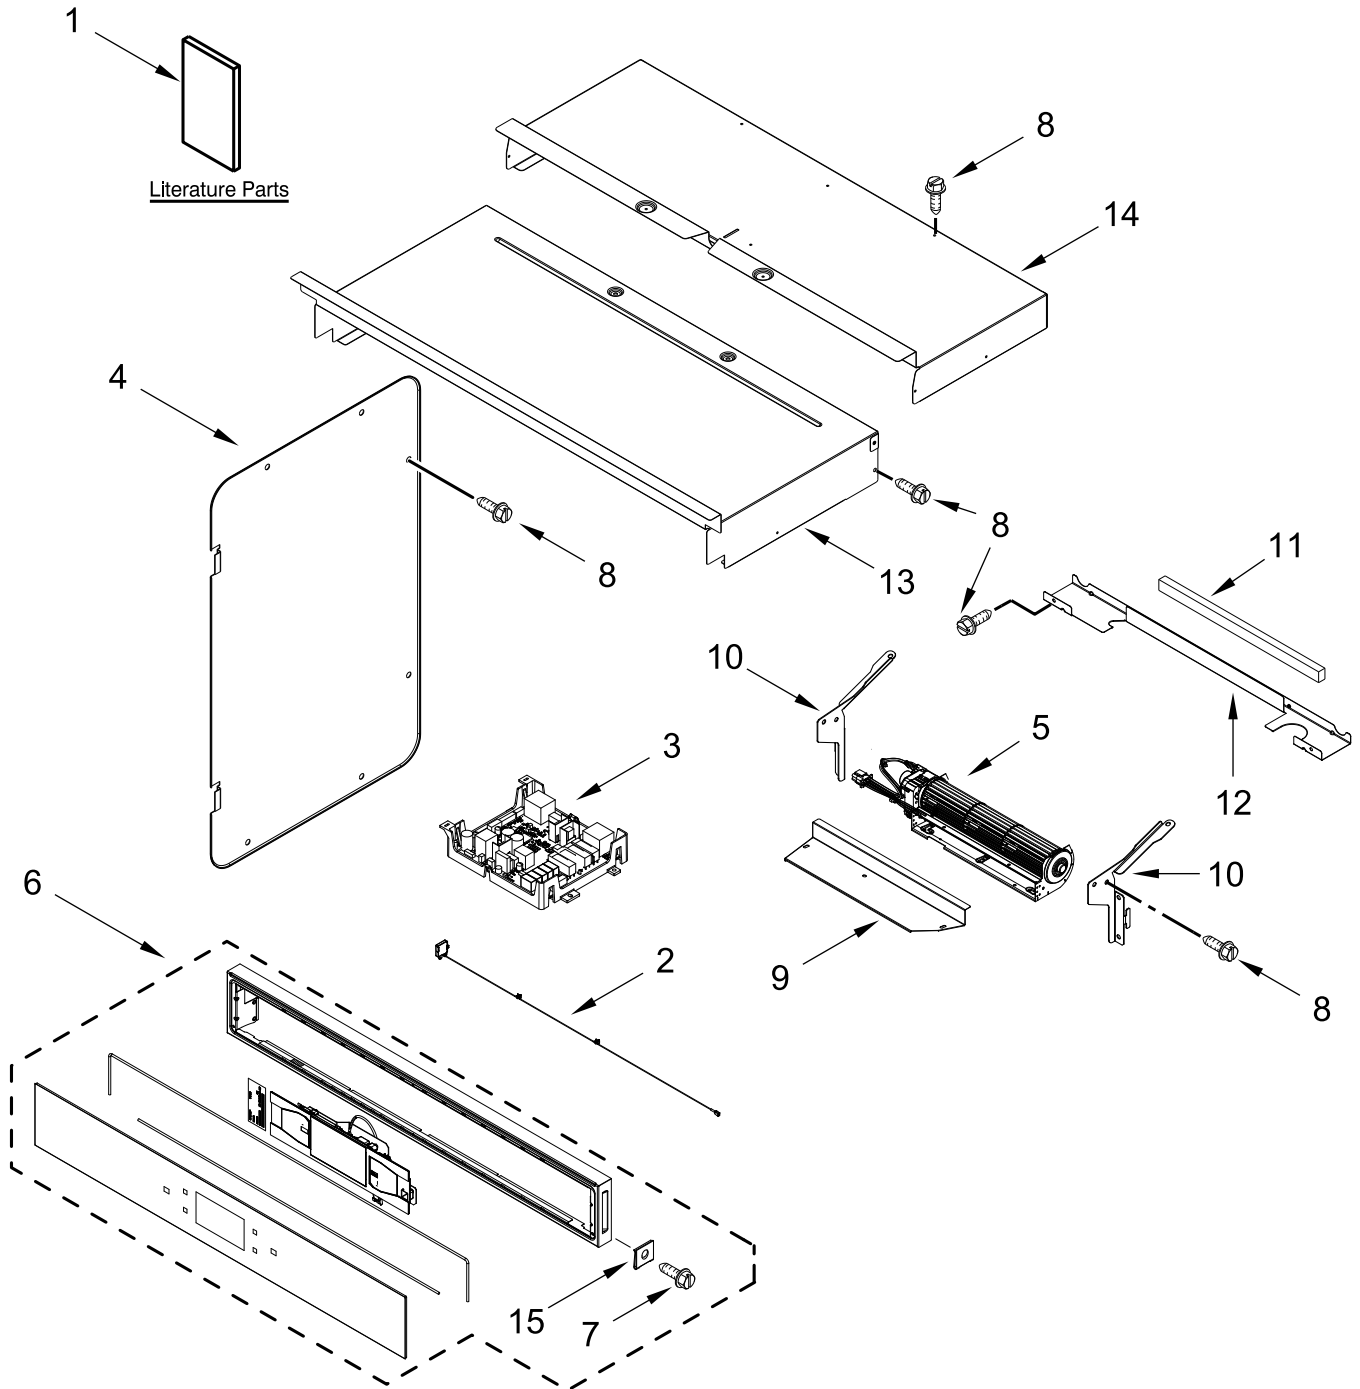

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12	W11166802	Divider, Chassis Back	15	4450118	Nut
	W11655510	Owner's Manual	13	W10318158	Chassis, Cover Top Front 30 IN			FOLLOWING PARTS NOT ILLUSTRATED
	W11553919	Quick Start Guide	14	W10588732	Chassis, Cover Top Back 30 IN	W11659368		Harness, Main
	W11623559	Tech Sheet				W11256629		Harness, Signal
2	W11409842	Antenna				W11454022		Harness, Fan and Turntable
3	W11253186	Appliance Manager, Copernicus (With Power Supply)				W11539494		Harness, Inverter
4	W10655467	Chassis, Combo Side				W11555169		Harness, Interlock
5	W11397930	Blower				W11555848		Harness, Input
6		Assembly, Control Panel (Includes Overlay)				W11356991		Harness, Ground Console Combo
	W11639721	Stainless				W11356990		Harness, Communication
	W11639724	Black Stainless				W11264646		Harness, Door Latch
7	W11339492	Screw (Black)				W11539527		Jumper Harness, Communication
8	7101P426-60	Screw				4450800		Screw, Grounding
9	W10681157	Cover, Combo Blower				4448664		Clamp, Conduit
10	W10655463	Bracket, Blower (Left)				313438		Clip, Harness
	W10655462	Bracket, Blower (Right)				W11394923		Bag, Hardware
11	4451758	Block, Foam						


OVEN PARTS

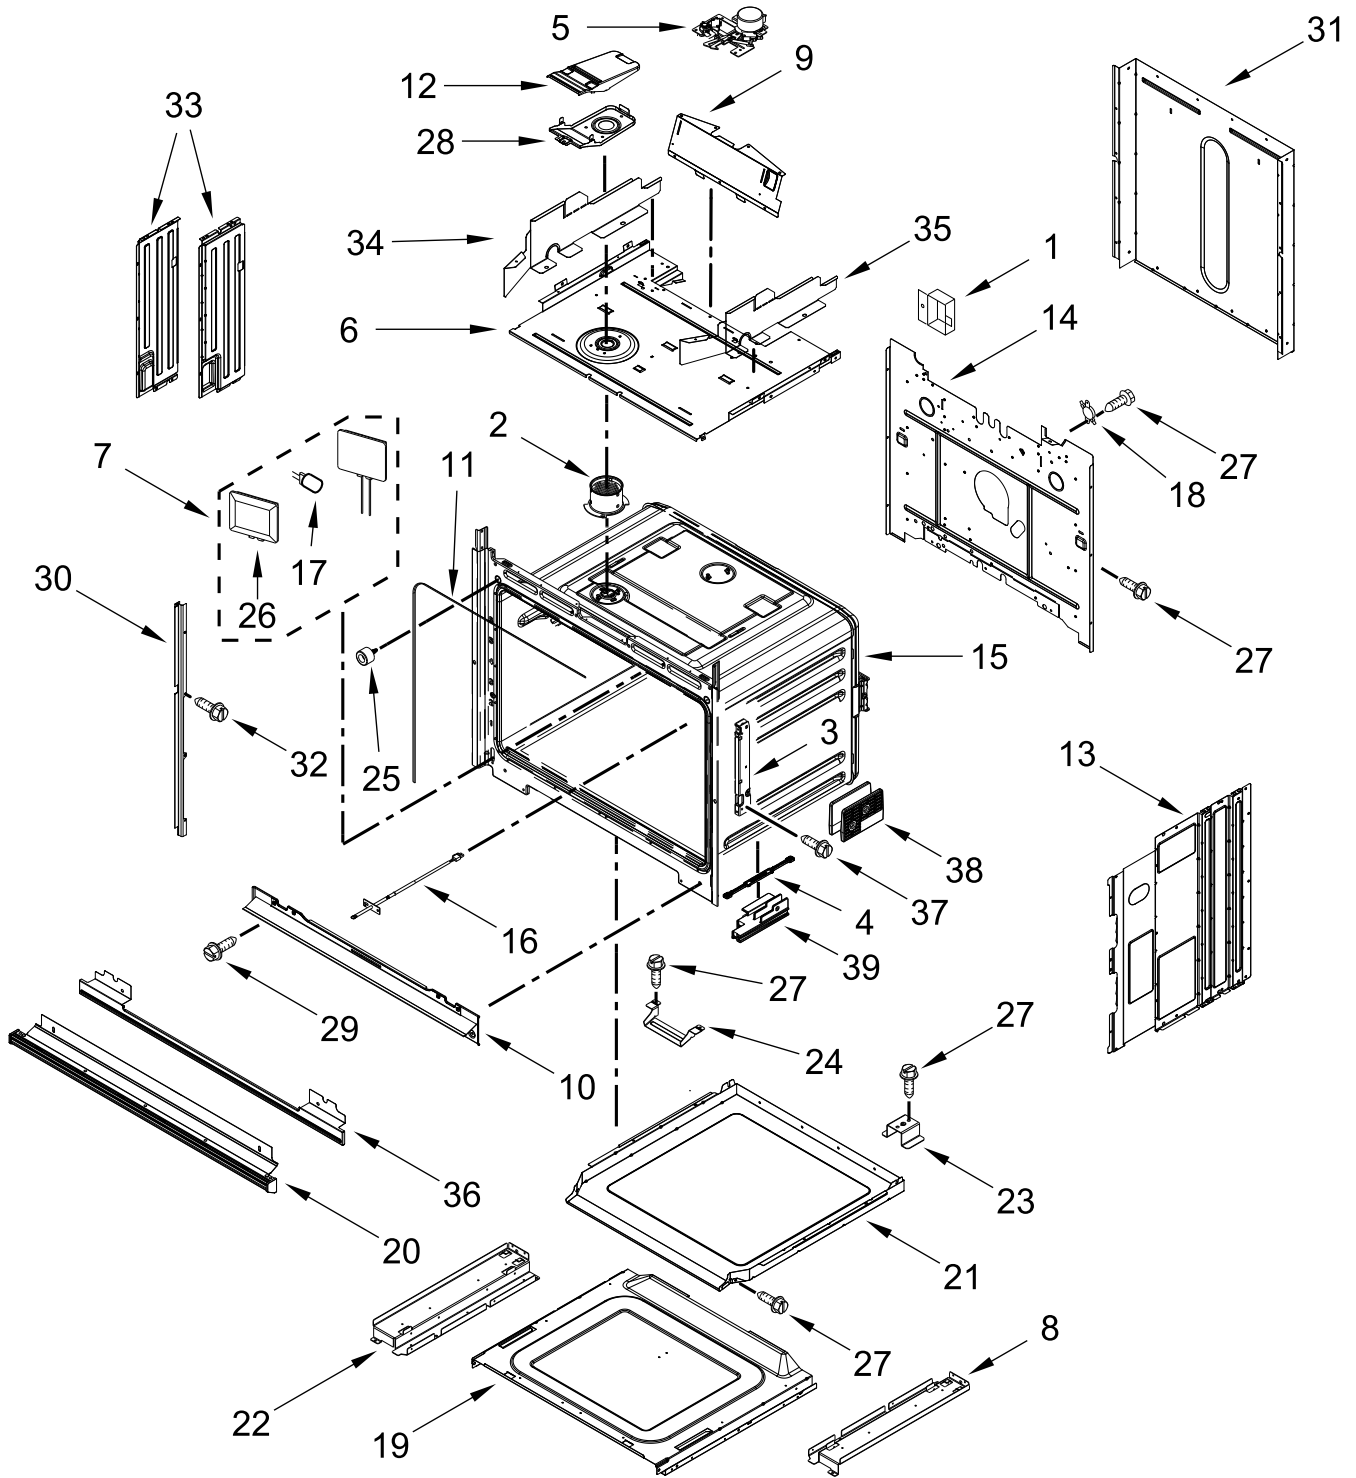

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector	17	W10472384	Bulb, Light	31	W11134657	Duct, Lower Chassis Back
2	W11085298	Tube, Vent	18	4449751	Thermostat (TOD)	32	W11404000	Screw
3	W11239070	Receiver, Hinge (Left)	19	W11135103	Base, Chassis	33	W11167419	Cover, Suction (Left)
	W11239072	Receiver, Hinge (Right)	20		Assembly, Bottom Vent		W11186675	Cover, Suction (Right)
4	W11558603	Spacer, Base		W11467754	Stainless	34	W11186391	Deflector, Chassis (Left)
5	W11132456	Latch, Motorized		W11467336	Black	35	W11186398	Deflector, Chassis (Right)
6	W11168071	Top, Chassis	21	W11244446	Duct, Bottom Chassis	36		Trim, Bottom Vent
7	W11205574	Assembly, Oven Light	22	W10283020	Support, Base (Left)		W11560859	Black
8	W10283021	Support, Base (Right)	23	W11135135	Support, Air Channel	37	W10254050	Screw
9	W10904163	Deflector, Blower	24	W11390667	Spacer, Chassis Bottom Duct	38	W11245118	Foot, Base
10	W11518347	Vent, Combo Center	25	W11166315	Bumper and Screw	39	W11245114	Foot, Chassis (Left)
11	W11608108	Gasket	26	W10472386	Lens, Light		W11245116	Foot, Chassis (Right)
12	W11256424	Cover, Vent Exhaust	27	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
13	W11165274	Side, Chassis	28	W11256423	Base, Vent Exhaust		W11188284	Insulation, Wrap
14	W11223327	Back, Chassis	29	W11249635	Screw		W11234758	Insulation, Cavity
15		Liner, Oven (Not Serviceable)	30		Trim, Side			
16	W11346074	Probe, Sensor		W11235457	Black (Left)			
				W11235458	Black (Right)			


OVEN DOOR PARTS

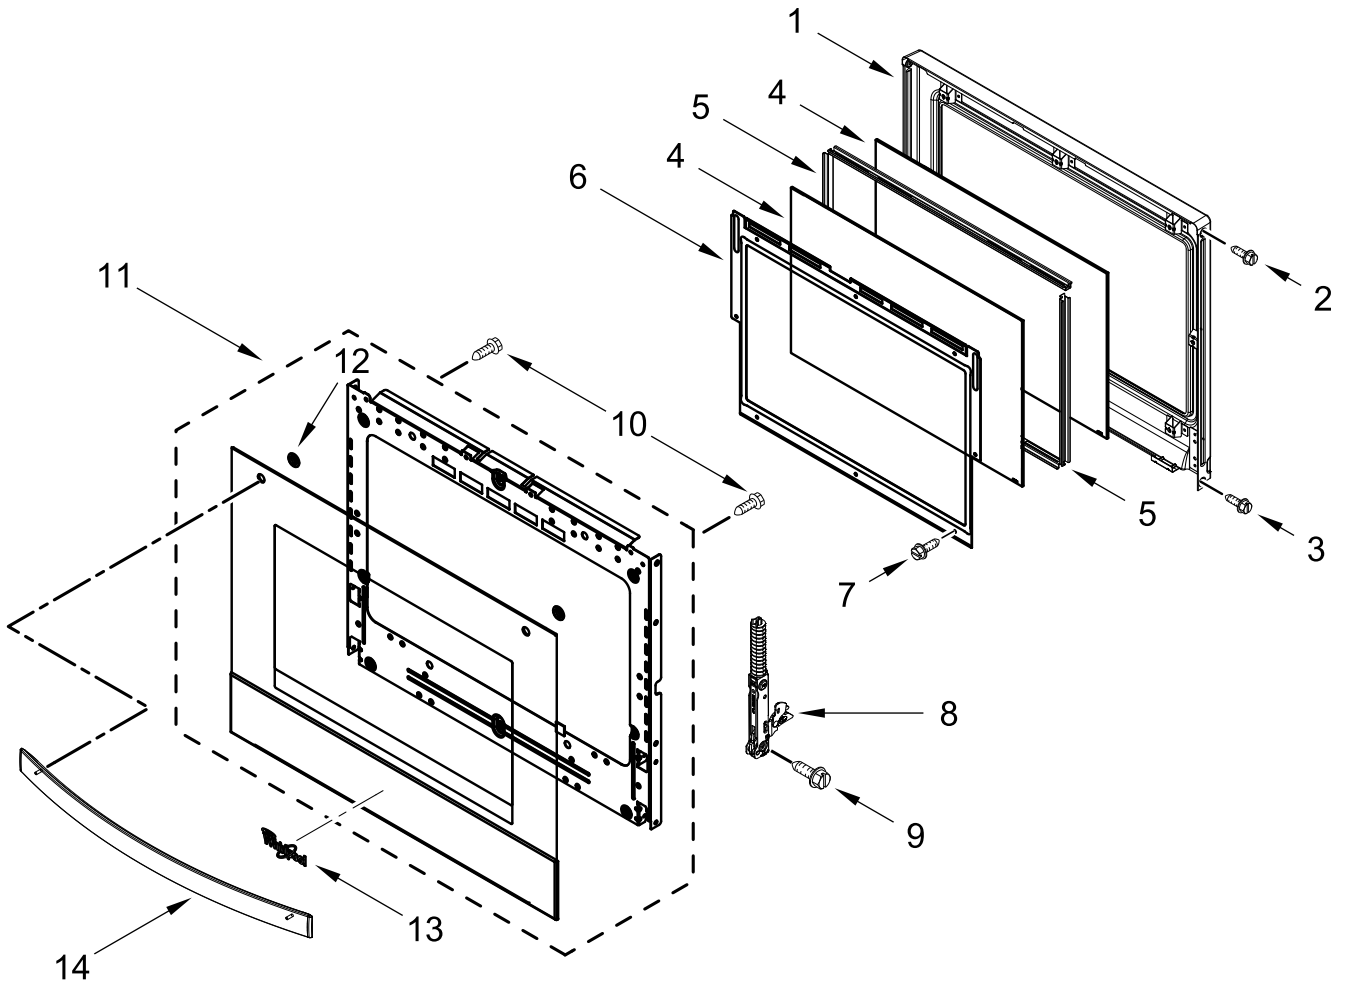

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11633416	Hinge, Door (Left)	13	W10884775	Badge
2	7101P375-60	Screw		W11633417	Hinge, Door (Right)	14		Handle Assembly
3	W11290045	Screw	9	3196183	Screw		W11532517	Stainless
4	W10618107	Glass, Inner	10	W11317731	Screw (Black)		W11548014	Black Stainless
5	W11302730	Spacer, Air Divider	11		Door Assembly			
6	W11174095	Retainer, Air Divider Glass		W11499218	Stainless			
7	7101P426-60	Screw		W11634524	Black Stainless			
			12	W10319024	Washer, Door			


INTERNAL OVEN PARTS

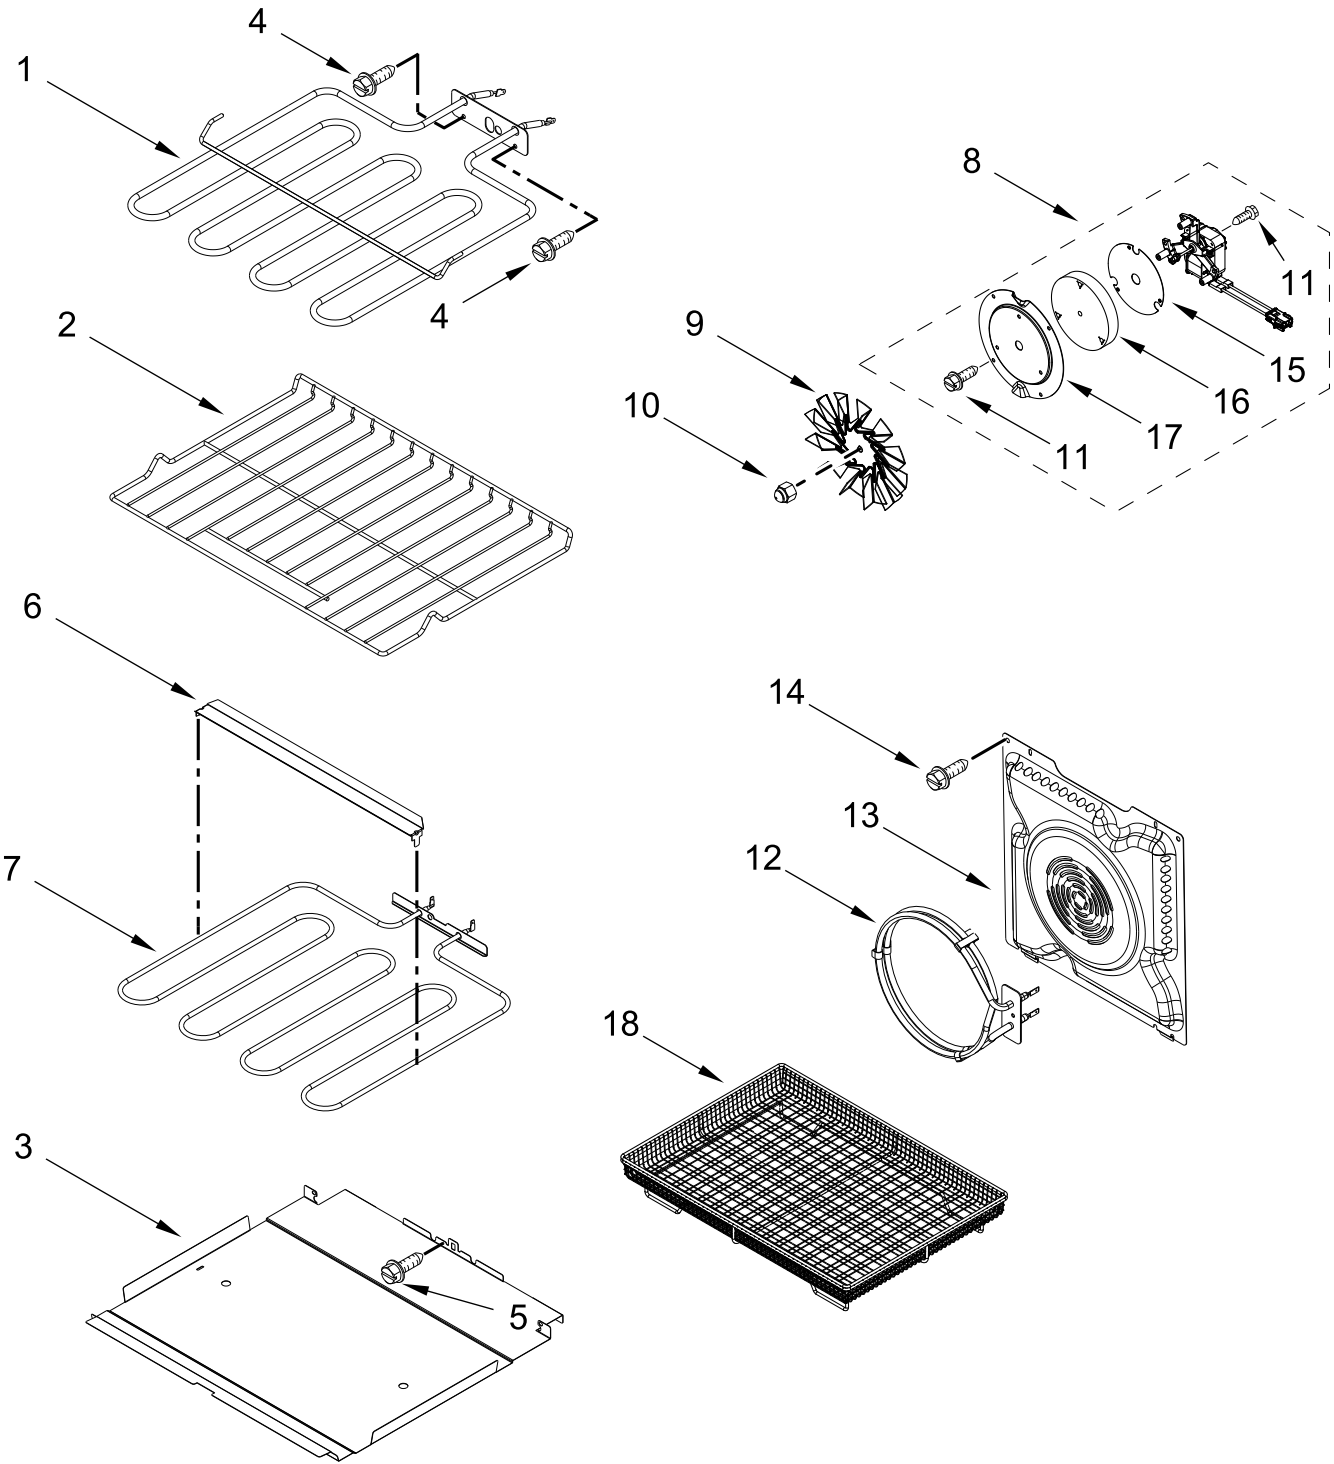

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	8	W11398058	Convect Motor Assembly	15	W11251715	Plate, Convect Motor
2	W11122597	Rack, Oven	9	W11425715	Blade, Fan	16	W11251716	Insulation, Convect Motor
3	W10318198	Tray, Hidden Bake	10	W11433702	Nut, Acorn (LH)	17	W11398057	Cover, Convect Plate
4	7101P434-60	Screw	11	W10720084	Screw	18	W11480738	Air Fry Basket Assembly
5	7101P426-60	Screw	12	W10260248	Ring, Element			
6	W10282957	Crossbar, Hidden Bake Tray	13	W10359278	Baffle, Convection			
7	W11292248	Element, Bake	14	W10906658	Screw			


CABINET AND STIRRER PARTS

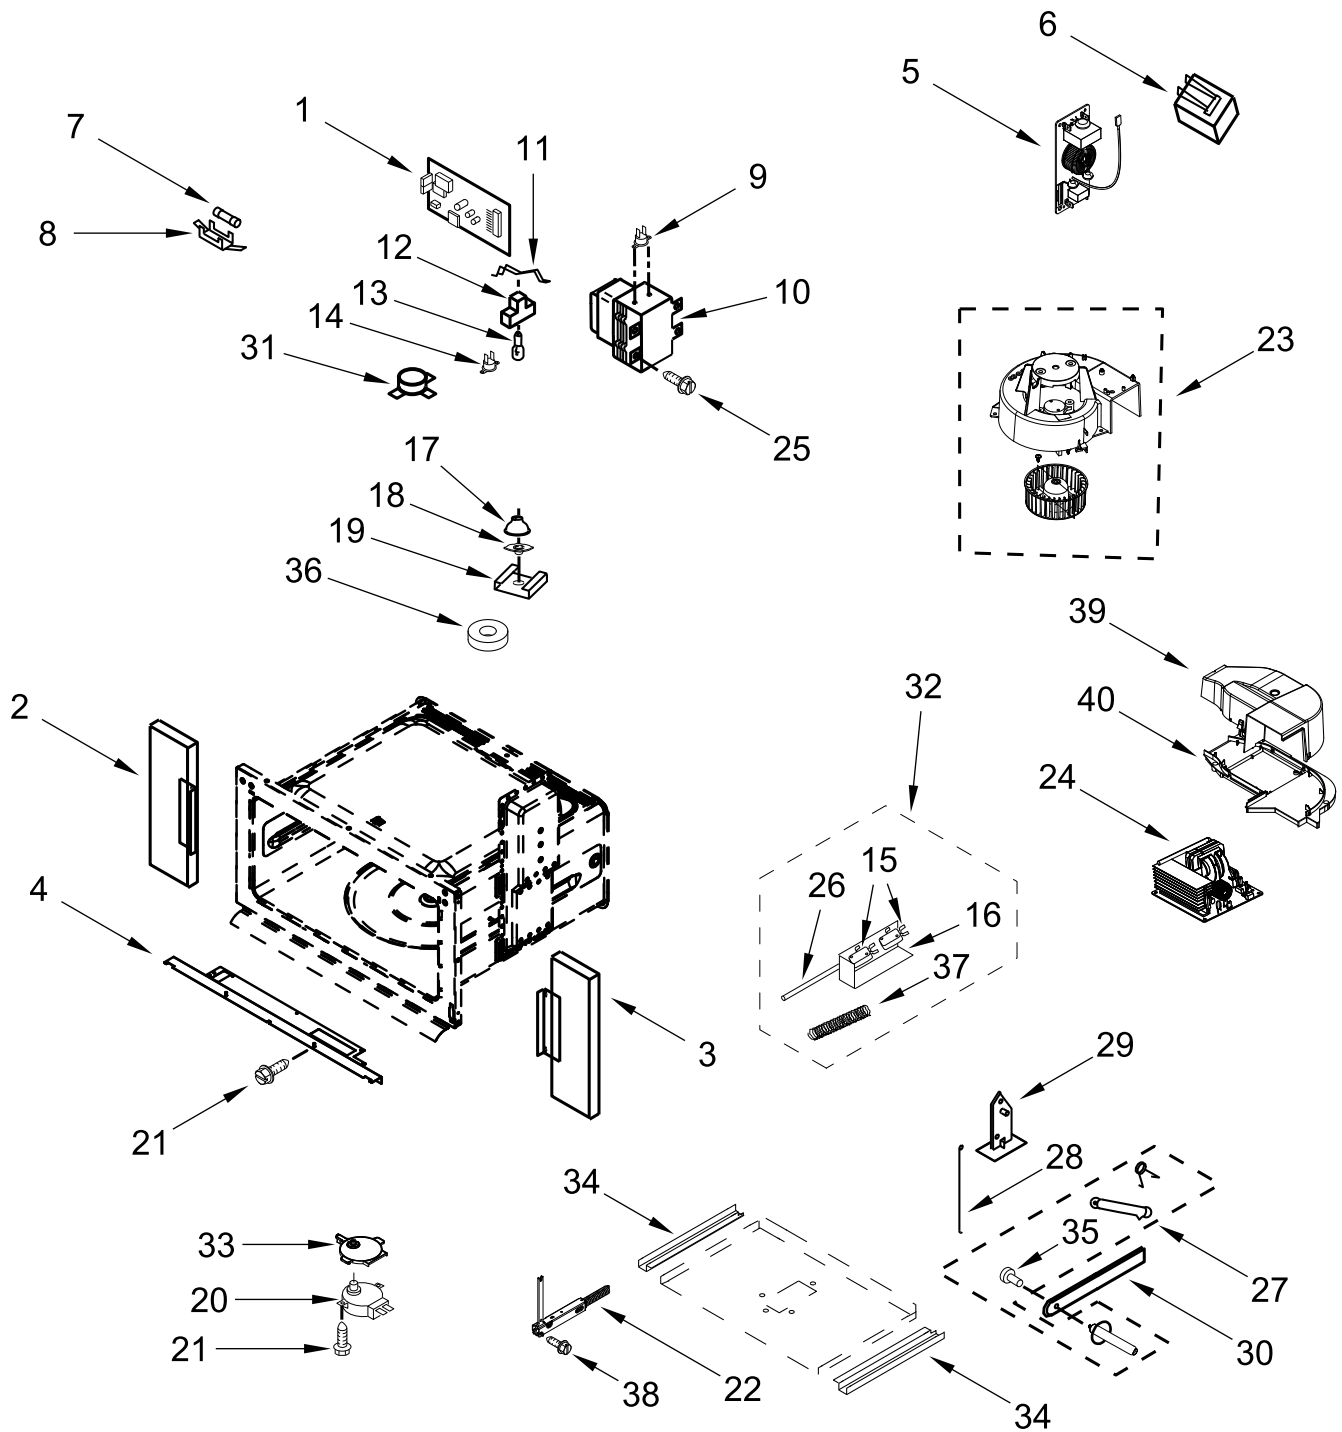

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290002	Control, Electric	16	W10876593	Holder, Switch	33	461967753742	Adapter, Turntable Motor
2	461967017491	Trim, Side (Left)	17	423107022541	Reflector	34	461967008461	Support, Bottom
3	461967017481	Trim, Side (Right)	18	423107720491	Lens, Lamp	35	461967510191	Bushing
4	W11334716	Vent, Top Microwave	19	W11440819	Clip, Spring	36	W10769147	Sealing, Lamp
5	W11505129	Filter, Noise	20	461967848971	Motor, Turntable	37	423107570871	Spring, Release Rod
6	461967848621	Transformer, Light (20V)	21	461967825321	Screw	38	461967825781	Screw (Shoulder)
7	241908600053	Fuse	22	W11131527	Hinge, Door	39	W11591019	Housing, Upper Inverter
8	4375231	Block, Fuse	23	W11131760	Cooling Fan Assembly	40	W11591018	Housing, Lower Inverter
9	461967846741	Thermostat, Magnetron	24	W11504539	Inverter			
10	W11504545	Magnetron	25	461967825971	Screw			
11	W10465869	Spring, Lamp	26	461967750464	Rod, Push			
12	W10490593	Holder, Lamp	27	251968600013	Pin, Damper			
13	W10795595	Lamp, Halogen	28	461967570351	Spring, Torsion			
14	W10389447	Thermostat	29	461967750494	Support			
15	461967848881	Switch	30	W11213889	Arm, Sliding			
			31	W10460457	Sensor, Humidity			
			32	W10358241	Assembly, Interlock Switch			


INTERNAL MICROWAVE PARTS

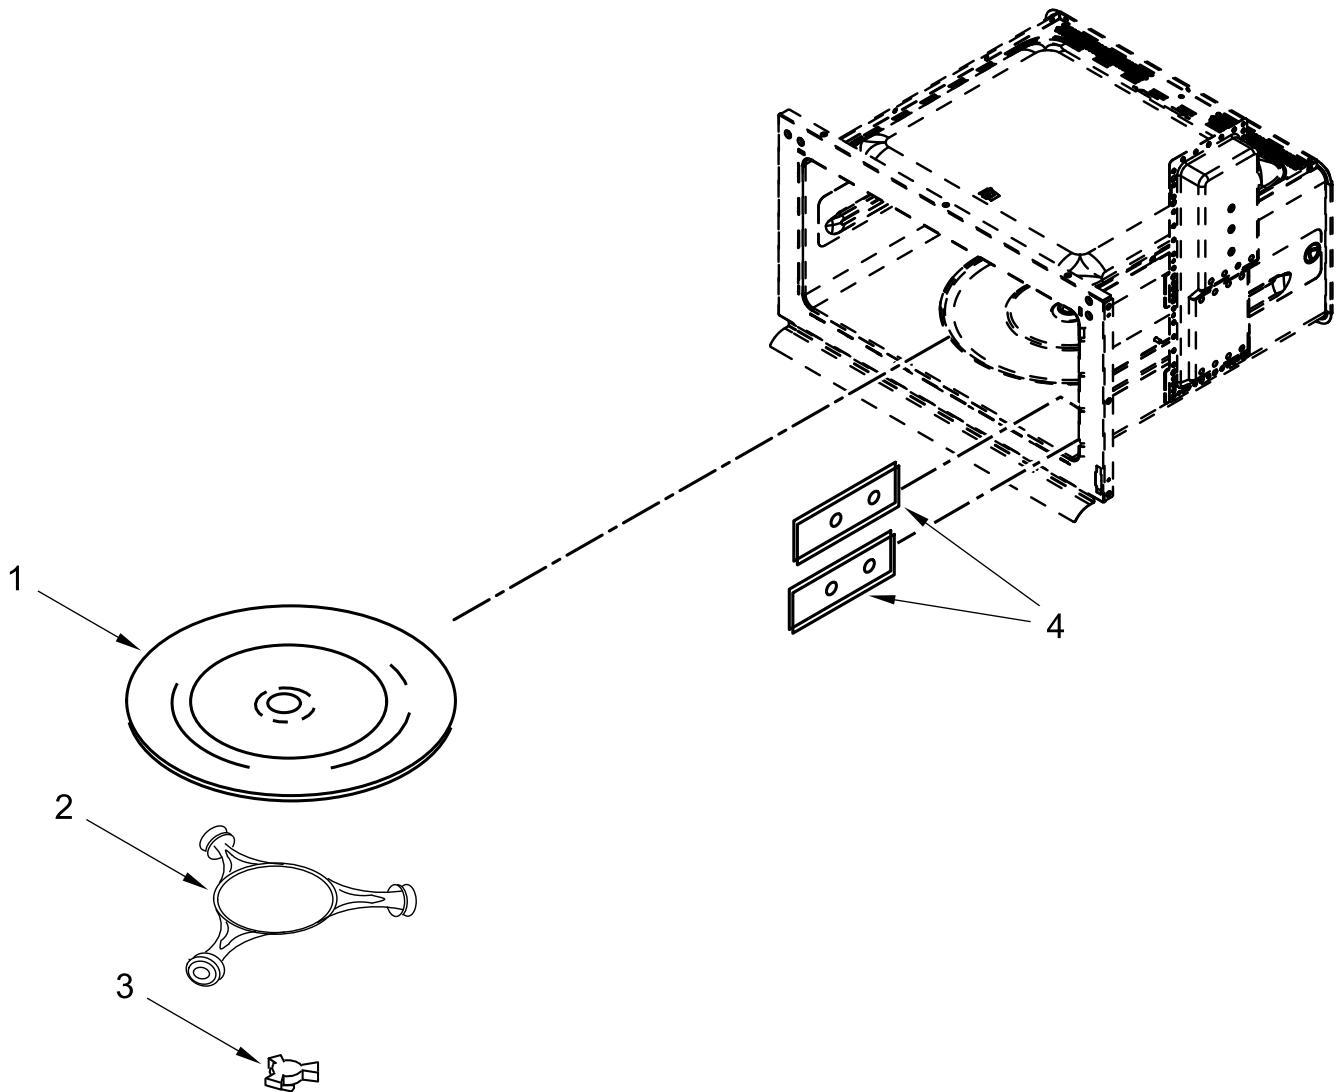

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11340342	Turntable, Glass	3	W10545578	Drive, Turntable
2	W10367316	Ring, Turntable	4	461967451001	Plate, Cover


TOP VENTING PARTS

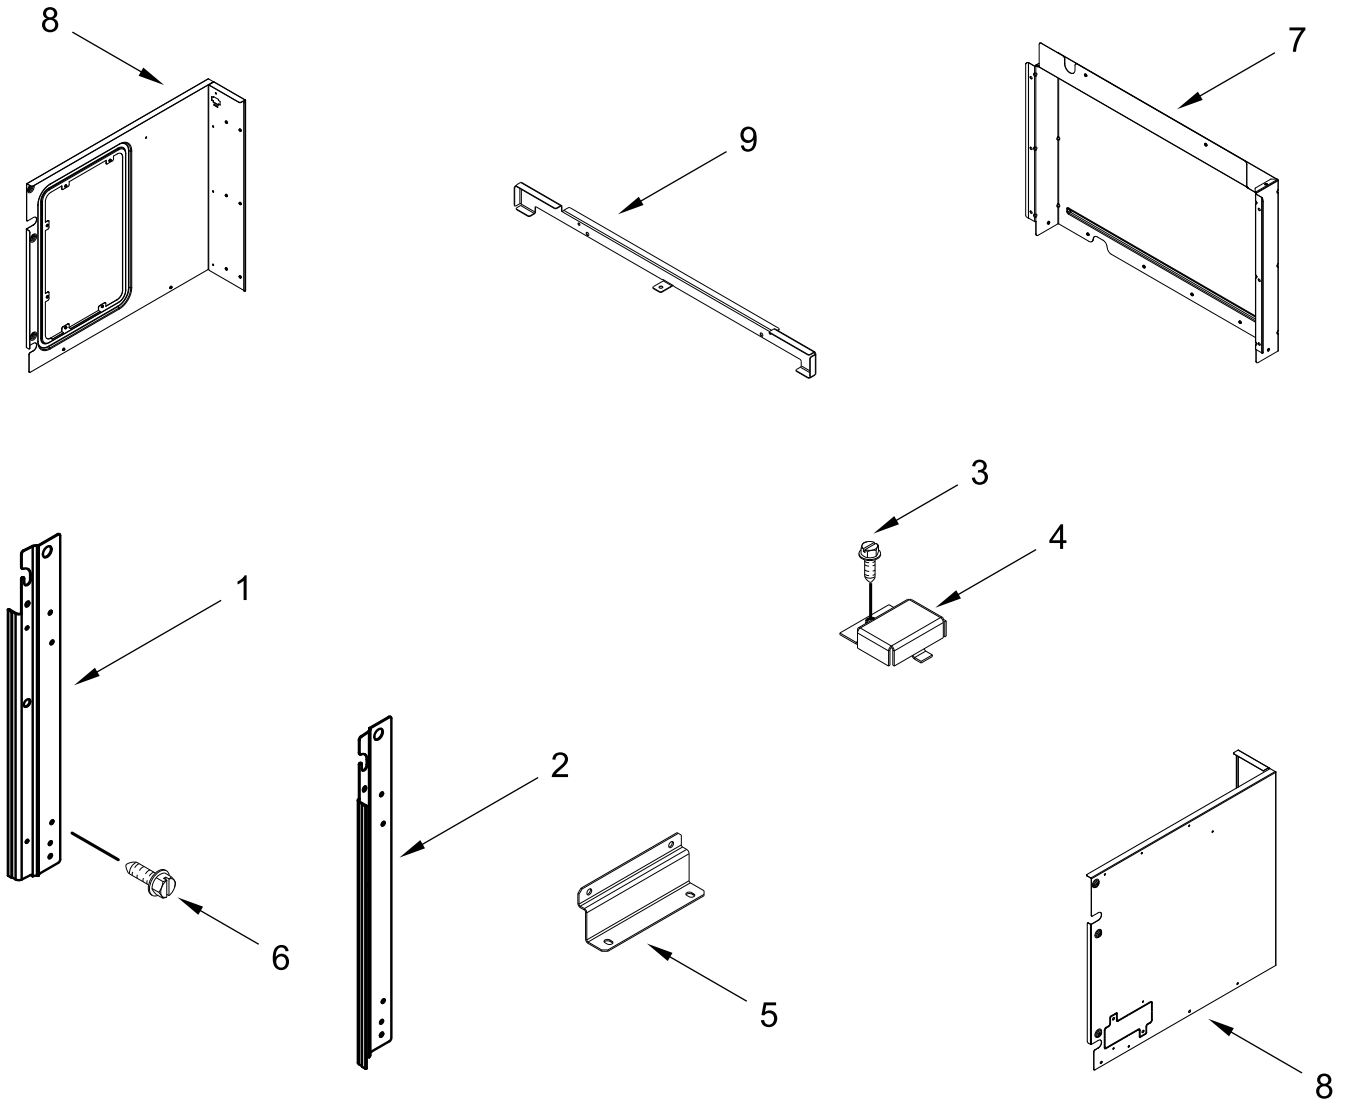

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11627410	Siderail, Combo (Left)	4	8285593	Cover, Connector	8	W11171909	Side, Combo Chassis (Left)
2	W11627411	Siderail, Combo (Right)	5	W10283024	Side, Bracket		W11171919	Side, Combo Chassis (Right)
3	7101P426-60	Screw	6	7101P633-60	Screw (Black)	9	W10283022	Support, Crossbar
			7	W11171004	Cover, Combo Chassis Back Duct			

MICROWAVE DOOR PARTS

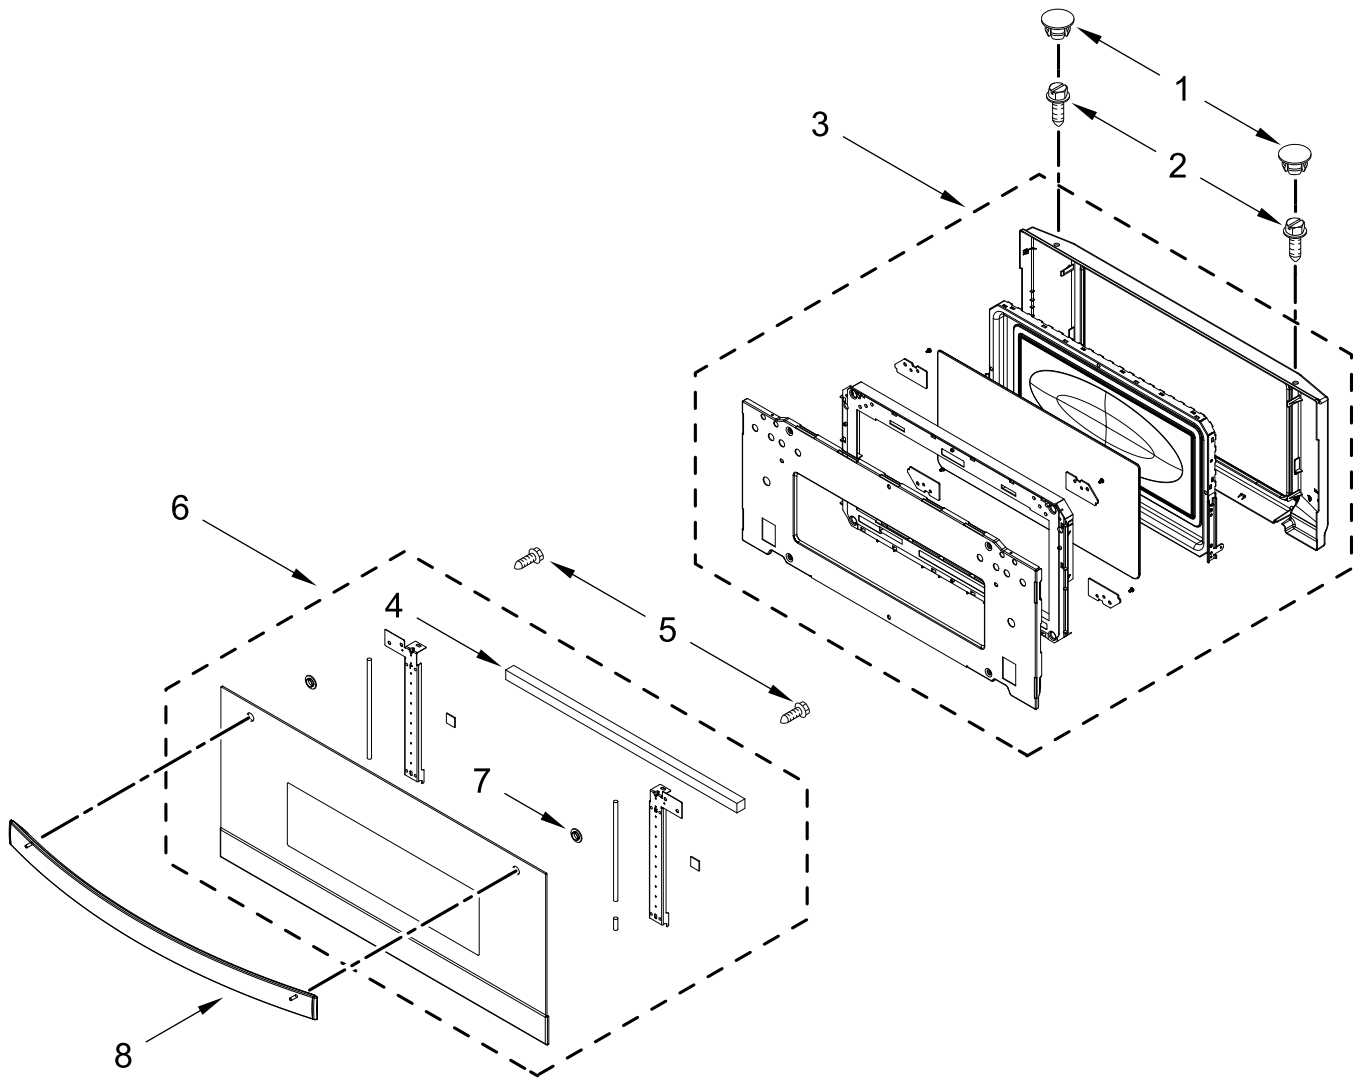

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5	W11317731	Screw (Black)	7	W10319024	Washer, Door
2	7101P338-60	Screw	6		Outer Door Assembly	8		Assembly, Handle
3	W11639555	Inner Door Assembly		W11500262	Stainless		W11532517	Stainless
4	W10359769	Foam, Door Handle		W11634529	Black Stainless		W11548014	Black Stainless

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
		Assembly, Bottom Vent
	W11369884	Black
	W11369889	Stainless Trim, Tall Vent
	W11570323	Stainless
	W11570325	Black