




ELECTRIC WALL OVEN

MODELS:

WOES3027LS00 (Stainless)


CONTROL PANEL PARTS

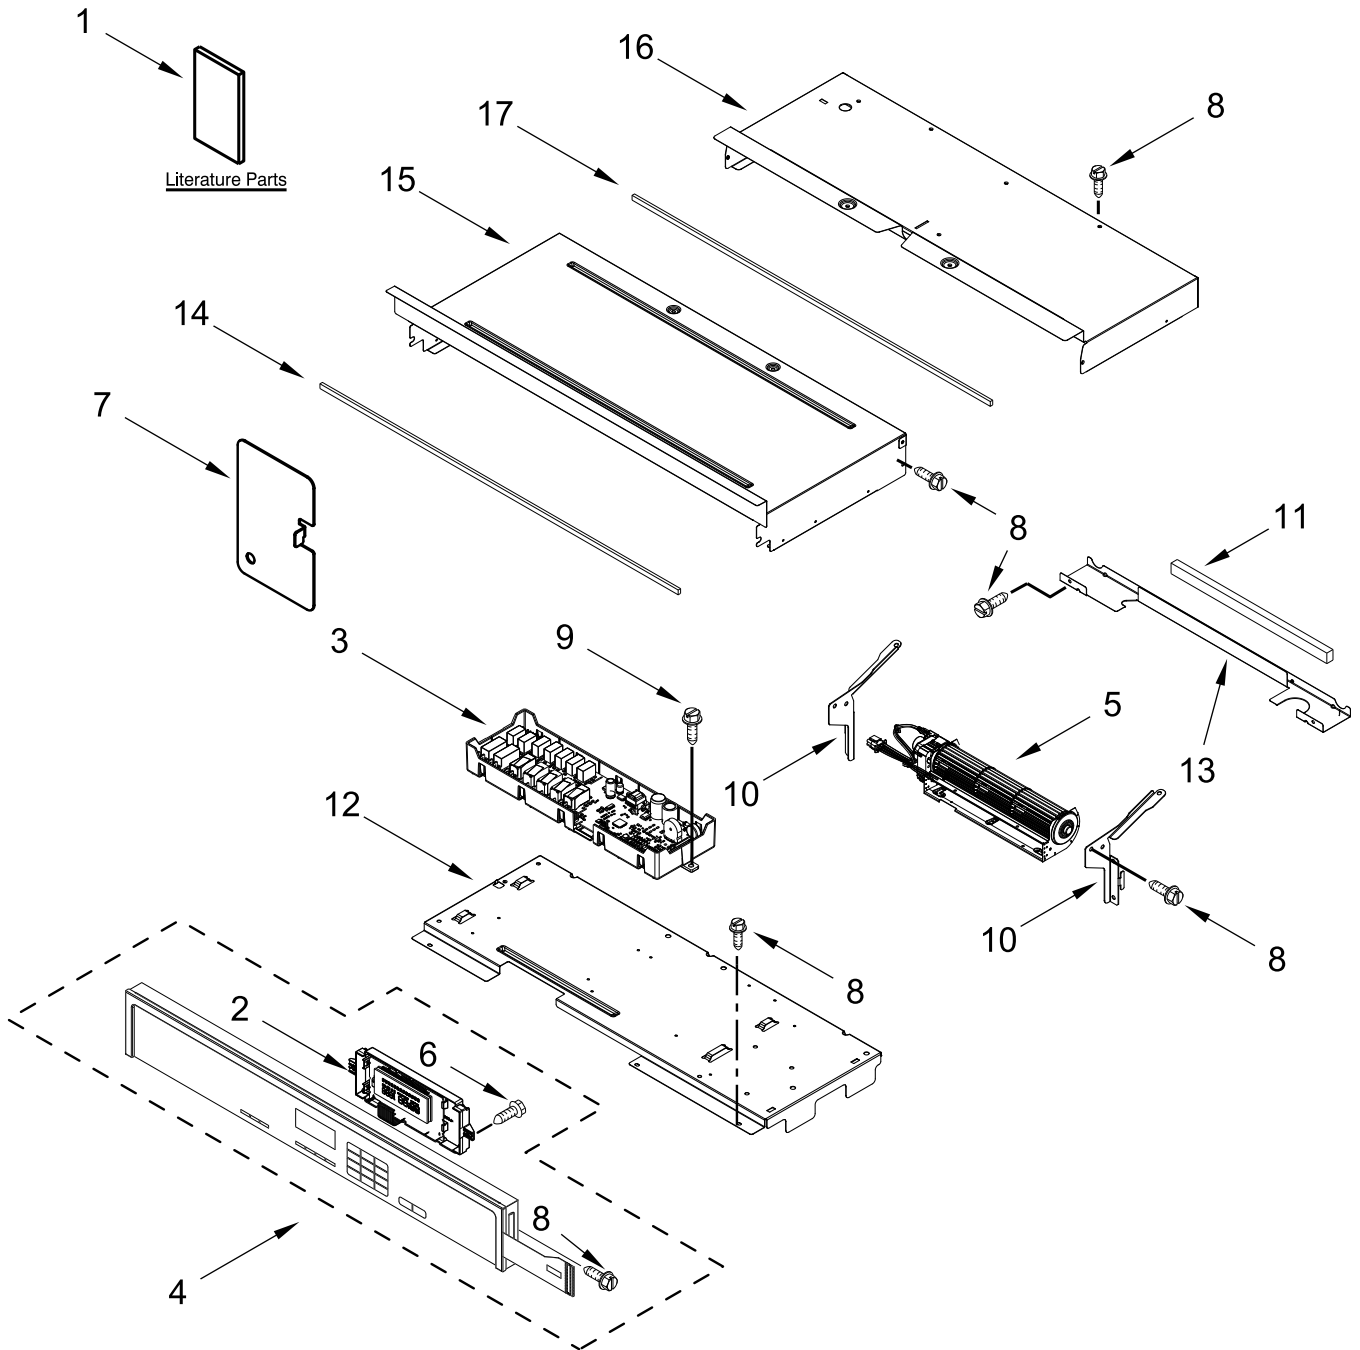

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P426-60	Screw	17	W10728475	Gasket, Rubber
	W11555306	Owner's Manual	9	7101P434-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11553919	Quick Start Guide	10	W10655463	Bracket, Blower (Left)			
	W11600302	Tech Sheet		W10655462	Bracket, Blower (Right)		W11499329	Harness, Main
2	W10752315	Interface (Maxwell), User Board	11	4451758	Block, Foam		W11264646	Harness, Door Latch
3	W11556520	Control, Maxwell	12	W11179509	Tray, Electronic		W10409840	Harness, EOL (MRC)
4		Assembly, Control Panel (Includes Overlay)	13	W11166802	Divider, Chassis Back		W11233570	Harness, Console
	W11467580	Black	14	W11162062	Gasket, Rubber (652 MM)		W10655464	Bracket, Harness
5	W11397930	Blower	15	W11244469	Cover, Top Front 27 IN Chassis		W10487999	Clip, Harness
6	7101P403-60	Screw					4448664	Clamp, Conduit
7	W11533682	Cover, WIFI	16	W11244459	Cover, Top Back 27 IN Chassis		4450800	Screw, Grounding
							W11547720	Bag, Hardware


OVEN PARTS

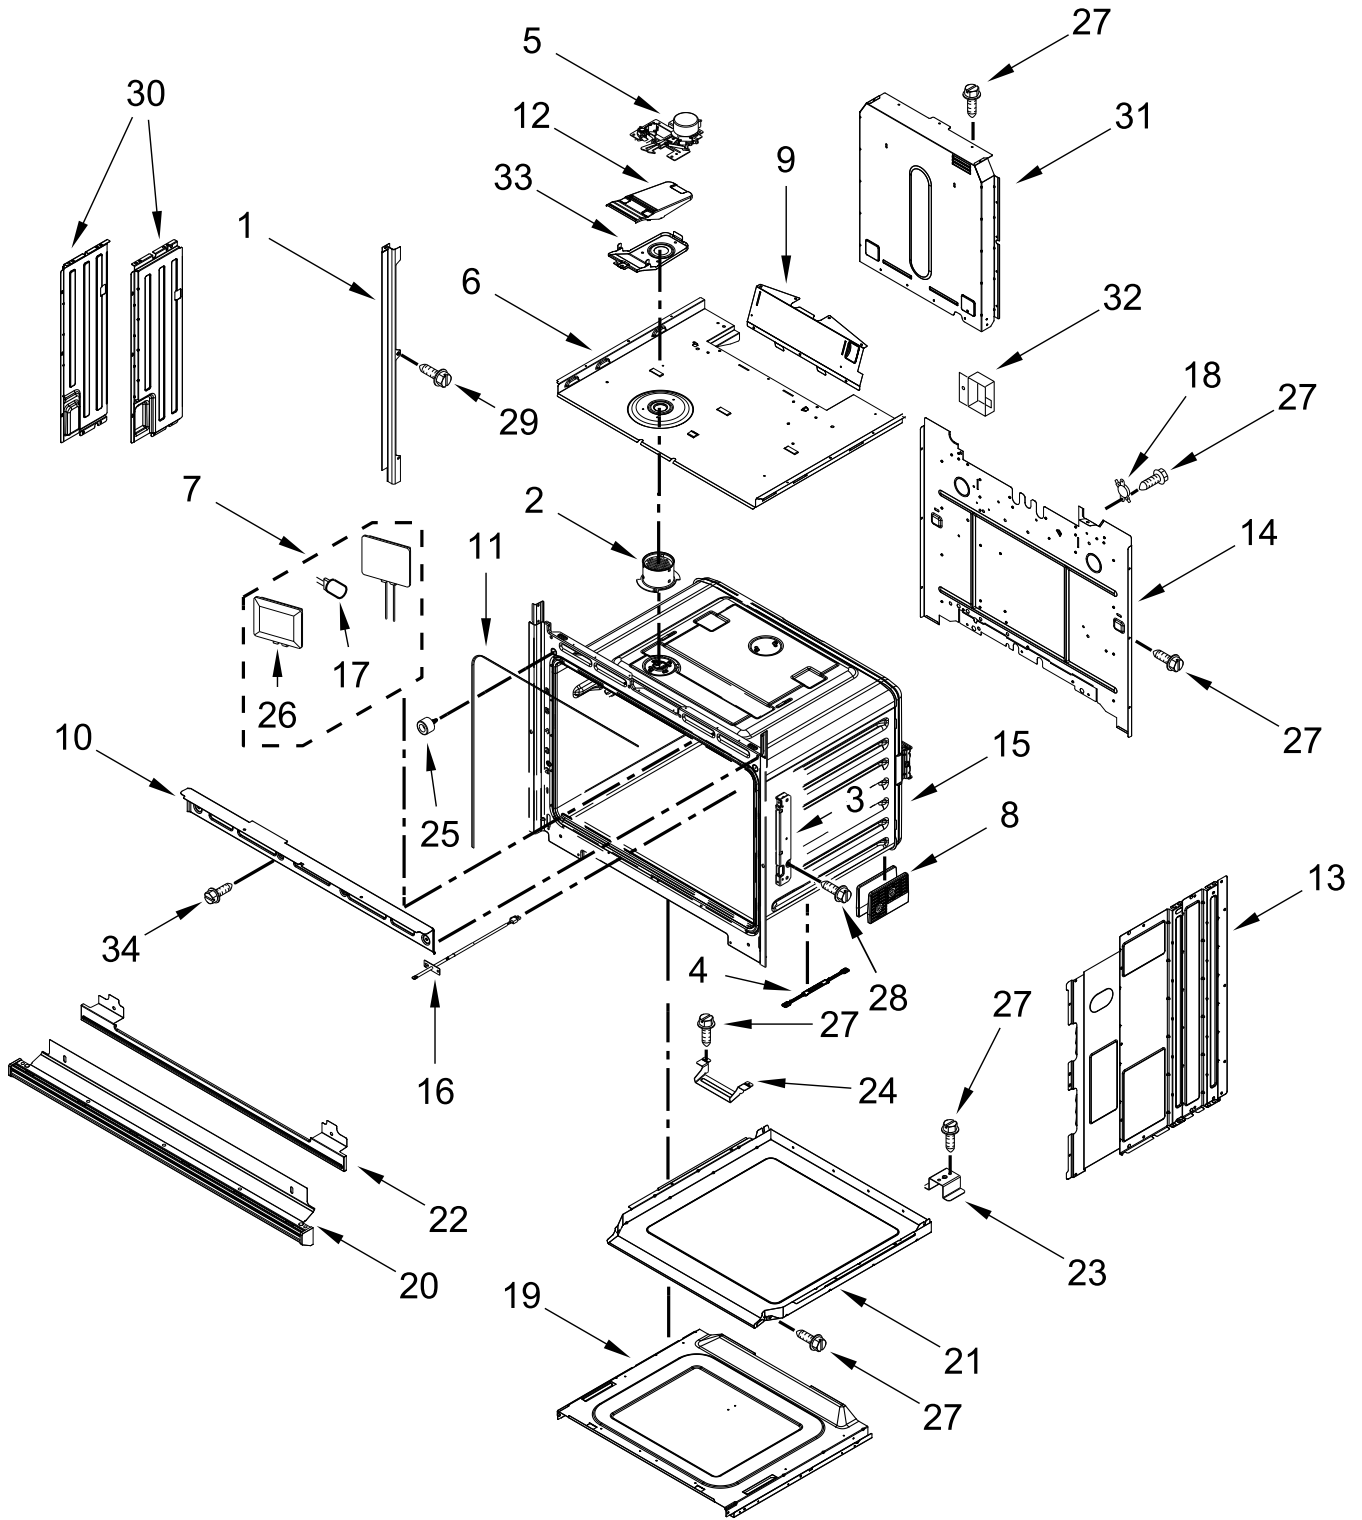

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Cover, Side Trim	14	W11442210	Back, Chassis	25	W11166315	Bumper and Screw
	W11235463	Black (Left)	15		Liner, Oven (Not Serviceable)	26	W10472386	Lens, Light
	W11235462	Black (Right)	16	W11346074	Probe, Sensor	27	7101P426-60	Screw
2	W11085298	Tube, Vent	17	W10472384	Bulb, Light	28	W10254050	Screw
3	W11100732	Receiver, Hinge	18	4449751	Thermostat (TOD)	29	W11404000	Screw
4	W11558603	Spacer, Base	19	W11244454	Base, Chassis	30	W11167419	Cover, Suction (Left)
5	W11132456	Latch, Motorized	20		Assembly, Bottom Vent		W11186675	Cover, Suction (Right)
6	W11244456	Top, Chassis		W11467824	Stainless	31	W11165250	Duct, Chassis Back
7	W11205574	Assembly, Oven Light	21	W11244446	Duct, Bottom Chassis	32	8285593	Cover, Connector
8	W11245118	Foot, Base	22		Trim, Bottom Vent	33	W11256423	Base, Vent Exhaust
9	W10904163	Deflector, Blower		W11560860	Black	34	W11249635	Screw
10	W11334858	Vent, Top 27 in		W11135135	Support, Air Channel			FOLLOWING PARTS NOT ILLUSTRATED
11	W11608109	Gasket, Cavity	23	W11390667	Spacer, Chassis		W11244474	Insulation, Wrap
12	W11256424	Cover, Vent Exhaust	24		Bottom Duct		W11244475	Insulation, Back
13	W11165274	Side, Chassis						



OVEN DOOR PARTS

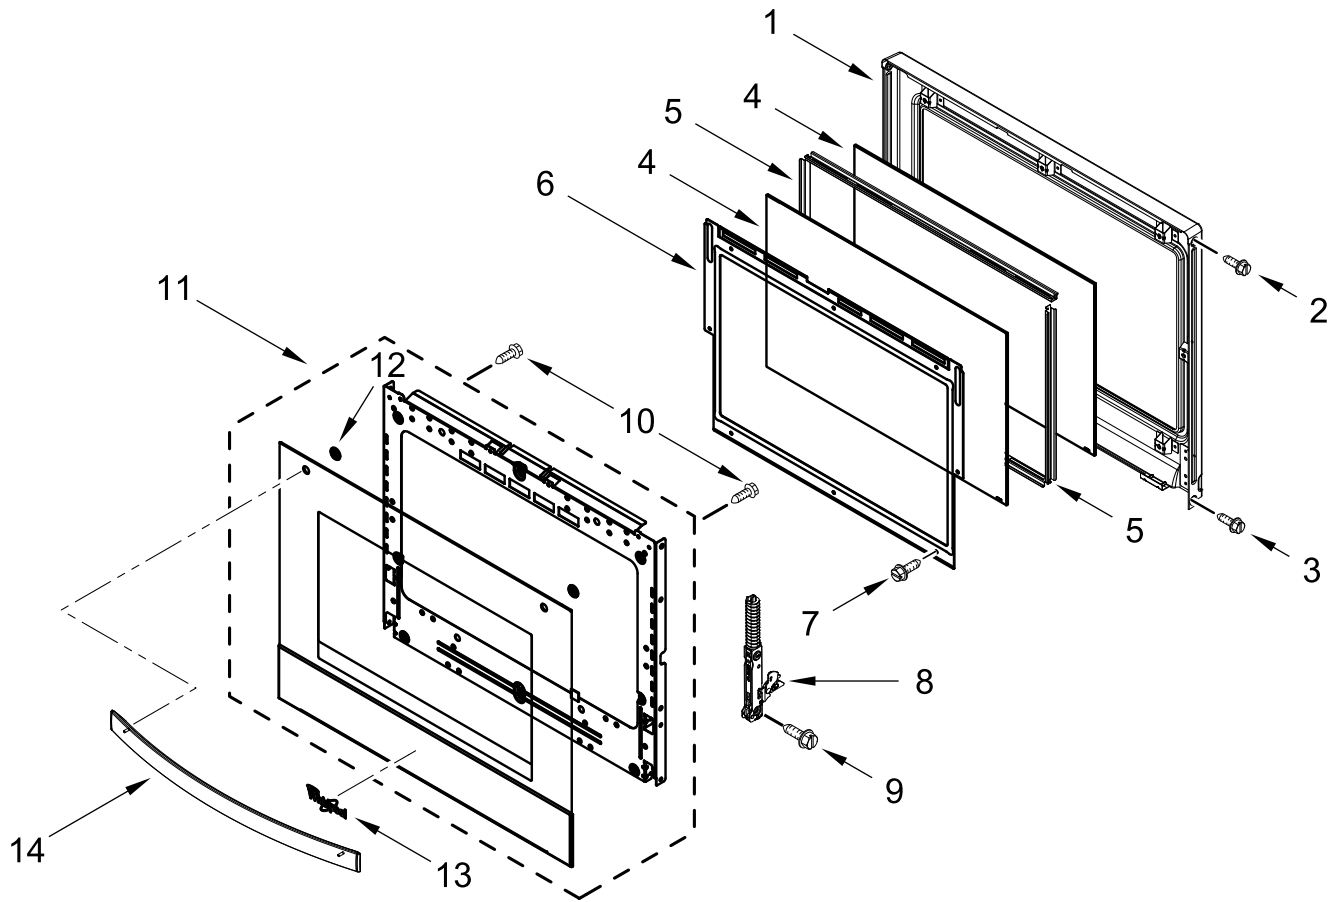

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	7	7101P426-60	Screw	11		Assembly, Door Glass
2	7101P375-60	Screw	8	W11470044	Hinge, Door (Left)		W11499373	Stainless
3	W11290045	Screw		W11470045	Hinge, Door (Right)	12	W10319024	Washer, Door
4	W10618123	Glass, Inner				13	W10884775	Badge
5	W11302731	Spacer, Air Divider	9	3196183	Screw	14		Handle, Door
6	W11204277	Retainer, Air Divider Glass	10	W11317731	Screw (Black)		W11532601	Stainless

INTERNAL OVEN PARTS

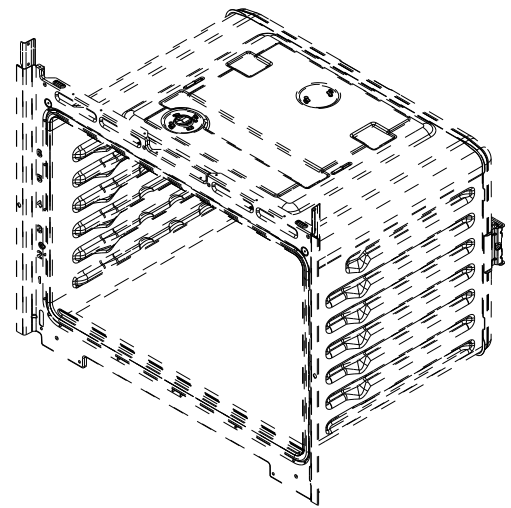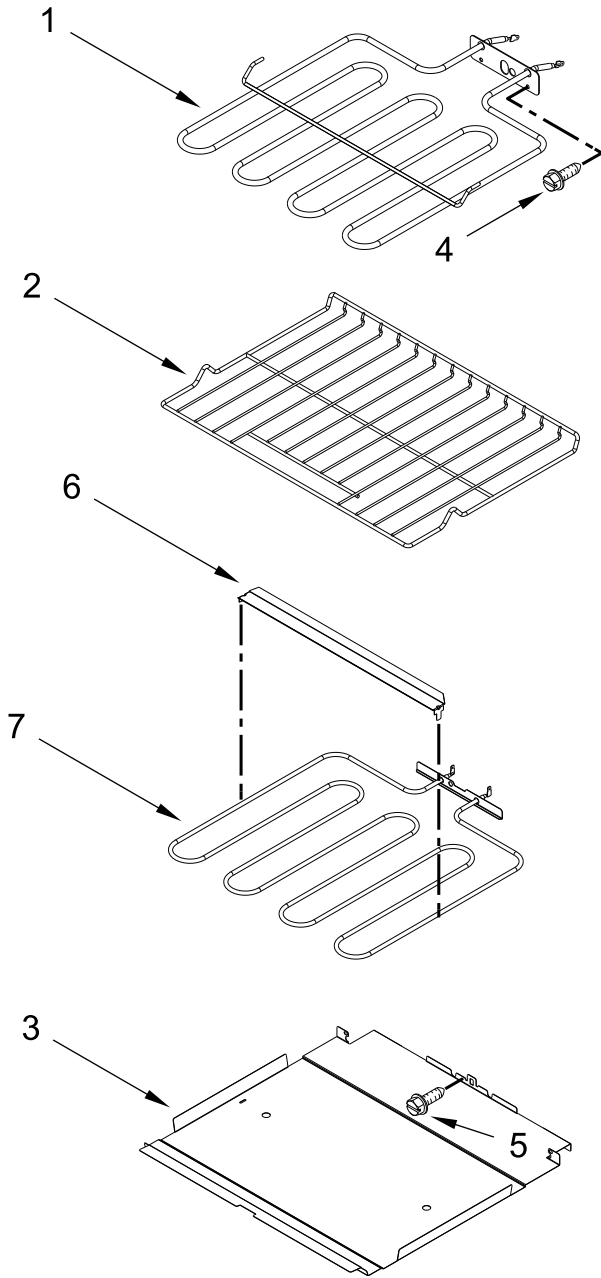

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W10317431	Rack, Oven	5	7101P426-60	Screw	7	W11292248	Element, Bake
3	W10318198	Tray, Hidden Bake						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORY PARTS
		Trim, Tall Vent
	W11570326	Black
	W11570324	Stainless
		Vent, Deflector
	W11551865	Stainless
		Trim, Bottom Vent
	W11570322	Stainless