




ELECTRIC RANGE

MODELS:

WSIS5030RV0 (Black Stainless)


COOKTOP AND DUCT PARTS

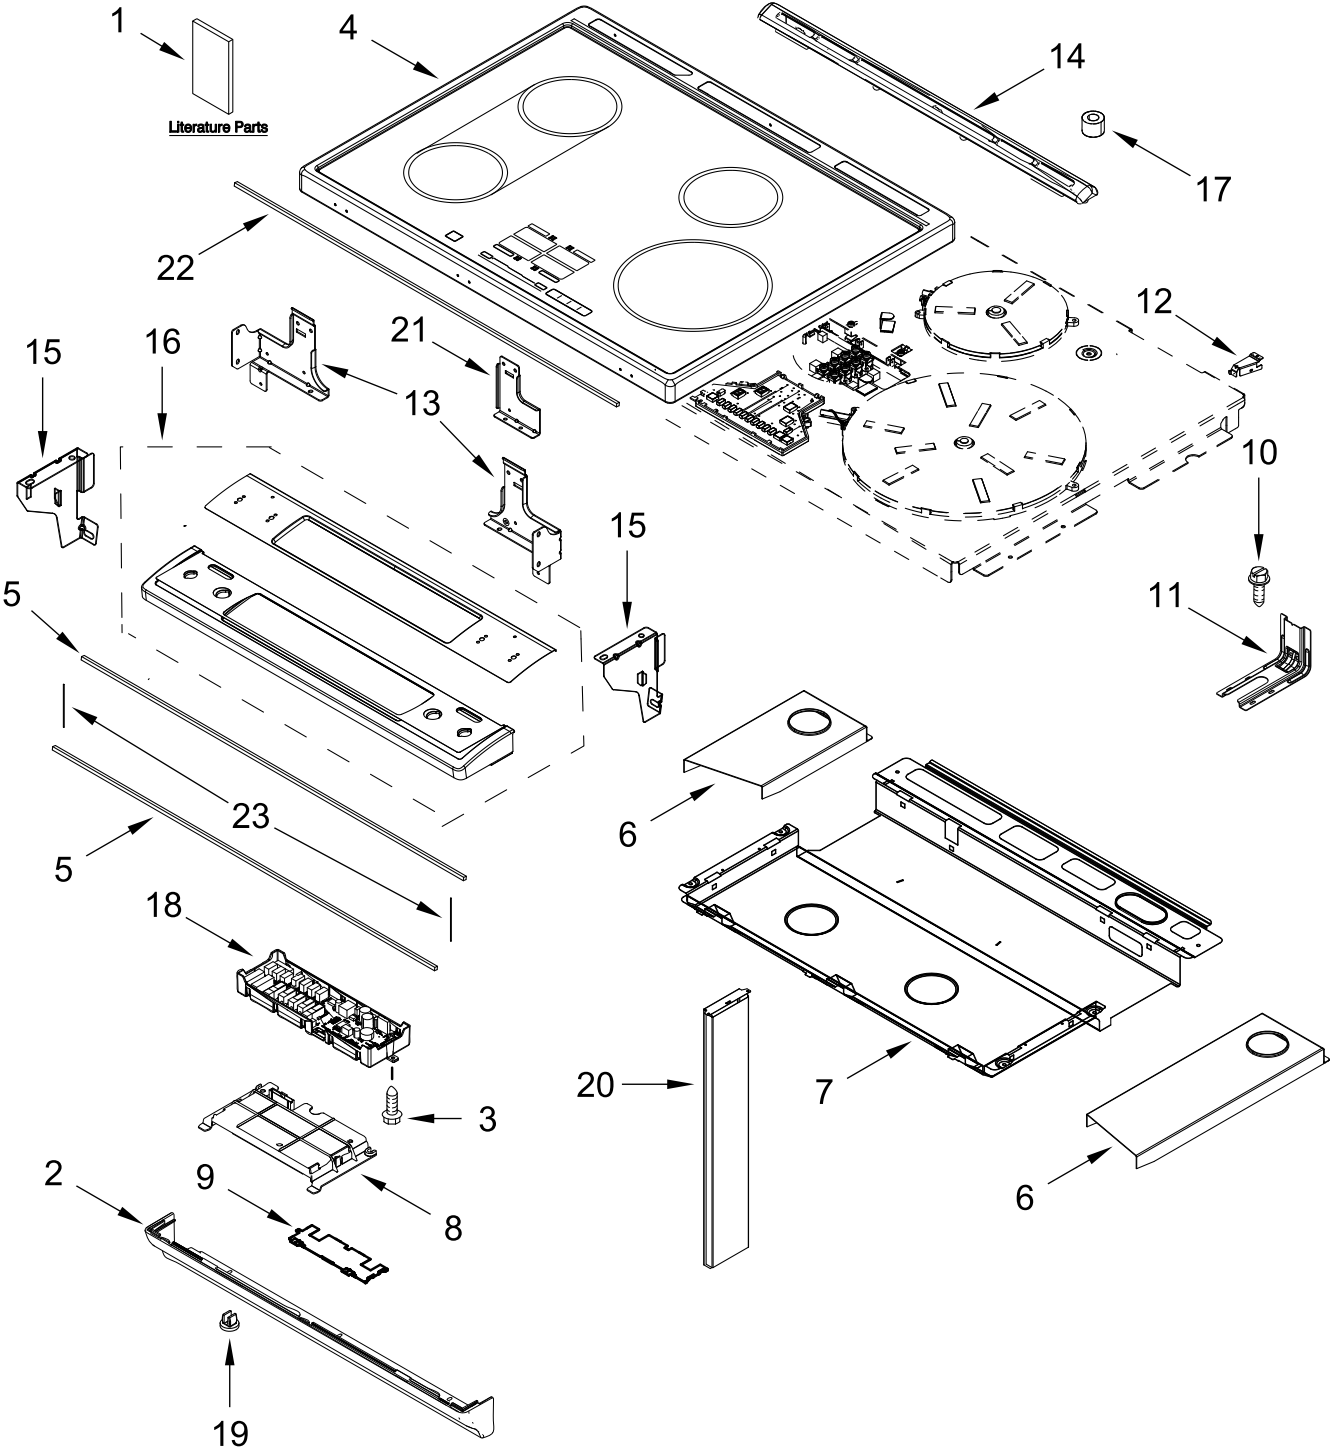

COOKTOP AND DUCT PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W10558372	Bracket, Control	16		Console
	W11637353	Use and Care Guide	10	7101P485-60	Screw, Anti-Tip Kit		W11691321	Black Stainless
	W11692352	Tech Sheet	11	W11379947	Bracket, Anti-Tip	17	W10854253	Bumper
	W11692162	Quick Start Guide	12	W10162253	Brace, Corner (Left)	18	W11691342	Control, MRC2
2		Panel, Lower Console		W10162252	Brace, Corner (Right)	19	W10645947	Grommet
	W10570527	Black	13	W10289170	Support, Cooktop (Left)	20	W11610960	Assembly, Induction Side Duct
3	3196178	Screw		W10289169	Support, Cooktop (Right)	21	W10598048	Bracket, Console (Center)
4		Cooktop			Vent, Trim Top	22	W10612719	Gasket, Console and Cooktop
	W11690181	Black	14		Black	23	W10689101	Gasket, Console
5	W10689102	Gasket, Console Short	15		Endcap			FOLLOWING PARTS NOT ILLUSTRATED
6	W11610945	Duct, Recirculation Plate (Left)		W10547960	Bracket, Console (Left)		W11690574	Harness, Main
	W11610944	Duct, Recirculation Plate (Right)		W10547961	Bracket, Console (Right)		W11172426	Harness, Display
7	W11610925	Pan, Induction (Lower)					W10575120	Harness, Keypad
8	W10759327	Assembly, Display						


INDUCTION ASSEMBLY PARTS

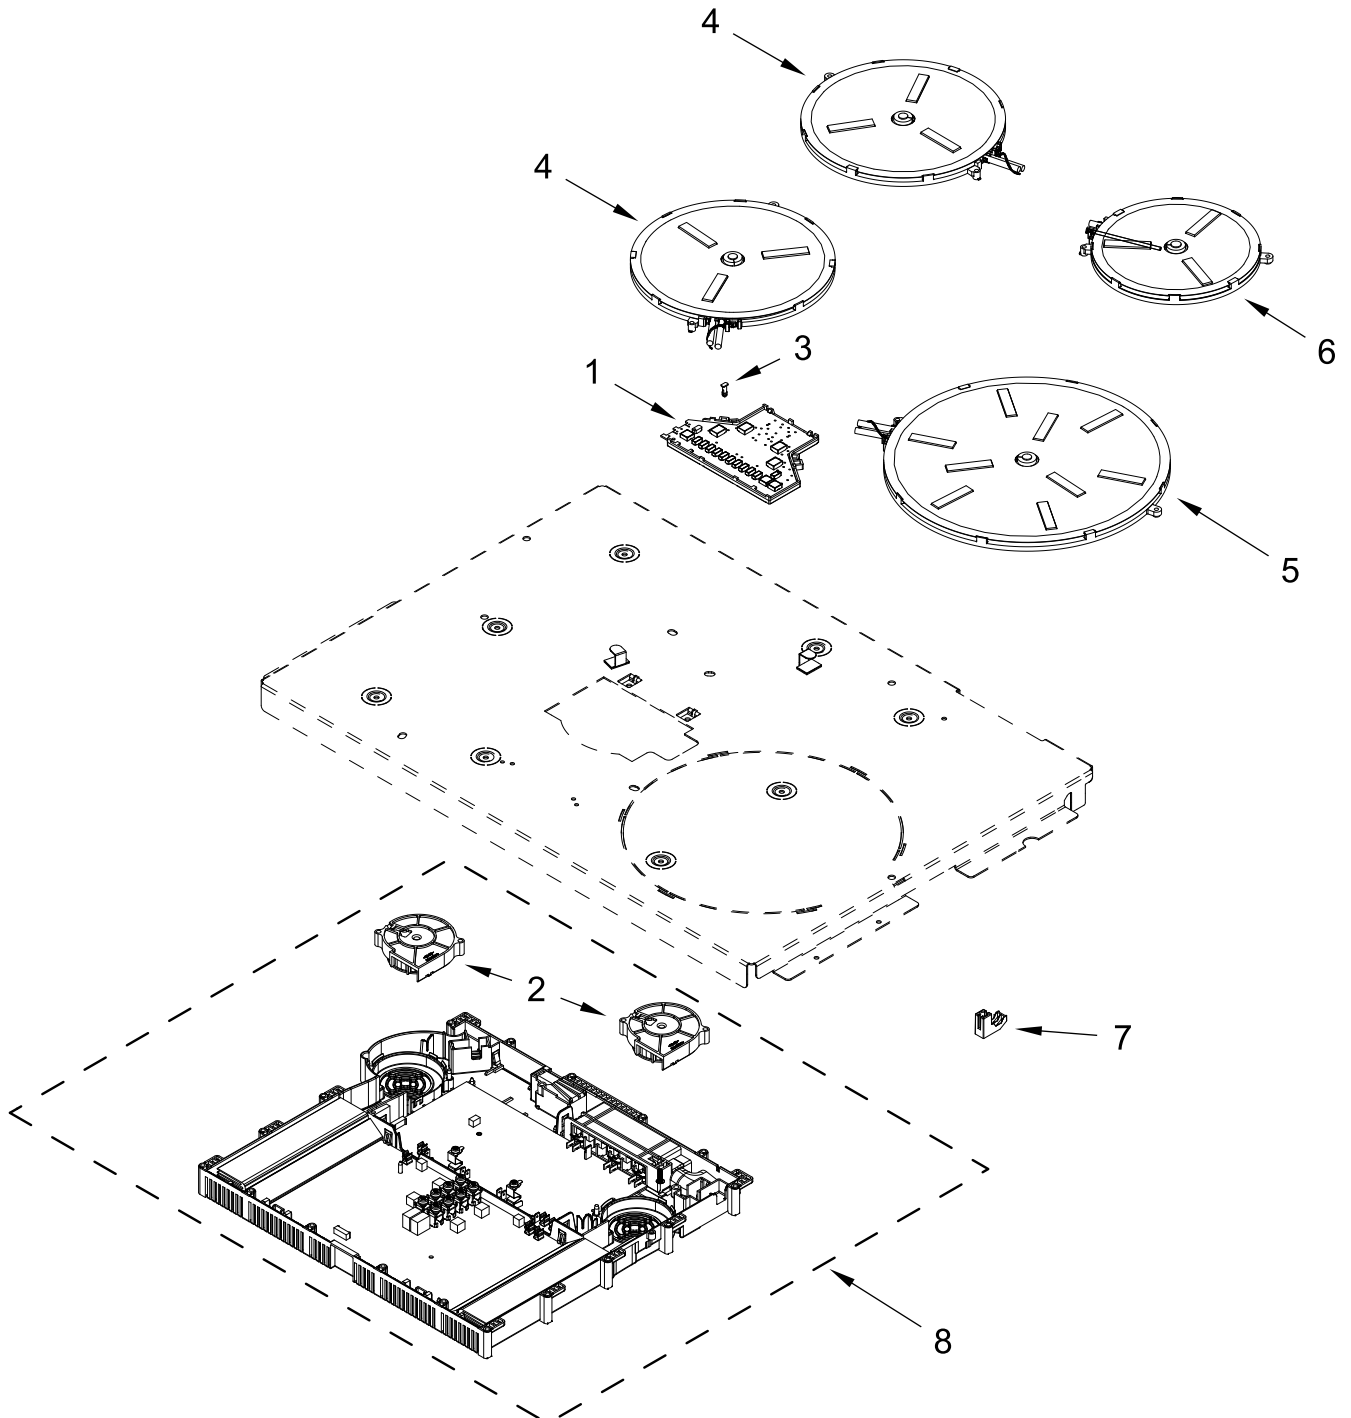

INDUCTION ASSEMBLY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11683059	User, Interface	5	W11683054	Element, Induction (Right Front)	8	W11683057	Assembly, Induction Module
2	W11683058	Fan, Cooling						
3	W11683061	Locking Pin, User Interface	6	W11683056	Element, Induction (Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
4	W11683055	Element, Induction (Left Front and Left Rear)	7	W11683063	Strain Relief, Cable		313438	Clip, Harness
							W11683062	Harness, UI to Module
							W11615923	Harness, Induction Cooktop


CHASSIS PARTS

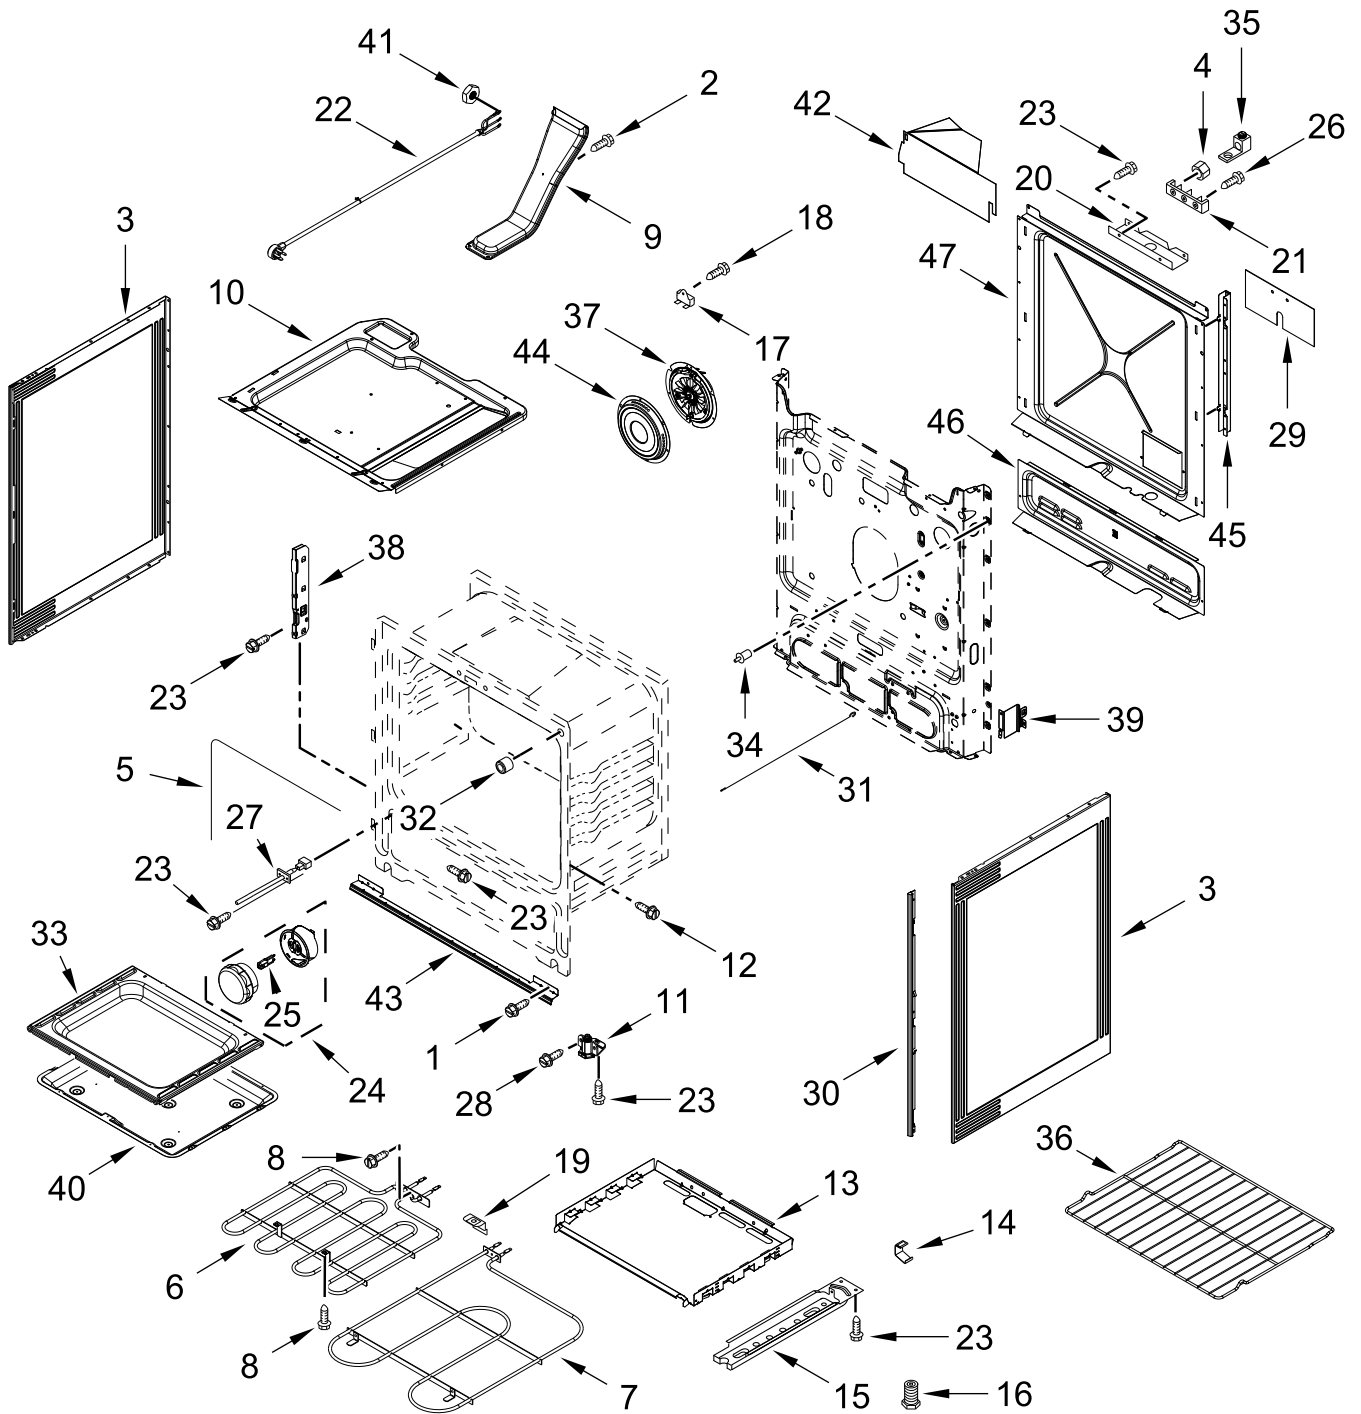

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196560	Screw	19	W10035900	Support, Oven Bottom	37	W11353926	Convection Assembly
2	W10362924	Screw	20	3186034	Bracket, Service	38	W10289077	Receiver, Hinge
3		Panel, Side	21	W10246624	Block, Terminal	39	W10273002	Bracket, Oven Support
	W10162245	Black	22	W10624592	Cord, Power	40	W11379357	Bake Pan
4	3400029	Nut	23	3196178	Screw	41	7103P027-60	Nut
5	W11491752	Gasket, Door	24	W11634772	Light Assembly	42	W10818358	Shield, Wire
6	W10544952	Element, Broil	25	7407P103-60	Bulb, Light	43	W11620269	Bracket, Front Frame
7	W10774342	Element, Bake	26	3400016	Screw	44	W10346154	Cover, Convection
8	W10362924	Screw	27	W10586204	Sensor	45	W10162241	Channel, Rear
9	W11122085	Assembly, Flue	28	3196169	Screw	46	W10162248	Cover, Wire
10	W10289168	Box, Burner SI	29	W10655441	Shield, Power Cord	47	W11379354	Cover, Back
11	W10341186	Front Foot Assembly	30	W11510561	Barrier Rail, Rubber (Front Left)			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw		W11510562	Barrier Rail, Rubber (Front Right)	W10289173		Insulation, Wrap
13	W10541959	Shield, Bake	31	W10273192	Rod, Door Switch	W10575374		Insulation, Bottom
14	W10137382	Clip, Panel	32	9758701	Spacer, Door	4820F015-59		Insulation, Strap
15	W10390008	Base Rail Assembly (Left)	33	W10774446	Bottom, Oven	W10655490		Insulation, Main Back
	W10390007	Base Rail Assembly (Right)	34	W11511828	Switch, Door	7111P017-60		Clamp, Wire
16	W10058460	Foot, Leveling	35	W10281322	Kit, Bare Wire Adapter Block			
17	3196548	Fuse, Thermal	36	W10531060	Rack, Oven			
18	3196172	Screw						


DOOR PARTS

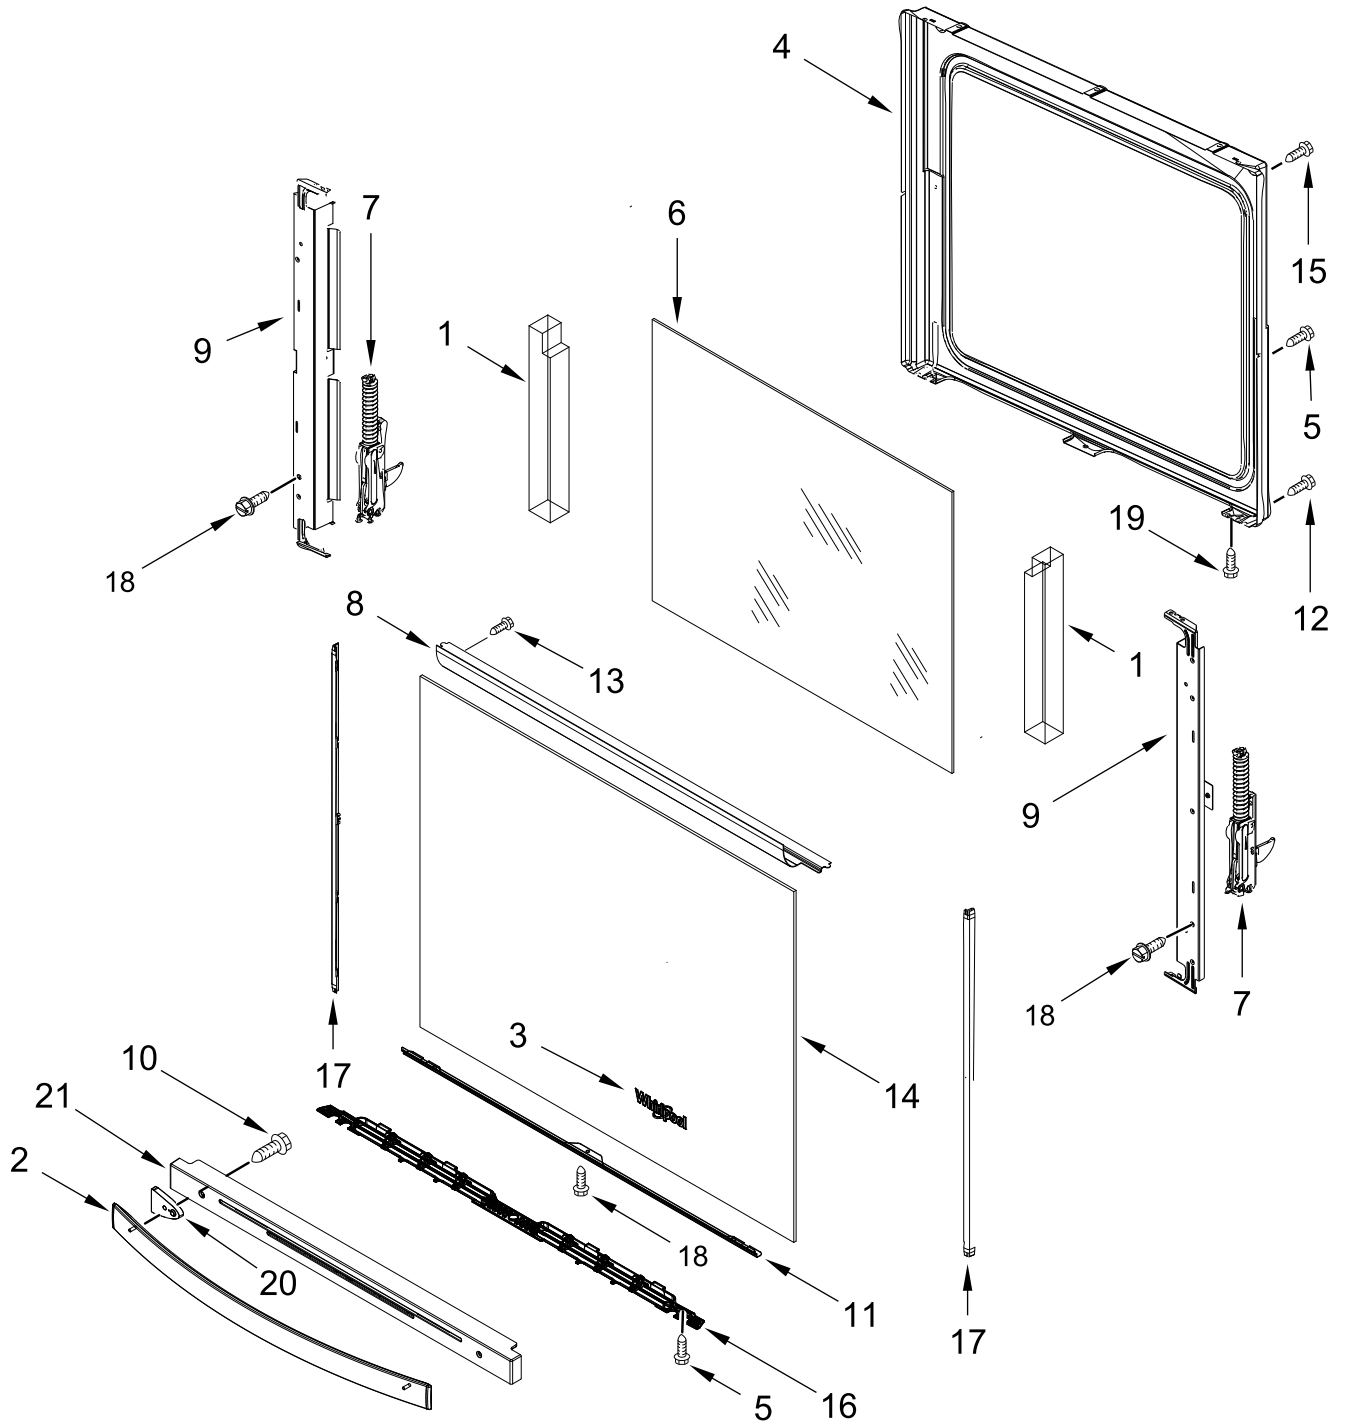

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10772958	Insulation, Door	9	W10294851	Rail, Door	17		Trim, Side
2		Assembly, Door Handle	10	3196165	Screw		W10334004	Black
	W10903342	Black Stainless	11		Trim, Bottom	18	W10327235	Screw
3	W10884775	Badge		W10334031	Black	19	9780274	Screw
4	W10297318	Liner, Door	12	W10031780	Screw	20		Standoff, Handle
5	W10031790	Screw	13	W10477496	Screw		W10917796	Black
6	W10300487	Glass, Inner	14		Assembly, Outer Door	21		Trim, Vent
7	W10440013	Hinge, Door (Active)		W11693008	Black		W11691763	Black
8	W10294853	Bracket, Glass Liner	15	W10317886	Screw			
			16	W11440160	Door, Bottom Cover			

DRAWER PARTS

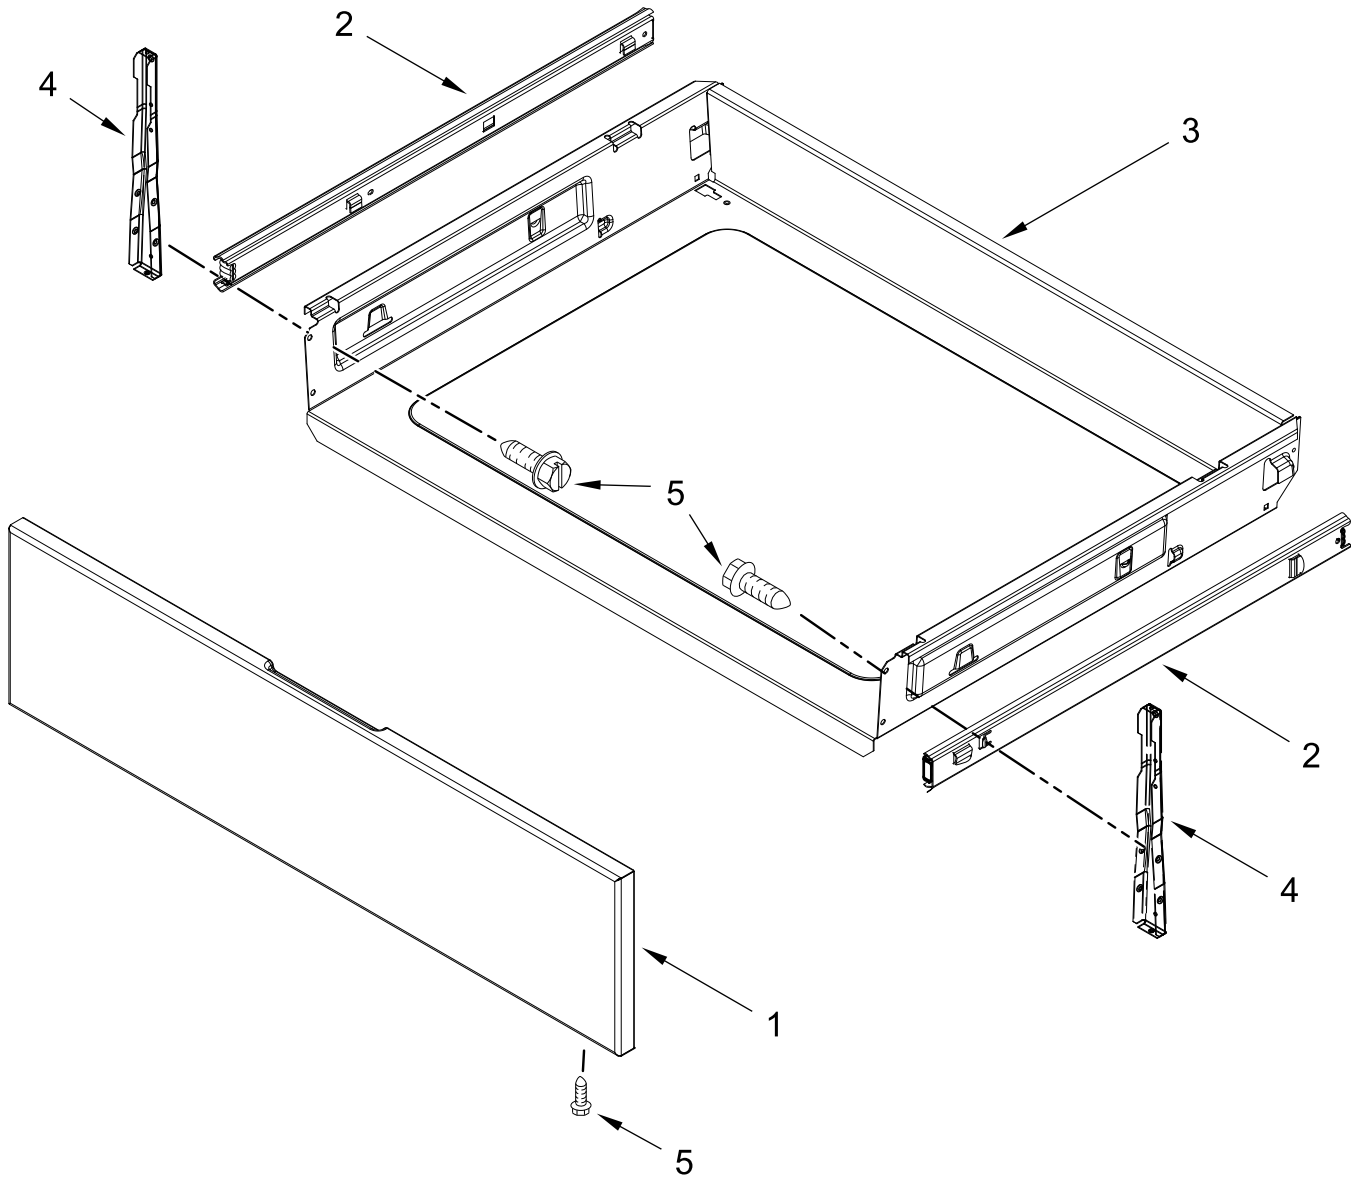

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10441804	Slide, Drawer (Left)	4	W10318026	Bracket, Mounting
	W11449715	Black Stainless		W10441805	Slide, Drawer (Right)	5	3196169	Screw
			3	W10688022	Drawer, Storage			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72032	Black
	72017	White
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	285006	Black
	350930	White
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS AND POLISHES
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432539	Griddle
	W10432545	Kit, Grill TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless