 


Slide-In Gas Range Quick Start Guide

PRODUCT REGISTRATION AND OWNER INFORMATION

YOUR QR CODE UNLOCKS

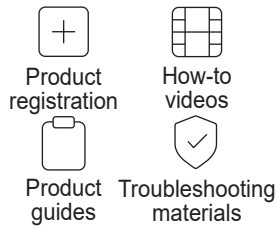

YOUR QR CODE UNLOCKS... product registration and warranty information, installation instructions, how-to videos, and additional accessories to get the most out of your product. If you purchased a smart appliance, your QR code will provide instructions on how to download the app and connect. You can access the full Installation, User Maintenance and Operating Instructions, Warranty details, and more by visiting our website at www.whirlpool.com/owners or www.whirlpool.ca/owners. This may save you the cost of a service call. To receive a free printed copy of the information online, call us at **1-866-698-2538** (U.S.A.) / **1-800-807-6777** (Canada) or write to us at:

Whirlpool Brand Home Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2692

Whirlpool Brand Home Appliances
Customer eXperience Centre Unit
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

Register to access warranty information and receive important notifications related to your product. Scan the Photo Registration Card or QR code to register your product.

OPERATING INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

Using Your Oven

- Step 1.** Select oven function.
 - Step 2.** Set the temperature.
 - Step 3.** Press Start.
 - Step 4.** Place food inside the oven once set temperature is reached. Close the oven door.
 - Step 5.** (Optional) Enter time to cook.
 - Step 6.** The Cancel button can be used to cancel the function during or after cook time.
- NOTE:** For more detailed instructions on specific functions, see the online Control Guide.

Using Your Range

WARNING



Fire Hazard

Do not let the burner flame extend beyond the edge of the pan.

Turn off all controls when not cooking.

Failure to follow these instructions can result in death or fire.

Before setting a control knob, place filled cookware on the grate. Do not operate a burner using empty cookware or without cookware on the grate.

The flame should be adjusted so it does not extend beyond the edge of the pan.

NOTE: Visually check that the burner has lit. If the burner does not ignite, listen for a clicking sound. If you do not hear the igniter click, turn the burner off. Check for a tripped circuit breaker or blown household fuse. Check that the control knob is pressed completely down on the valve shaft. If the spark igniter still does not operate, call a trained repair specialist.

To Use:

- Push in and turn knob counterclockwise to Ignite. All surface burners will click. Only the burner with the control knob turned to Ignite will produce a flame.
- Turn knob to anywhere between HIGH and LOW.

Electric igniters automatically light the surface burners when control knobs are turned to Ignite.

REMEMBER: When range is in use, the entire cooktop area may become hot.

POWER FAILURE

In case of prolonged power failure, the surface burners can be lit manually. Hold a lit match near a burner and turn knob counterclockwise to the Ignite position. After the burner lights, turn knob to setting.

ALUMINUM FOIL

IMPORTANT: To avoid permanent damage to the oven bottom finish, do not line the oven bottom with any type of foil or liner.

For best cooking results, do not cover entire oven rack with foil because air must be able to move freely.

IMPORTANT: Do not allow aluminum foil and meat probes to contact heating elements.

 
POSITIONING RACKS AND BAKEWARE

IMPORTANT: To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the oven door or bottom.

Racks

- Position racks before turning on the oven.
- Do not position racks with bakeware on them.
- Make sure racks are level.

To move a rack, pull it out to the stop position, raise the front edge, and then lift out. Use the following illustrations as a guide.

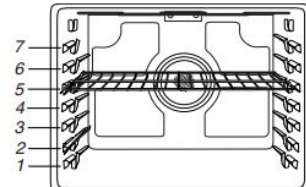


For hamburger patties to have a well-seared exterior and a rare interior, use a flat rack in rack position 7. Preheat the oven for 5 minutes. Side 1 should cook for approximately 4 to 5 minutes. Side 2 should cook for approximately 4 1/2 to 5 1/2 minutes. Expect a moderate degree of smoke when broiling.

BAKING COOKIES AND LAYER CAKES ON TWO RACKS

Baking Layer Cakes

 For best results when baking cakes on two racks, use the Bake function, a flat rack in rack position 5, and a flat rack in rack position 2. If you do not have two flat racks, use a Max Capacity Oven Rack in rack position 6. Place the cakes on the racks, as shown. Keep at least 3" (7.6 cm) of space between the front of the racks and the front cakes.

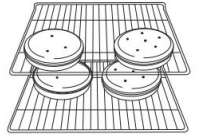


Baking Cookies

For best results when baking cookies on two racks, use the Convection Bake function, a flat rack in rack position 5, and a flat rack in rack position 2. If you do not have two flat racks, use a flat rack in rack position 2 and a Max Capacity Oven Rack in rack position 6. If you do not have Convection Bake, use the standard Bake function.

BURNER SIZE


Select a burner that best fits your cookware. See the following illustration and chart.

Burner Size	Recommended Use
Small (Auxiliary)	<ul style="list-style-type: none">Low-heat cookingMelting chocolate or butter
Medium (Semi Rapid)	<ul style="list-style-type: none">Multipurpose burner
Oval	<ul style="list-style-type: none">Multipurpose burner
Wok	<ul style="list-style-type: none">For large cookware
X-Large (most powerful) (Stack)	<ul style="list-style-type: none">For large cookwareMost powerful burner

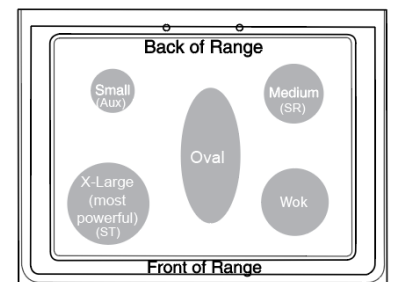 

OVEN VENT

 The oven vent releases hot air and moisture from the oven and should not be blocked or covered. Blocking or covering the oven vent will cause poor air circulation, affecting cooking and cleaning results. Do not set plastics, paper, or other items that could melt or burn near the oven vent.

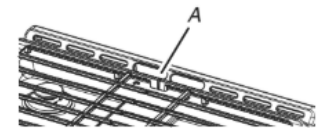

A. Oven vent

OVEN LIGHT

The oven light is a 40 W halogen bulb. Before replacing, make sure the oven and cooktop are cool and the control knobs are in the Off position.

To Replace:

- Disconnect power.
- Turn the glass bulb cover in the back of the oven counterclockwise to remove.
- Remove bulb from socket.
- Replace bulb, using tissue or wearing cotton gloves to handle bulb. To avoid damage to or decreasing the life of the new bulb, do not touch bulb with bare fingers.
- Replace bulb cover by turning clockwise.
- Reconnect power.

IMPORTANT: Do not use lamps rated higher than 40 W.

WI-FI CONNECT (on some models)

Download the Whirlpool® App from the app store on your mobile phone. See the Internet Connectivity Guide section in the Owner's Manual for more detailed instructions. You may also visit www.whirlpool.com/connect.

NOTE: For further information on connecting your appliance to your home Wi-Fi network, read the online Control Guide.

REMOTE ENABLE (on some models)

Select REMOTE ENABLE to enable the ability to utilize the Whirlpool® app.

SABBATH MODE:

The Sabbath Mode sets the oven to remain on the bake setting until disabled.

For guidance on usage and a complete list of models with Sabbath Mode, visit www.star-k.org or contact us as per the information provided above.