




**30" DOUBLE OVEN ELECTRIC RANGE
(Fingerprint Resistant)**

MODELS:

MET8800FZ05 (Stainless)


COOKTOP PARTS

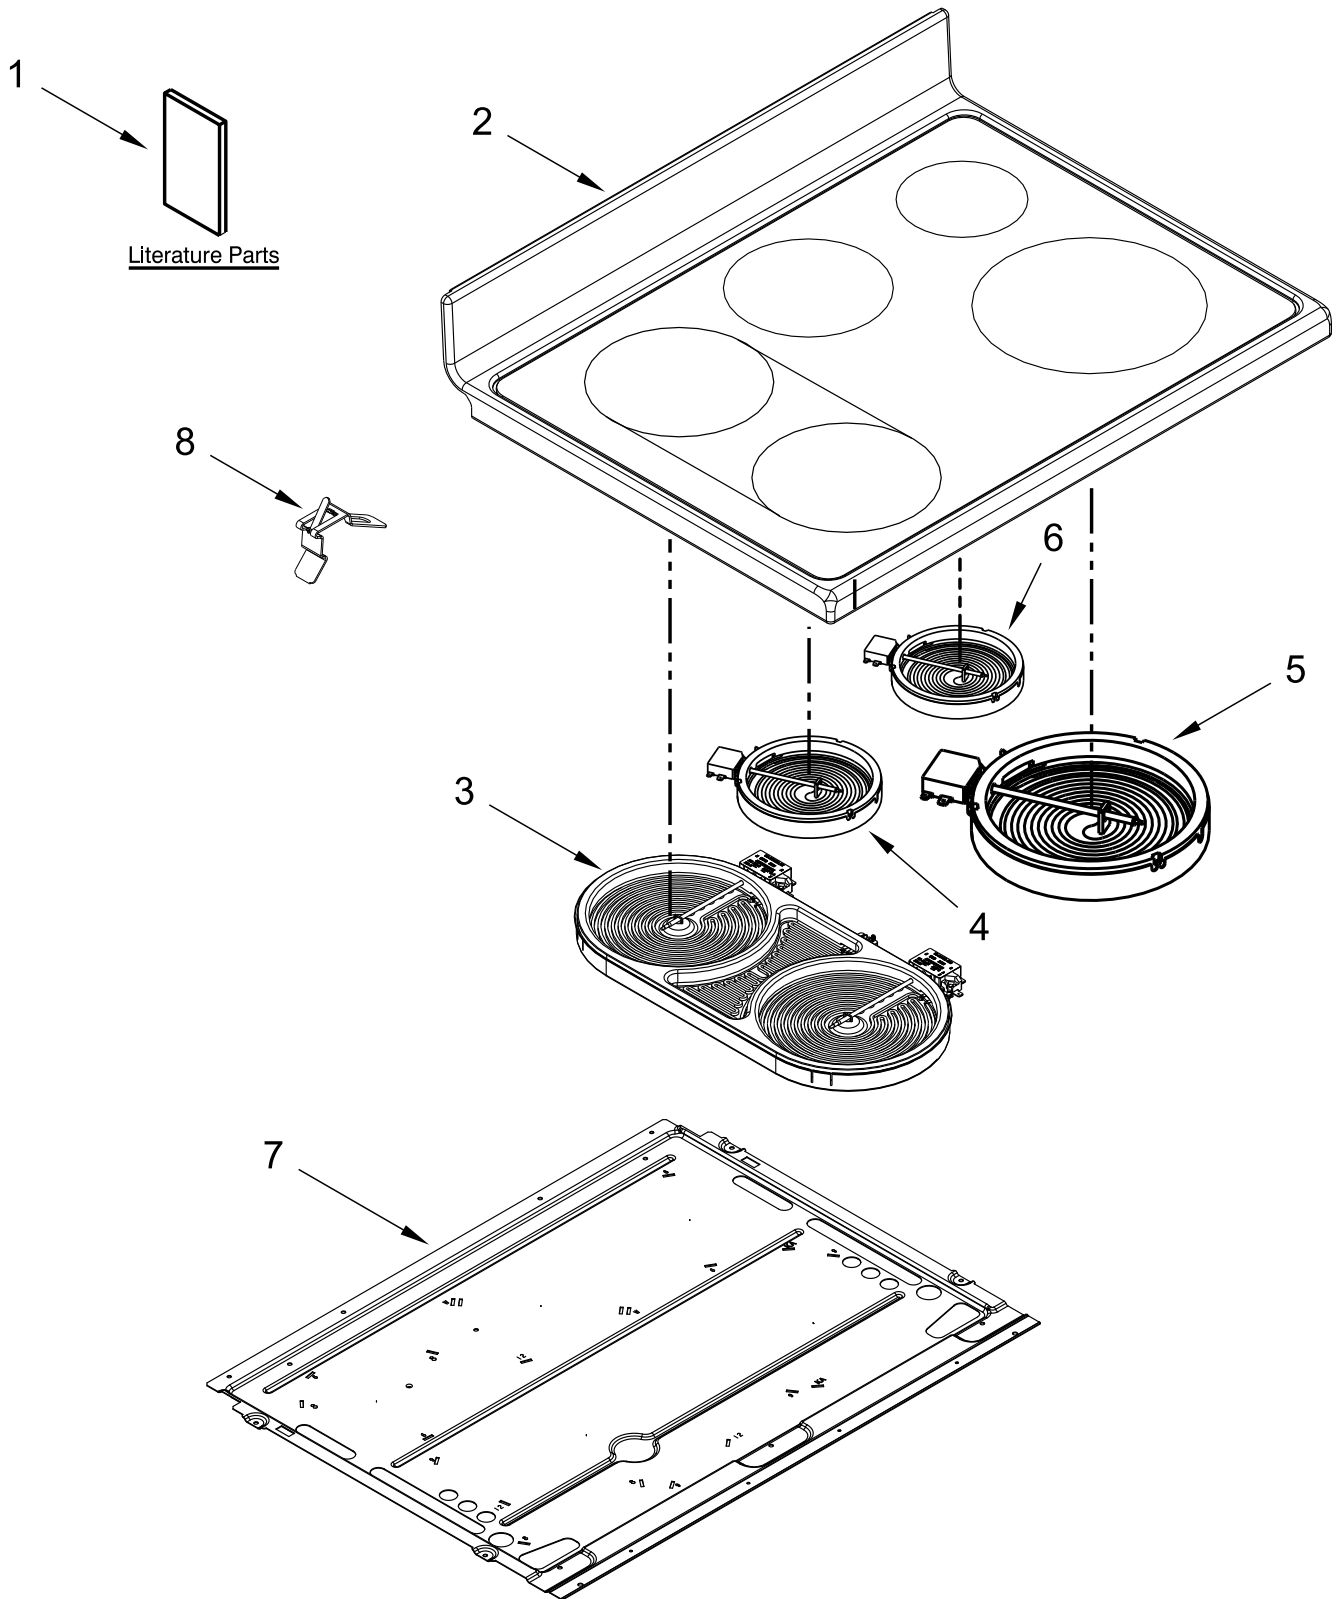

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W10225448	Spring, Element
	W11427490	Owner's Manual			FOLLOWING PARTS
	W11430271	Quick Start Guide			NOT ILLUSTRATED
	W11333112	Tech Sheet		W11190468	Harness, Main
2		Cooktop		W11217845	Harness, Infinite Switch (Left)
	W10902186	Black		W11217848	Harness, Infinite Switch (Right)
3	W10248259	Element, Bridge (Left Front & Left Rear)		W11190467	Harness, Cooktop
4	W10799048	Element, Warm Zone (Center Rear)		W11172531	Harness, Sensor & Locks
5	W10251108	Element (3200W) (Right Front)		W11172428	Harness, EOL (DOFSR)
6	8273994	Element (1200W) (Right Rear)		7101P027-60	Screw, Ground
7	W10260946	Panel, Element Support		8019P013-60	Clip, Wire Lock
				7401P157-60	Block, Bare Wire Adapter


CONTROL PANEL PARTS

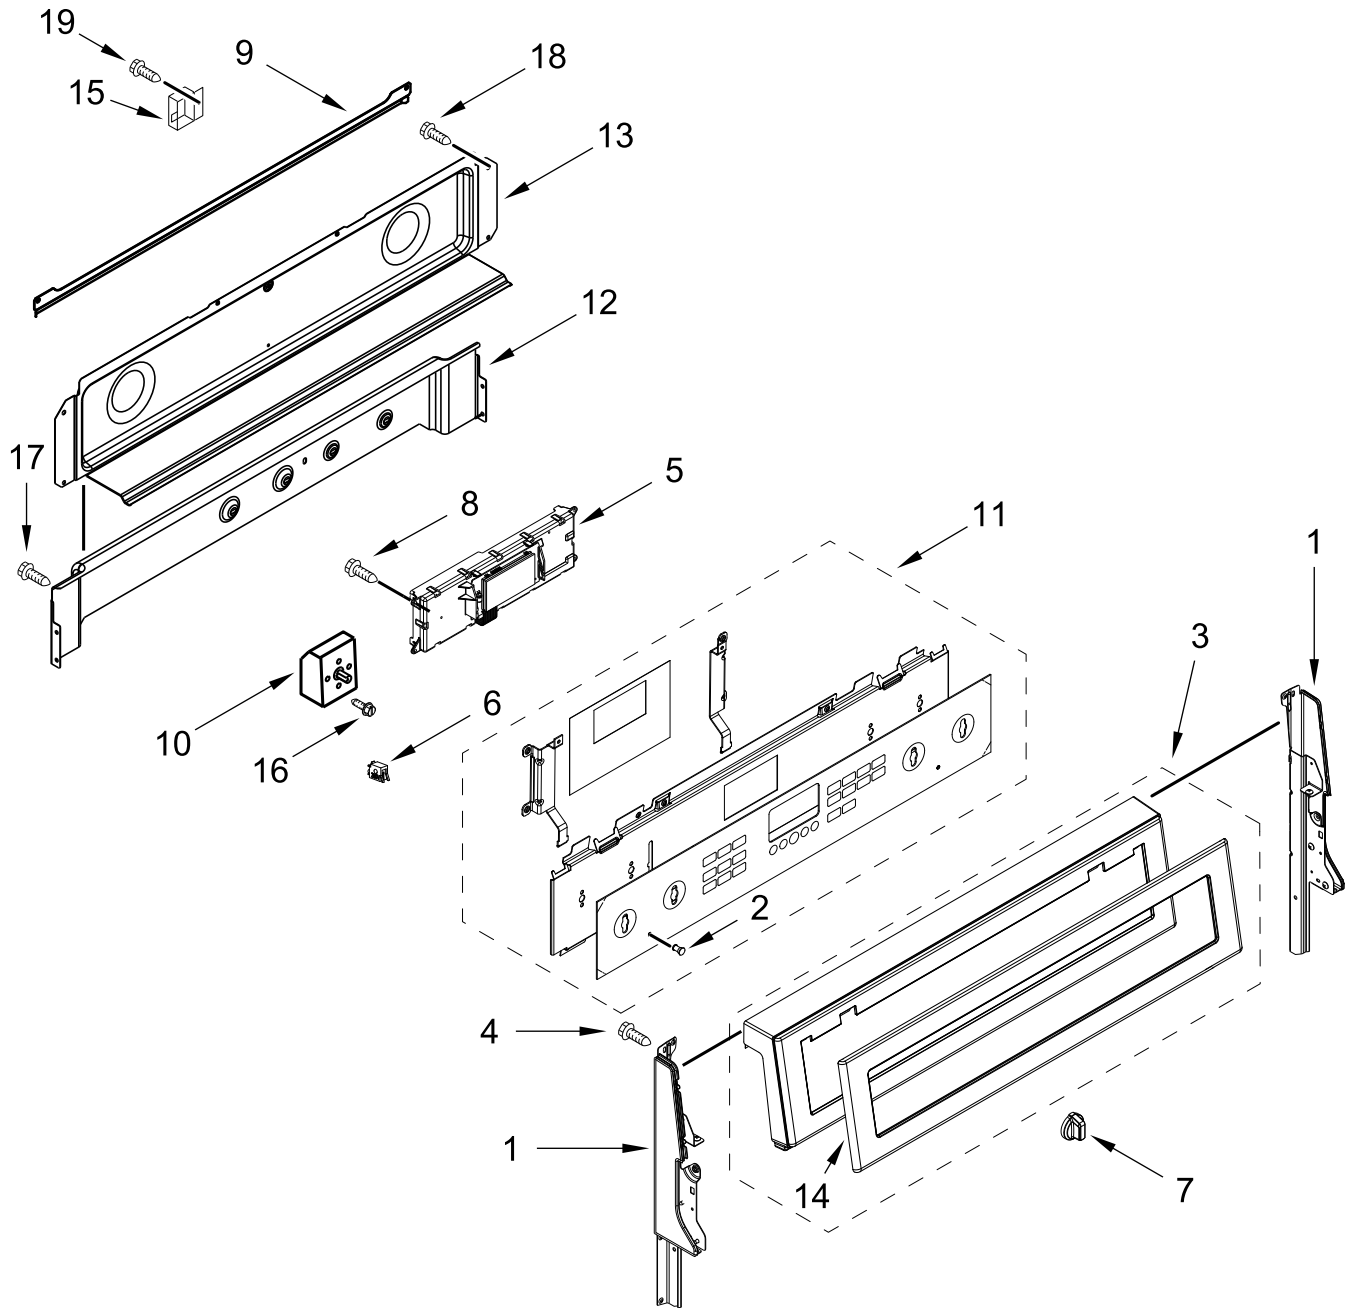

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	9	W10299338	Shield, Wire Cover	13	W10776098	Cover, Backguard
	W10319109	Black (Left)	10	W10312185	Switch, Infinite (Left Front)	14		Skin, Console (Not Serviced)
	W10319111	Black (Right)		W10843843	Switch, Infinite (Left Rear)	15	8285593	Cover, Connector
2	3196068	Lens, Indicator		W10437094	Switch, Infinite (Right Front)	16	7101P309-60	Screw
3		Assembly, Console		W10578768	Switch, Infinite (Right Rear)	17	9780274	Screw
	W11024861	Stainless	11		Assembly, Membrane (Includes Bracket)	18	7101P426-60	Screw
4	W10241367	Screw		W11527471	Stainless	19	W10292297	Screw
5	W11515092	Control, Maxwell Electric		12	W10278697	Shield, Vent		
6	7407P136-60	Light, Indicator						
7		Knob						
	W10886657	Stainless						
8	7101P434-60	Screw						


CHASSIS PARTS

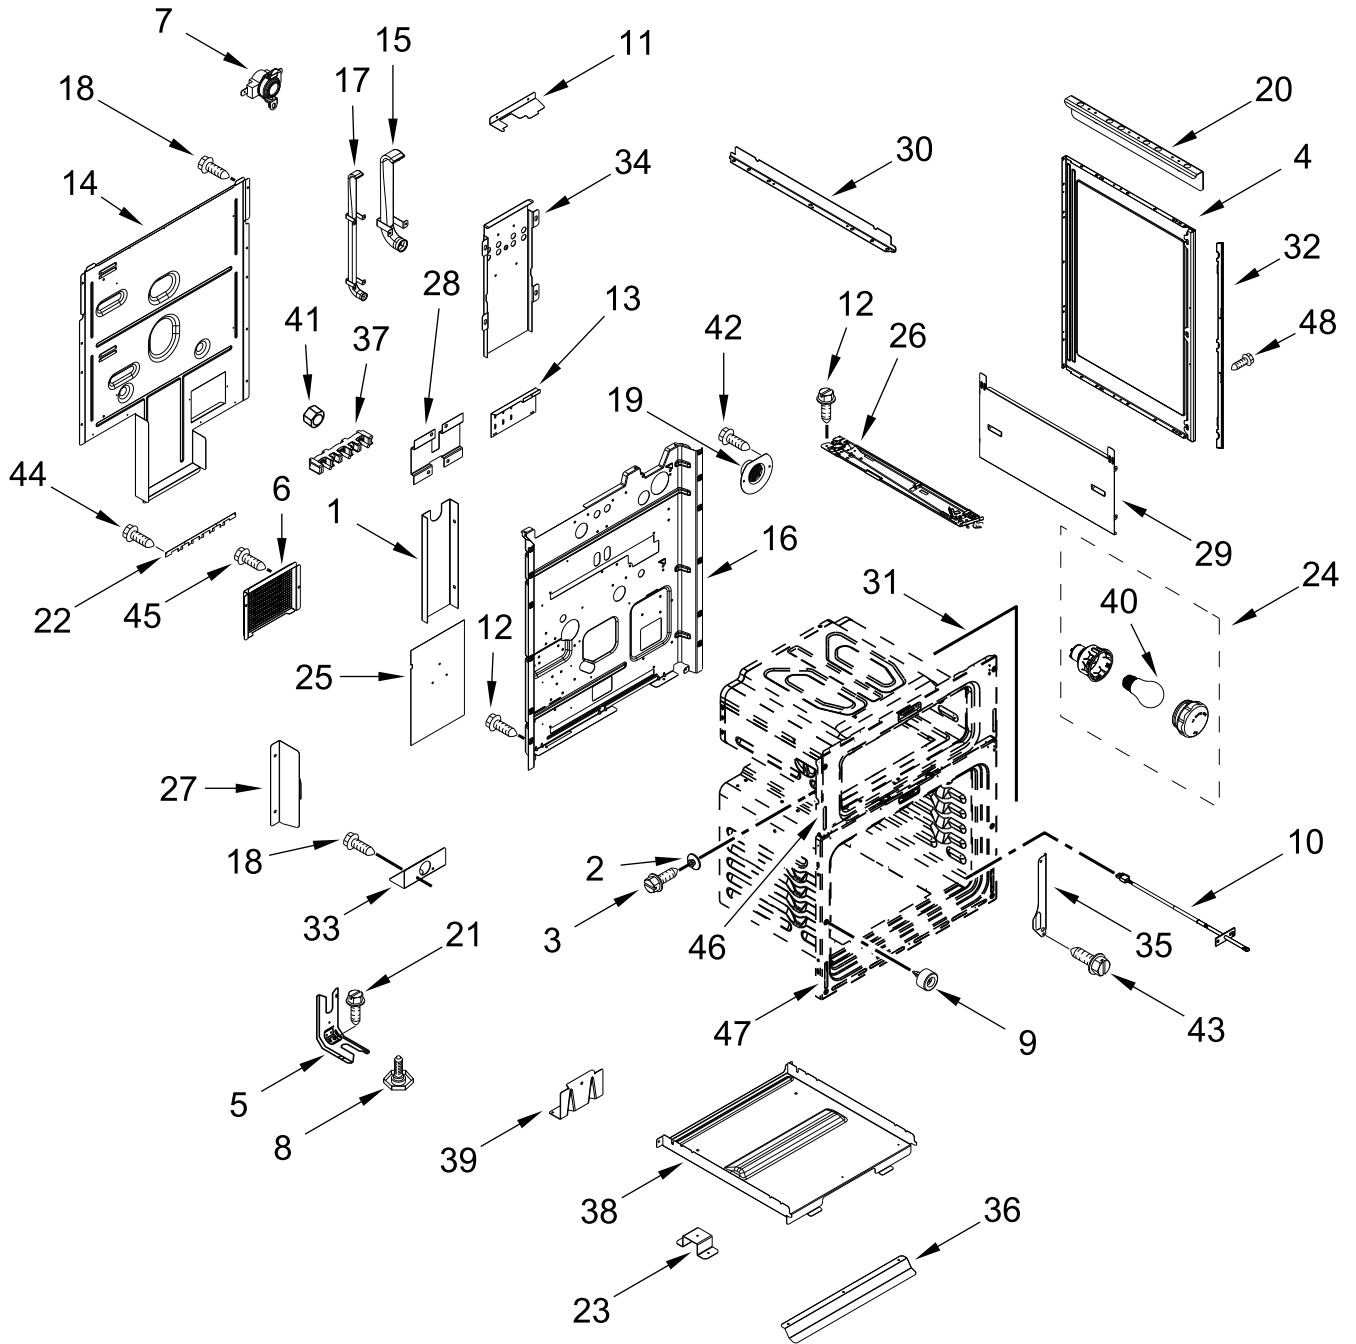

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	22	8036P012-60	Shield, Power Cord	38	W10548601	Pan, Element
2	W11479123	Spacer, Side Panel	23	W10260545	Clip, Retaining	39	W10863342	Support, Lower Oven
3	7101P642-60	Screw	24	W11544370	Light Assembly	40	7407P103-60	Bulb, Light
4		Panel, Side	25	W10311987	Shield, Cord (Right)	41	3400029	Nut
	W11477310	Black	26	W10683517	Lock, Rear Mount	42	W10720084	Screw
5	3801F656-51	Bracket, Anti-Tip	27	W10268560	Cover, Wire Lower	43	4449743	Screw
6	W10312612	Cover, Access (Terminal Block)	28	7003P104-60	Insulator, Heat Shield	44	489290	Screw
7	7403P899-60	Switch, High Limit	29	W10538516	Shield, Side Insulation	45	7101P338-60	Screw
8	7101P507-60	Foot, Leveler	30	W10357697	Bracket, Side Panel	46	W11515375	Front, Main (Upper)
9	W10105790	Bumper & Screw	31	W11491754	Gasket, Oven Door	47	W11515372	Front, Main (Lower)
10	7430P044-60	Sensor, Oven			(Upper)	48	3196160	Screw
11	W10268559	Cover, Lower Wire		W11491753	Gasket, Oven Door			INSULATION PARTS NOT ILLUSTRATED
12	7101P426-60	Screw			(Lower)		W10271637	Insulation, Floor
13	W10332449	Shield, Cord	32	W11453994	Bracket, Rubber Barrier		W11462751	Insulation, Wrapper
14	W10261386	Cover, Main Wire					W10322111	Insulation, Back
15	W10337391	Tube, Vent (Upper)	33	W10190166	Bracket, Power Supply		W10204079	Insulation, Middle
16	W10668730	Back, Main	34	W10261388	Bracket, Terminal		W10204085	Insulation, Main Front Strip
17	W10323793	Tube, Vent (Lower)	35	W10410463	Cover, Hinge (Left)		W11463064	Insulation, Hidden Bake Pouch
18	7101P434-60	Screw		W10410461	Cover, Hinge (Right)			
19	W10322408	Adapter, Vent Tube	36	W10253470	Bracket, Retaining			
20	W10319087	Bracket, U Channel	37	W10245259	Block, Terminal			
21	7101P485-60	Screw, Anti-Tip Kit						


INTERNAL OVEN PARTS

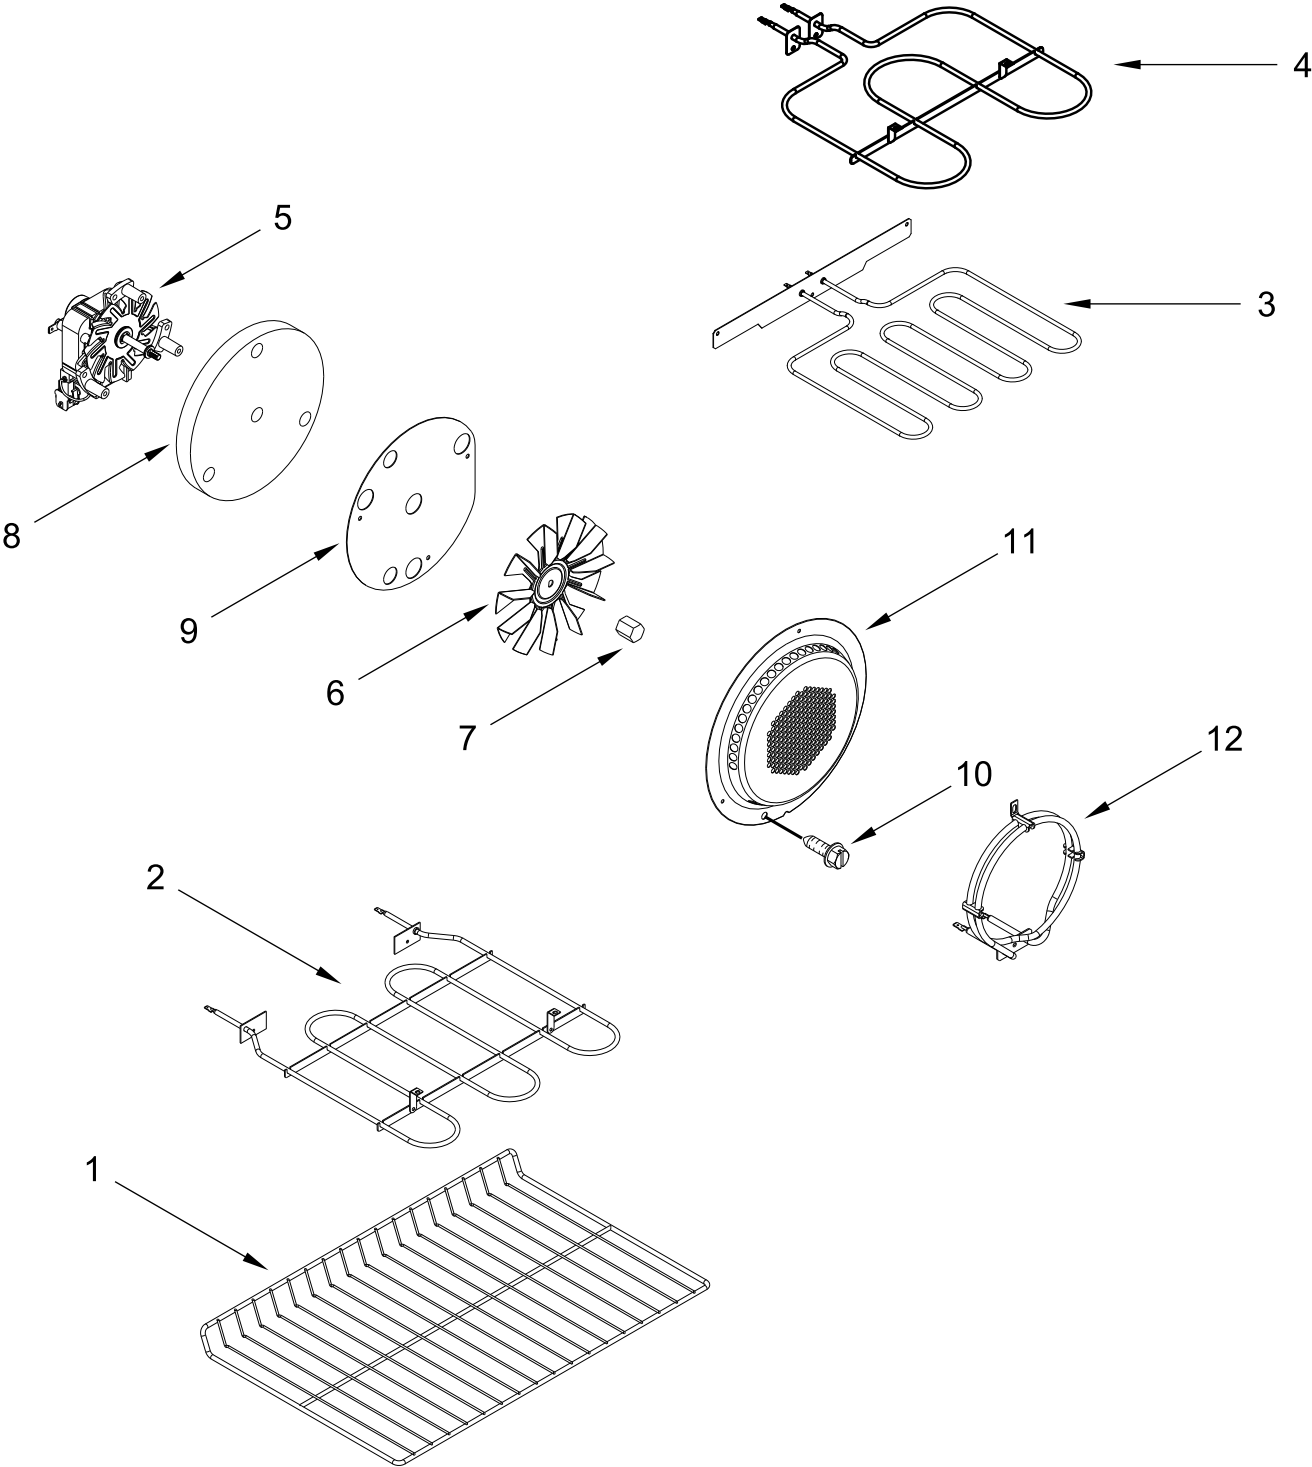

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10179152	Rack, Oven	5	W11190725	Motor, Convection	10	W10720084	Screw
2	W10249979	Element, Broil (Lower)	6	W10631503	Blade, Fan	11	4448988	Cover, Fan
3	W11095935	Bake Element (Upper & Lower)	7	W10631504	Nut, Acorn (LH)	12	W10271639	Element, Convection (240VAC)
4	W11095934	Broil Element (Upper)	8	W10274268	Insulation, Convection Motor			
			9	W10339476	Plate, Insulation			


UPPER DOOR PARTS

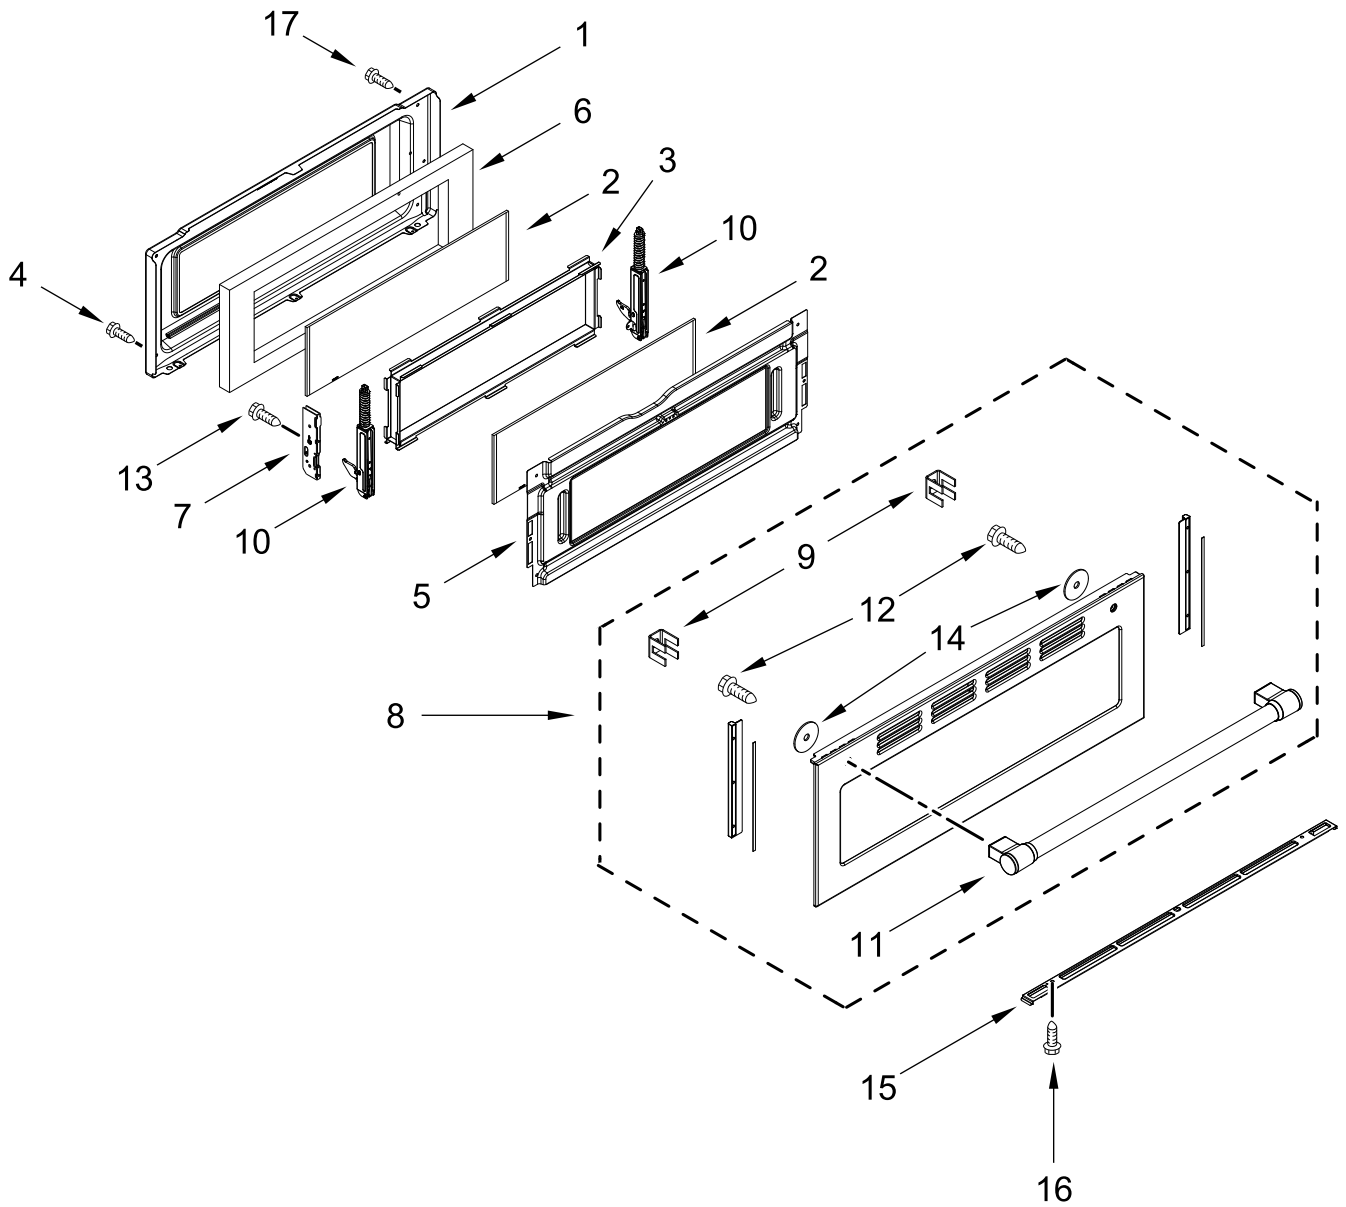

UPPER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051040	Lining, Door	9	W10575917	Spacer, Vent Trim	15	W11448964	Bracket, Door Trim
2	W11099272	Glass, Inner	10	W10485733	Hinge, Door (Left)	16	W10284411	Screw with Washer
3	W10272708	Frame, Glass		W10485732	Hinge, Door (Right)	17	W10317886	Screw
4	W10292297	Screw	11		Assembly, Door Handle			
5	W10485723	Retainer, Insulation		W10904974	Stainless			
6	W10321271	Insulation, Door	12	W10480830	Screw			
7	W10289077	Receiver, Hinge	13	W10031780	Screw			
8		Assembly, Outer Door	14	7109P084-60	Washer, Fiber			
	W10888652	Stainless						

LOWER DOOR PARTS

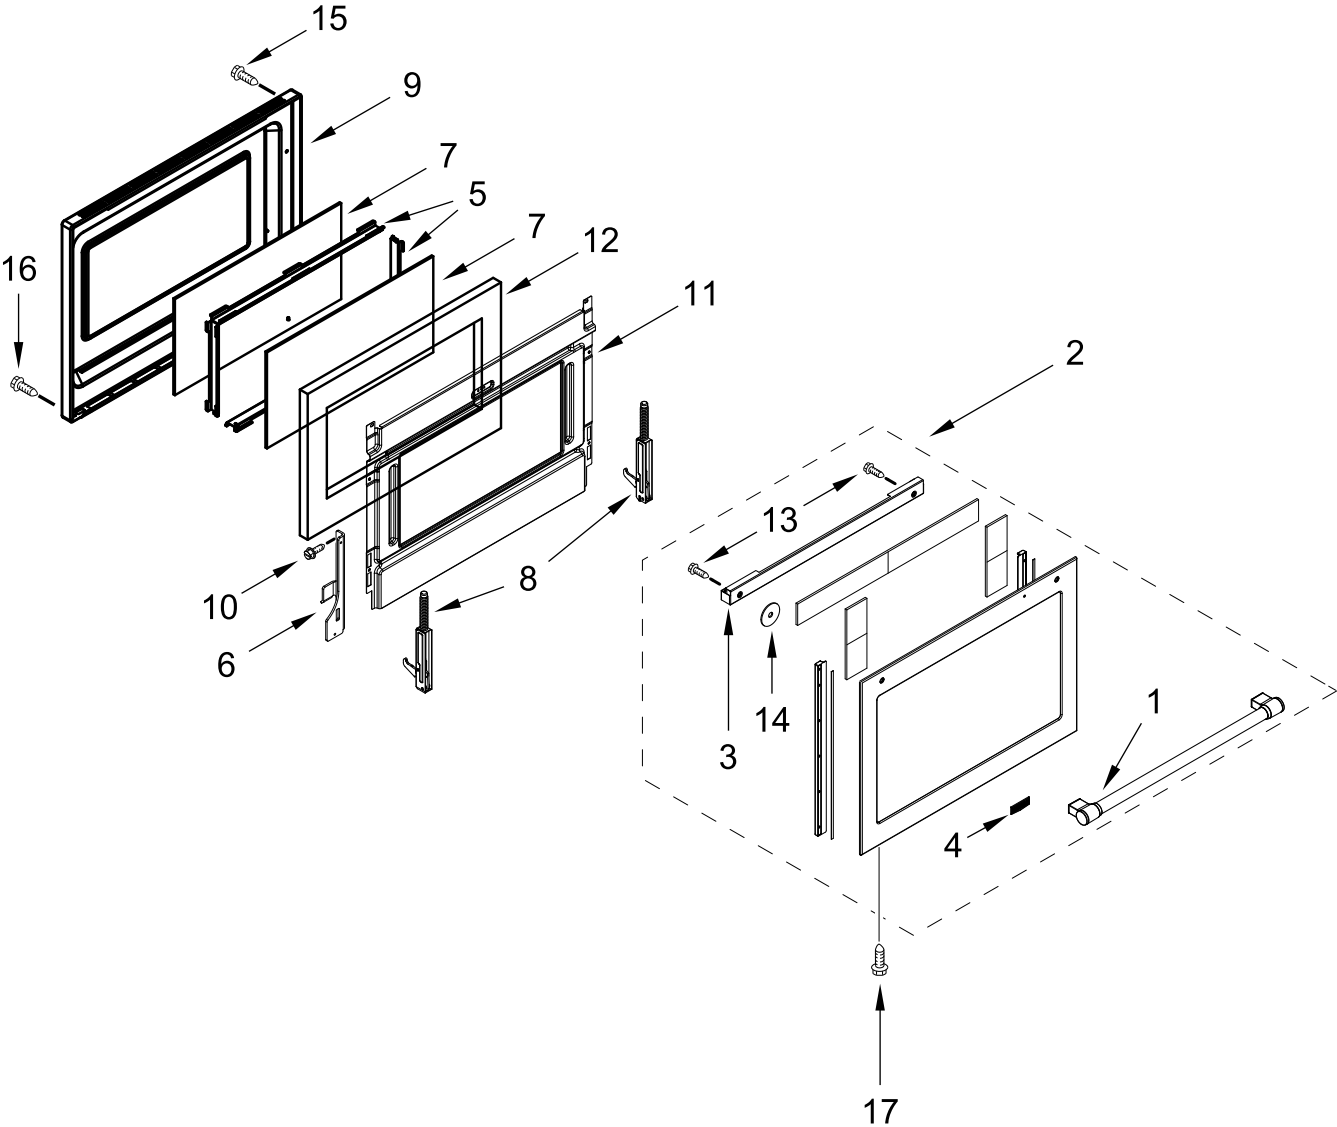

LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle	6	W10272329	Receiver (Left)	12	W10321285	Insulation, Door
	W10904974	Stainless		W10272328	Receiver (Right)	13	W10480830	Screw
2		Assembly, Outer Door	7	9757706	Glass, Inner	14	7109P084-60	Washer, Fiber
	W11528791	Stainless	8	W10335434	Hinge, Door (Left)	15	W10898280	Screw
3	W10575689	Bracket, Handle		W10335433	Hinge, Door (Right)	16	W10292297	Screw
4	W10612925	Badge	9	W10272698	Lining, Door	17	W10284411	Screw with Washer
5	W10272594	Frame, Glass	10	4449040	Screw			
			11	W10340464	Retainer, Insulation			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)
		PAINT, SPRAY
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORIES
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning