




GAS RANGE

MODELS:

MFGS6030RB0 (Black)
MFGS6030RW0 (White)


COOKTOP PARTS

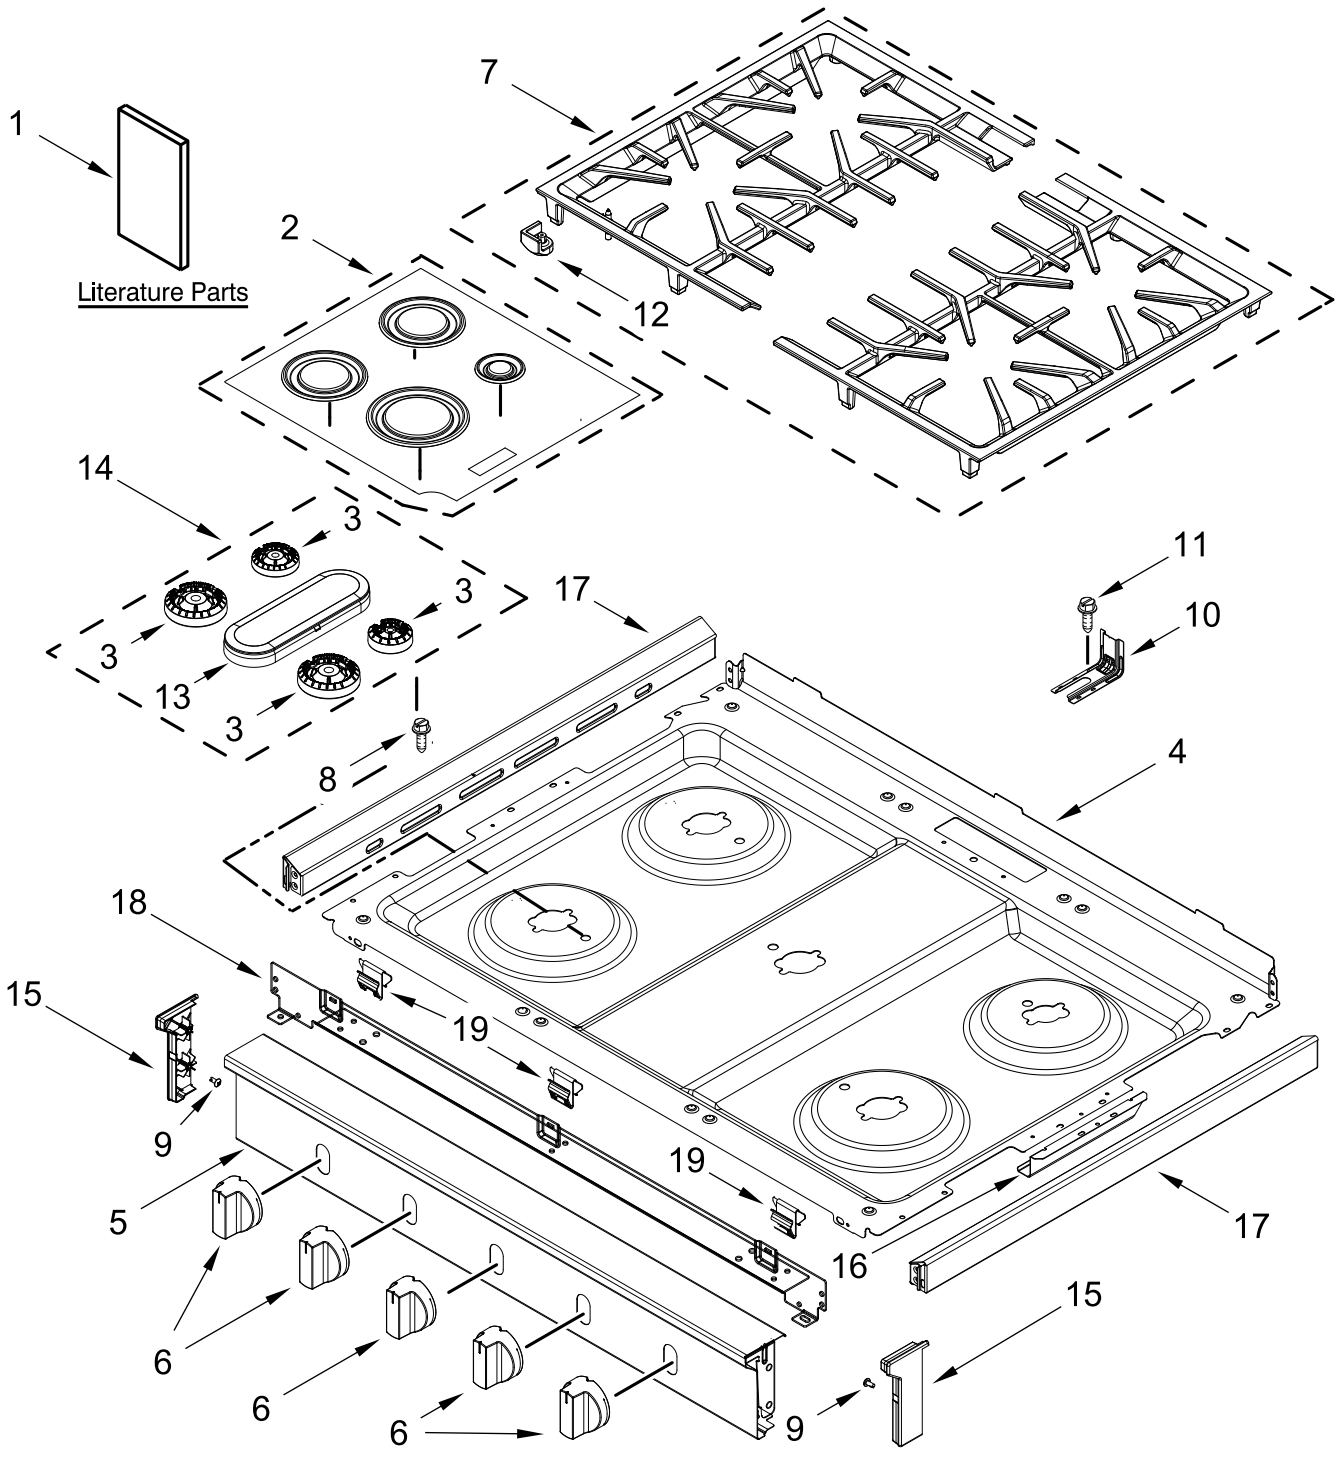

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6		Knob, Control	16	W11366598	Bracket, Spark Module
	W11641830	Quick Start Guide		W11584000	Stainless	17	W11736695	Cooktop, Frame
	W11642080	Owners Manual	7		Grate Kit	18		Bracket, Front Cooktop
	W11639172	Tech Sheet		W11601432	Black (Set of 2)		W11736687	Black
2		Burner Cap Kit	8	W10673618	Screw	19	W11637551	Spring, Clip
	W11636608	Black (Set of 4)	9	9780274	Screw			FOLLOWING PARTS NOT ILLUSTRATED
3	W11352019	Spreader, Flame (Left Front and Right Rear)	10	W11379945	Bracket, Anti-Tip		W11374168	Harness, Main
	W11352021	Spreader, Flame (Left Rear)	11	7101P485-60	Screw, Anti-Tip Kit		3196173	Screw
	W11352018	Spreader, Flame (Right Front)	12	W11672010	Grate, Bumper		W11448086	Harness, Bake and Broil
4		Cooktop	13	W11357363	Oval Burner Assembly		3196520	Clip, Wire
	W11279786	Black	14	W11635708	Burner Kit		313438	Clip, Harness
5		Panel, Manifold	15		Panel, Manifold End Cap		3196896	Clip, Wire
	W11412237	Black		W11402711	Black (Left)			
	W11412238	White		W11402710	Black (Right)			
				W11402708	White (Left)			
				W11402707	White (Right)			


CONTROL PANEL PARTS

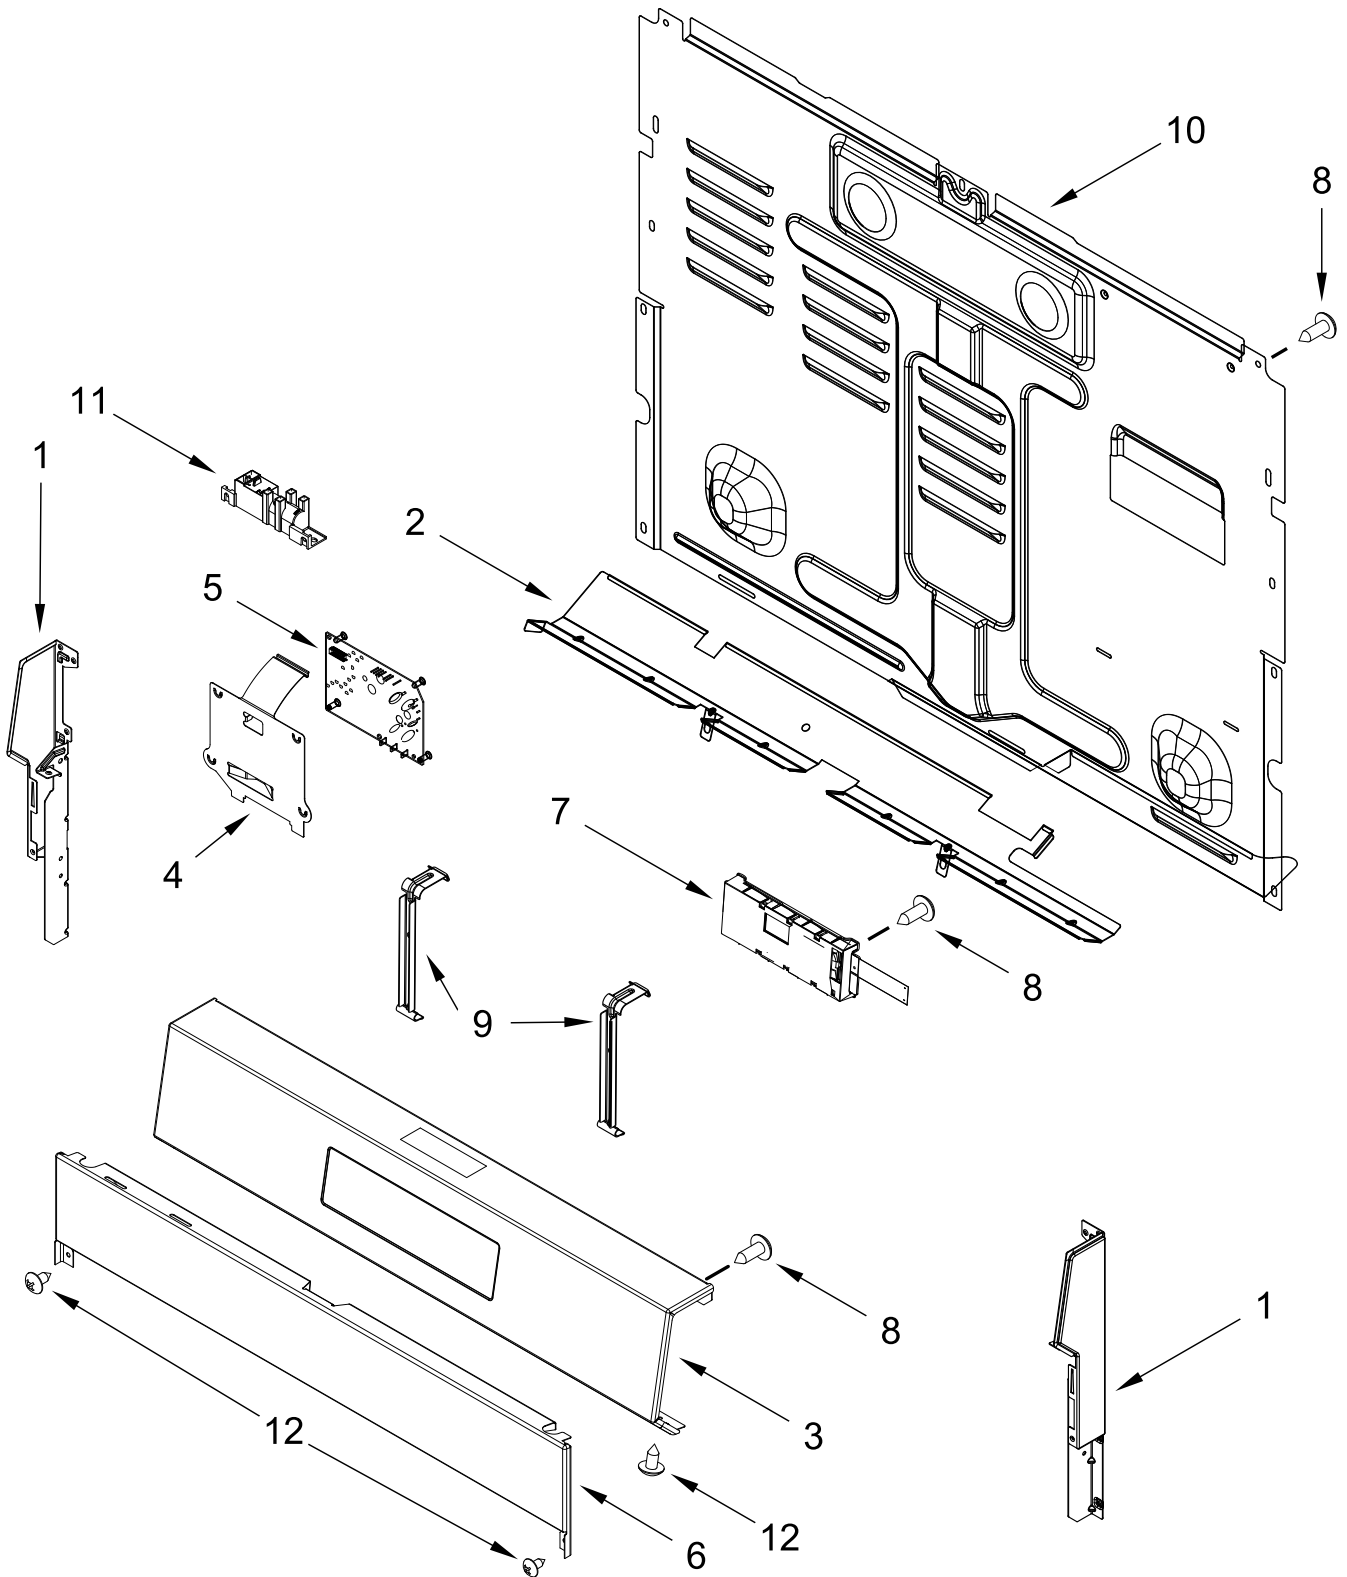

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10818365	Module, Spark DSI	11	W11350452	Spark Module
	W11625423	Black (Left)	6		Lower, Panel	12	3196169	Screw
	W11625420	Black (Right)		W11625443	Black			
	W11625422	White (Left)		W11625439	White			
	W11625418	White (Right)	7		Control, Electronic (LCX)			
2	W11736649	Shield, Heat		W11637095	Black			
3		Panel, Control	8	3196178	Screw			
	W11730187	Black	9	W11371599	Bracket, Control			
	W11730186	White	10	W11393670	Cover, Back			
4	W11736648	Bracket, Mounting (DSI)						


MANIFOLD PARTS

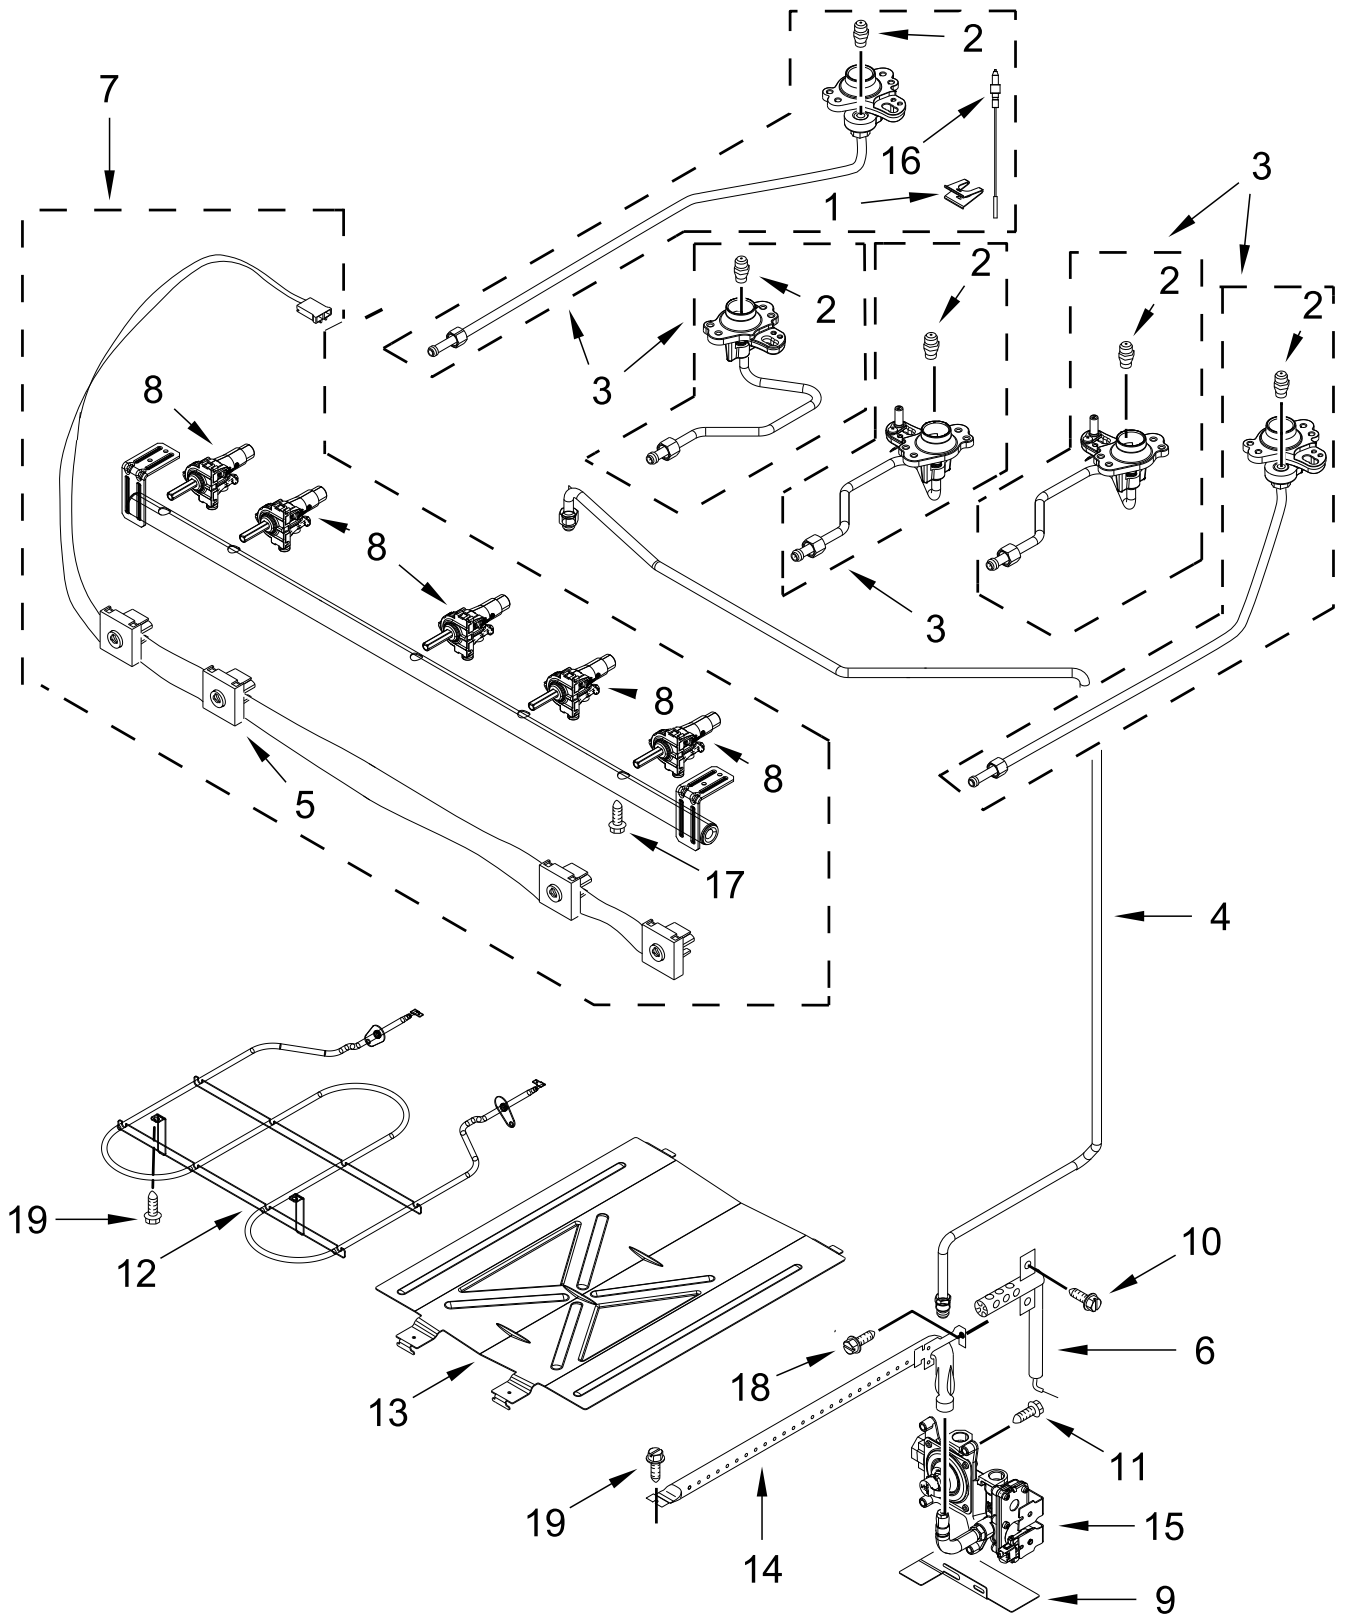

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10827923	Electrode, Spring	4	W11384792	Tubing (Manifold to Regulator)	16	W11428831	Electrode (Left Front and Left Rear)
2	W10849716	Orifice (12K) (Left Front and Left Rear)	5	W11637977	Harness, Igniter (Includes Switches)		W11428858	Electrode (Right Front, Right Rear, and Center)
	W10849722	Orifice (18K) (Right Front)	6	W11450459	Electrode, Bake	17	W11402213	Screw
	W10849719	Orifice (5K) (Right Rear)	7	W11279814	Manifold Assembly	18	3196265	Screw
	W10907868	Orifice (Center)	8	W11630470	Valve, Gas (Left Front and Left Rear)	19	W10362924	Screw
3	W11300876	Orifice Holder Assembly (12K) (Left Front)		W11279839	Valve, Single (Right Front and Center)			FOLLOWING PARTS NOT ILLUSTRATED
	W11341430	Orifice Holder Assembly (12K) (Left Rear)		W11279837	Valve, Single (Right Rear)		W10838304	Orifice, LP Bake
	W11300879	Orifice Holder Assembly (18K) (Right Front)	9	W10224921	Bracket, Aegis		W11370715	LP 5 Orifice Conversion Kit
	W11300867	Orifice Holder Assembly (5K) (Right Rear)	10	3196385	Screw			
	W11300874	Orifice Holder Assembly (10K) (Center)	11	3400016	Screw			
			12	W10714060	Element, Broiler			
			13	W10184491	Spreader, Flame (Oven)			
			14	9758078	Burner, Bake			
			15	W10818355	Regulator			


CHASSIS PARTS

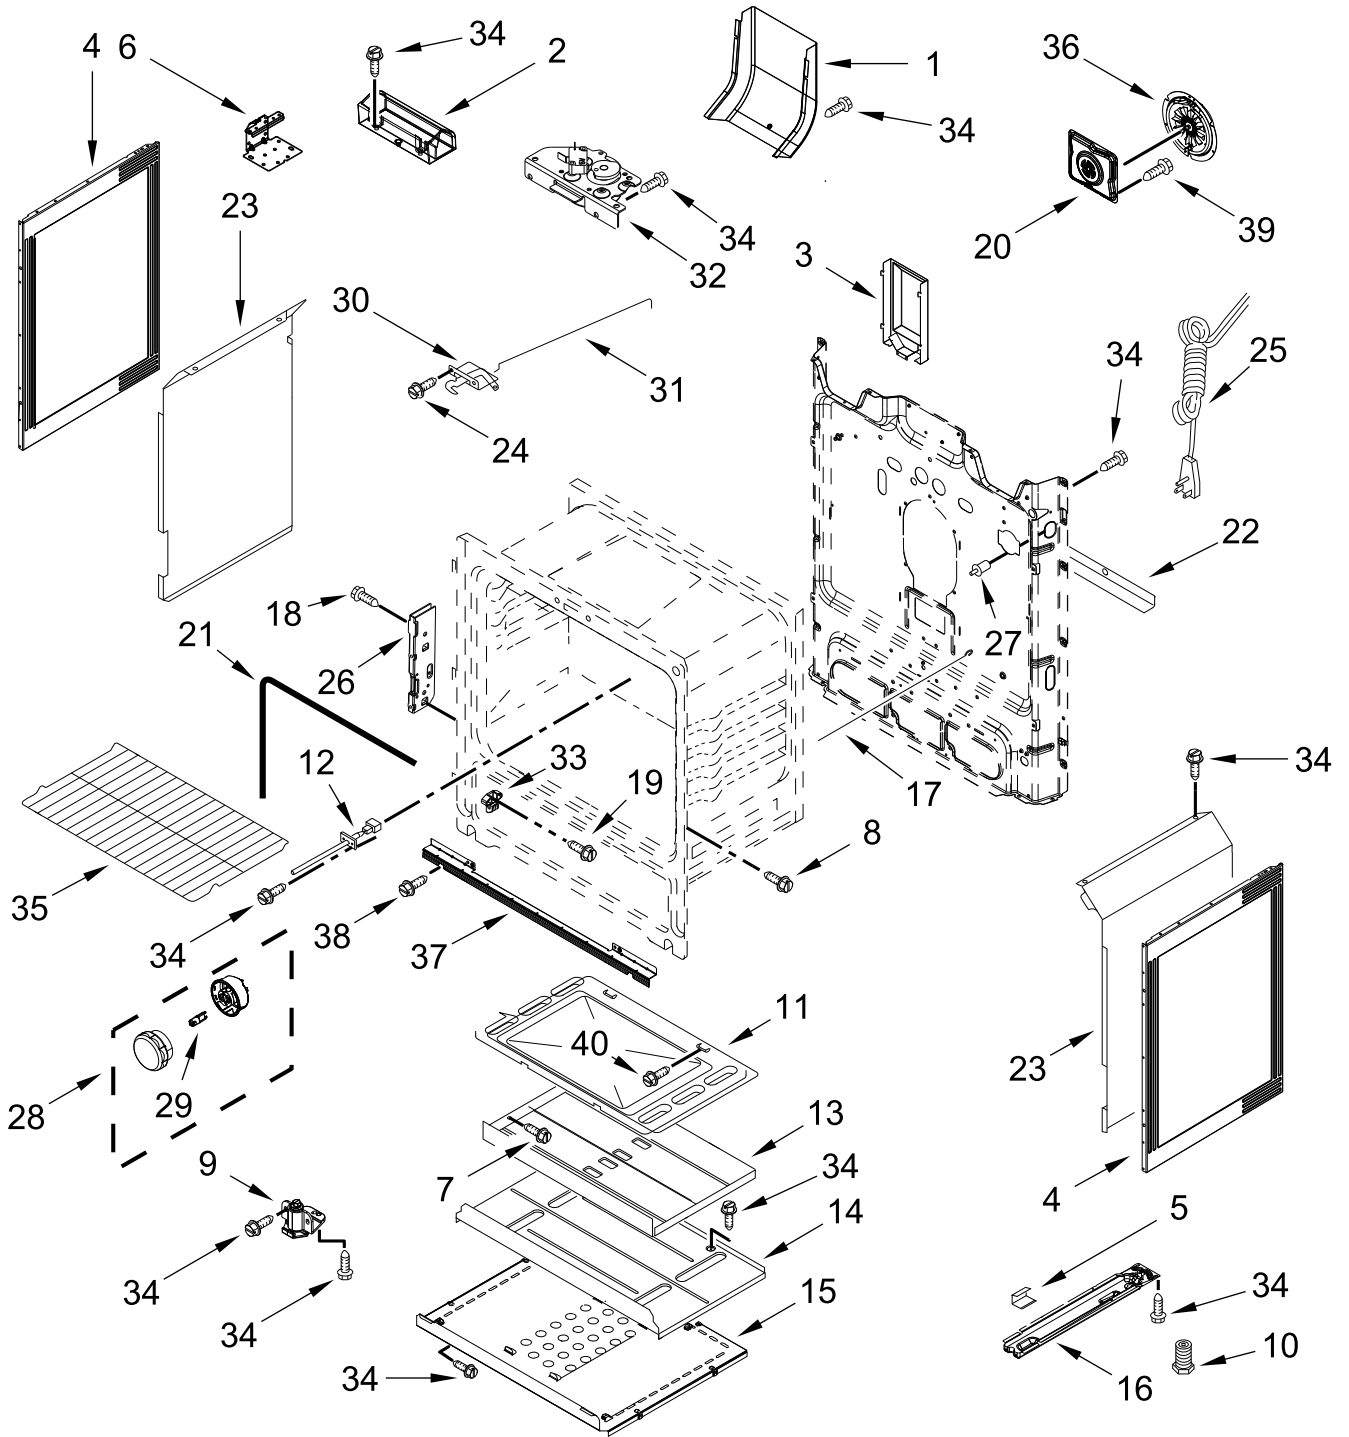

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11366110	Box, Flue	17	9757239	Rod, Door Switch	33	W10674705	Glide, Drawer Front
2	W11279866	Shield, Flue	18	W10031780	Screw	34	3196178	Screw
3	W10158780	Cover, Rear Fan	19	3400080	Screw	35	W11173792	Rack, Oven
4		Panel, Side	20	W11373155	Cover, Conv Fan	36	W11353930	Fan, Convection
	W11445467	Black	21	W11491751	Seal, Door	37	W11464547	Bracket, Front Frame
	W11445761	White	22	W10435470	Brace, Main Back	38	W10516115	Screw
5	W10137382	Clip, Panel	23	W11379353	Retainer, Insulation (Left)	39	3196169	Screw
6	W11287215	Bracket, Manifold		W11379943	Retainer, Insulation (Right)	40	W10379120	Screw
7	W10362924	Screw						FOLLOWING PARTS NOT ILLUSTRATED
8	3196560	Screw	24	3196560	Screw			
9	W10341186	Front Foot Assembly	25	W11661976	Cord, Power	W10818362		Insulation, Wrap
10	W10058460	Foot, Leveling	26	W10289077	Receiver, Hinge	W11407376		Insulation, Back
11	W11602073	Bottom, Oven	27	W11511828	Switch, Door			
12	W10586204	Sensor	28	W11634772	Light Assembly			
13	8053967	Baffle, Burner Oven	29	W10571723	Bulb, Halogen 40 Watts			
14	8053969	Shield, Heat	30	9761013	Front Door Latch Assembly			
15	W11640074	Shield, Lower	31	W10078370	Rod, Push Latch			
16	W10390008	Base Rail Assembly (Left)	32	W10107820	Rear Door Latch Assembly			
	W10390007	Base Rail Assembly (Right)						

DOOR PARTS

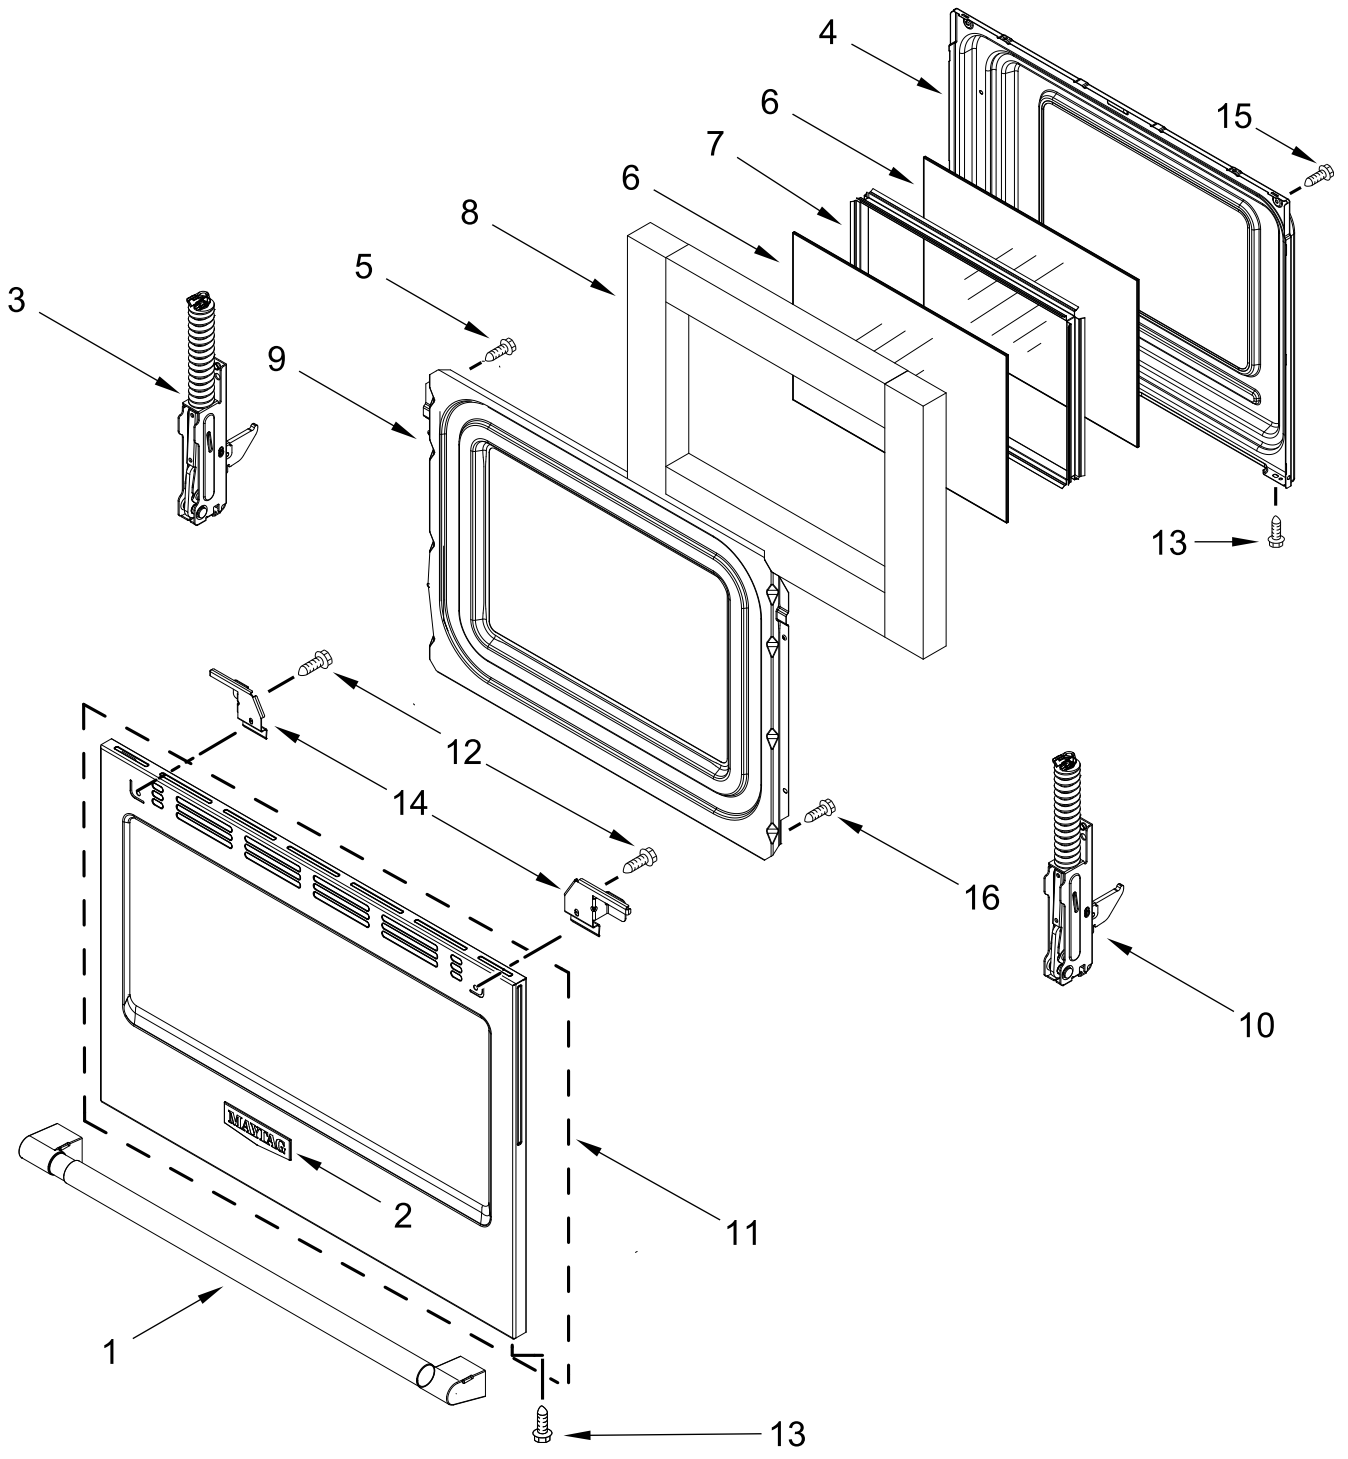


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Door
	W11495825	Stainless
2	W11628148	Badge
3	W10388635	Hinge, Door (Active)
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	W10316950	Frame, Glass
8	W10278991	Insulation, Door Strip

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	W11380222	Retainer, Insulation
10	W10440013	Hinge, Door (Active)
11		Glass, Outer Door
	W11631949	Black (Includes Badge)
	W11631932	White (Includes Badge)
12	3196154	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10327235	Screw
14	W11157607	Bracket, Handle Mount (Left)
	W11417442	Bracket, Handle Mount (Right)
15	W10200660	Screw
16	W10031780	Screw

DRAWER PARTS

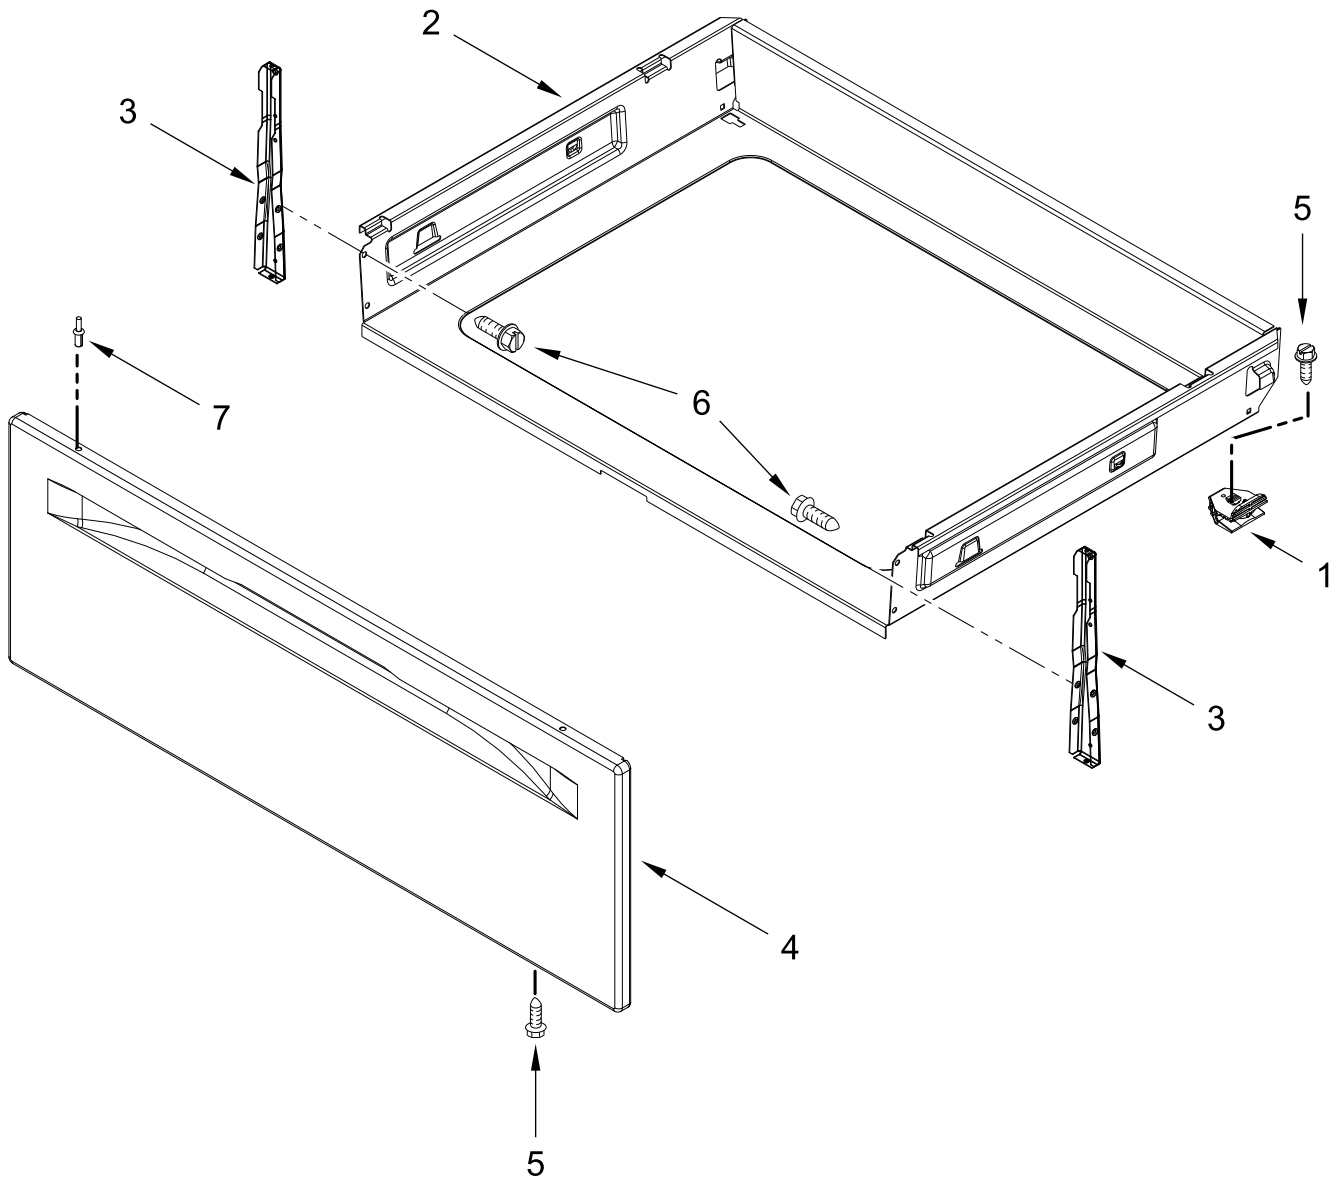

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10674708	Glide, Drawer Rear	4		Panel, Drawer Front	6	3196169	Screw
2	W10688022	Drawer, Storage		W11123976	Black	7		Rivet, Push
3	W10462911	Bracket, Mounting		W11123977	White		3196813	Black
			5	3196178	Screw		3196814	White

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		PAINT, TOUCH-UP (1/2oz.)
	4392899	Biscuit and Bisque
	72017	White
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	285006	Black
	350930	White
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid