


AMANA®

ELECTRIC RANGE

MODELS:

AER6603SMS1 (Stainless)


COOKTOP PARTS

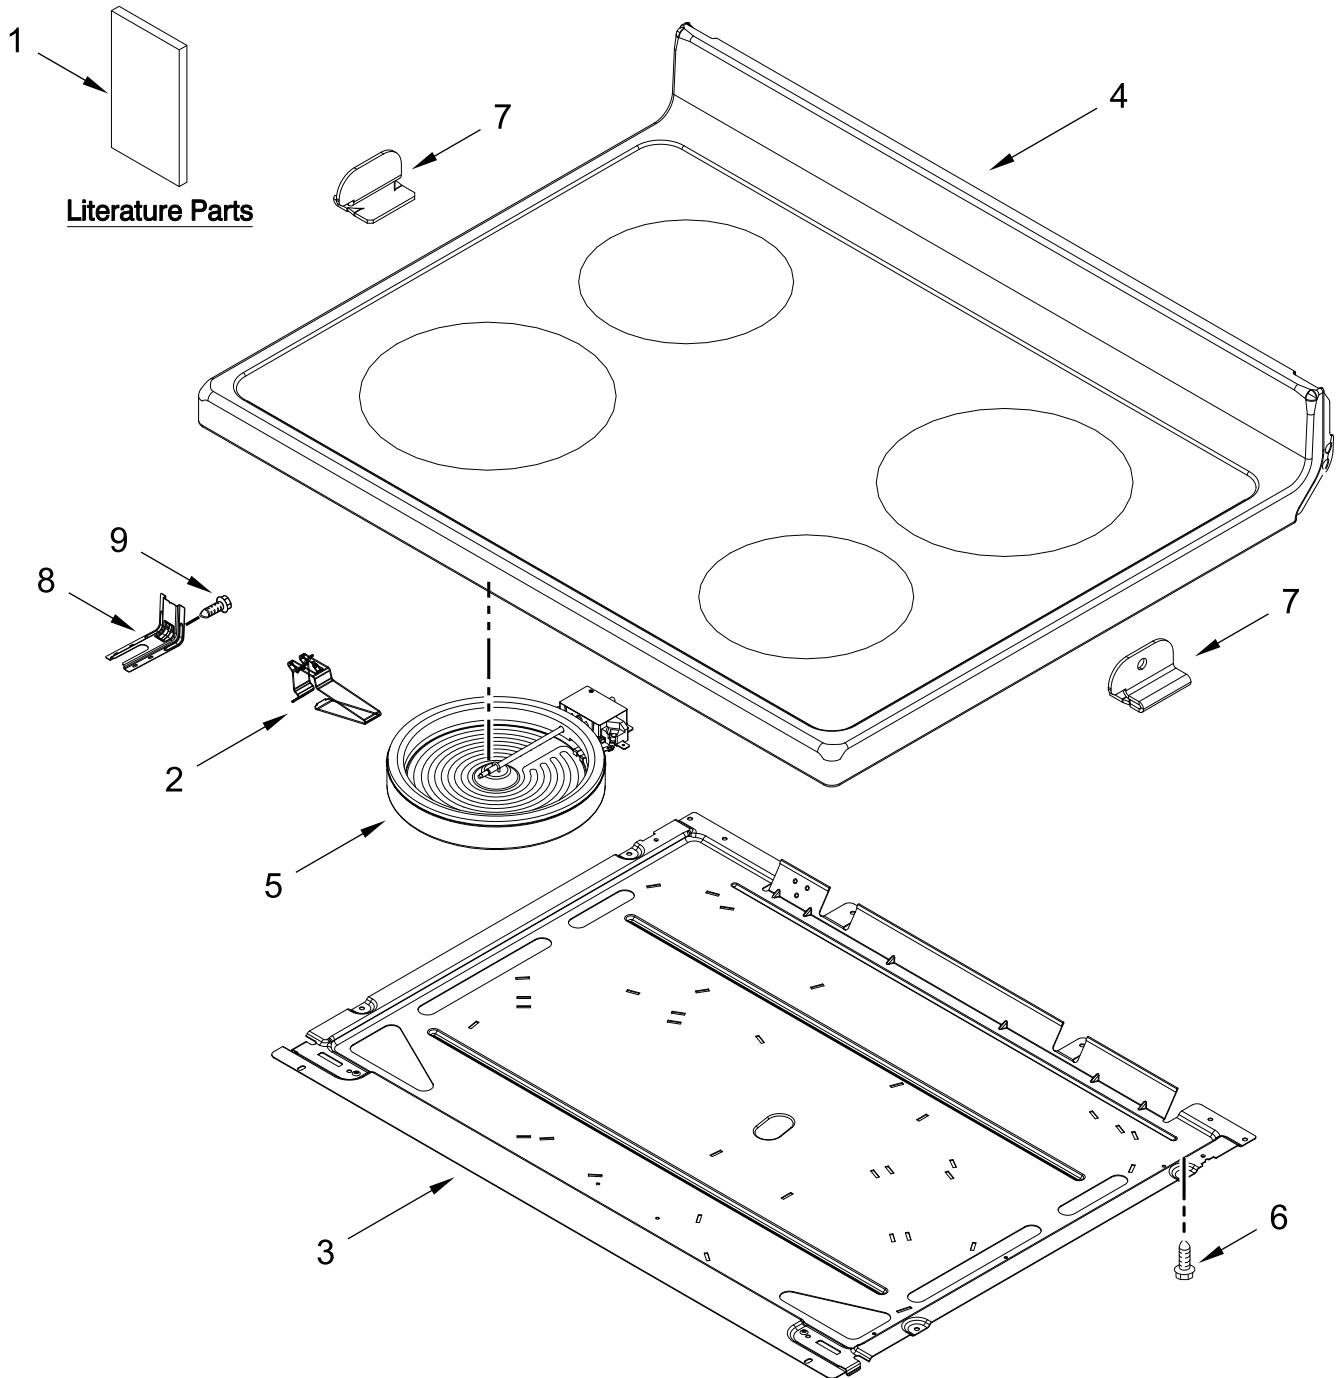

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	8273993	Element (1800W) (Right Rear)	8	W11379945	Bracket, Anti-Tip
	W11469631	Quick Start Guide		W10248261	Element (1200W) (Right Front and Left Rear)	9	7101P485-60	Screw, Anti-Tip Kit
	W11509598	User Instructions						FOLLOWING PARTS NOT ILLUSTRATED
	W11393929	Sheet, Tech		W10275048	Element (3000 and 1400W) (Left Front)		W11452623	Harness, Main
2	W11600012	Spring, Element					W11134603	Harness, Cooktop (Left)
3	W10691223	Pan, Radiant Element					W11134551	Harness, Cooktop (Right)
4		Cooktop	6	3196169	Screw			
	W10853125	Black	7	W10607641	Bracket, Cooktop (Left)			
				W10607642	Bracket, Cooktop (Right)			


CONTROL PANEL PARTS

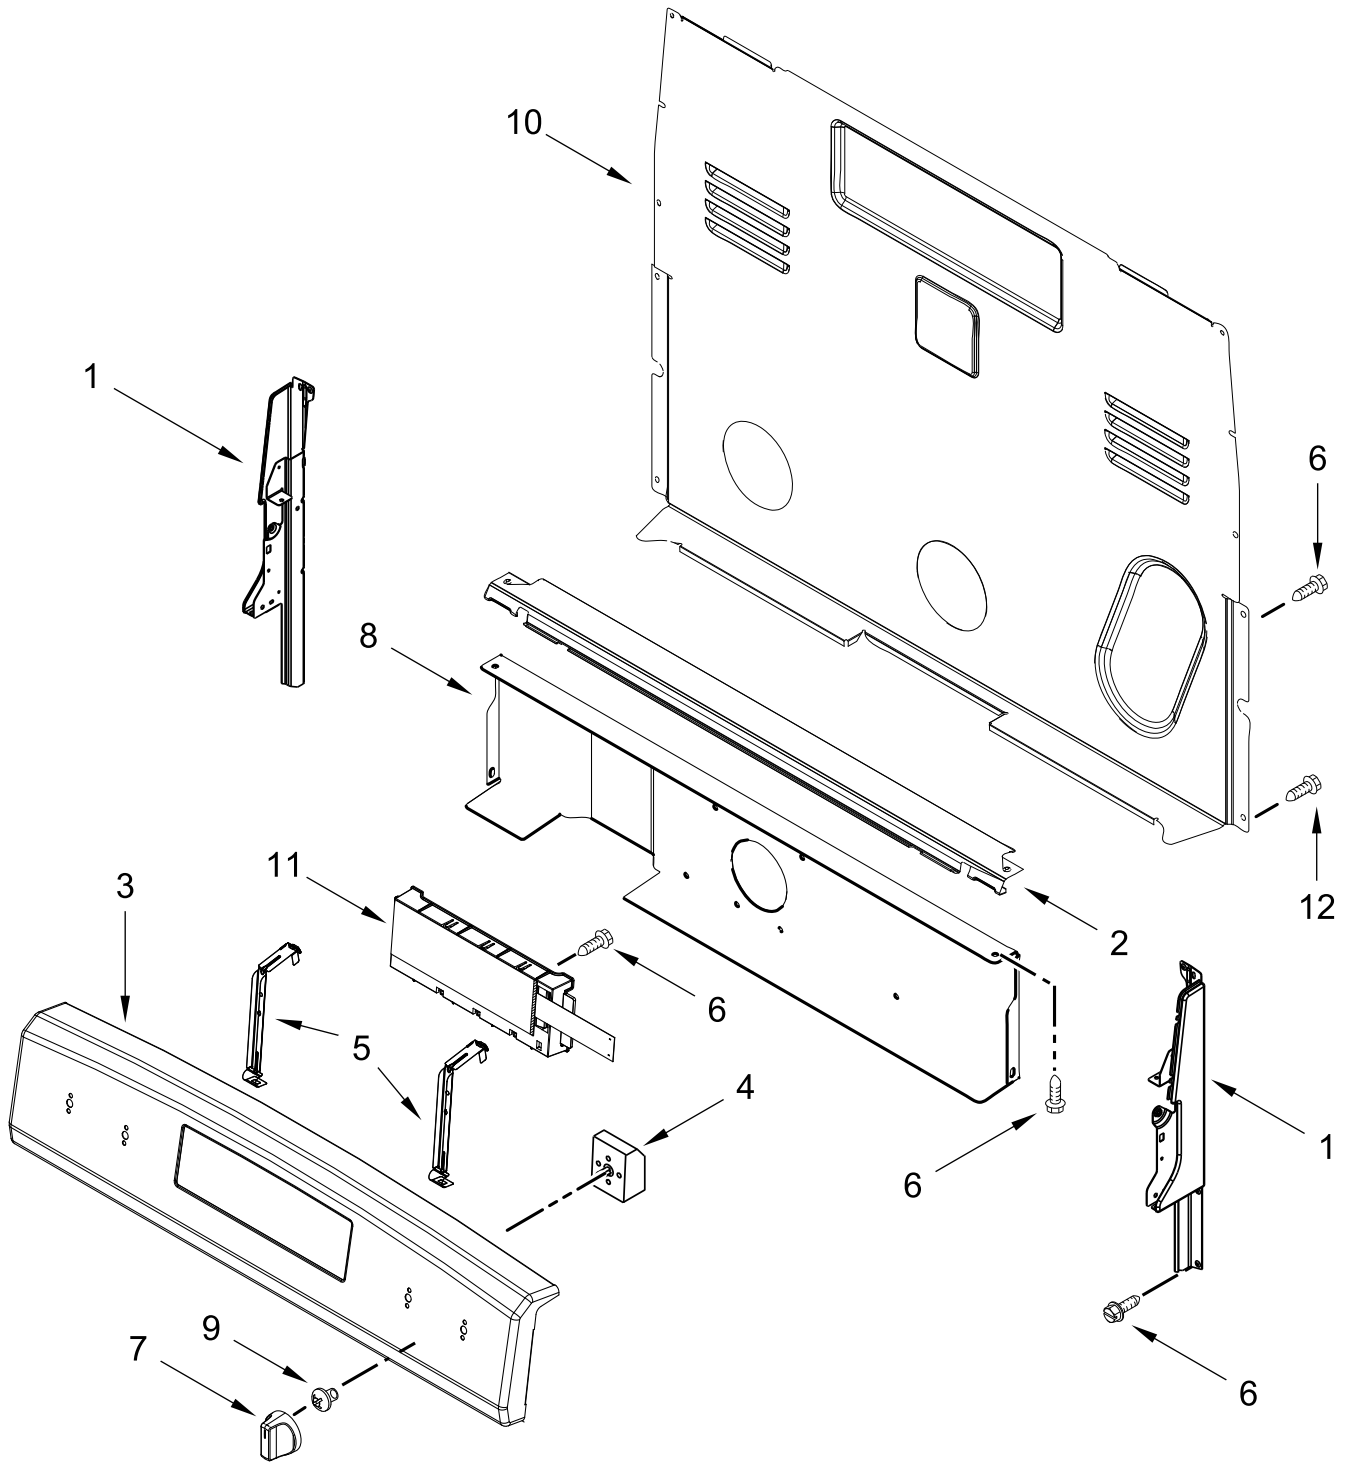

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148951	Switch, Infinite	7		Knobs
	W11130372	Black (Left)			(Right Front and Left Rear)		W10844801	Black
	W11130379	Black (Right)				8	W10134247	Shield, Heat
2	W10525121	Bracket, Console Mounting		3148953	Switch, Infinite (Green)	9	3400882	Screw
					(Right Rear)	10	8272473	Cover, Upper Rear
3		Panel, Console		W10434452	Switch, Infinite (Dual)	11		Control, Electronic (LCX)
	W11157021	Stainless			(Left Front)		W11515098	Black
			5	W10695491	Bracket, Control	12	W10031780	Screw
			6	3196178	Screw			


CHASSIS PARTS

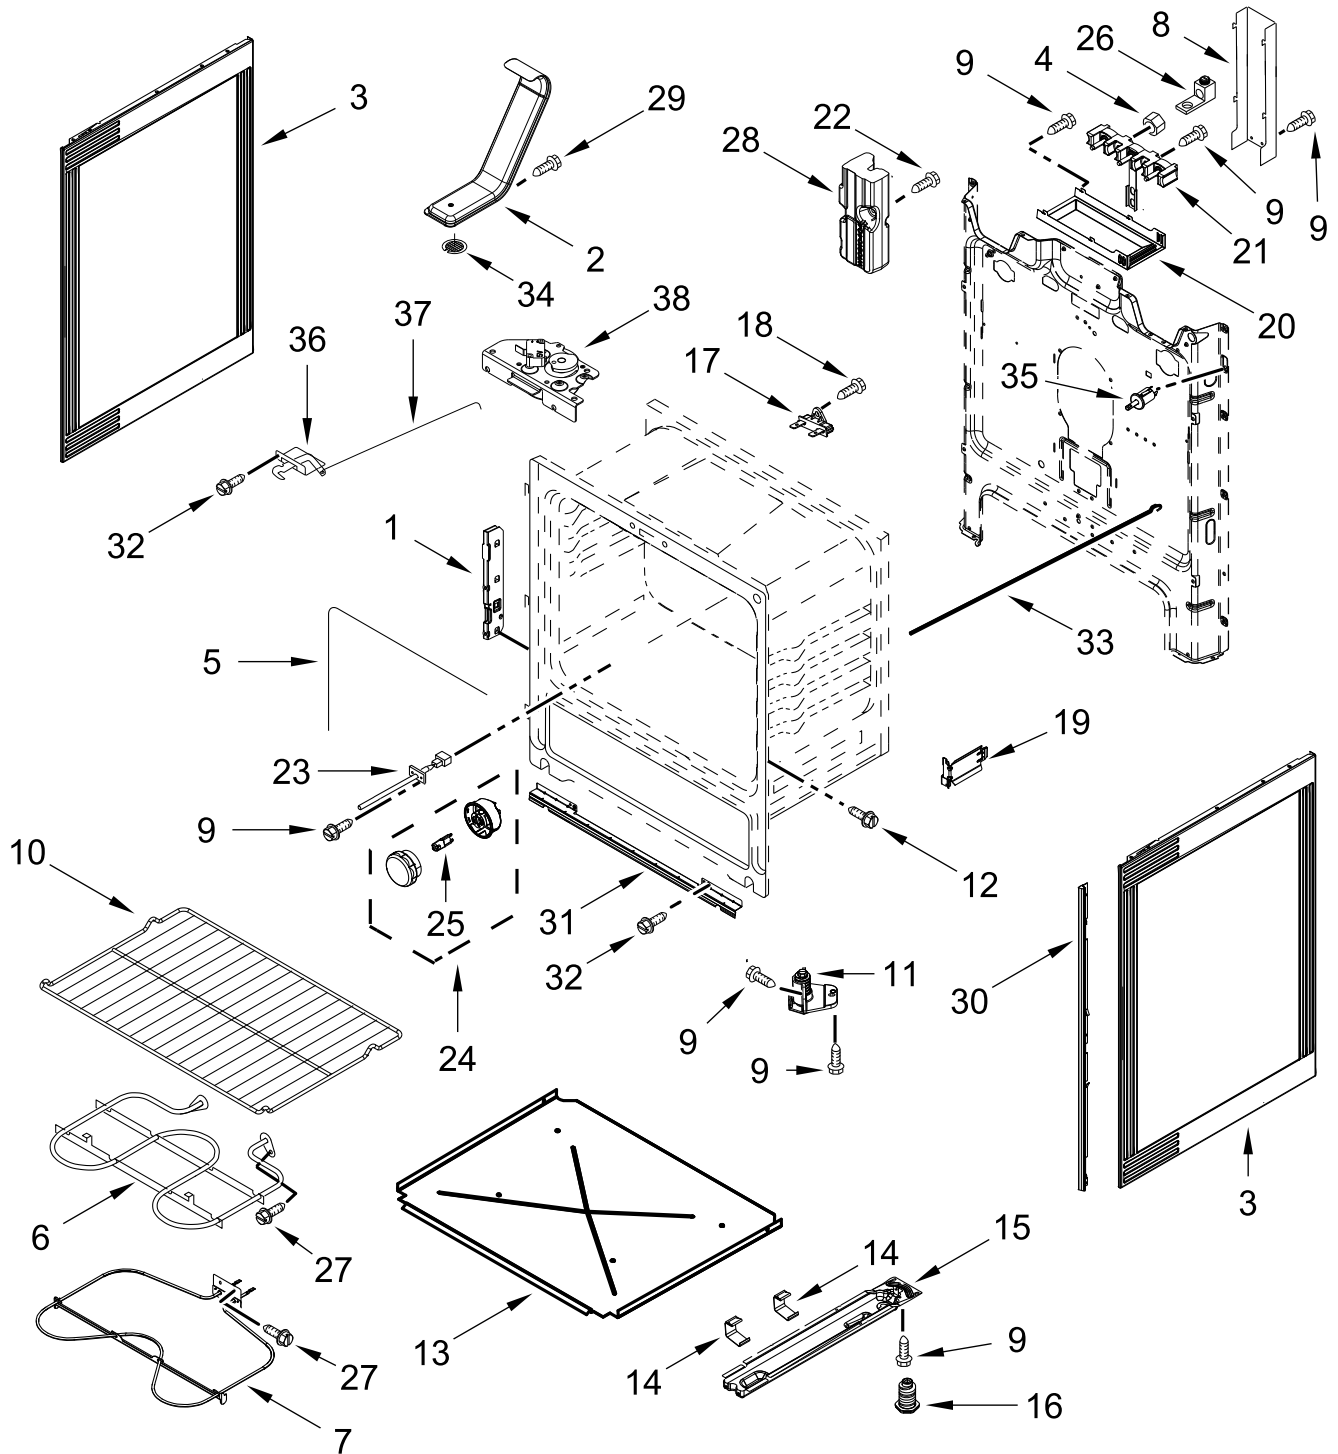

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	17	3196548	Fuse, Thermal	34	W11092984	Screen, Vent
2	W10134285	Tube, Vent	18	3196172	Screw	35	W11511828	Switch, Door
3		Panel, Side	19	W10404688	Clip, Oven Support	36	9761013	Front Door Latch Assembly
	W10162245	Black	20	3186034	Bracket, Service			
4	3400029	Nut	21	W10245259	Block, Terminal	37	W10078380	Rod, Latch
5	W11491751	Seal, Door	22	W11034869	Screw	38	W10107820	Rear Door Latch Assembly
6	9757340	Element, Broil	23	W10181986	Sensor, Oven			
7	W11111743	Element, Bake	24	W11634772	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
8	W10326122	Cover, Terminal Block	25	W10571723	Bulb, Halogen 40 Watts			
9	3196169	Screw					W10333344	Insulation, Flue
10	W11173792	Rack, Oven	26	W10281322	Kit, Bare Wire Adapter Block		W10774939	Insulation, Wrap
11	W10341186	Front Foot Assembly					W11127325	Insulation, Back
12	W10067840	Screw	27	3196154	Screw			
13	8054068	Retainer, Insulation	28	W10910404	Counterweight			
14	W10137382	Clip, Panel	29	W10362924	Screw			
15	W10390007	Base Rail Assembly (Right)	30	W11510560	Barrier Rail, Rubber (Left and Right)			
	W10390008	Base Rail Assembly (Left)	31	W11464547	Bracket, Front Frame			
			32	3196560	Screw			
16	W10058460	Foot, Leveling	33	9757239	Rod, Door Switch			


DOOR PARTS

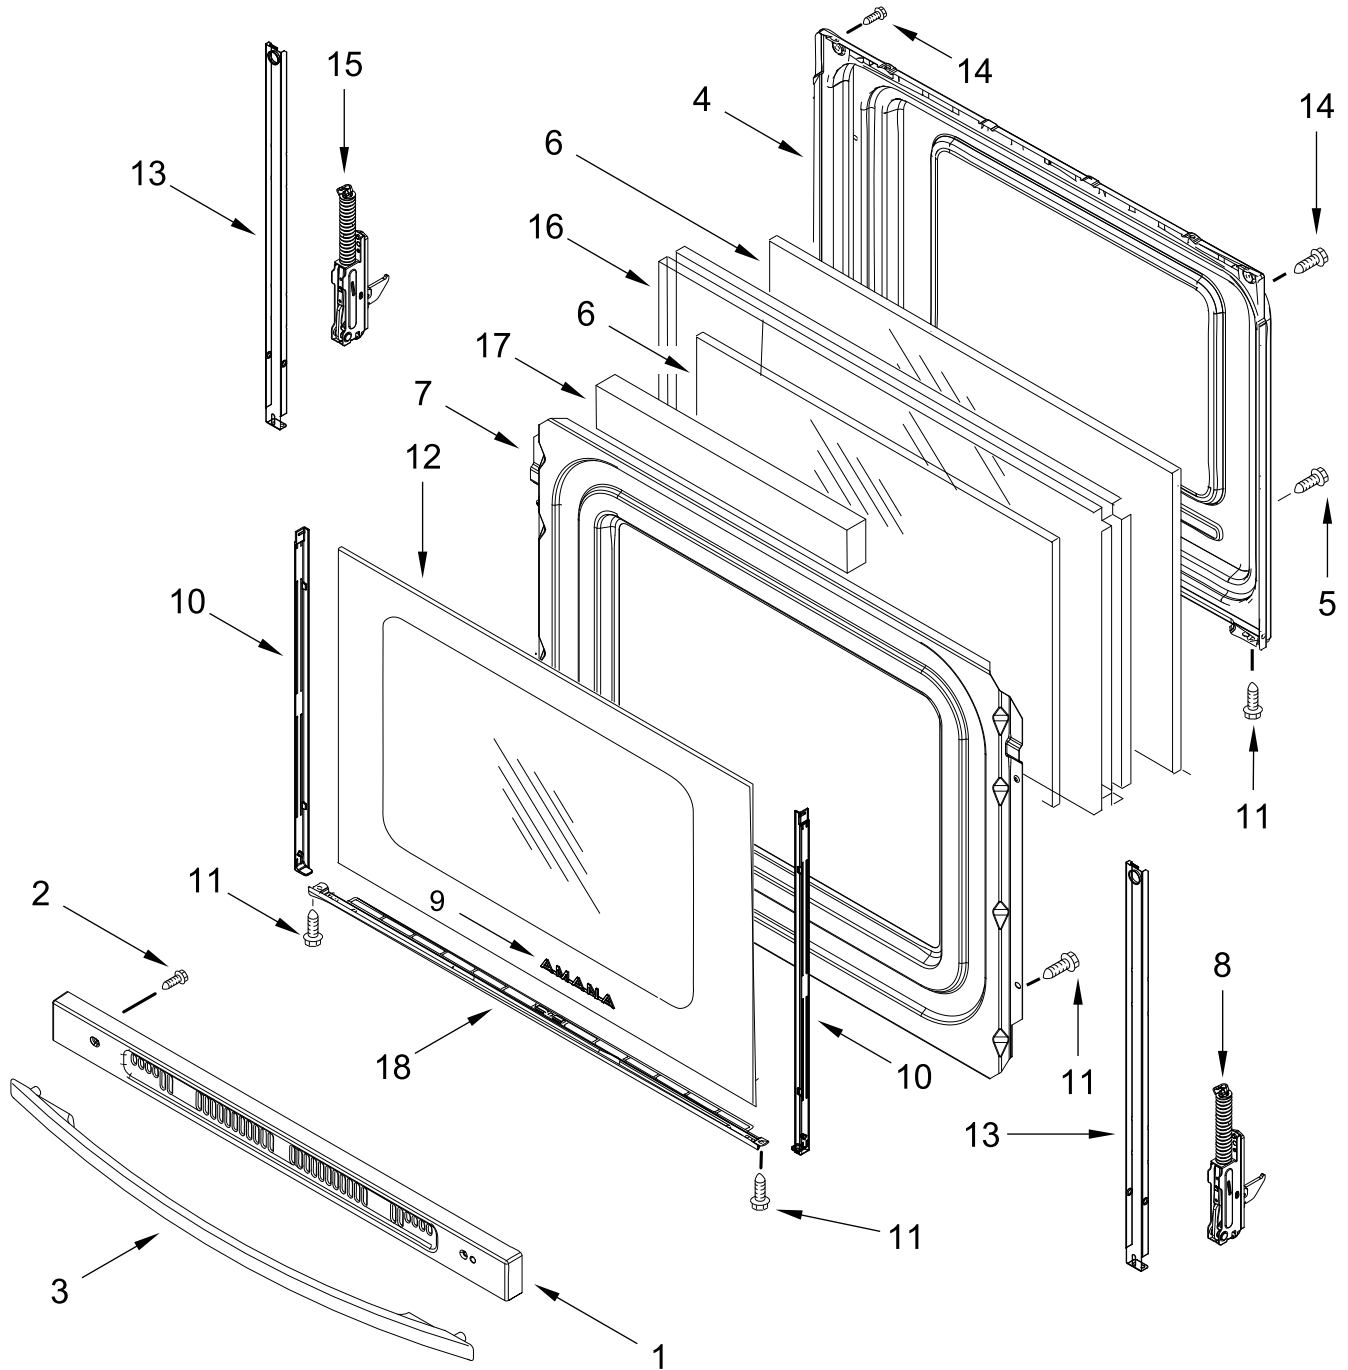

DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top	9		Badge	15	W10299227	Hinge, Door (Passive)
	W10310922	Black		W10846752	Stainless	16	W10316950	Frame, Glass
2	W10163951	Screw	10		Trim, Side	17	W10278991	Insulation, Door Strip
3		Handle, Door		W10746436	Black (Left)	18	W11440159	Trim, Bottom Door
	W10144883	Stainless		W10746435	Black (Right)			
4	9761344	Liner, Door	11	W10327235	Screw			
5	W10031790	Screw	12		Glass Assembly, Outer Door			
6	9758162	Glass, Inner		W11603159	Stainless			
7	W11380222	Retainer, Insulation		W11379944	Strap, Door			
8	W10299224	Hinge, Active (With Spring)	13	W10200660	Screw			
			14					

DRAWER AND BROILER PARTS

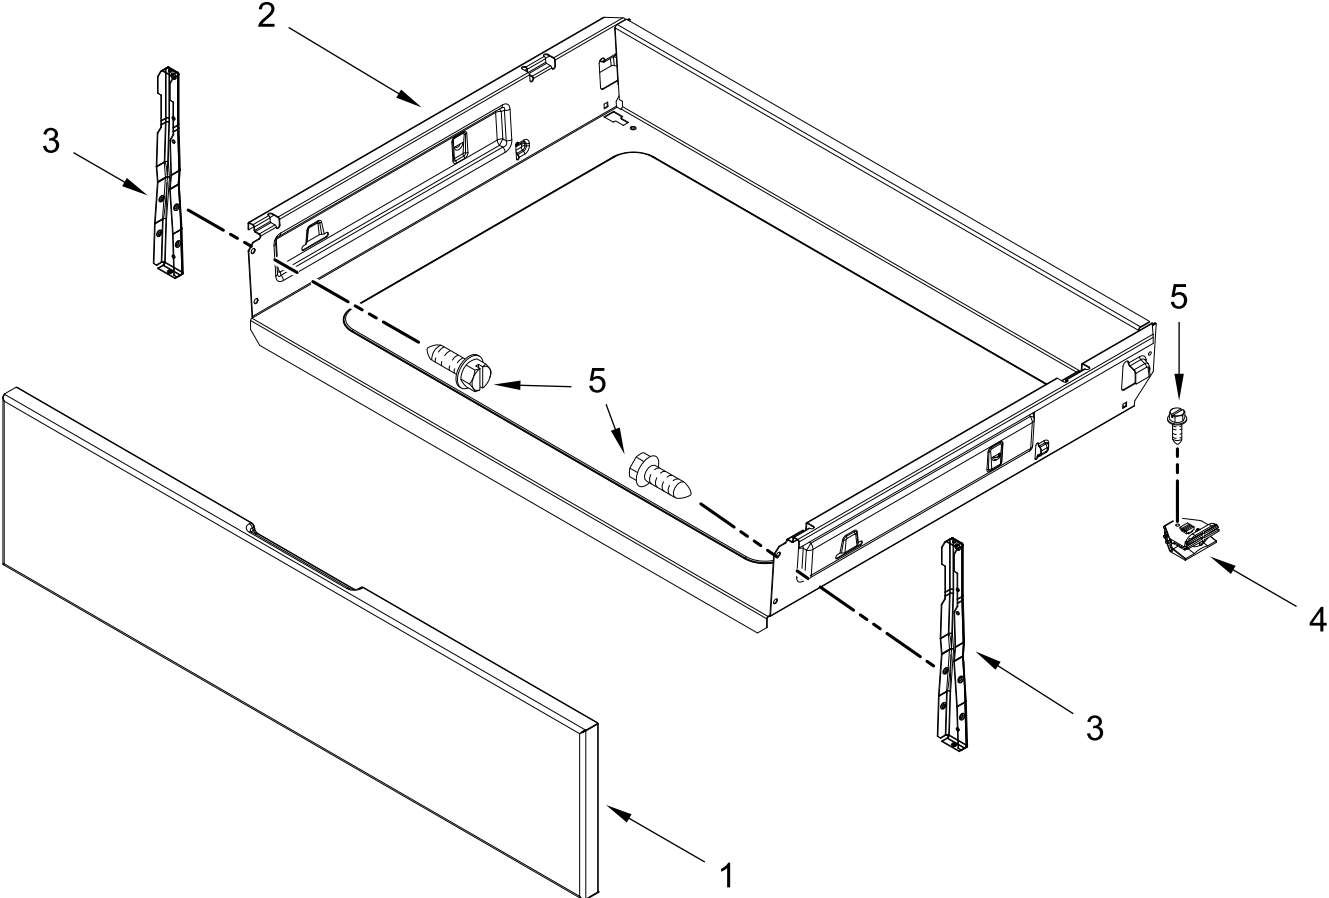

DRAWER AND BROILER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462910	Bracket, Mounting Drawer	4	W10674708	Glide, Drawer Rear
	W10330070	Stainless					W10674705	Glide, Drawer Front
2	W10688022	Drawer, Storage				5	3196165	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	8212473	Universal Silver
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	3191048	Glass Cleaner
	4396923	Broiler Pan and Grid