


KitchenAid®

GAS RANGE

MODELS:

KSDB900ESS9 (Stainless)


COOKTOP PARTS

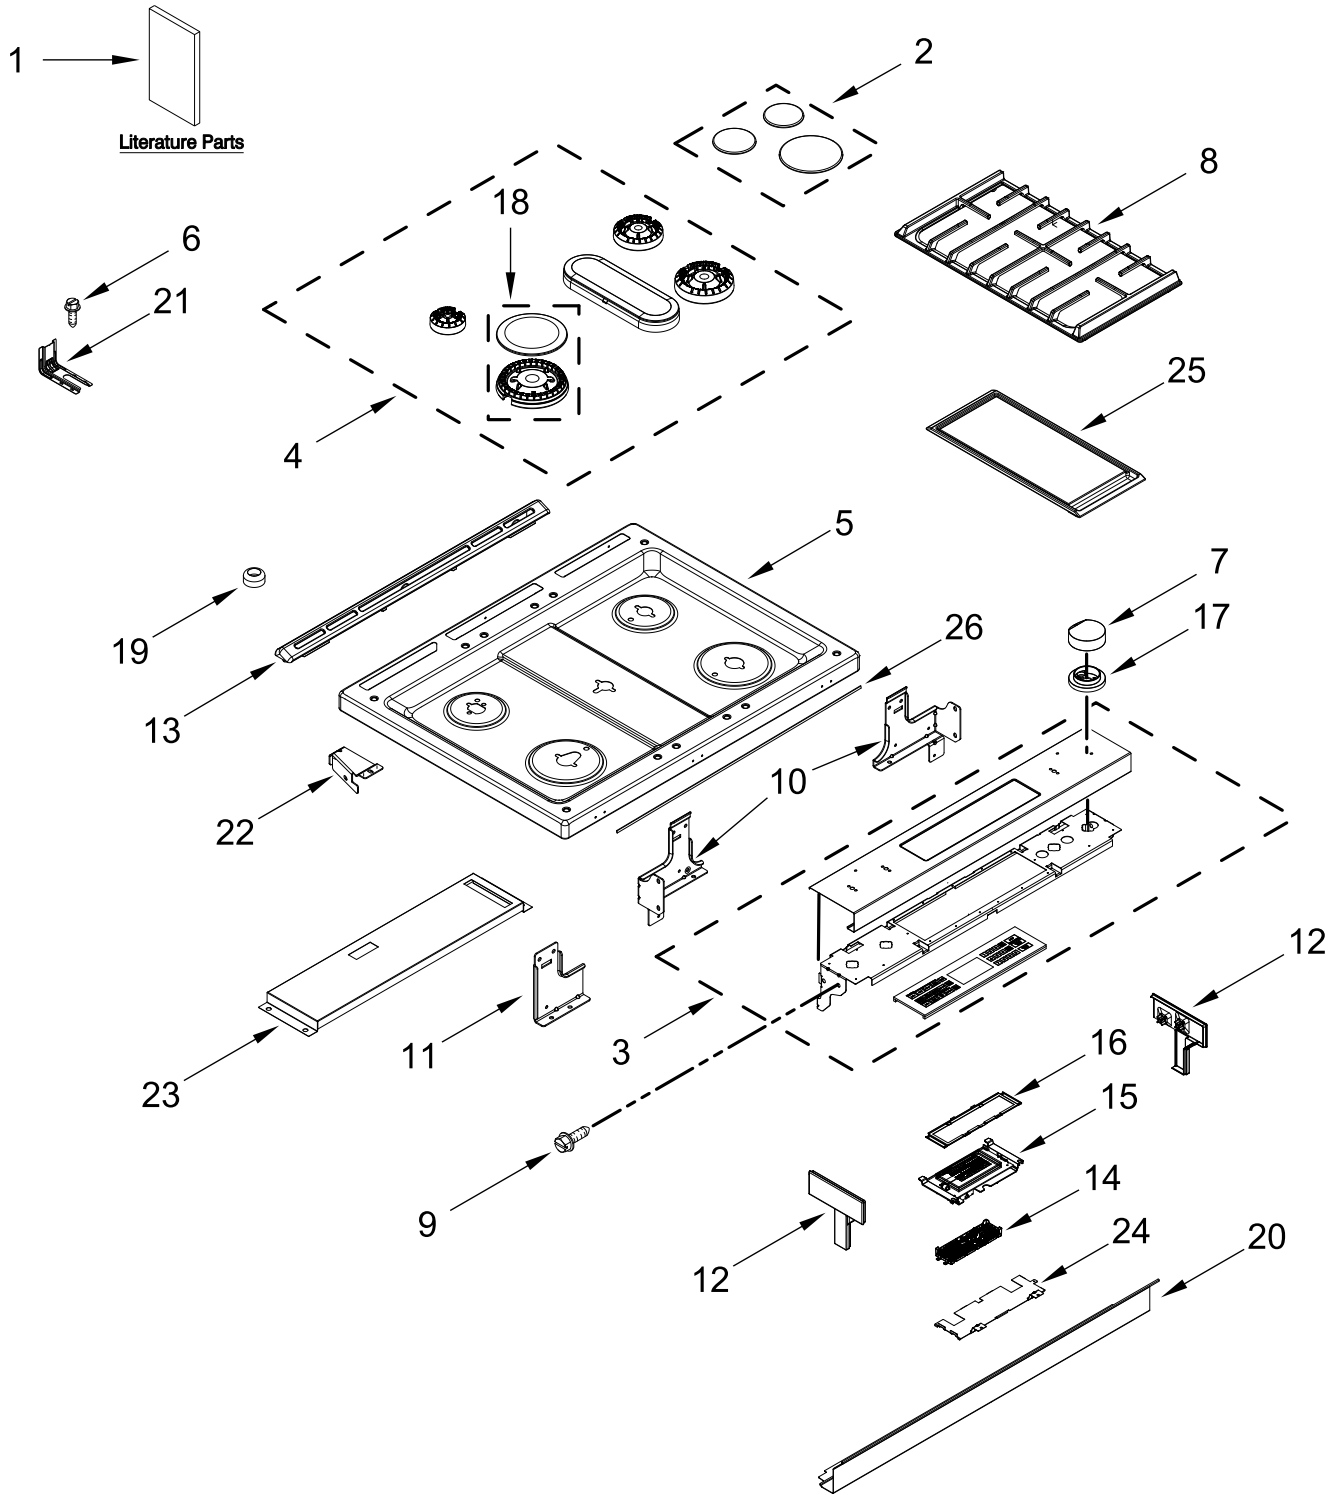

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Set, Grate	19	W10854253	Bumper
	W11477345	Use and Care Guide		W11188538	Black	20		Panel, Lower Console
	W11477346	Quick Start Guide (English)	9	3196169	Screw		W10743276	Stainless
	W11565455	Tech Sheet	10	W11563529	Bracket,Support (Left)	21	W11379947	Bracket, Anti-Tip
2		Burner Cap Kit		W11563527	Bracket, Support (Right)	22	W10162253	Brace, Corner (Left)
	W11367440	Black (Set of 3) (Left Rear, Right Front, Right Rear)	11	W10598048	Bracket, Console (Center)		W10162252	Brace, Corner (Right)
3		Console	12		Endcap	23	W11355689	Keypad Shield
	W10901118	Stainless		W10555937	Stainless (Left)	24	W10558372	Bracket, Control
4	W11367105	Burner Kit (Set of 5)		W10555940	Stainless (Right)	25	W10432544	Griddle
5		Cooktop	13		Trim, Vent	26	W11512127	Gasket, Console and Cooktop
	W11117940	Stainless		W10636529	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
6	7101P485-60	Screw, Anti-Tip Kit	14	W11541194	Control, MRC2		W11457083	Harness, Main
7		Knob	15	W10759323	Assembly, Display		W10575120	Harness, Keypad
	W10786064	Stainless (Left Front)	16	W10555923	Bracket, User Interface		W10598169	Harness, Display
	W10786065	Stainless (Right Front, Right Rear, Left Rear and Center)	17		Bezel		W10580316	Harness, Bake Drawer
				W10785119	Stainless (Kit of 5)		3196520	Clip, Wire
			18	W11366282	Burner Kit (Includes Cap and Spreader)		313438	Clip, Harness


CHASSIS PARTS

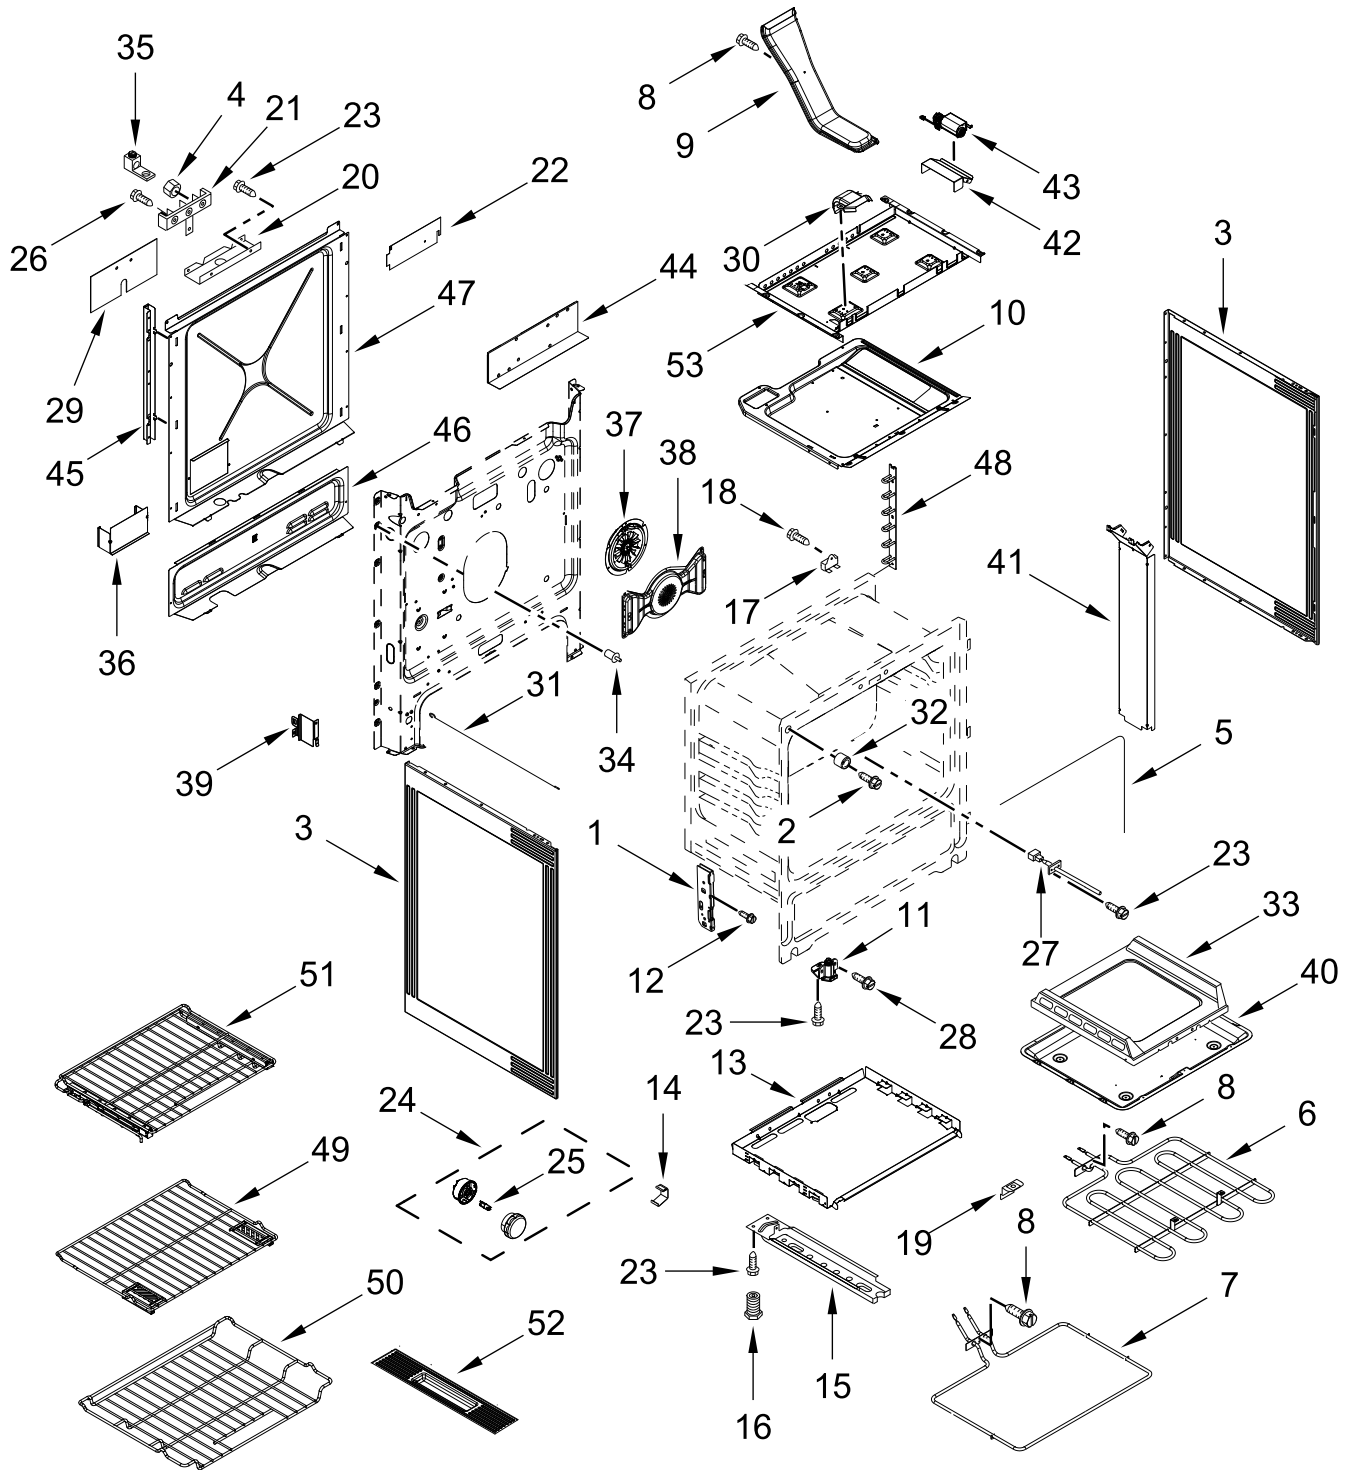

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	20	3186034	Bracket, Service	41	W10162255	Duct, Cover
2	W10362924	Screw	21	W10245259	Block, Terminal	42	W10162254	Duct, Cooling
3		Panel, Side	22	W10818358	Shield, Wire	43	W11467246	Cooling Fan
	W10162245	Black	23	3196178	Screw	44	W10162260	Shield, Heat
4	3400029	Nut	24	W11634772	Light Assembly	45	W10162241	Channel, Rear
5	W11491752	Gasket, Door	25	W10571723	Bulb, Halogen 40 Watts	46	W10575377	Cover, Wire
6	W10544952	Element, Broil				47	W11379354	Cover, Back
7	W10774342	Element, Bake	26	3400016	Screw	48	W10603482	Rack, Ladder
8	W10362924	Screw	27	W10586204	Sensor	49	W10554007	Rack, Steam
9	W11122085	Assembly, Flue	28	3196169	Screw	50	W10554006	Rack, Maximum Capacity
10	W10289168	Box, Burner SI	29	W10655441	Shield, Power Cord	51	W10911366	Rack, Sliding
11	W10341186	Front Foot Assembly	30	W10162257	Duct, Cooktop	52	W10686408	Kit, Reservoir (Steam Rack)
12	W10067840	Screw	31	W10273192	Rod, Door Switch			
13	W10541959	Shield, Bake	32	9758701	Spacer, Door	53	W11320442	Gas Box Burner
14	W10137382	Clip, Panel	33	W10774446	Bottom, Oven			FOLLOWING PARTS NOT ILLUSTRATED
15	W10390008	Base Rail Assembly (Left)	34	W11511828	Switch, Door			
	W10390007	Base Rail Assembly (Right)	35	W10281322	Kit, Bare Wire Adapter Block		W10655489	Insulation, Wrapper
16	W10058460	Foot, Leveling	36	W10162258	Cover, Regulator		W10655490	Insulation, Main Back
17	3196548	Fuse, Thermal	37	W11353932	Convection Assembly		W10575374	Insulation, Bottom
18	3196172	Screw	38	W10346153	Baffle, Full Convection		4820F015-59	Insulation, Strap
19	W10035900	Support, Oven Bottom	39	W10273002	Bracket, Oven Support		W10655442	Insulation, Heat Shield
			40	W11379357	Bake Pan		7111P017-60	Clamp, Wire


MANIFOLD PARTS

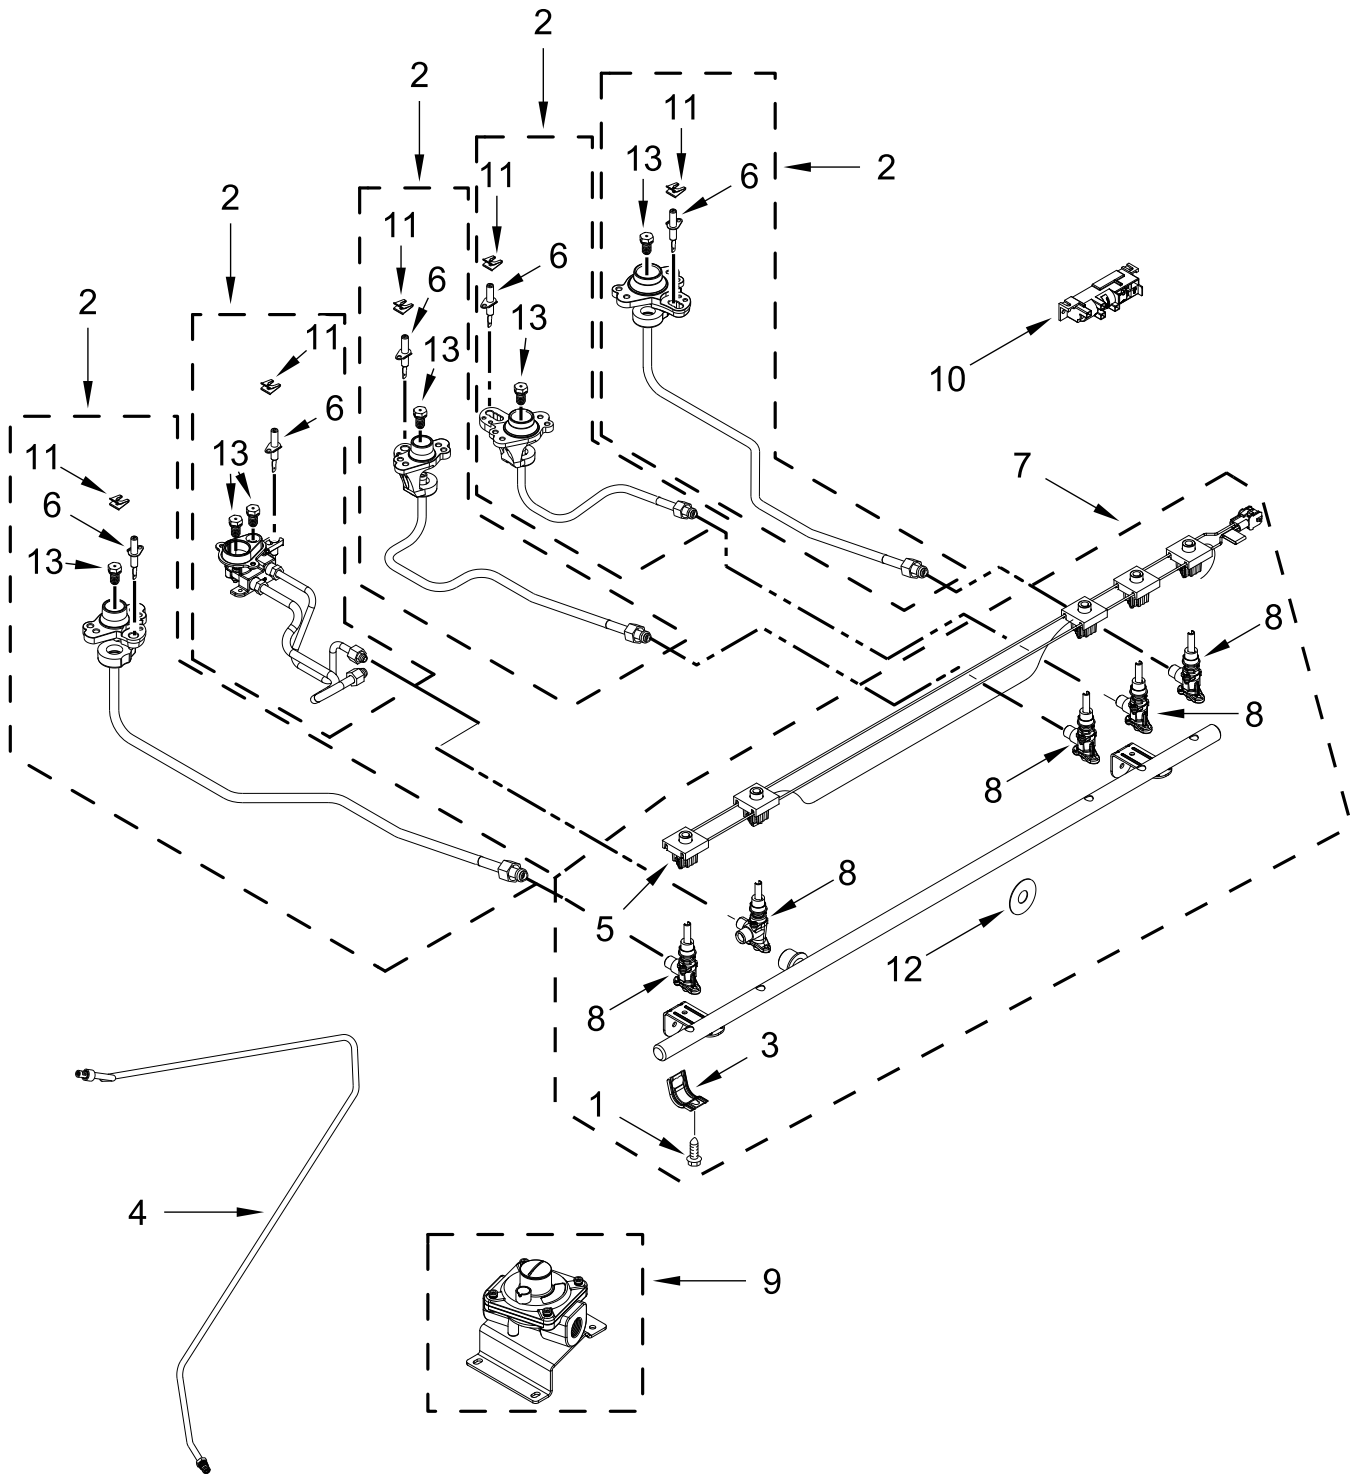

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	7	W11356345	Manifold Assembly	13	W10702888	Orifice (18K) (Left Front)
2	W11186513	Orifice Assembly (Left Front)	8	W10432224	Valve, Gas Duel (Left Front)		W11354862	Orifice (1.45K) (Left Front)
	W11186509	Orifice Assembly (Left Rear)		W10831590	Valve, Gas (Left Rear)		W10849719	Orifice (5K) (Left Rear)
	W11186526	Orifice Assembly (Right Front)		W10566062	Valve, Gas (Right Front)		W10849715	Orifice (8K) (Center)
	W11186522	Orifice Assembly (Right Rear)		W10566057	Valve, Gas (Right Rear and Center)		W10849717	Orifice (15K) (Right Front)
	W11186518	Orifice Assembly (Center)	9	W10661850	Assembly, Regulator and Bracket		W10849714	Orifice (9.5K) (Right Rear)
3	W10949105	Bracket, Saddle Valve	10	W11350452	Spark Module			FOLLOWING PARTS NOT ILLUSTRATED
4	W10552945	Tube, Supply	11	W10827923	Electrode, Spring		W11397194	LP Conversion Kit
5	W10432517	Harness, Switch Spark	12	W10140571	Seal, Switch Shaft		W10182767	Tie, Manifold Wire
6	W10898387	Electrode, Burner (Left Front)						
	W10669525	Electrode (Left Rear)						
	W10669524	Electrode, Burner (Right Front and Center)						
	W10669523	Electrode, Burner (Right Rear)						

DOOR PARTS

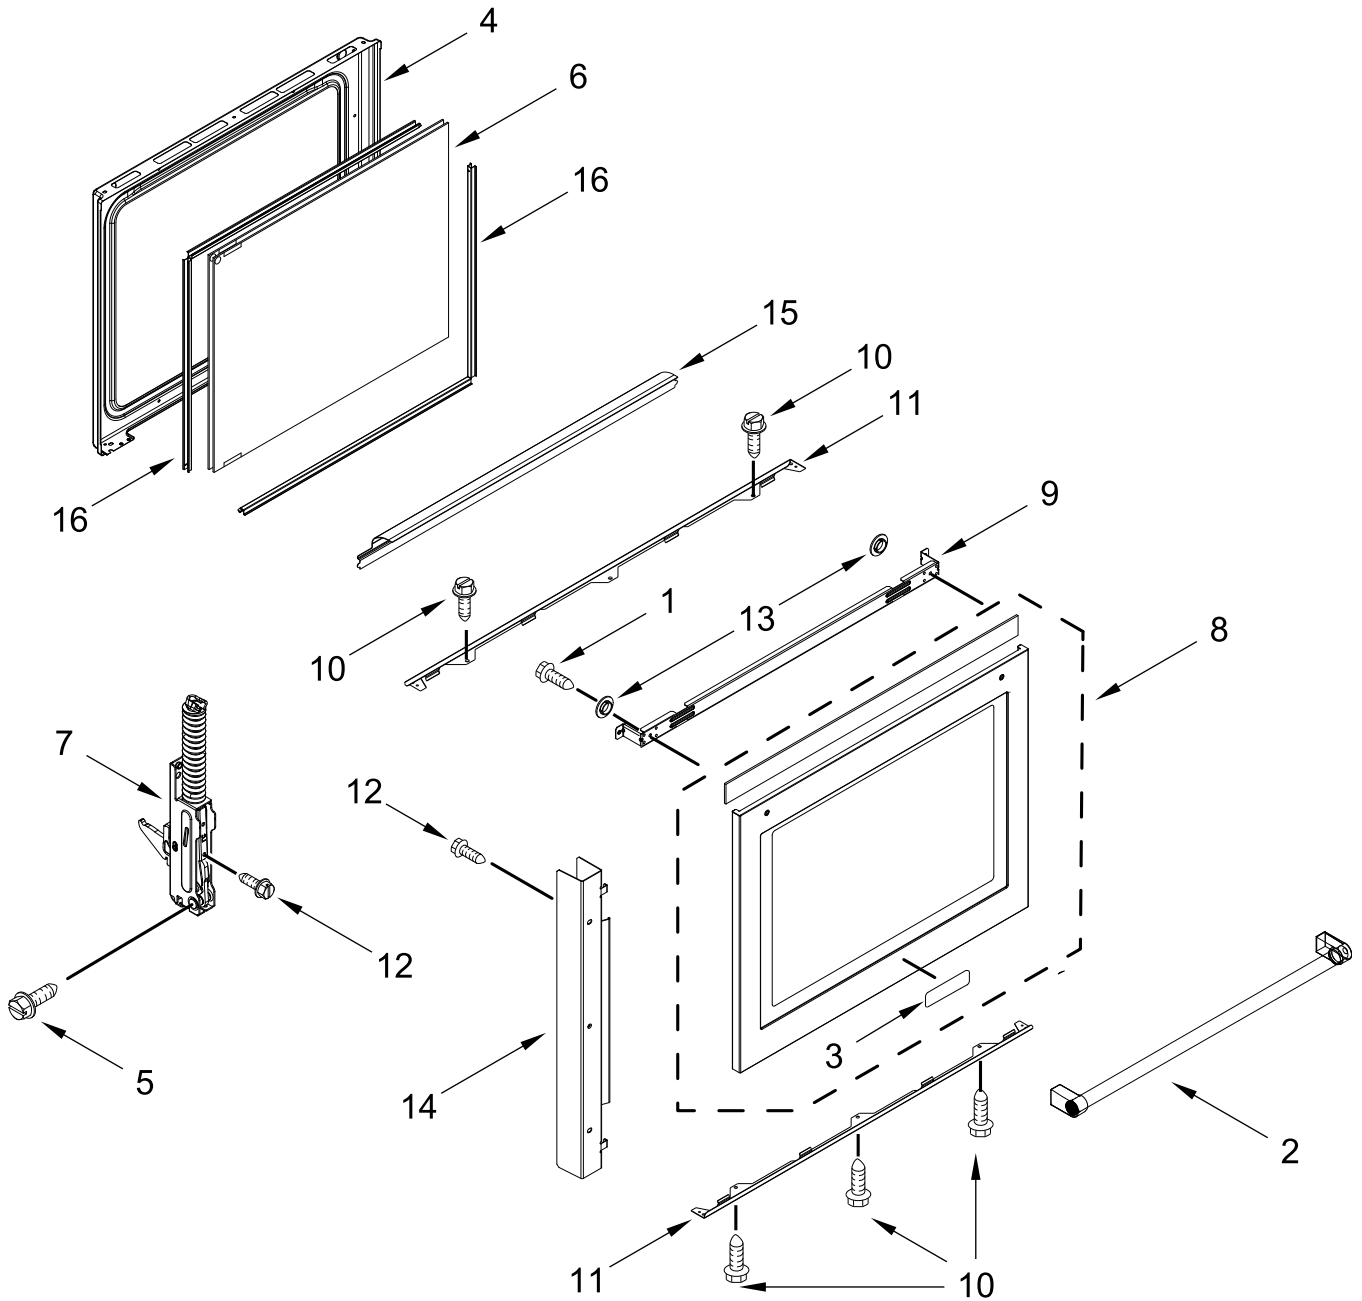


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	9780274	Screw
2		Assembly, Door Handle
	W11669501	Stainless
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11223202	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8		Assembly, Outer Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10031780	Screw
13	W10319024	Washer, Door
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10613791	Black
16	W11379948	Glass Spacer

DRAWER PARTS

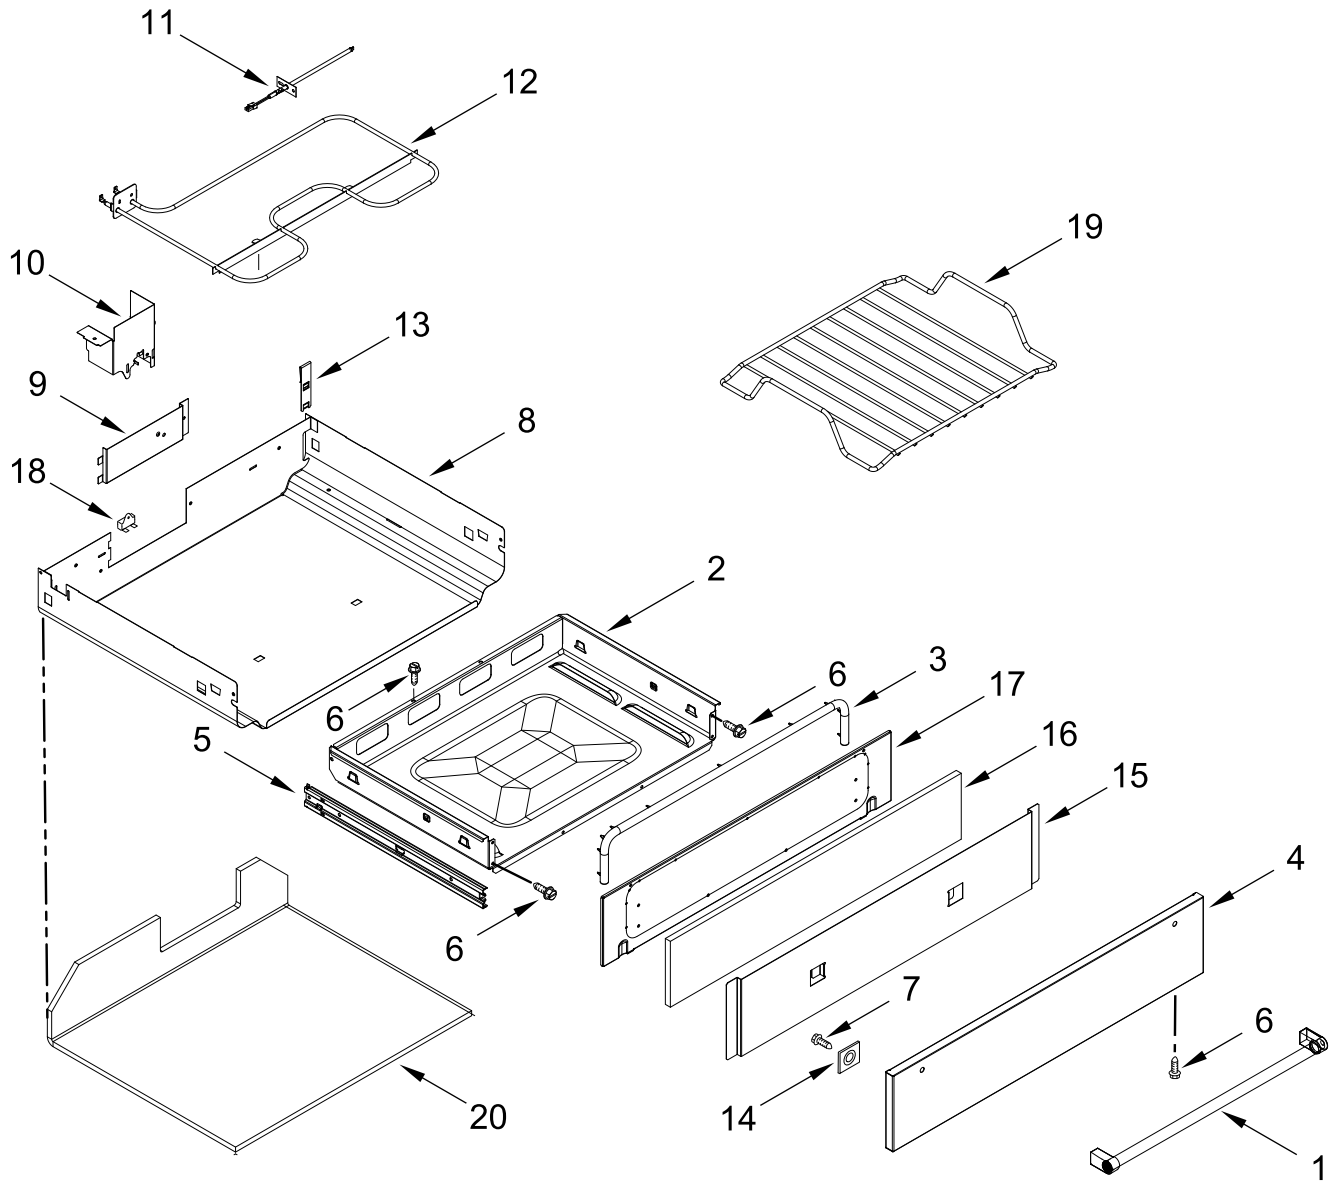

DRAWER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	7	3400882	Screw	16	W10550982	Insulation, Drawer
	W11669501	Stainless	8	W10634260	Enclosure, Warming	17	W10541947	Panel, Front Inner
2	W10757442	Drawer,Bake	9	W10727084	Cover, Gas Valve	18	W10729897	Fuse, Thermal
3	W10550987	Seal, Drawer	10	W10634259	Cover, Wire	19	W10602493	Rack, Bake Drawer
4		Panel, Drawer Front	11	W10720530	Sensor	20	W10551011	Insulation, Bake Drawer Bottom
	W10541954	Stainless	12	W10541944	Element, Bake			
5	W11399928	Slide, Drawer (Left)	13	W10551019	Cover, Side			
	W11399929	Slide, Drawer (Right)	14	3823F017-45	Spacer, Handle			
6	W10327235	Screw	15	W10551018	Insulation, Drawer Front			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS AND POLISHES
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint