


AMANA®

20" ELECTRIC FREESTANDING RANGE STANDARD CLEAN OVEN

MODELS:

AEP222VAW5 (White)


COOKTOP PARTS

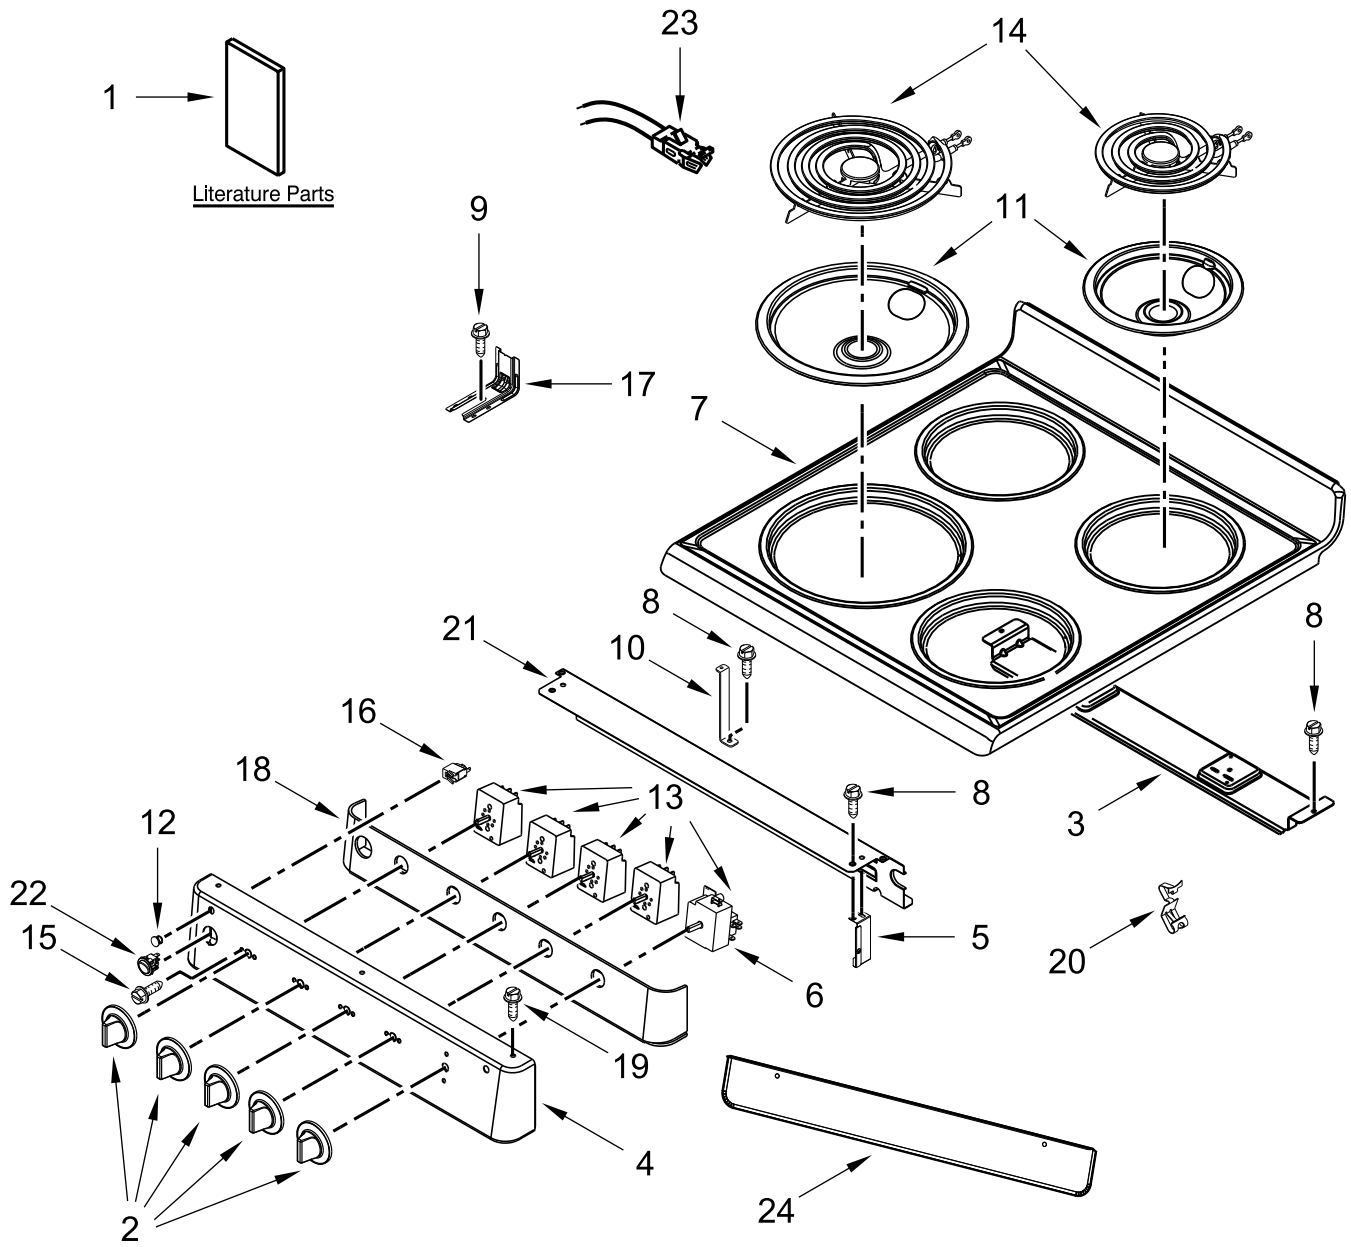

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	13	W10179654	Switch, Infinite (Left Front)	24	W11520373	"Z" Bracket, Manifold
	W11256486	Use & Care Guide		W10179655	Switch, Infinite (Left Rear, Right Rear, Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W10459122	Insallation Instructions					W11176326	Harness, Wire (Surface To Panel Assembly)
	W10181003	Tech Sheet	14	W11364019	Element, Coil Heating (2400W) (Left Front)		W11219526	Harness, Wire (Oven Light Switch)
	98007130	Tips, Safe Cooking (English)		W11364018	Element, Coil Heating (1500W) (Left Rear, Right Rear, Right Front)		W11188382	Harness, Wire (Ground)
2	W10183393	Knob, Control					W11241454	Harness, Switch
3	W10168363	Support, Burner	15	98005663	Screw		W11176327	Wire, Infinite To Term Block L1 (Black)
4		Panel, Control	16	W10185551	Indicator, Light		W11176350	Wire, Term Block To Thermostat (Red)
	W11543893	White	17	W10477747	Anti-Tip Kit		W11176347	Wire, Thermostat To Bake Element
5	W11509664	Bracket, Support Left	18	W11512692	Foil, Panel		W11176348	Wire, Thermostat BR Bake Element (Yellow)
	W11509665	Bracket, Support Right	19	98008545	Screw (Black)		W11176349	Wire, Broiler Element To Thermostat To BK
6	W10179656	Thermostat	20	98005642	Clip, Therm Bulb		W11176361	Wire, Tstat (4) To Tstat (Black)
7		Cooktop	21	W11509663	Shield, Control		W11176362	Wire, Tstat (H) To Oven Indicator Light (Black)
	W10175582	White	22		Switch, Rocker			
8	W10493726	Screw		98011571	White		3391018	Tie, Cable
9	7101P485-60	Screw, Anti-Tip Kit	23	814399	Receptacle, Element		3196696	CLIP-HARNESS
10	W11259395	Bracket, Cooktop						
11		Bowl, Chrome						
	W10179653	8" (Left Front)						
	W10179650	6" (Left Rear, Right Rear, Right Front)						
12	W10179657	Lens, Indicator						


CHASSIS PARTS

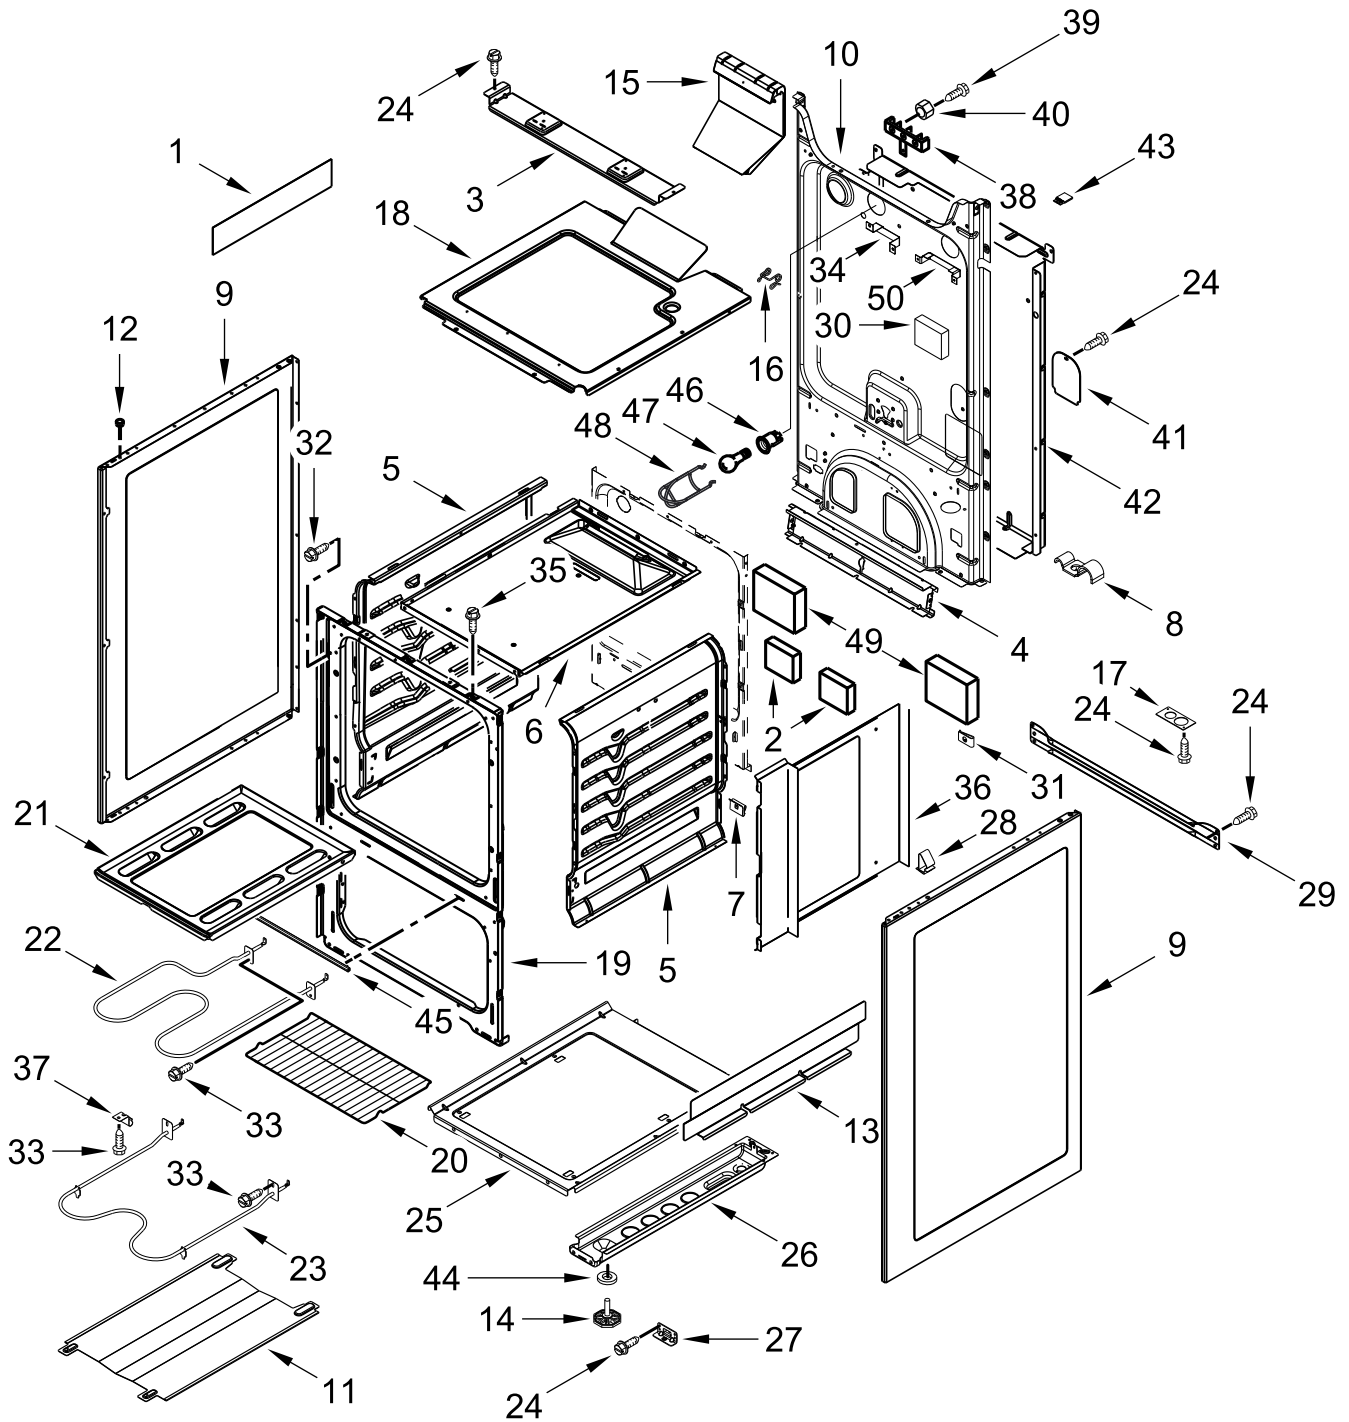

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10368736	Aluminum Foil	19	W11503844	Frame, Front	42	W10159819	Cover, Main Rear
2	W10185442	Counterweight	20	98016942	Rack, Oven	43	W10206594	Block, Adapter
3	W10168363	Support, Burner	21	W10192836	Bottom, Oven	44	98007193	Spacer
4	98012912	Support, Oven Burner	22	W10170571	Element, Broil	45	W11522388	Seal, Door
5	98004452	Side, Oven (Right Hand)	23	W10163272	Element, Bake	46	W10554269	Socket - Oven Light
	98004451	Side, Oven (Left Hand)	24	W10493726	Screw	47	W10788320	Bulb, Light
6	98004448	Top, Oven	25	98003945	Baffle, Base	48	W10224805	Protector, Lamp
7	98005502	Clip, Oven Botton	26	98003830	Rail, Base	49	W10902689	Counterweight
8	W11510655	Clip, Tubing	27	98007126	Base, Foot	50	W11036713	Support, Brick
9		Panel, Side	28	98004722	Clip, Cooktop			FOLLOWING PARTS NOT ILLUSTRATED
	W11501467	White	29	98010054	Support, Rear		W10206735	Insulation, Wrap
10	W10166296	Back, Main	30	98006710	Counterweight		W10137234	Insulation, Back
11	98015099	Spread, Flame (Bake)	31	98009179	U-Nut		W10177346	Insulation, Bottom
12	W10207167	Bumper, Cooktop	32	98008545	Screw (Black)		W10207891	Insulation, Top
13	98007191	Shield, Heat (Lower)	33	98006632	Screw		98004294	Wire Tie, Insulation
14	W10153610	Foot, Front	34	W11040327	Brick Support, Upper			
	W10058460	Foot, Leveling	35	98015526	Screw			
15	W10116396	Box, Flue	36	98017387	Baffle, Side			
16	98013690	Spring, Torsion (Flue Box)	37	98004973	Support, Element			
17	W10180177	Plate, Conduit	38	W10181453	Block, Terminal Bare Wire			
18	W10208539	Box, Burner	39	W10179708	Screw			
			40	W10204883	Nut, Terminal Block			
			41	W10209692	Cover, Terminal Block			


DOOR AND DRAWER PARTS

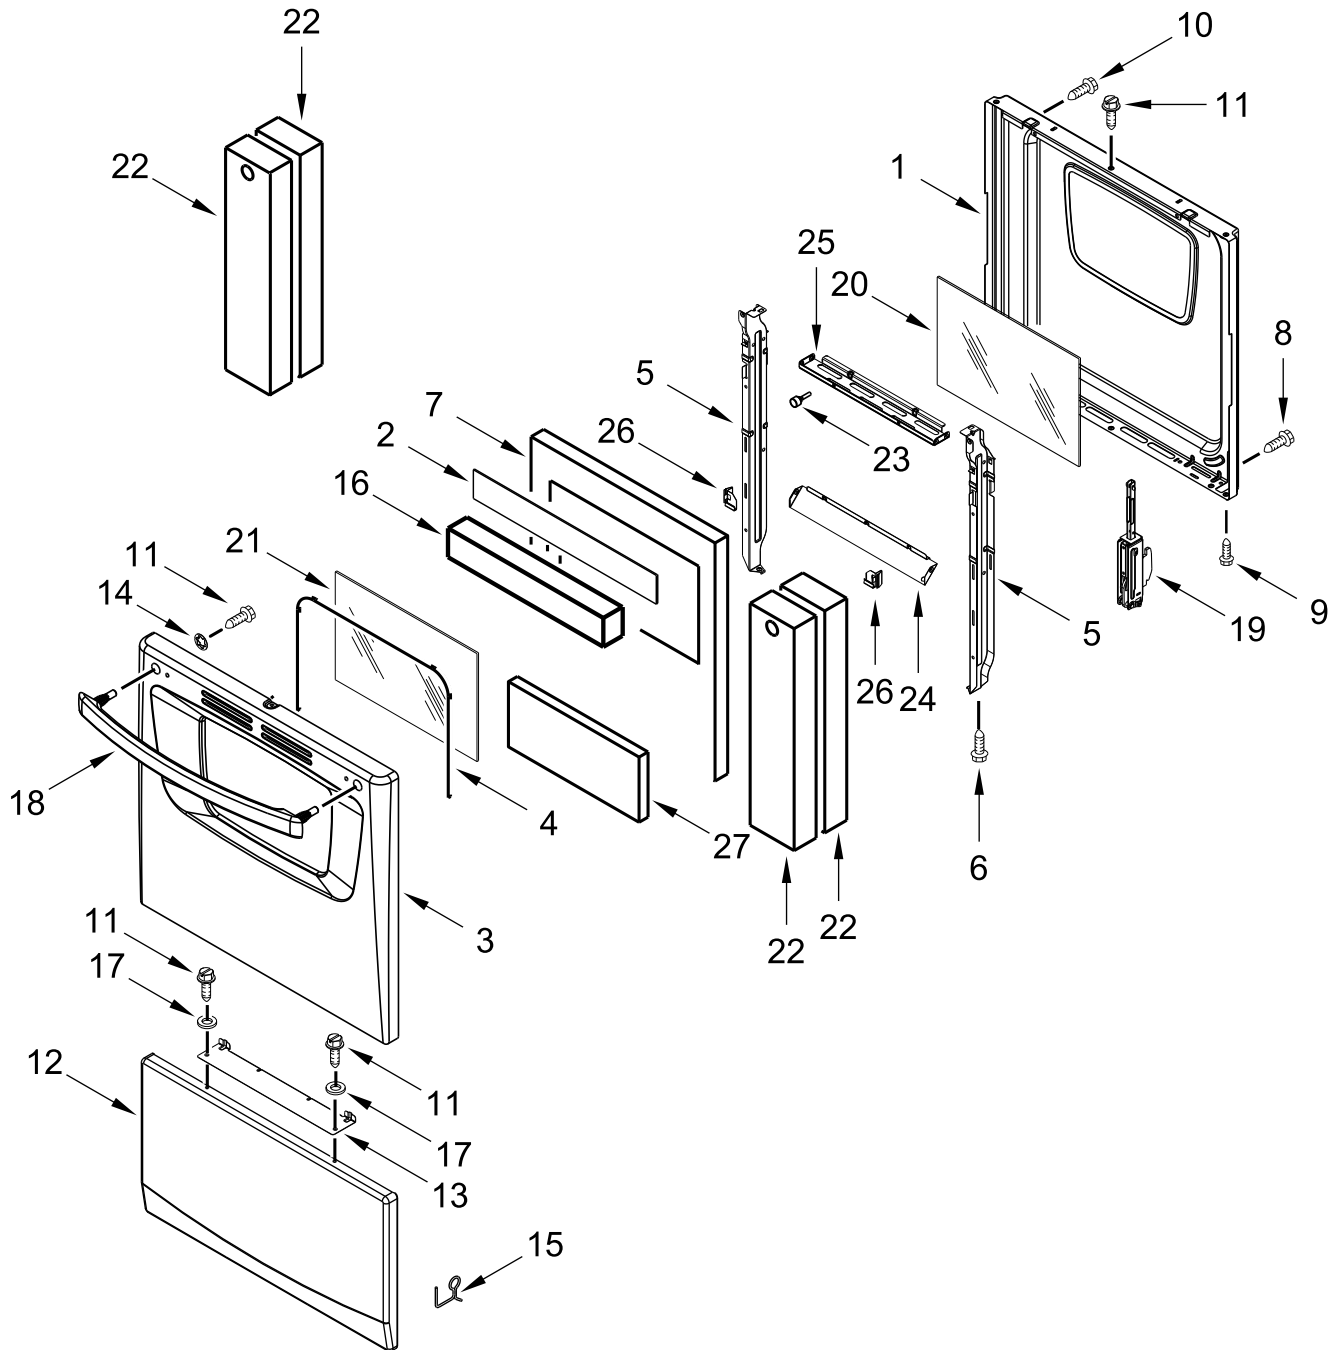

DOOR AND DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11501954	Liner, Door	9	98006726	Screw (Black)	20	W10201296	Glass, Inner
2	W11513373	Retainer, Upper Insulation	10	8533842	Screw	21	W10168624	Glass, Outer
3		Panel, Outer Door	11	98006727	Screw (White)	22	W10212526	Insulation
	W11501931	White	12	98009307	Door, Broil	23	98004979	Bumper
4	W11522387	Seal, Oven	13	W10208117	Bracket, Panel	24	98012903	Retainer, Insulation (Bottom)
5	98004564	Retainer (Right Hand)	14	98004650	Nut, Push	25	98004981	Retainer, Insulation (Top)
	98004629	Retainer (Left Hand)	15	6610364	Clip, Door	26	98004953	Clip, Glass (Right Hand)
6	98004993	Screw	16	W11502239	Insulation, Door		98004952	Clip, Glass (Left Hand)
7	W10212696	Insulation, Door	17	W10216805	Washer	27	W10212525	Insulation, Door
8	98008699	Screw	18		Handle, Door			
				98004947	White			
			19	98017873	Hinge, Oven Door (Yellow)			

BACKGUARD PARTS

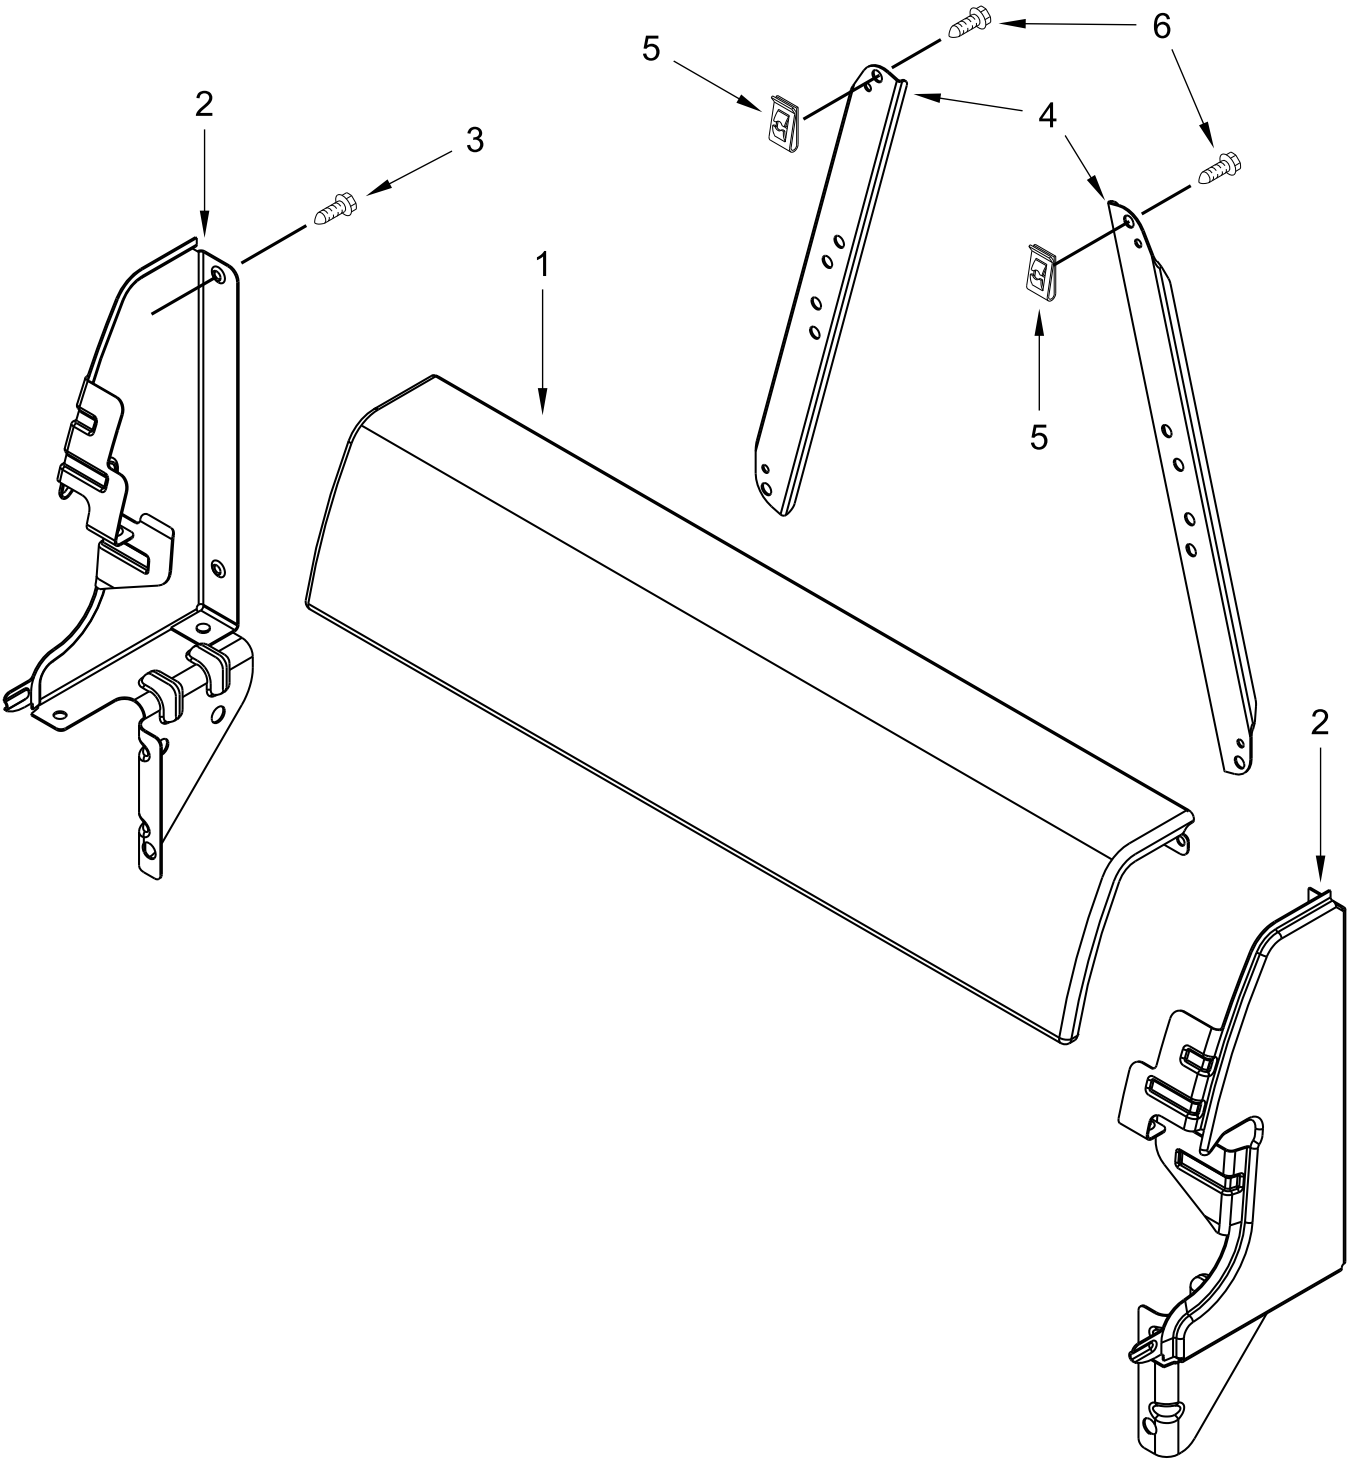

BACKGUARD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	98009821	Backguard, Short	4	W10145101	Support, Backguard
2		Endcap	5	98009179	U-Nut
	W10144828	White Left Hand	6	W10493726	Screw
	W10144829	White Right Hand			
3	98015526	Screw			

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	98012220	Kit, Door Pin

WIRING HARNESS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10177729	Harness, Wire (Surface To Panel Assembly)
	W10180175	Harness, Wire (Oven Light Switch)
	W10244849	Harness, Wire (Ground)
	W10177713	Wire, Infinite To Term Block L1 (Black)
	W10177714	Wire, Infinite To Term Block L2 (Red)
	W10177715	Wire, Term Block To Thermostat L1 (Black)
	W10177716	Wire, Thermostat To Bake Element (Blue)
	W10177718	Wire, Thermostat BR Bake Element (Yellow)
	W10177719	Wire, Tstat (4) To Tstat (Black)
	W10177720	Wire, Infinite To Indicator Light (Black)
	W10177722	Wire, Tstat (H) To Oven Indicator Light (Black)
	W10177724	Wire, Infinite(L2) To Surface Indicator Light To Oven (Red)
	W10177726	Wire, Broiler Element To Thermostat To BK (Red)
	W10177728	Wire, Term Block To Tstat 5 (Red)
	8534079	Screw, Ground
	3391018	Tie, Cable