



ELECTRIC WALL OVEN


MODELS:

WOED5030LB01 (Black)

WOED5030LW01 (White)

WOED5030LZ01 (Stainless)


CONTROL PANEL PARTS

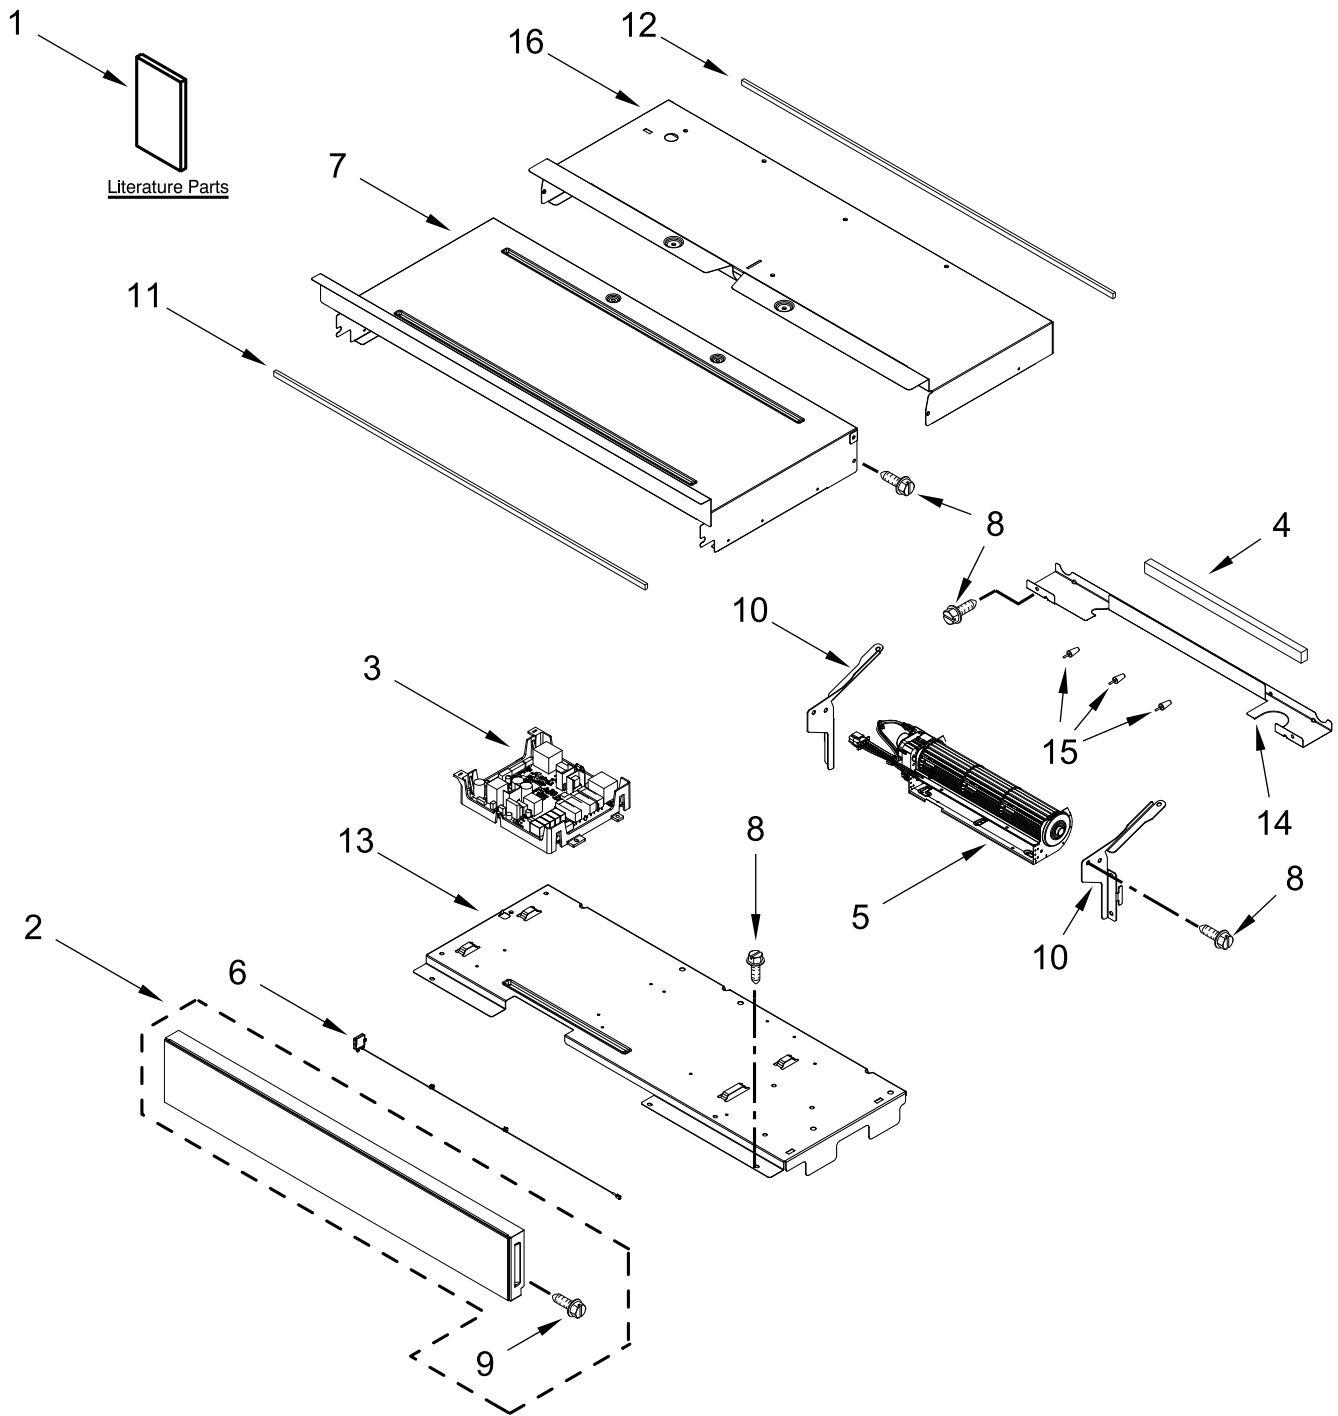

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	4451758	Block, Foam	16	W11223325	Cover, 30 IN Chassis Top Back
	W11656312	Owner's Manual	5	W11397930	Blower			
	W11553919	Quick Start Guide	6	W11409842	Antenna			FOLLOWING PARTS NOT ILLUSTRATED
	W11601391	Tech Sheet	7	W11244445	Cover, 30 IN Chassis Top Front		W11464640	Harness, Main
2		Assembly, Control Panel (Includes Overlay)	8	7101P426-60	Screw		W11245677	Harness, Signal
	W11467969	Black (Used in Black and Stainless Models)	9	W11339492	Screw (Black)		W11264646	Harness, Door Latch
	W11568106	White	10	W10655463	Bracket, Blower (Left)		W10562910	Harness, EOL
3	W11585754	Control, Copernicus		W10655462	Bracket, Blower (Right)		W11132988	Strap, Lead Ground
	W11585756	Control, Copernicus (Without Power Supply)	11	W11162063	Gasket, Rubber		4448664	Clamp, Conduit
			12	W10728475	Gasket, Rubber		W10655464	Bracket, Harness
			13	W11179509	Tray, Electronic		313438	Clip, Harness
			14	W11166802	Divider, Chassis Back		4450800	Screw, Grounding
			15	W10351295	Bumper		W10487999	Clip, Harness
							W11394923	Bag, Hardware


OVEN PARTS

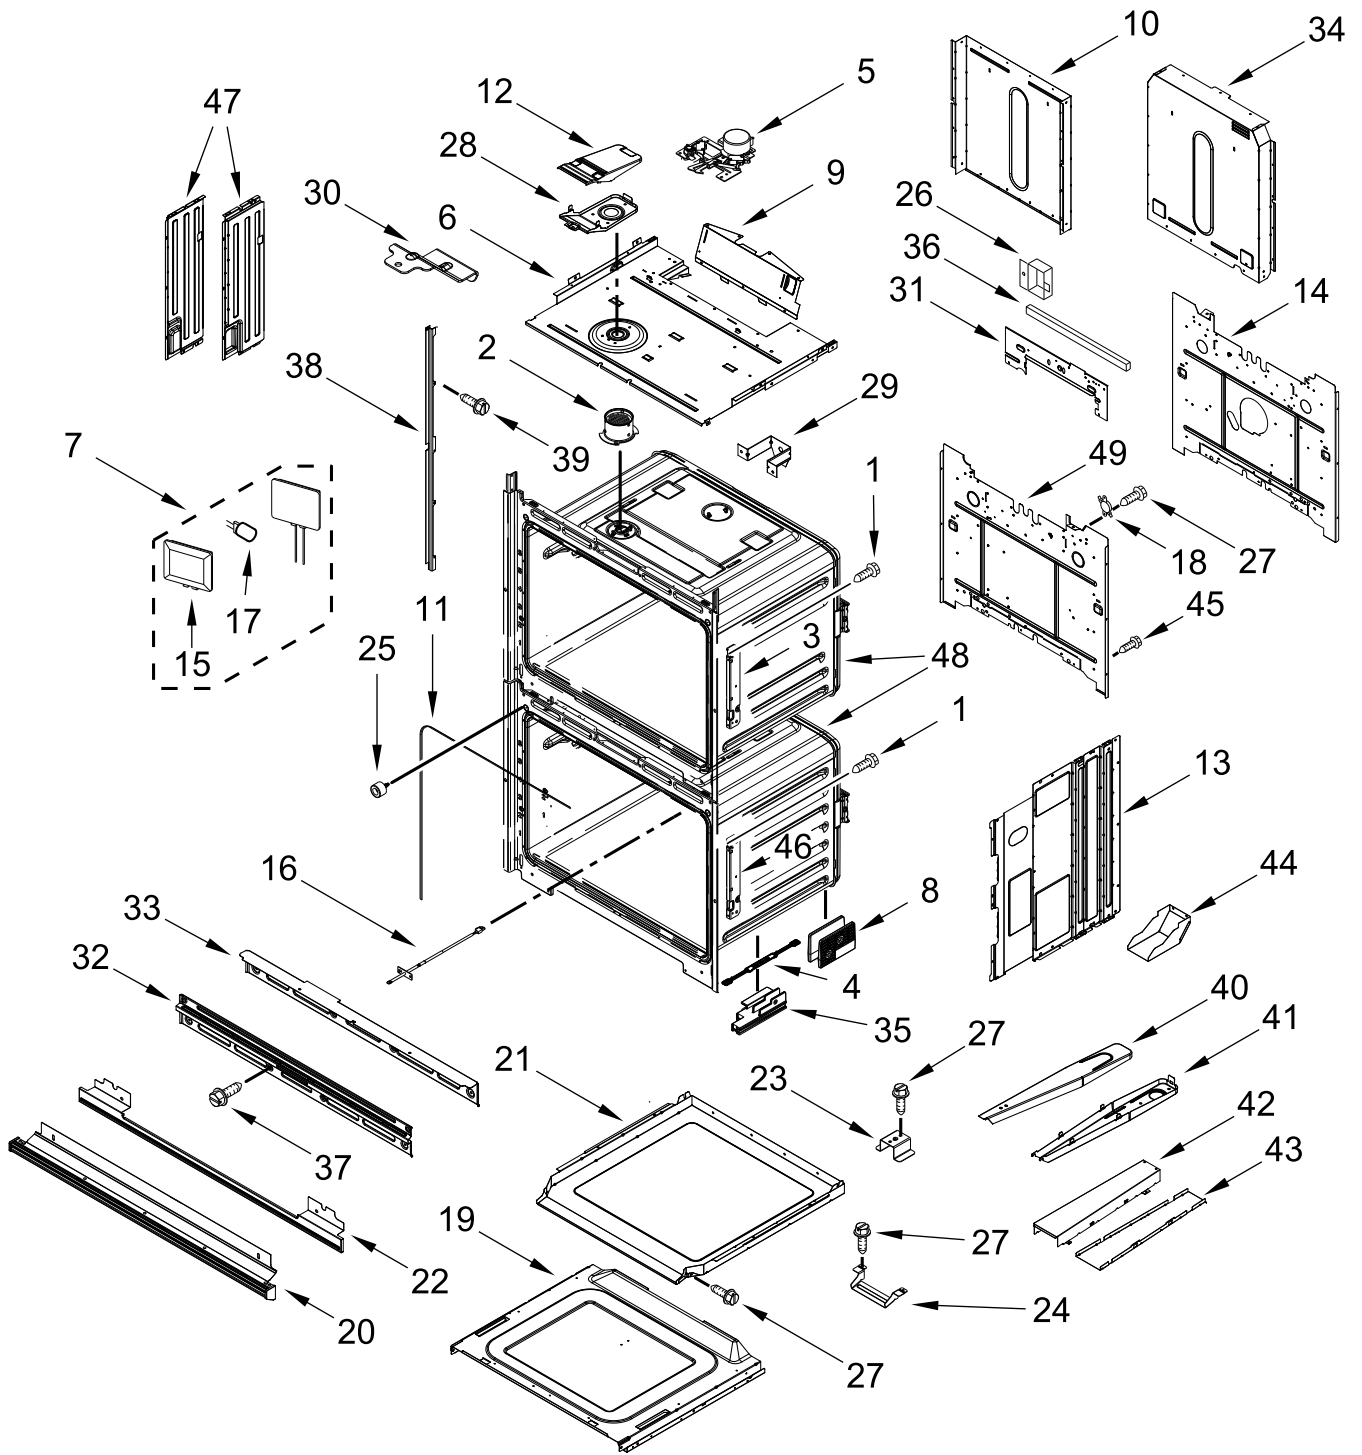

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	22		Trim, Bottom Vent	41	W11256420	Base, Top Back Exhaust
2	W11085298	Tube, Vent		W11560859	Black			
3	W11100732	Receiver, Hinge (Upper)	23	W11135135	Support, Air Channel	42	W11256431	Cover, Lower Back Exhaust
4	W11558603	Spacer, Base	24	W11390667	Spacer, Chassis Bottom Duct	43	W11256430	Base, Lower Back Exhaust
5	W11132456	Latch, Motorized	25	W11166315	Bumper and Screw	44	W11256432	Deflector, Lower Back Exhaust
6	W11168071	Top, Chassis	26	8285593	Cover, Connector	45	W10142292	Screw
7	W11205574	Assembly, Oven Light	27	7101P426-60	Screw	46	W11239070	Receiver, Hinge (Left)
8	W11245118	Foot, Base	28	W11256423	Base, Vent Exhaust		W11239072	Receiver, Hinge (Right)
9	W10904163	Deflector, Blower	29	W11344645	Hat Bracket, Vent			(Lower)
10	W11134657	Duct, Lower Chassis Back	30	W11342780	Bracket, Top Front	47	W11167419	Cover, Suction (Left)
11	W11608108	Gasket	31	W11186652	Bracket, U-Shape		W11186675	Cover, Suction (Right)
12	W11256424	Cover, Vent Exhaust	32	W11235482	Vent, Center 30"	48		Liner, Oven (Not Serviceable)
13	W11165274	Side, Chassis	33	W11334857	Vent, Top 30 IN	49	W11442209	Back, Chassis (Lower)
14	W11223327	Back, Chassis (Upper)	34	W11165250	Duct, Chassis Back (Upper)			FOLLOWING PARTS NOT ILLUSTRATED
15	W10472386	Lens, Light	35	W11245114	Foot, Chassis (Left)	W11188284		Insulation, Wrap
16	W11346074	Probe, Sensor		W11245116	Foot, Chassis (Right)	W11234758		Insulation, Cavity
17	W10472384	Bulb, Light	36	W11211345	Foam, U-Bracket			
18	4449751	Thermostat (TOD)	37	W11249635	Screw			
19	W11135103	Base, Chassis	38	W11235460	Cover, Side trim (Left)			
20		Assembly, Bottom Vent		W11235461	Cover, Side Trim (Right)			
	W11467336	Black (Used in Black and White Models)	39	W11404000	Screw			
	W11467754	Stainless	40	W11256421	Cover, Top Back Exhaust			
21	W11244446	Duct, Bottom Chassis						


UPPER OVEN DOOR PARTS

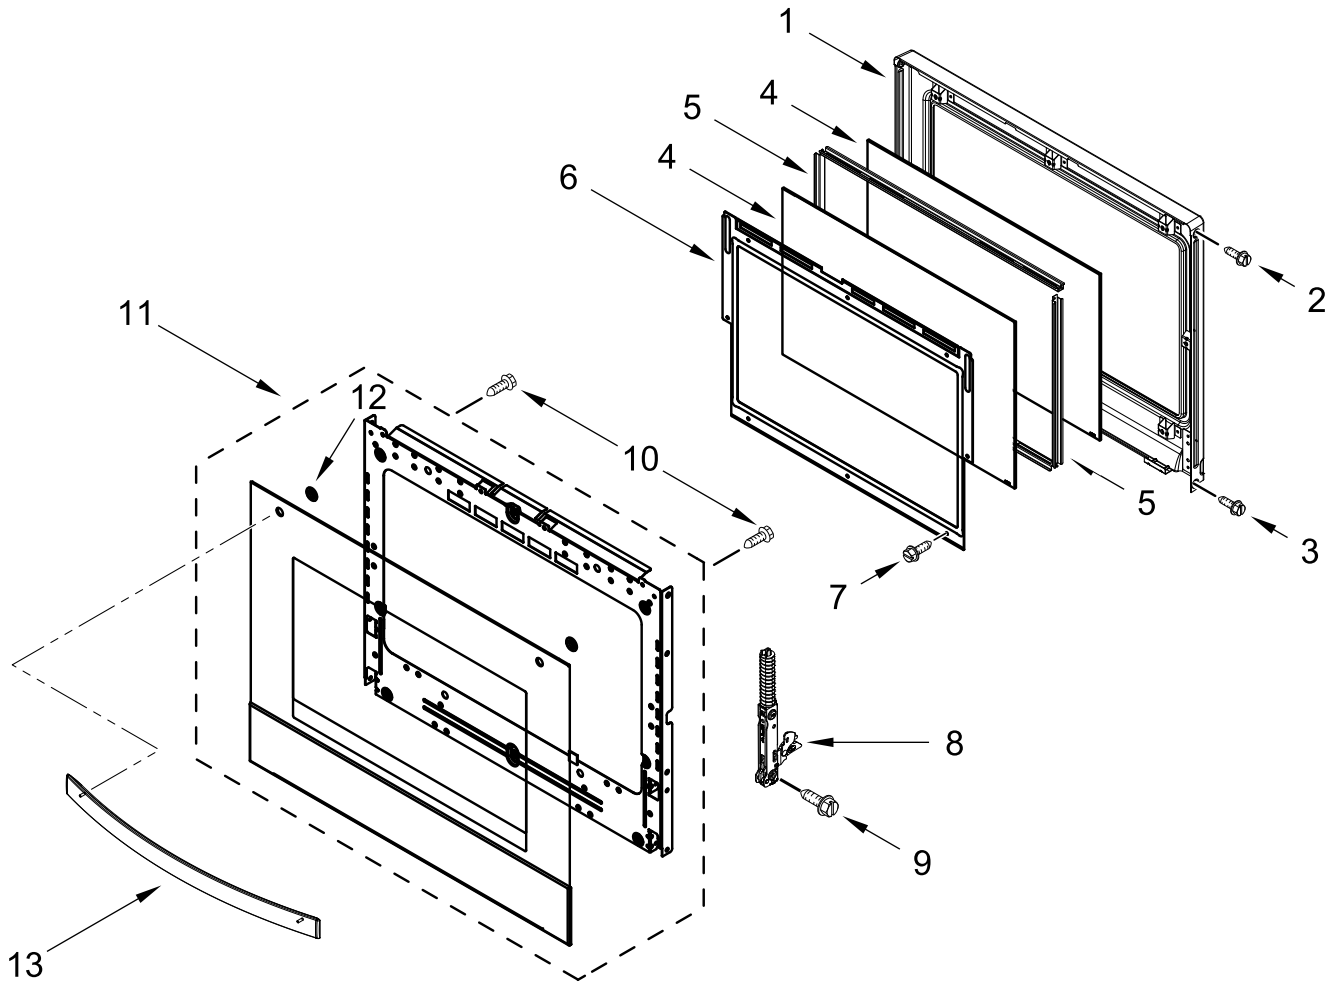

UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11394143	Hinge, Door (Left)	12	W10319024	Washer, Door
2	7101P375-60	Screw		W11394144	Hinge, Door (Right)	13		Handle Assembly
3	W11290045	Screw	9	3196183	Screw		W11532518	Black
4	W10618107	Glass, Inner	10	W11317731	Screw (Black)		W11660149	White
5	W11302730	Spacer, Air Divider	11		Door Assembly		W11532517	Stainless
6	W11174095	Retainer, Air Divider Glass		W11499217	Black			
7	7101P426-60	Screw		W11499219	White			
				W11499218	Stainless			


LOWER OVEN DOOR PARTS

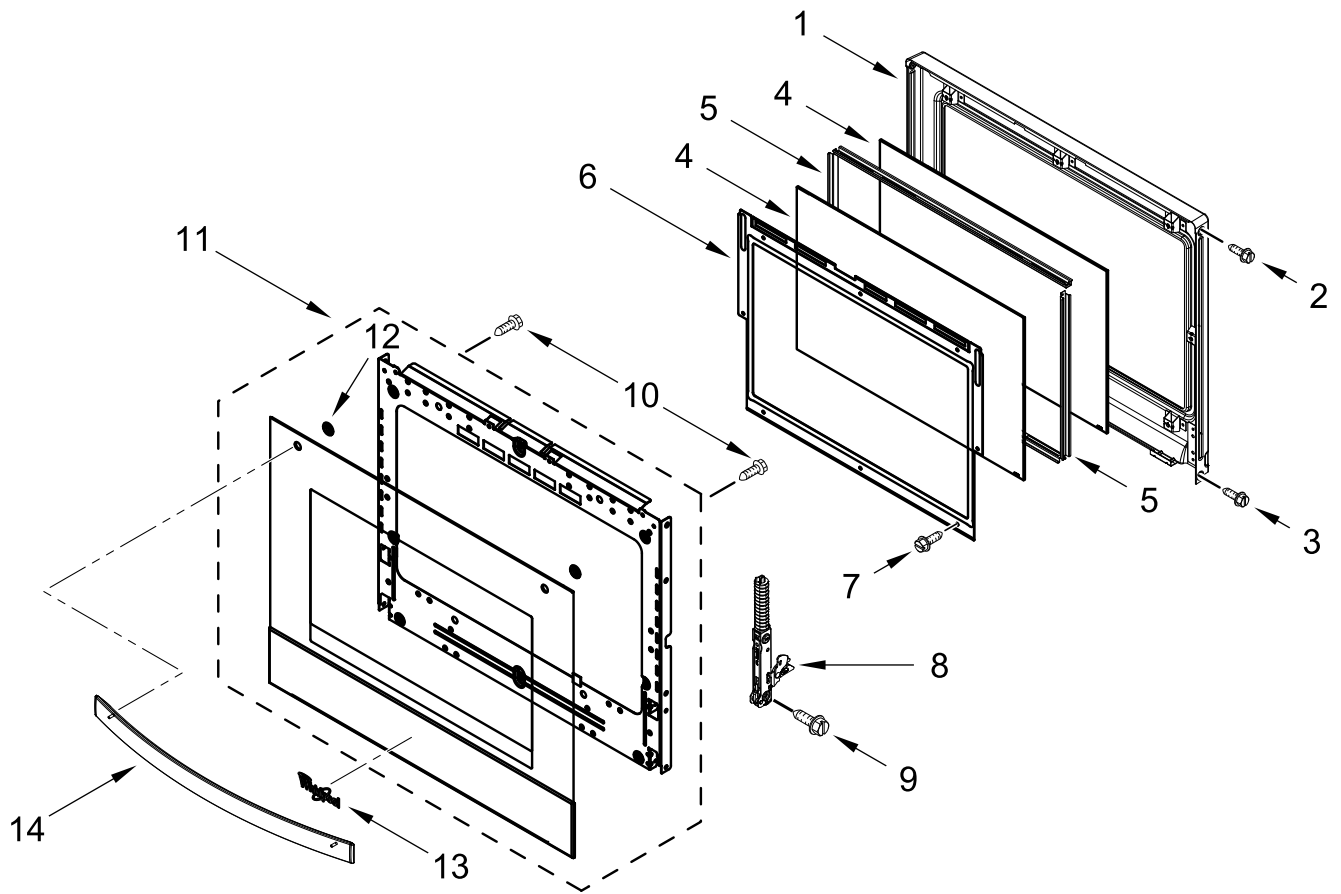

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11394143	Hinge, Door (Left)	12	W10319024	Washer, Door
2	7101P375-60	Screw		W11394144	Hinge, Door (Right)	13	W10884775	Badge
3	W11290045	Screw	9	3196183	Screw	14		Handle Assembly
4	W10618107	Glass, Inner	10	W11317731	Screw (Black)		W11532518	Black
5	W11302730	Spacer, Air Divider	11		Door Assembly		W11660149	White
6	W11174095	Retainer, Air Divider Glass		W11499217	Black		W11532517	Stainless
7	7101P426-60	Screw		W11499219	White			
				W11499218	Stainless			

INTERNAL OVEN PARTS

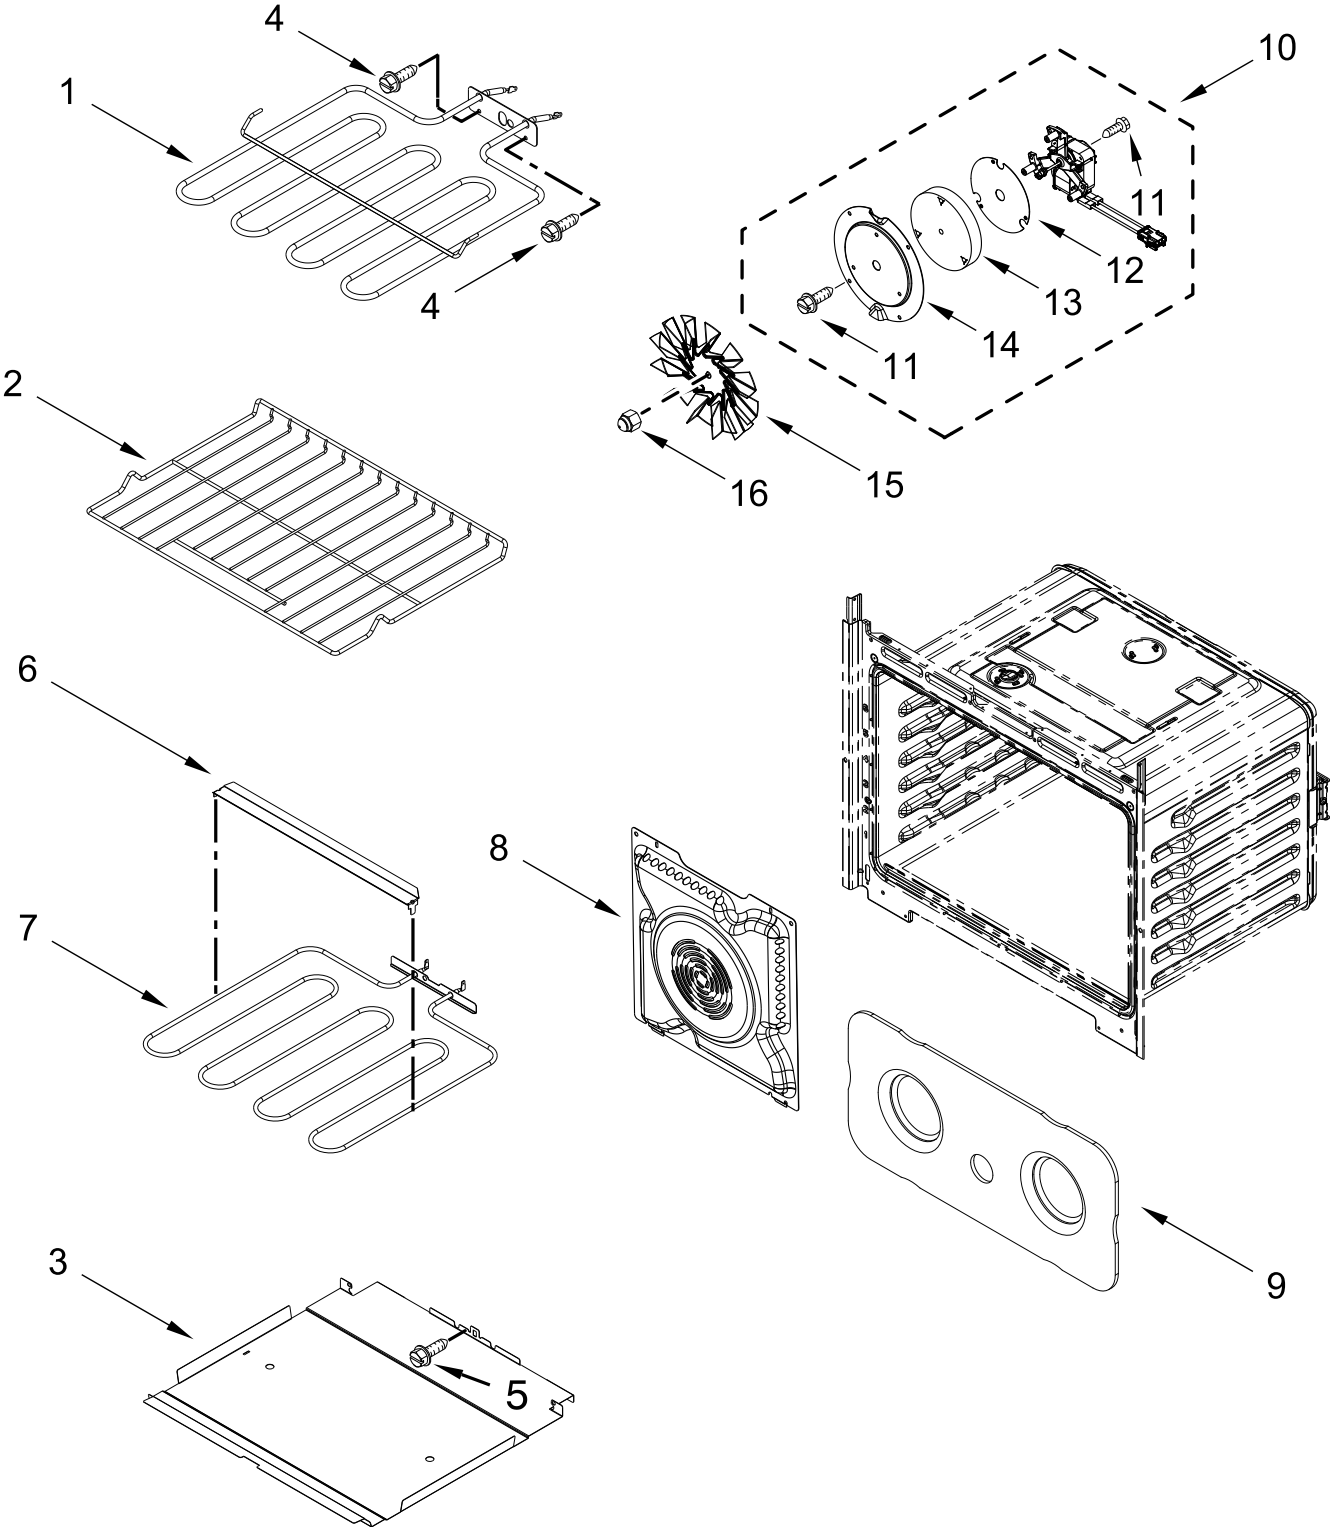

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	8	W10359278	Baffle, Convection	14	W11398057	Cover, Convect Plate
2	W11122597	Rack, Oven	9	W11489860	Plate, Ring Element	15	W11425715	Blade, Fan
3	W10318198	Tray, Hidden Bake	10	W11398058	Convect Motor Assembly	16	W11433702	Nut, Acorn (LH)
4	7101P434-60	Screw	11	W10720084	Screw			
5	7101P426-60	Screw	12	W11251715	Plate, Convect Motor			
6	W10282957	Crossbar, Hidden Bake Tray	13	W11251716	Insulation, Convect Motor			
7	W11292248	Element, Bake						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
		Vent, Deflector
	W11594553	Black
	W11551866	Stainless Trim, Tall Vent
	W11570325	Black
	W11570323	Stainless Trim, Bottom Vent
	W11570321	Stainless