

Single-Door Freezer A Quick Guide to Getting Started

Set up your freezer

- Prior to using the freezer, make sure it is located on a floor that is level and strong enough to support it fully loaded. Remove tape and glue residue and clean surfaces with soap and water before turning on the unit.
- If you are using your freezer in a kitchen, we recommend you set your temperature at 0°F (-18°C).
 After 24 hours, you can adjust the control as desired, allowing the temperature to stabilize.

Press either + or — to adjust to desired temperature setting inside the refrigerator. **°F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).

Care and cleaning

- Immediately wipe up any spills and clean your freezer at least twice per year. Keeping your freezer clean prevents odor build up and maintains appearance.
- More powerful than baking soda, PureAdvantage
 Ultra II™ Air Filter absorbs undesirable smells keeping
 your freezer fresher. We recommend replacing your filter
 at least once every 6 months.

Your Filter: ELPAULTRA2 PureAdvantage Ultra II™ Air Filter

Welcome to an effortless appliance protection experience.

Have peace of mind knowing we are here to always keep your appliance in peak performance.

 Register your product for a more effortless experience by scanning the QR code.



- Extend your
 manufacturer's limited warranty
 with an appliance protection plan to
 ensure you are always protected from
 surprises, including up to \$250
 of food-loss coverage and a worryfree guarantee we'll replace what
 we can't repair.
- Ever in need of service or repair? Our trusted Electrolux-trained technicians are experts on your appliance and can provide reliable service and repair work.

Call us at (866) 386-5286 to enroll.

? FAQs

· What does the alarm or "buzzer sound" mean?

An alarm or "buzzer sound" can mean your door is open, a power outage or **HI TEMP** has been detected. In most cases, simply acknowledge the alarm by resetting it. However, in the event of a **HI TEMP**, it's a good idea to make sure your freezer is level and the door closes freely with a proper seal. Once you close your freezer door, leave it closed so the freezer temperature can decrease and stabilize to the set temperature.

• Why does my freezer seem to run continuously?

Your variable speed compressor is designed to run 100% of the time except during the defrost cycle. At times it will run faster, such as after a defrost cycle.

• The temperature is warmer or colder than preferred. What can I do?

Adjust the temperature by 1 or 2 degrees and allow 24 hours for the temperature to stabilize. Check to ensure food items are not blocking the multi-port air exhaust ducts as this will impact performance.

See more FAQs and your User Manual online