


# Dryer Quick Start Guide

## OPERATING INSTRUCTIONS


**WARNING**



**Fire Hazard**

No washer can completely remove oil.  
Do not dry anything that has ever had any type of oil on it (including cooking oils).  
Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.  
Failure to follow these instructions can result in death or fire.

**WARNING**

 


**Explosion Hazard**


Keep flammable materials and vapors, such as gasoline, away from dryer.  
Do not dry anything that has ever had anything flammable on it (even after washing).  
Failure to follow these instructions can result in death, explosion, or fire.

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

### Step 1. Clean Lint Screen

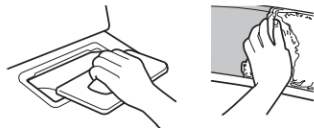

### Step 2. Load Clothes; then Close Door

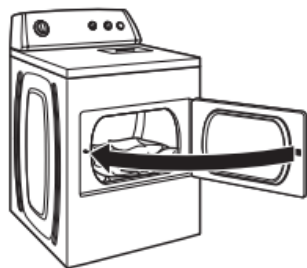 

### Step 3. Select Cycle and Settings



### Step 4. Press Start



## Cycle Guide – Normal Cycle

Not all cycles and settings are available on all models.

**AccuDry™ Cycle** senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level.

Items to Dry:	Cycle:	Temperature:	Description:
Work clothes, medium-weight fabrics, sheets	Energy Preferred or Normal	Medium	Automatic cycles give the best drying in the shortest time. Drying time varies based on fabric type, load size, and dryness setting. Select a drying temperature based on the fabrics in your load. If you are unsure of the temperature to select for a load, select the lower setting rather than the higher setting.

**NOTE:** Government energy certifications for the Whirlpool® Gas and Electric models were based on the Timed Dry cycle with the Maximum drying temperature setting. The as-shipped defaults of Auto Dry, Normal cycle, Low heat, Wrinkle Shield™ were not used.

**NOTE:** If loads do not seem as dry as you would like, select Very Dry the next time you dry a similar load. If loads seem drier than you like, select Less Dry the next time you dry a similar load.

## Online Ordering Information

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit [www.whirlpool.com/owners](http://www.whirlpool.com/owners), or in Canada [www.whirlpool.ca/owners](http://www.whirlpool.ca/owners). This may save you the cost of a service call.



[Register Product](#)



[Schedule Service](#)



[How To's & FAQ](#)



[Manuals & Downloads](#)



[Add Service Plan](#)



[Parts](#)



[Filters](#)



[Accessories](#)

However, if you need to contact us, use the information listed below for the appropriate region.

United States:  
1-866-698-2538

Canada:  
1-800-807-6777

Whirlpool Brand Home Appliances  
Customer eXperience Center  
553 Benson Road  
Benton Harbor, MI 49022-2692

Whirlpool Brand Home Appliances  
Customer eXperience Centre  
200-6750 Century Ave.  
Mississauga, Ontario L5N 0B7

**IMPORTANT:** Retain this guide for future use.

## Button Descriptions

### 1. Wrinkle Shield™ Option (on some models)

When you are unable to remove a load of clothes from the dryer as soon as it stops, wrinkles can form. The Wrinkle Shield™ Option periodically tumbles, rearranges, and fluffs the load to help keep wrinkles from forming.

- Get 90 minutes of heat-free, periodic tumbling at the end of a cycle. Turn the Wrinkle Shield™ Option knob to On or Off at any time before the cycle has ended.

### 2. CYCLE CONTROL KNOB

Use the Cycle Control knob to select available cycles on your dryer. Turn the knob to select a cycle for your laundry load. See the online "Cycle Guide" for details.

#### Timed Dry

Will run the dryer for the specified time on the control. On models with a selectable temperature knob, you may choose a setting based on the fabrics in your load. Drying time and temperature will depend on your dryer model.

 
#### AccuDry™ Cycle/Automatic Dry Cycle/Auto Dry Cycle

Senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Gives the best drying in the shortest time. Drying time will vary based on fabric type, load size, dryness setting, and temperature setting.

### 3. TEMPERATURE

Select a drying temperature based on the fabrics in your load. If you are unsure of the temperature to select for a load, select the lower setting rather than the higher setting.

**NOTE:** The No Heat temperature setting (on some models) is not available on AccuDry™ Cycles.

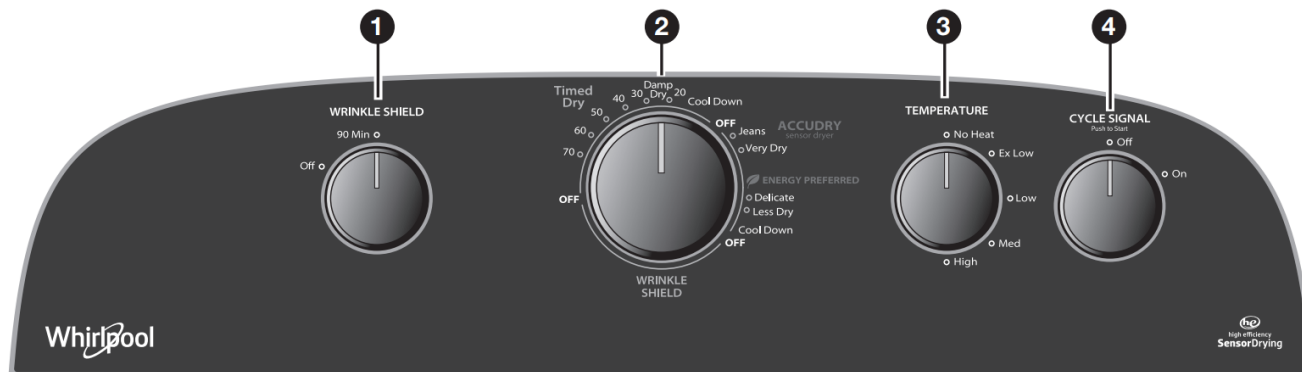

Not all features, cycles, and options are available on all models. Appearance may vary.

### 4. CYCLE SIGNAL/PUSH TO START

The Cycle Signal produces an audible sound when the drying cycle is finished. Promptly removing clothes at the end of the cycle reduces wrinkling. Turn the Cycle Signal knob to select the desired setting (On or Off). Press the Push to Start knob to start the dryer.

**NOTE:** Cuando seleccione el ajuste Wrinkle Shield™ (Antiarrugas), el tono se escuchará cada 5 minutos hasta que saque la ropa o hasta que haya terminado el ajuste Wrinkle Shield™.