




**ELECTRIC RANGE  
(Fingerprint Resistant)**

**MODELS:**

MER7700LZ3 (Stainless)


# COOKTOP PARTS

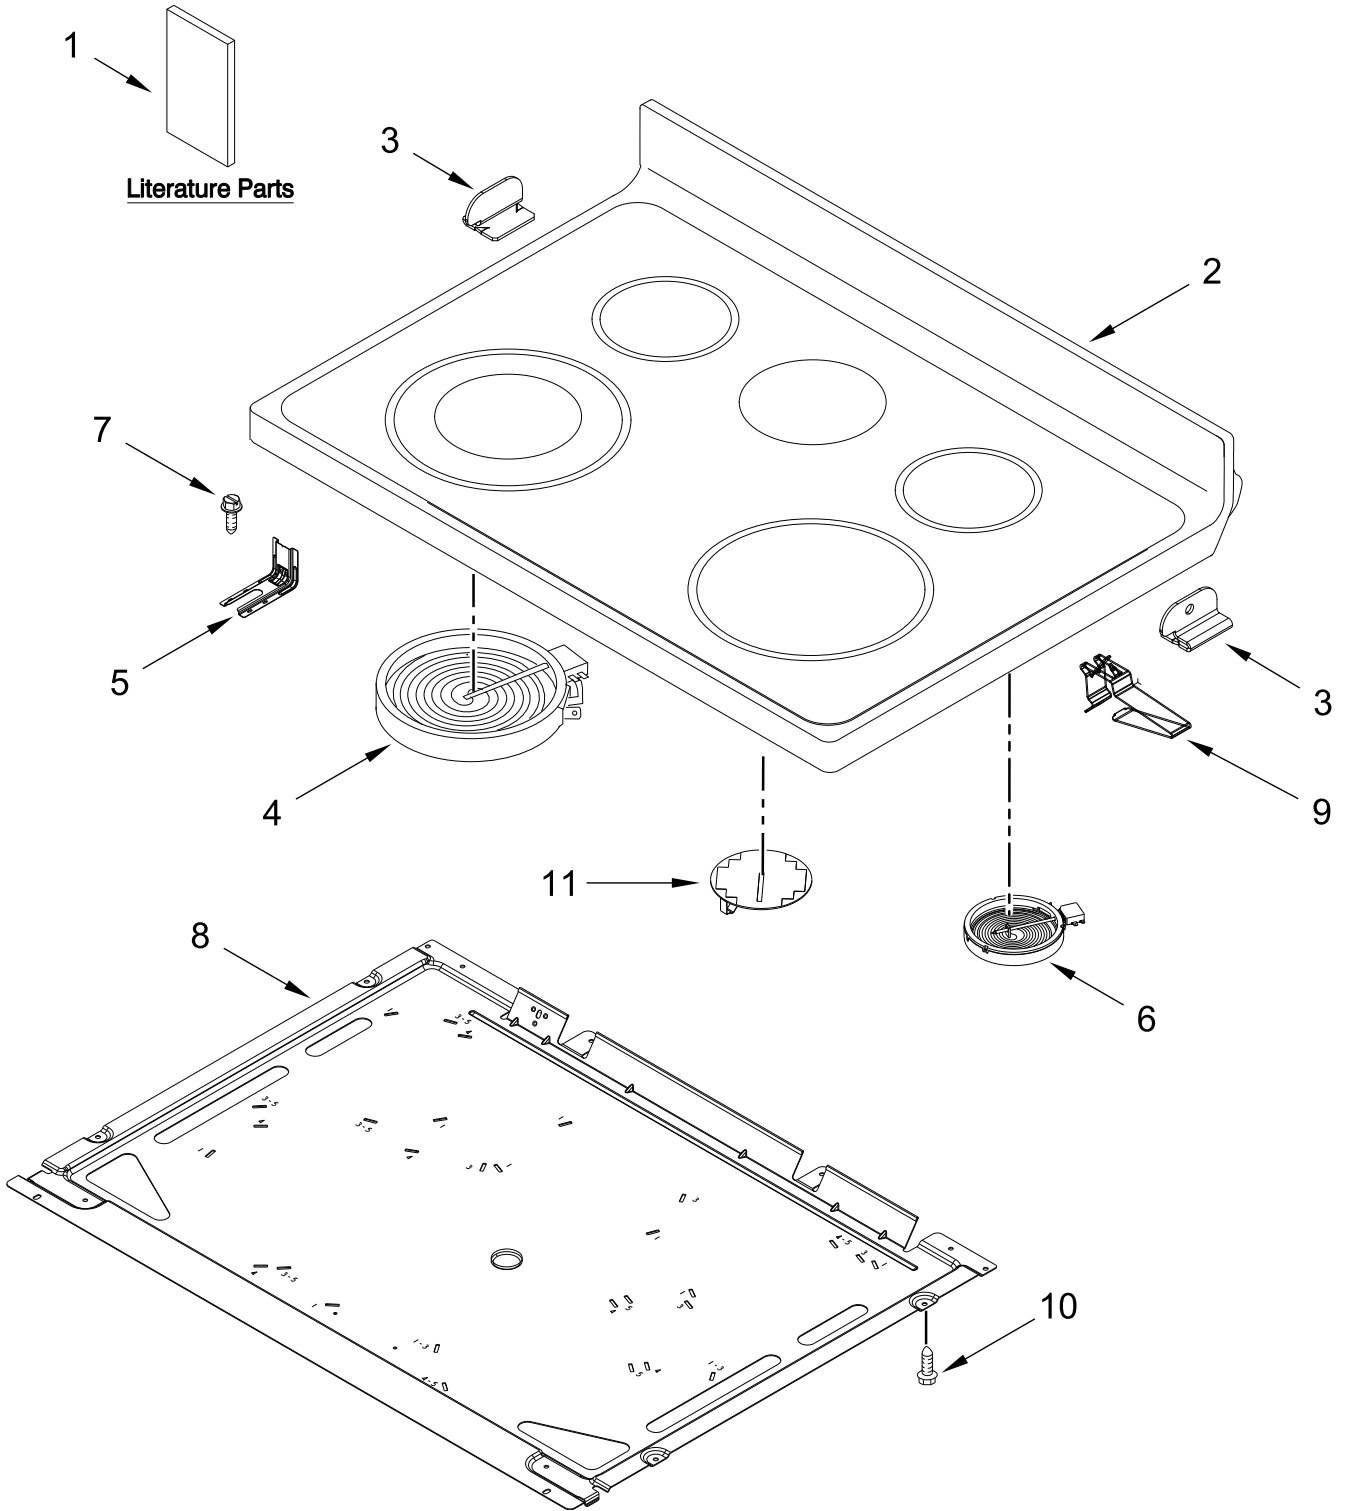

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10275048	Element (3000 and 1400W)	11	W11668631	Element, Warm Zone
	W11443024	Owners Manual						FOLLOWING PARTS NOT ILLUSTRATED
	W11523142	Quick Start Guide			(Left Front, Right Front)		W11452630	Harness, Main
	W11401734	Tech Sheet	5	W11379945	Bracket, Anti-Tip		W11134603	Harness, Cooktop (Left)
2		Cooktop	6	8273994	Element (1200W)		W11134845	Harness, Cooktop (Right)
	W11527499	Black			(Left Rear and Right Rear)		W11598759	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)	7	7101P485-60	Screw, Anti-Tip Kit		W11172528	Harness, Hidden Bake
	W10607642	Bracket, Cooktop (Right)	8	W10691223	Pan, Radiant Element		W10281322	Kit, Bare Wire Adapter Block
			9	W11600012	Spring, Element			
			10	3196165	Screw			


# CONTROL PANEL PARTS

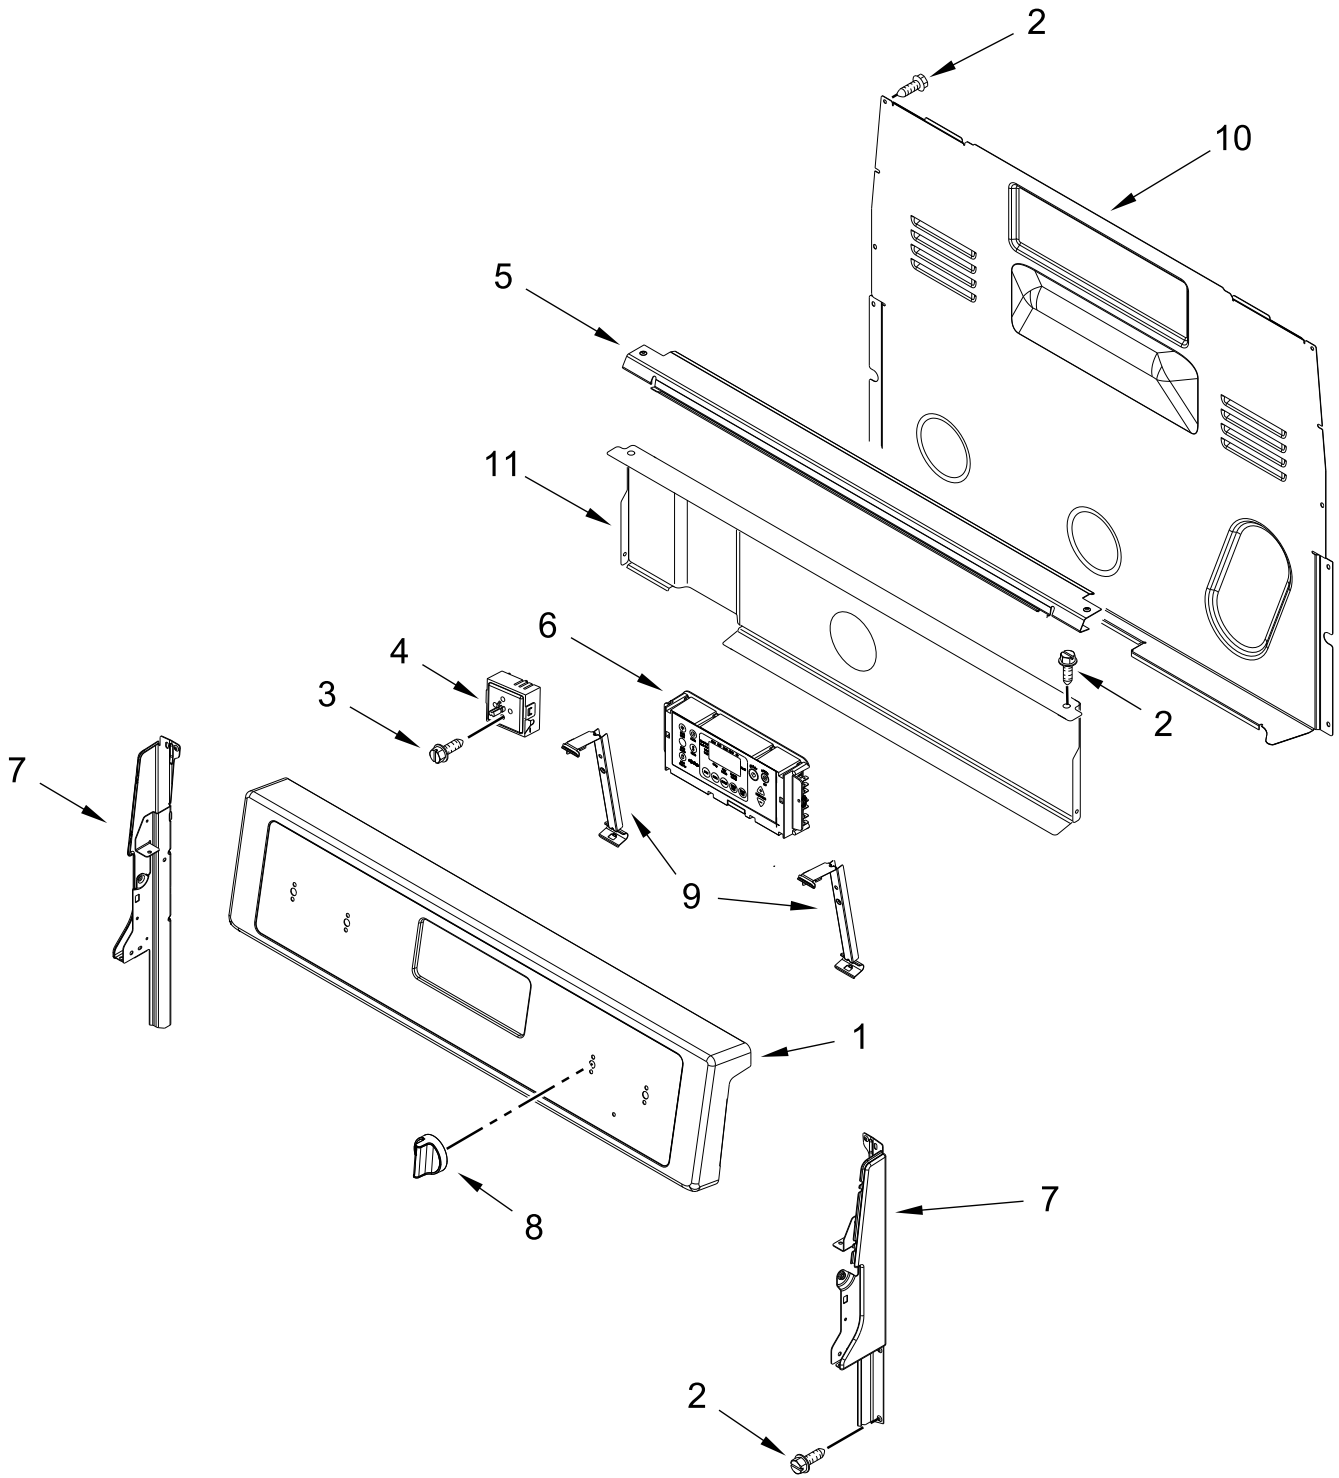

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	W10525121	Bracket, Console Mounting	10	8272473	Cover, Upper Rear
	W11520765	Stainless				11	W10134247	Shield, Heat
2	3196178	Screw	6		Board, Control			
3	3400882	Screw		W11527162	Black			
4	W10434452	Switch, Infinite (Dual)	7		Endpost, Console			
		(Left Front, Right Front)		W11130372	Black (Left)			
				W11130379	Black (Right)			
	3148951	Switch, Infinite	8		Knob			
		(Left Rear and Right Rear)		W10858250	Stainless			
			9	W10695491	Bracket, Control			


# CHASSIS PARTS

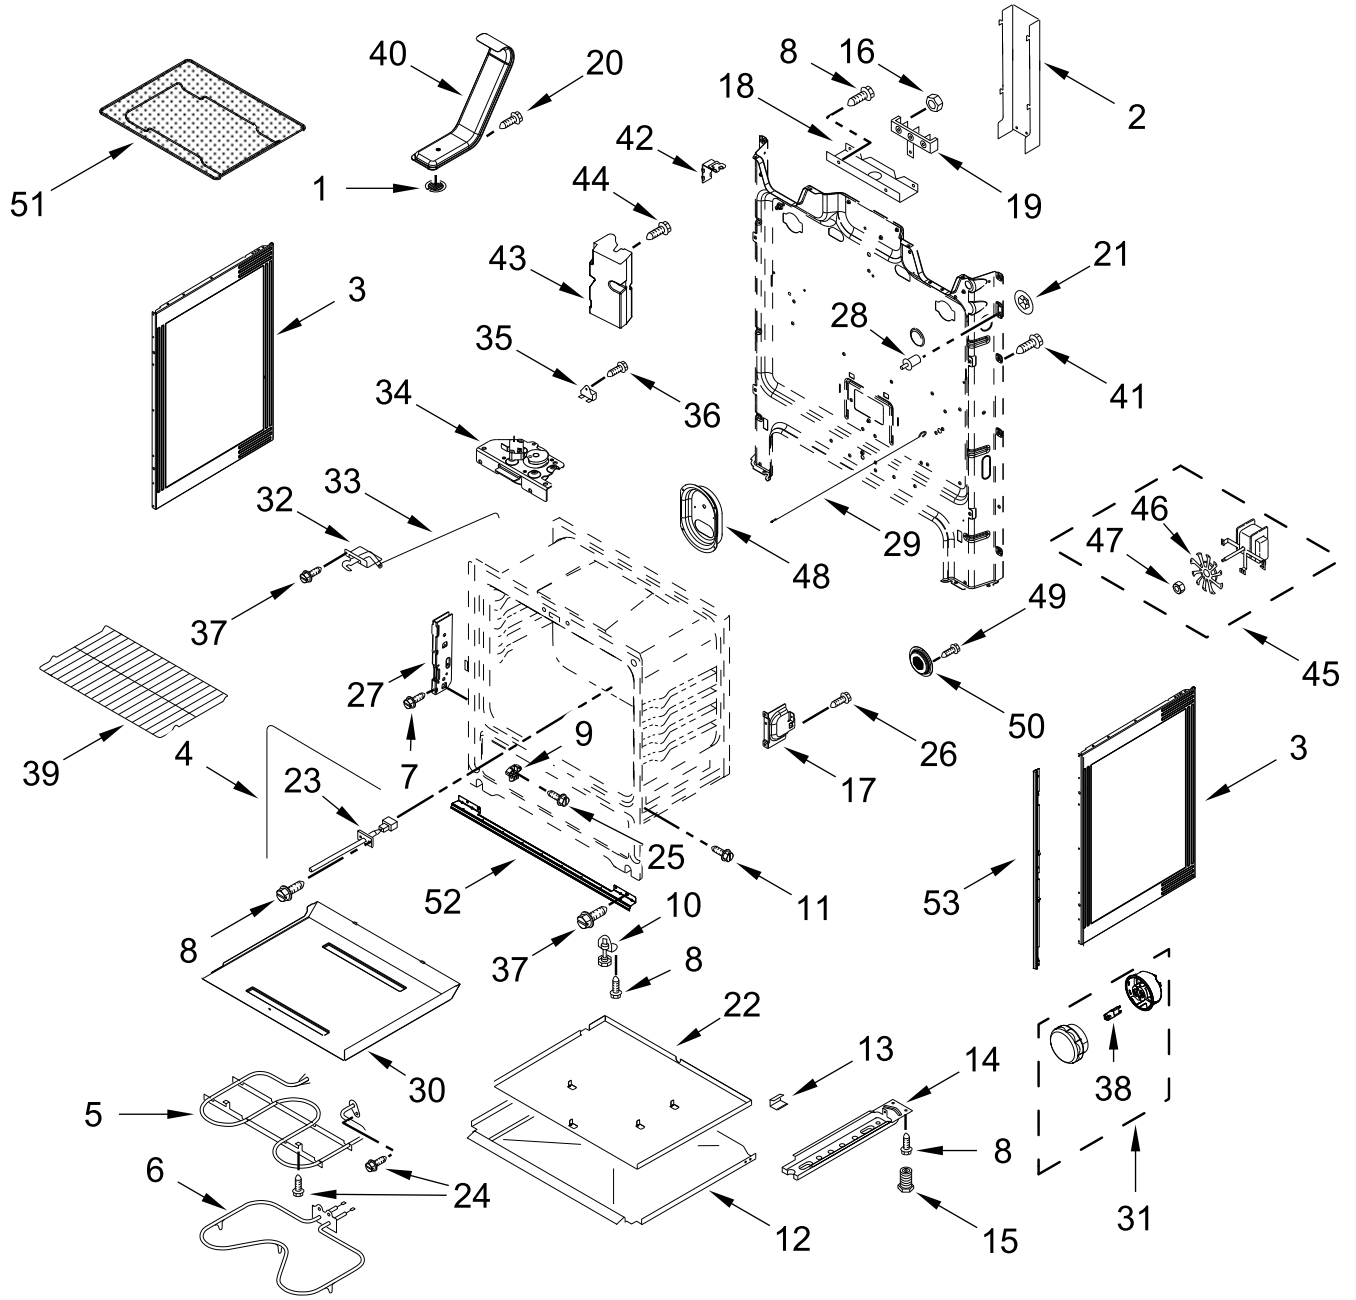

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	20	W10362924	Screw	41	3400016	Screw
2	W10326122	Cover, Terminal Block	21	3400968	Nut	42	W10183541	Clip, Spring Steel
3		Panel, Side	22	W10134125	Shield, Heat	43	W10910404	Counterweight
	W10162245	Black	23	W10181986	Sensor, Oven	44	W11034869	Screw
4	W11491751	Seal, Door	24	3196154	Screw	45	W11403617	Fan, Convection
5	9757340	Element, Broil	25	3400080	Screw	46	W11425715	Blade, Fan
6	9755770	Element, Bake	26	3196169	Screw	47	W11433702	Nut, Acorn (LH)
7	W10031780	Screw	27	W10289077	Receiver, Hinge	48	W10134126	Bracket, Fan
8	3196178	Screw	28	W11511828	Switch, Door	49	4449809	Screw
9	W10674705	Glide, Drawer Front	29	9757239	Rod, Door Switch	50	W10134124	Cover, Conv Fan
10	W10341186	Front Foot Assembly	30	W10183712	Tray, Hidden Bake	51	W11661815	Basket, Airfry
11	W10067840	Screw	31	W11634772	Light Assembly	52	W11464547	Bracket, Front Frame
12	W10134121	Tray, Insulation	32	9761013	Front Door Latch Assembly	53	W11510560	Barrier Rail, Rubber (Left and Right)
13	W10137382	Clip, Panel	33	W10078380	Rod, Latch			FOLLOWING PARTS NOT ILLUSTRATED
14	W10390007	Base Rail Assembly (Right)	34	W10107820	Rear Door Latch Assembly			
	W10390008	Base Rail Assembly (Left)	35	3196548	Fuse, Thermal		3196520	Clip, Wire
15	W10058460	Foot, Leveling	36	3196172	Screw		W10646923	Card, Insulator
16	3400029	Nut	37	3196560	Screw		W10774939	Insulation, Wrap
17	W10404688	Clip, Oven Support	38	W10571723	Bulb, Halogen 40 Watts		W11127324	Insulation, Back
18	3186034	Bracket, Service	39	W11173792	Rack, Oven		W10333344	Insulation, Flue
19	W10245259	Block, Terminal	40	W10134285	Tube, Vent			

# DOOR PARTS

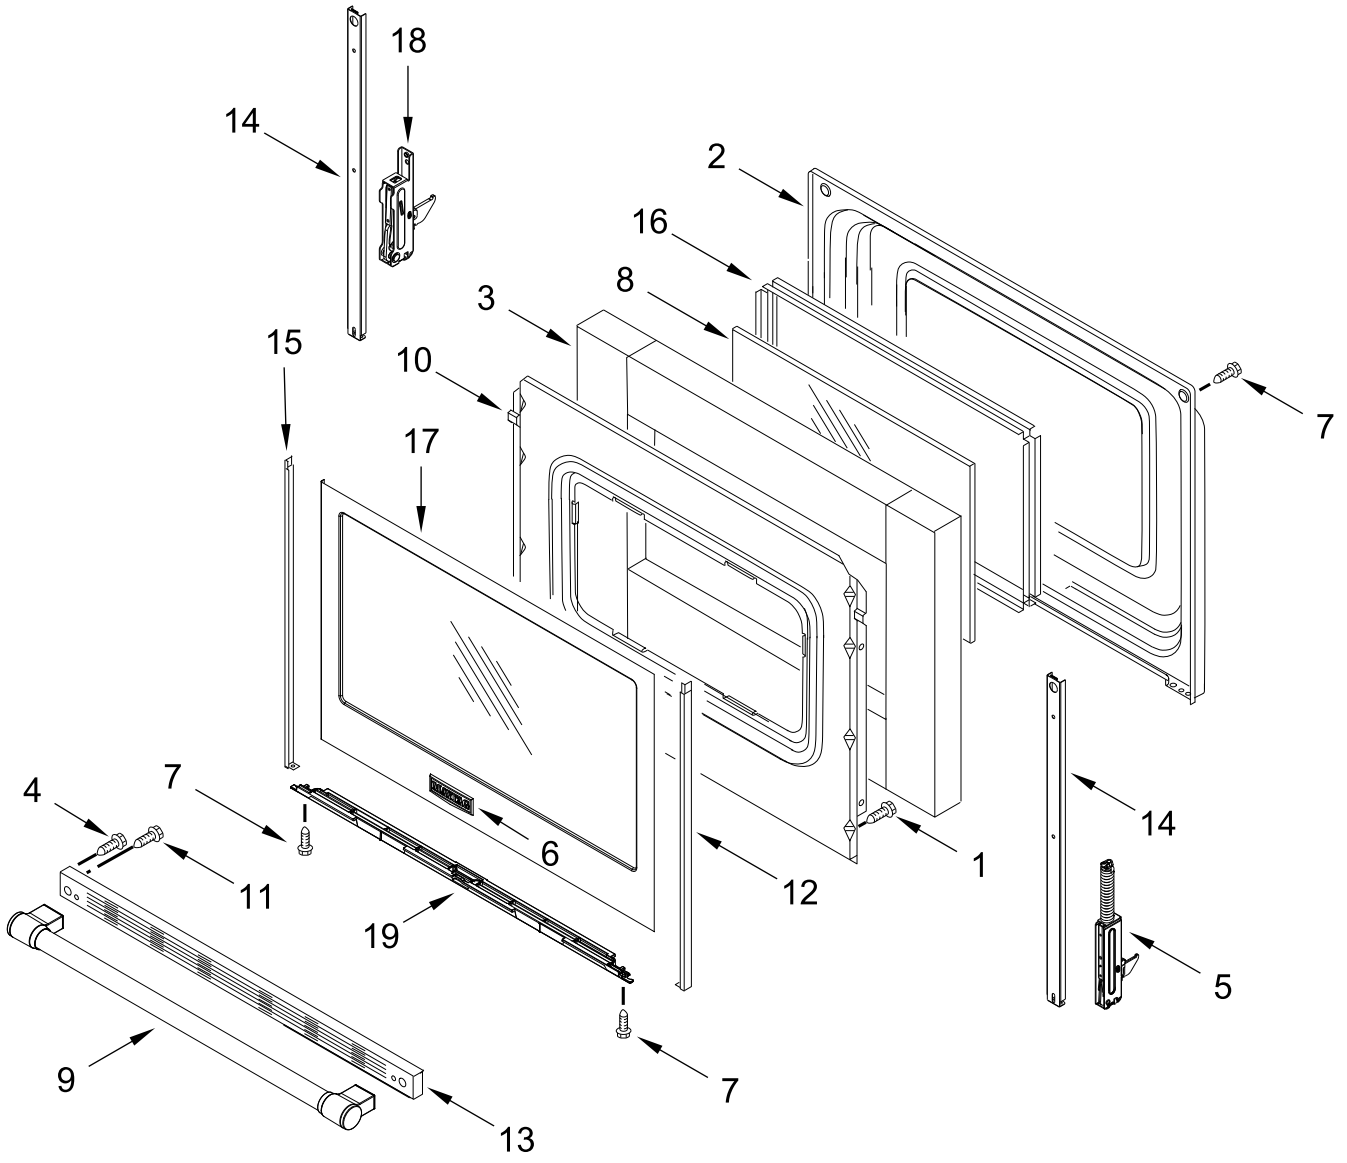




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	10	W11380222	Retainer, Insulation	17		Glass Assembly, Outer Door
2	9761344	Liner, Door	11	W10480830	Screw			
3	W10278991	Insulation, Door Strip	12		Trim, Door		W11167878	Stainless
4	W10200660	Screw		W10746435	Black (Right)	18	W10299227	Hinge, Door (Passive)
5	W10299224	Hinge, Active (With Spring)	13		Trim, Oven Door Vent	19	W11440159	Trim, Bottom Door
6	W10612925	Badge		W11047800	Stainless			
7	W10327235	Screw		W10884159	Black			
8	9758162	Glass, Inner	14	W11379944	Strap, Door			
9		Handle, Oven Door	15		Trim, Door			
	W10834521	Stainless		W10746436	Black (Left)			
			16	W10316950	Frame, Glass			

# DRAWER PARTS

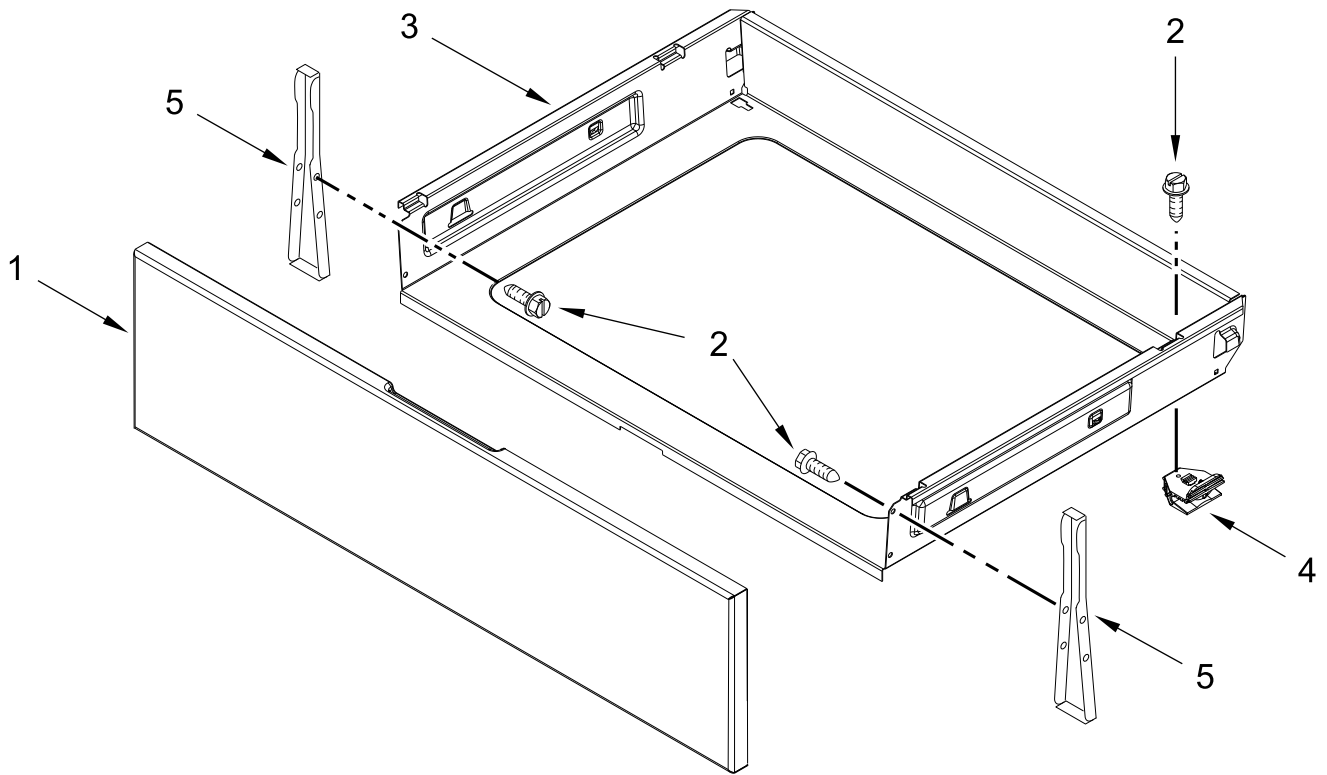

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11449698	Stainless
2	3196165	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	W10462910	Bracket, Mounting Drawer

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10268578	Rack, Oven
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting