

KitchenAid®


ELECTRIC WALL OVEN

MODELS:

KODE900HSS21 (Stainless)

KODE900HBS21 (Black Stainless)


CONTROL PANEL PARTS

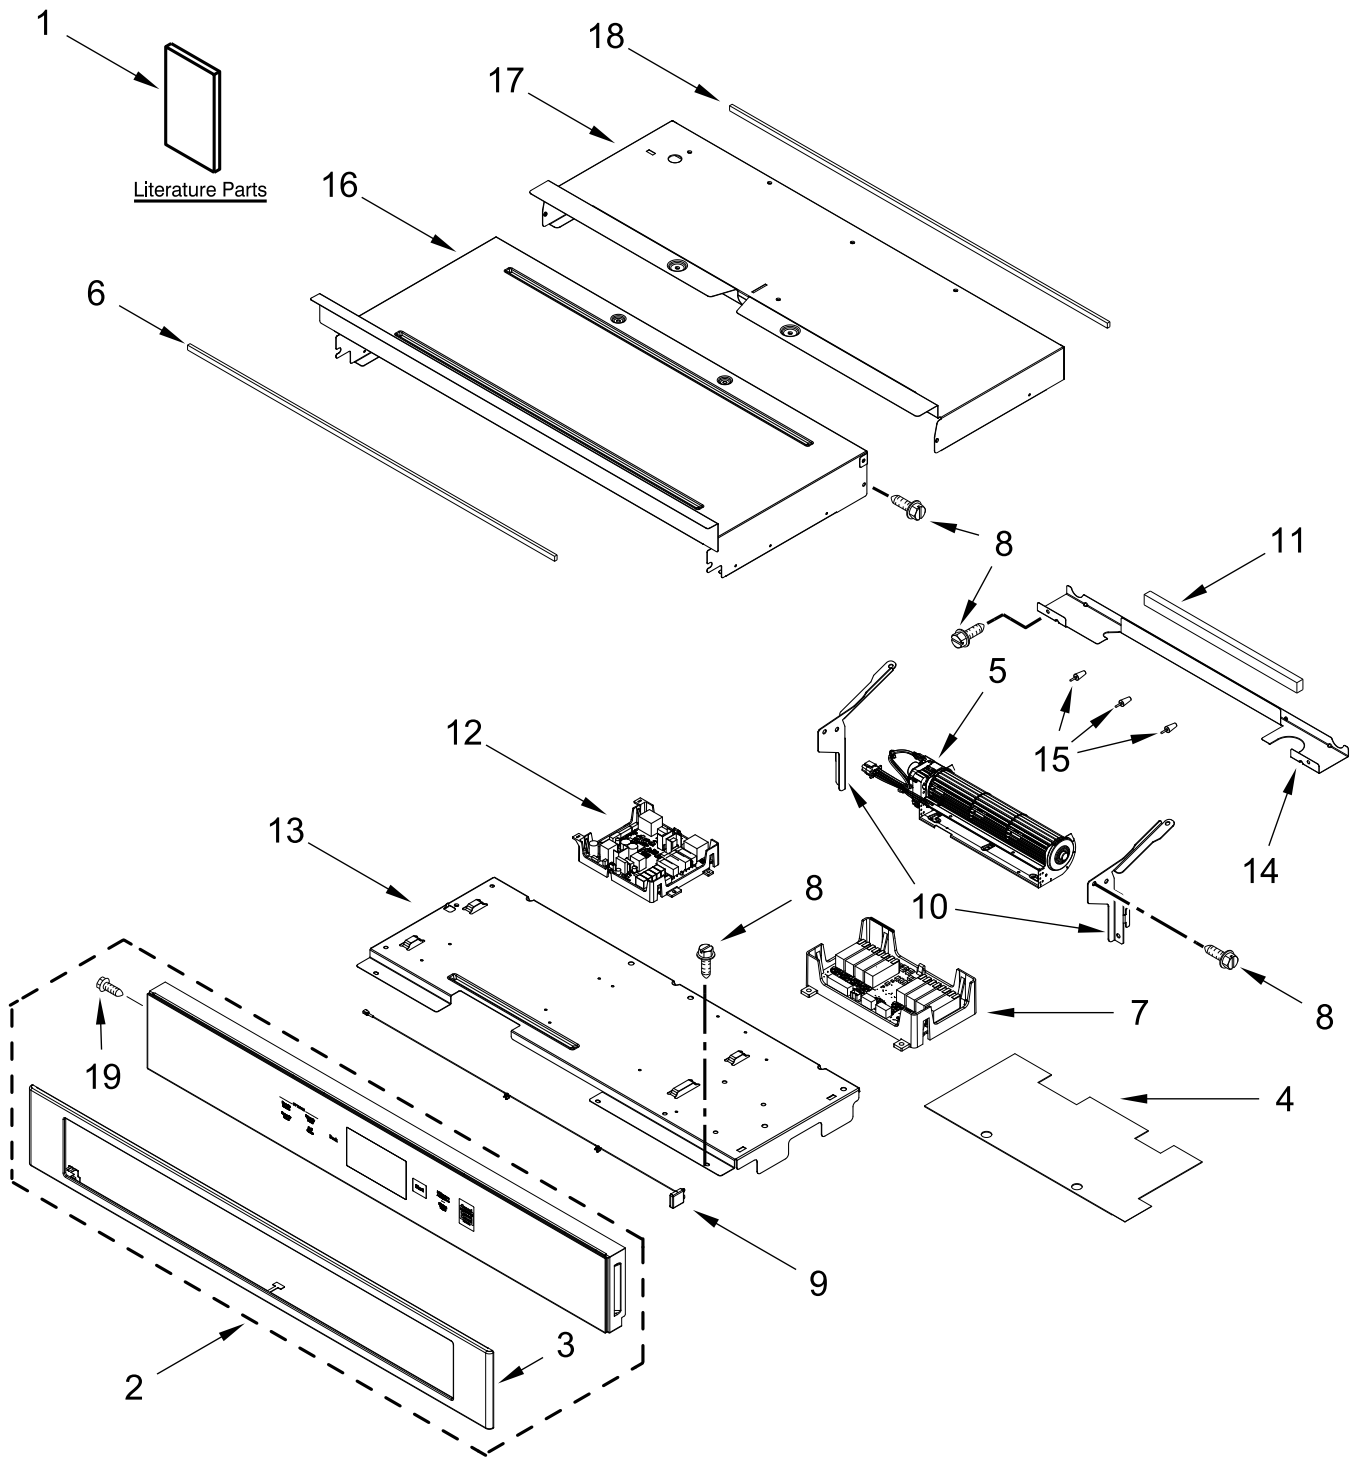

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P426-60	Screw	19	W11339492	Screw (Black)
	W11340821	Owner's Manual	9	W11409842	Antenna			FOLLOWING PARTS NOT ILLUSTRATED
	W11382210	Quick Start Guide	10	W10655463	Bracket, Blower (Left)		W11342420	Harness, Main
	W11477595	Tech Sheet		W10655462	Bracket, Blower (Right)		W11319490	Harness, Signal
2		Assembly, Control Panel	11	4451758	Block, Foam		W11264646	Harness, Door Latch
	W11243254	Stainless	12	W10850871	Control (Copernicus)		W10562910	Harness, EOL
	W11243255	Black Stainless	13	W11179509	Tray, Electronic		W11233570	Harness, Console
3		Skin, Control Panel	14	W11166802	Divider, Chassis Back		4450800	Screw, Grounding
	W10588740	Stainless	15	W10351295	Bumper		313438	Clip, Harness
	W10776407	Black Stainless	16	W11244445	Cover, 30 IN Chassis Top Front		4448664	Clamp, Conduit
4	W10752925	Pad, Insulator	17	W11223325	Cover, 30 IN Chassis Top Back		W10655464	Bracket, Harness
5	W11397930	Blower	18	W10728475	Gasket, Rubber		W10487999	Clip, Harness
6	W11162063	Gasket, Rubber					W11394923	Bag, Hardware
7	W10890118	Appliance Manager, Expansion						


OVEN PARTS

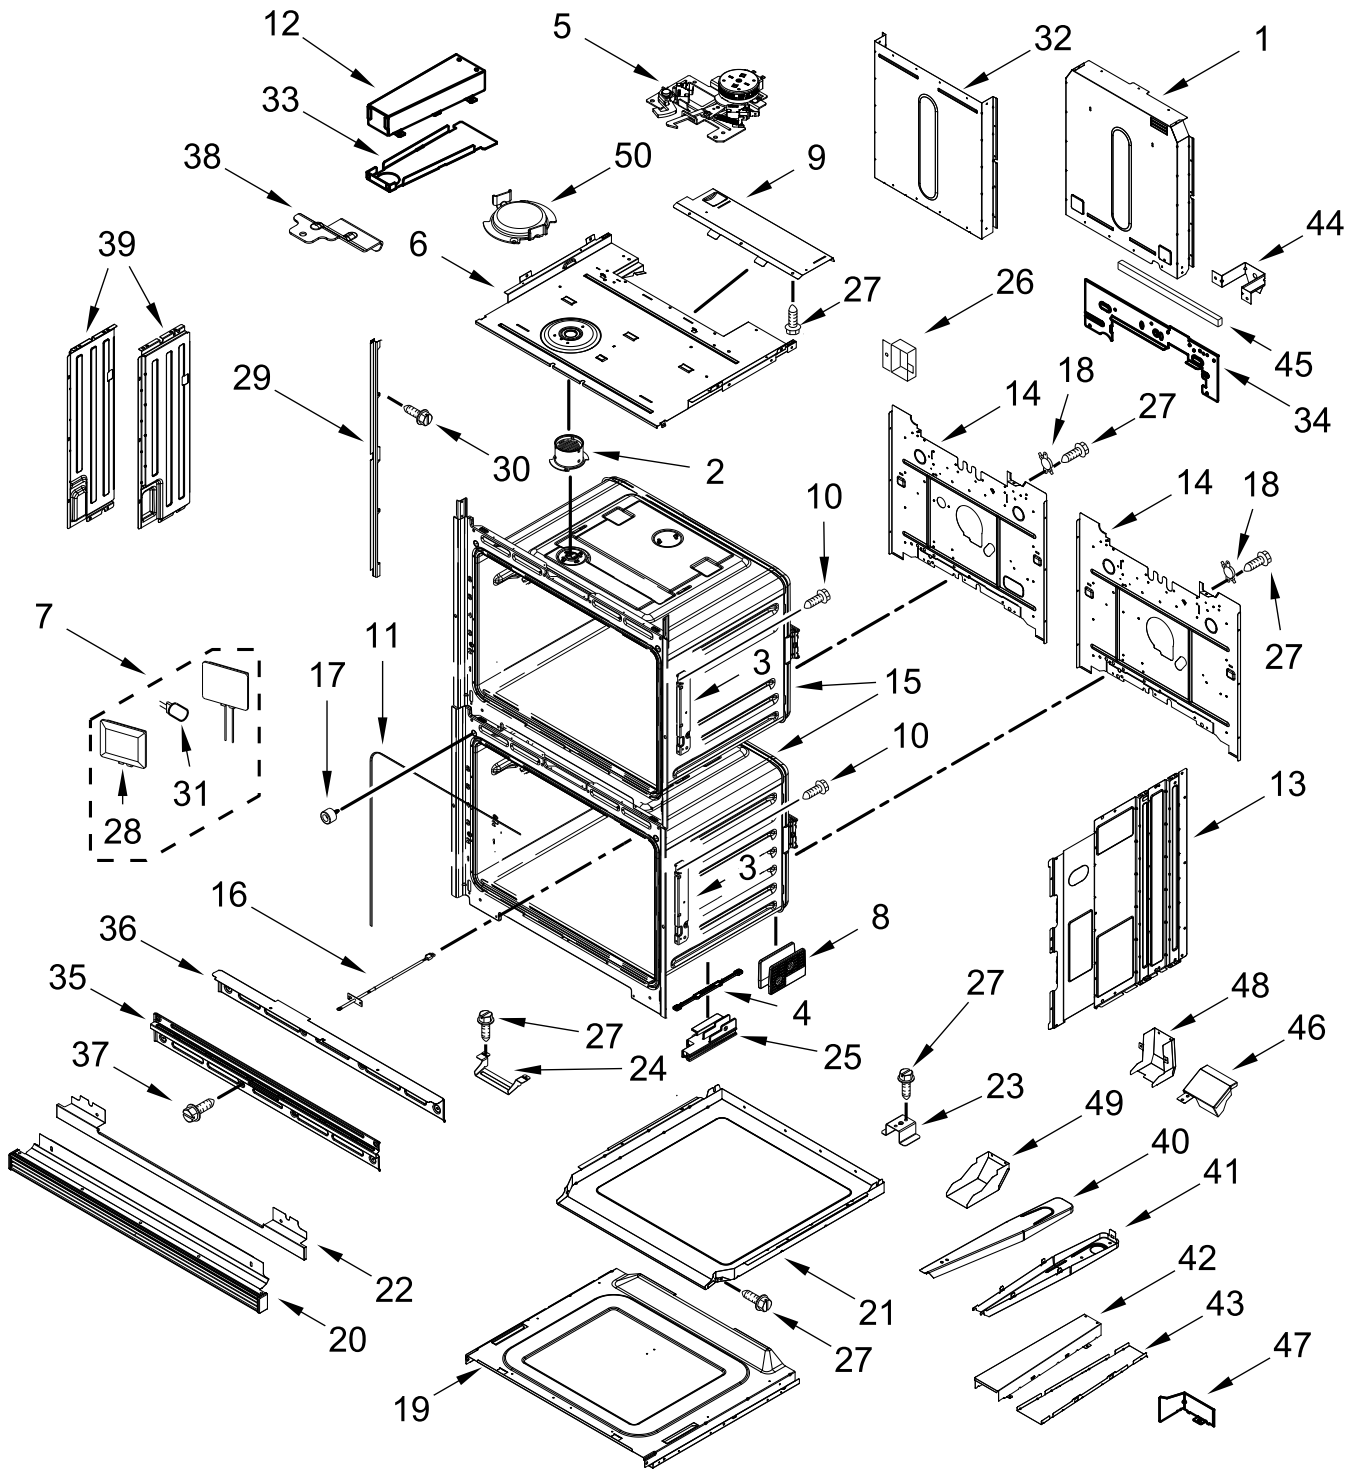

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11165250	Duct, Chassis Back (Upper)	20		Assembly, Bottom Vent	36	W11334857	Vent, Top 30 IN
2	W11085298	Tube, Vent		W11369892	Stainless	37	W11249635	Screw
3	W11239070	Receiver, Hinge (Left)		W11410028	Black Stainless	38	W11342780	Bracket, Top Front
	W11239072	Receiver, Hinge (Right)	21	W11244446	Duct, Bottom Chassis	39	W11167419	Cover, Suction (Left)
4	W11558603	Spacer, Base			Trim, Bottom Vent		W11186675	Cover, Suction (Right)
5	W11655005	Latch, Motorized		W11356753	Black	40	W11256421	Cover, Top Back Exhaust
6	W11168071	Top, Chassis	23	W11135135	Support, Air Channel	41	W11256420	Base, Top Back Exhaust
7	W11205574	Assembly, Oven Light	24	W11390667	Spacer, Chassis Bottom Duct	42	W11256431	Cover, Lower Back Exhaust
8	W11245118	Foot, Base	25	W11245114	Foot, Chassis (Left)	43	W11256430	Base, Lower Back Exhaust
9	W10904163	Deflector, Blower		W11245116	Foot, Chassis (Right)	44	W11344645	Hat Bracket, Vent
10	W10254050	Screw	26	8285593	Cover, Connector	45	W11211345	Foam, U-Bracket
11	W11608108	Gasket	27	7101P426-60	Screw	46	W11256428	Cap, Back Upper Exhaust
12	W11256427	Cover, Upper Back Exhaust	28	W10472386	Lens, Light	47	W11260508	Deflector, DBL
13	W11165274	Side, Chassis	29	W11235460	Cover, Side trim (Left)	48	W11256429	Deflector, Upper Back Exhaust
14	W11244441	Back, Chassis (Upper)		W11235461	Cover, Side Trim (Right)	49	W11256432	Deflector, Lower Back Exhaust
	W11223327	Back, Chassis (Lower)	30	W11404000	Screw	50	W11248347	Cap, Chimney Vent
15		Liner, Oven (Not Serviceable)	31	W10472384	Bulb, Light			FOLLOWING PARTS NOT ILLUSTRATED
16	W11346074	Probe, Sensor	32	W11219304	Duct, Chassis Back (Lower)	W11188284		Insulation, Wrap
17	W11166315	Bumper and Screw	33	W11256425	Base, Upper Back Exhaust	W11234758		Insulation, Cavity
18	4449751	Thermostat (TOD)	34	W11255058	Bracket, U-Shape Chimney			
19	W11135103	Base, Chassis	35	W11433367	Vent, Center 30"			


UPPER OVEN DOOR PARTS

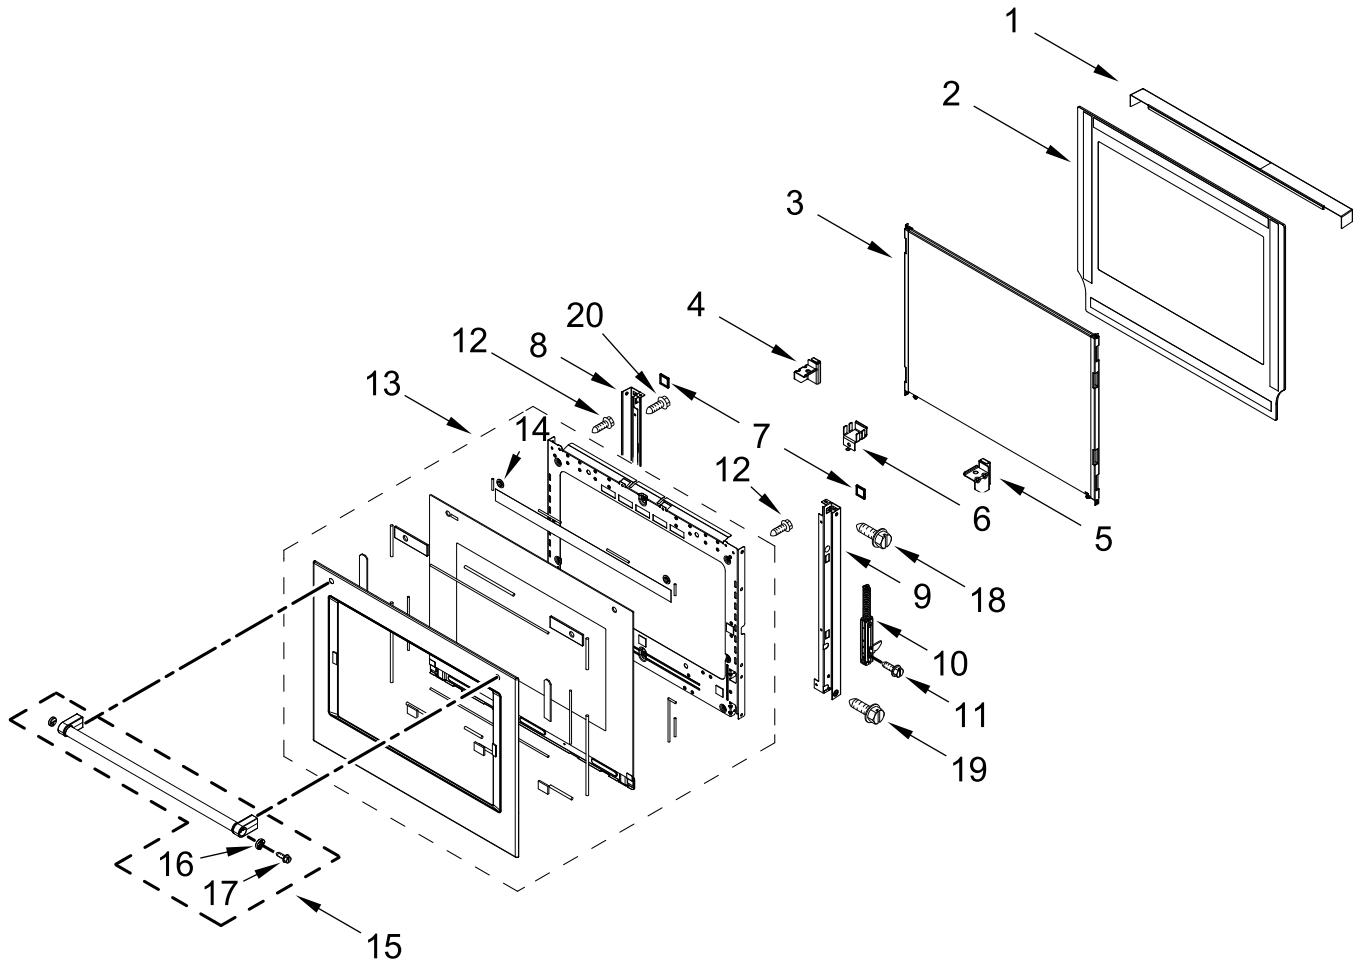

UPPER OVEN DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11597415	Top Vent Trim Assembly	8	W11302773	Rail, Door (Left)	15		Handle Assembly
2	W11260091	Glass Cavity Assembly	9	W11302780	Rail, Door (Right)		W11241572	Stainless
3	W11304273	Air Divider Assembly	10	W11296041	Hinge, Door (Left)	16	W10551026	Medallion, Handle
4	W11302803	Bracket, Glass (Left)		W11296043	Hinge, Door (Right)	17	W10656499	Screw
5	W11302802	Bracket, Glass (Right)	11	3196183	Screw	18	694091	Screw
6	W11302954	Bracket, Glass Reinforcement	12	W11317731	Screw (Black)	19	W11290045	Screw
7	W10517428	Spacer, Vent	13		Door Assembly	20	W10443110	Screw
				W11295957	Stainless			
				W11295959	Black Stainless			
			14	W10319024	Washer, Door			


LOWER OVEN DOOR PARTS

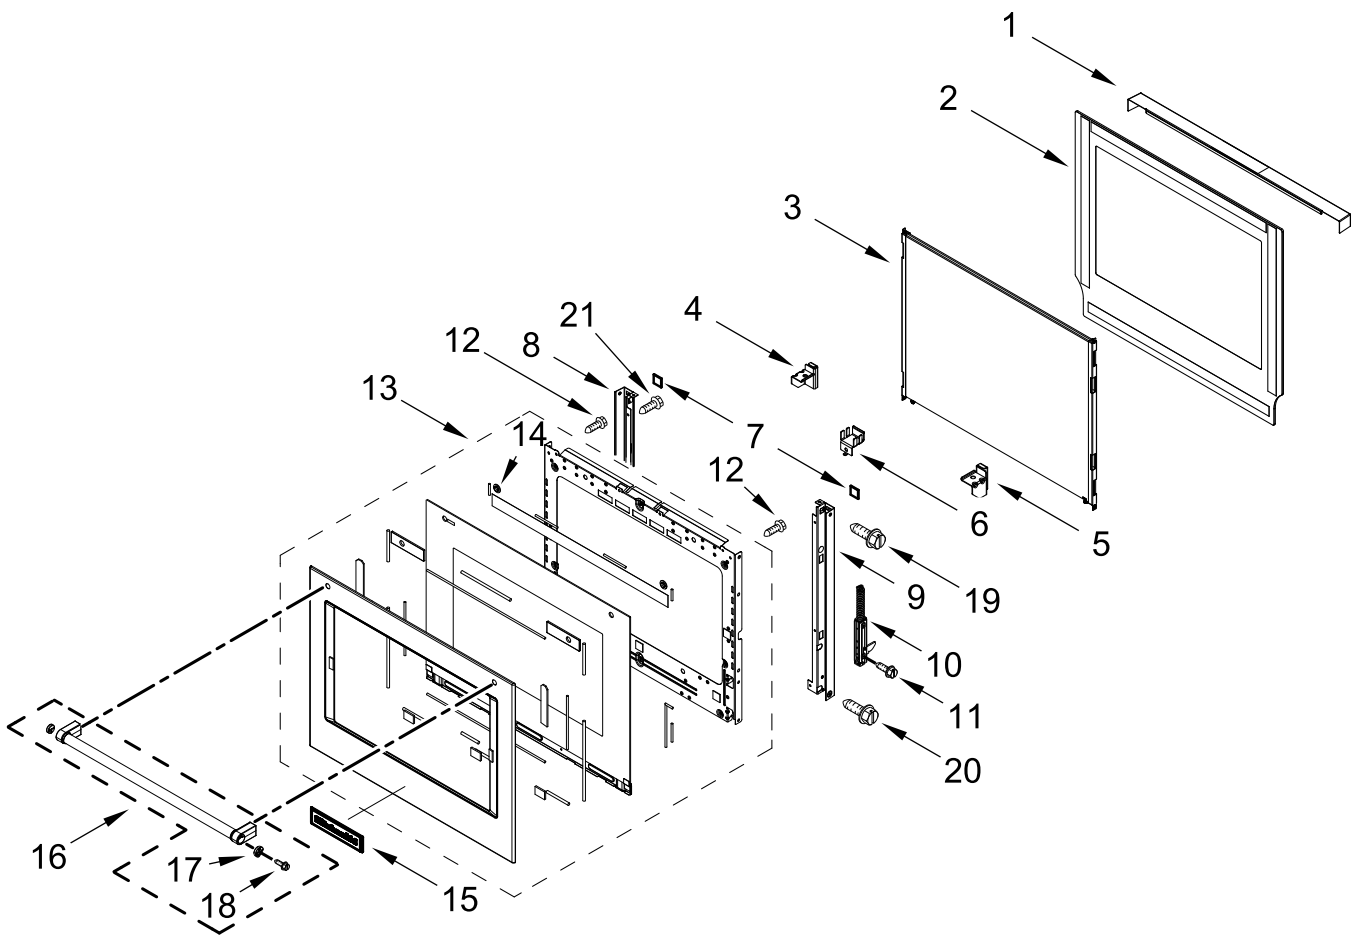

LOWER OVEN DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11597415	Top Vent Trim Assembly	8	W11302773	Rail, Door (Left)	15	W10518672	Badge
2	W11260091	Glass Cavity Assembly	9	W11302780	Rail, Door (Right)	16		Handle Assembly
3	W11304273	Air Divider Assembly	10	W11296041	Hinge, Door (Left)		W11241572	Stainless
4	W11302803	Bracket, Glass (Left)		W11296043	Hinge, Door (Right)	17	W10551026	Medallion, Handle
5	W11302802	Bracket, Glass (Right)	11	3196183	Screw	18	W10656499	Screw
6	W11302954	Bracket, Glass Reinforcement	12	W11317731	Screw (Black)	19	694091	Screw
7	W10517428	Spacer, Vent	13		Door Assembly	20	W11290045	Screw
				W11295957	Stainless	21	W10443110	Screw
				W11295959	Black Stainless			
			14	W10319024	Washer, Door			


INTERNAL OVEN PARTS

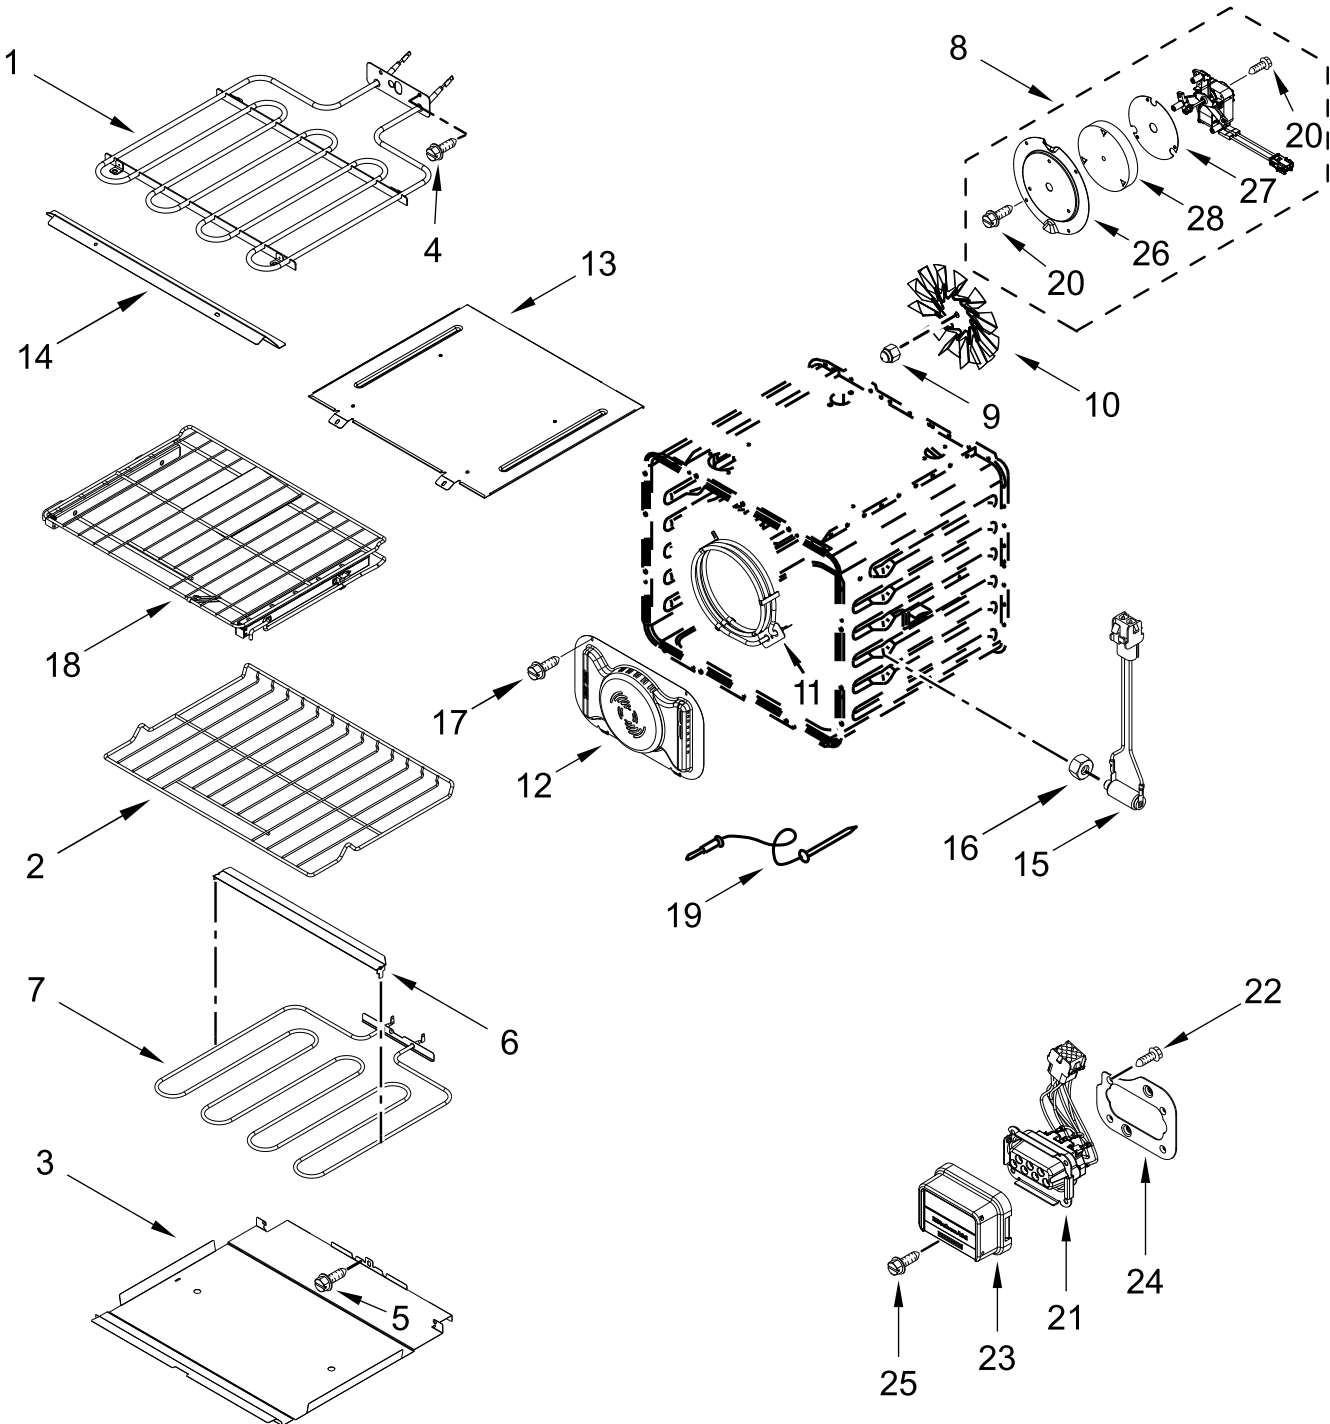

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238159	Element, Broil	11	W10546519	Element, Convection	22	W11249635	Screw
2	W10554526	Rack, Oven	12	W10918895	Baffle, Bow Tie	23	W10903893	Cover, Connector
3	W10318198	Tray, Hidden Bake	13	W11235537	Reflector, Broil	24	W11307587	Plate, Cavity Backer
4	7101P434-60	Screw	14	W10588737	Shield, Broil Front	25	W11236393	Screw
5	7101P426-60	Screw	15	W11252826	Jack, Meat Probe	26	W11235449	Cover, Convect Plate
6	W10282957	Crossbar, Hidden Bake Tray	16	W11033111	Nut, Locking	27	W11251715	Plate, Convect Motor
7	W11292248	Element, Bake	17	W10739592	Screw	28	W11251716	Insulation, Convect Motor
8	W11244895	Convect Motor Assembly	18	W10554531	Rack, Sliding			
9	W11433702	Nut, Acorn (LH)	19	9755542	Probe, Temperature			
10	W11425715	Blade, Fan	20	W10720084	Screw			
			21	W10903862	Connector, Plug Assembly Accessory			

POWERED ACCESSORY PARTS

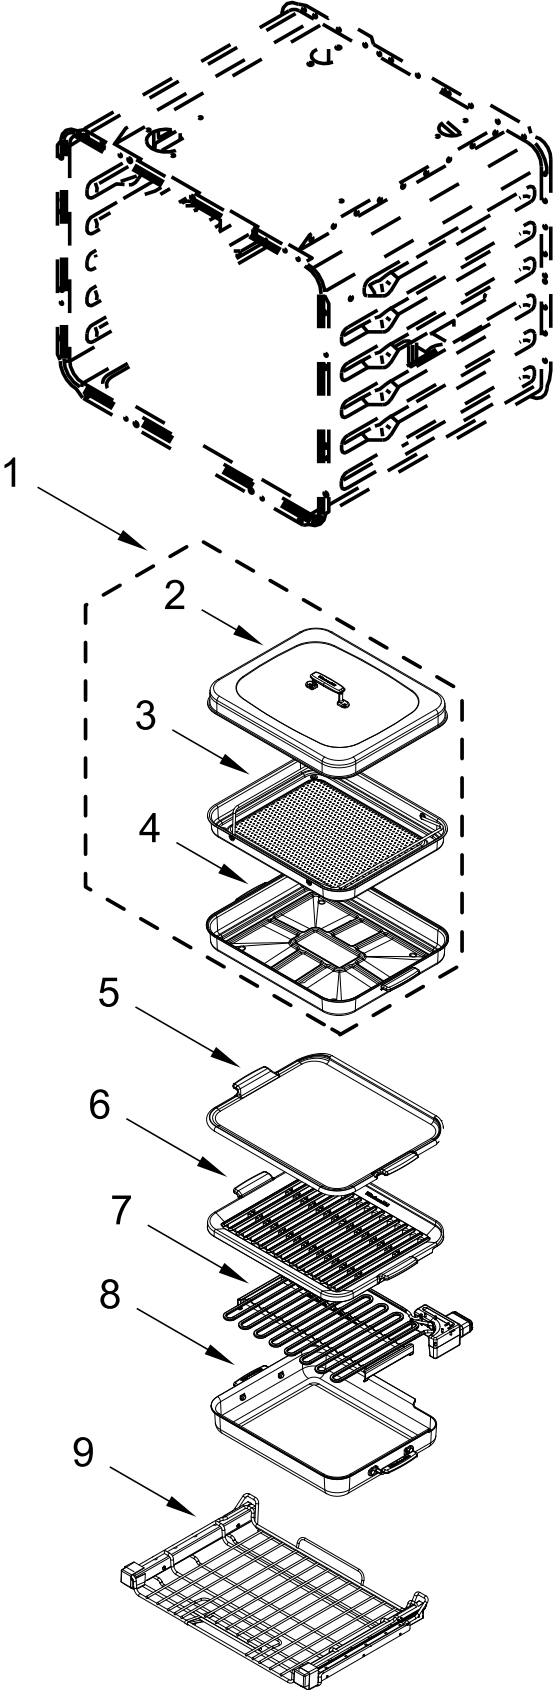

POWERED ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10862029	Steamer, Power Accessory	4	W10862030	Pan, Steamer Water	8	W10862025	Pan, Base
2	W10862032	Lid, Steamer	5	W10862028	Stone, Baking	9	W10823215	Rack, Powered Accessory
3	W10862031	Pan, Steamer Perforated	6	W10862027	Plate, Grill			
			7	W10866323	Unit, Heating			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	285006	Black
	350938	Gray Primer
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	4396923	Broiler Pan and Grid
W10123240		Rack, Broiler Pan and Roasting
		Medallion, Handle
W10846205		Chrome
W10846206		Black
W10846207		Red
		Trim, Tall Vent
W11570323		Stainless
W11570325		Black
		Assembly, Bottom Vent
W11369884		Black
		Deflector, Heat
W10536339		Stainless
W10727416		Black Stainless