


KitchenAid®

ELECTRIC WALL OVEN

MODELS:

KOSC504PPS00 (Stainless)


CONTROL PANEL PARTS

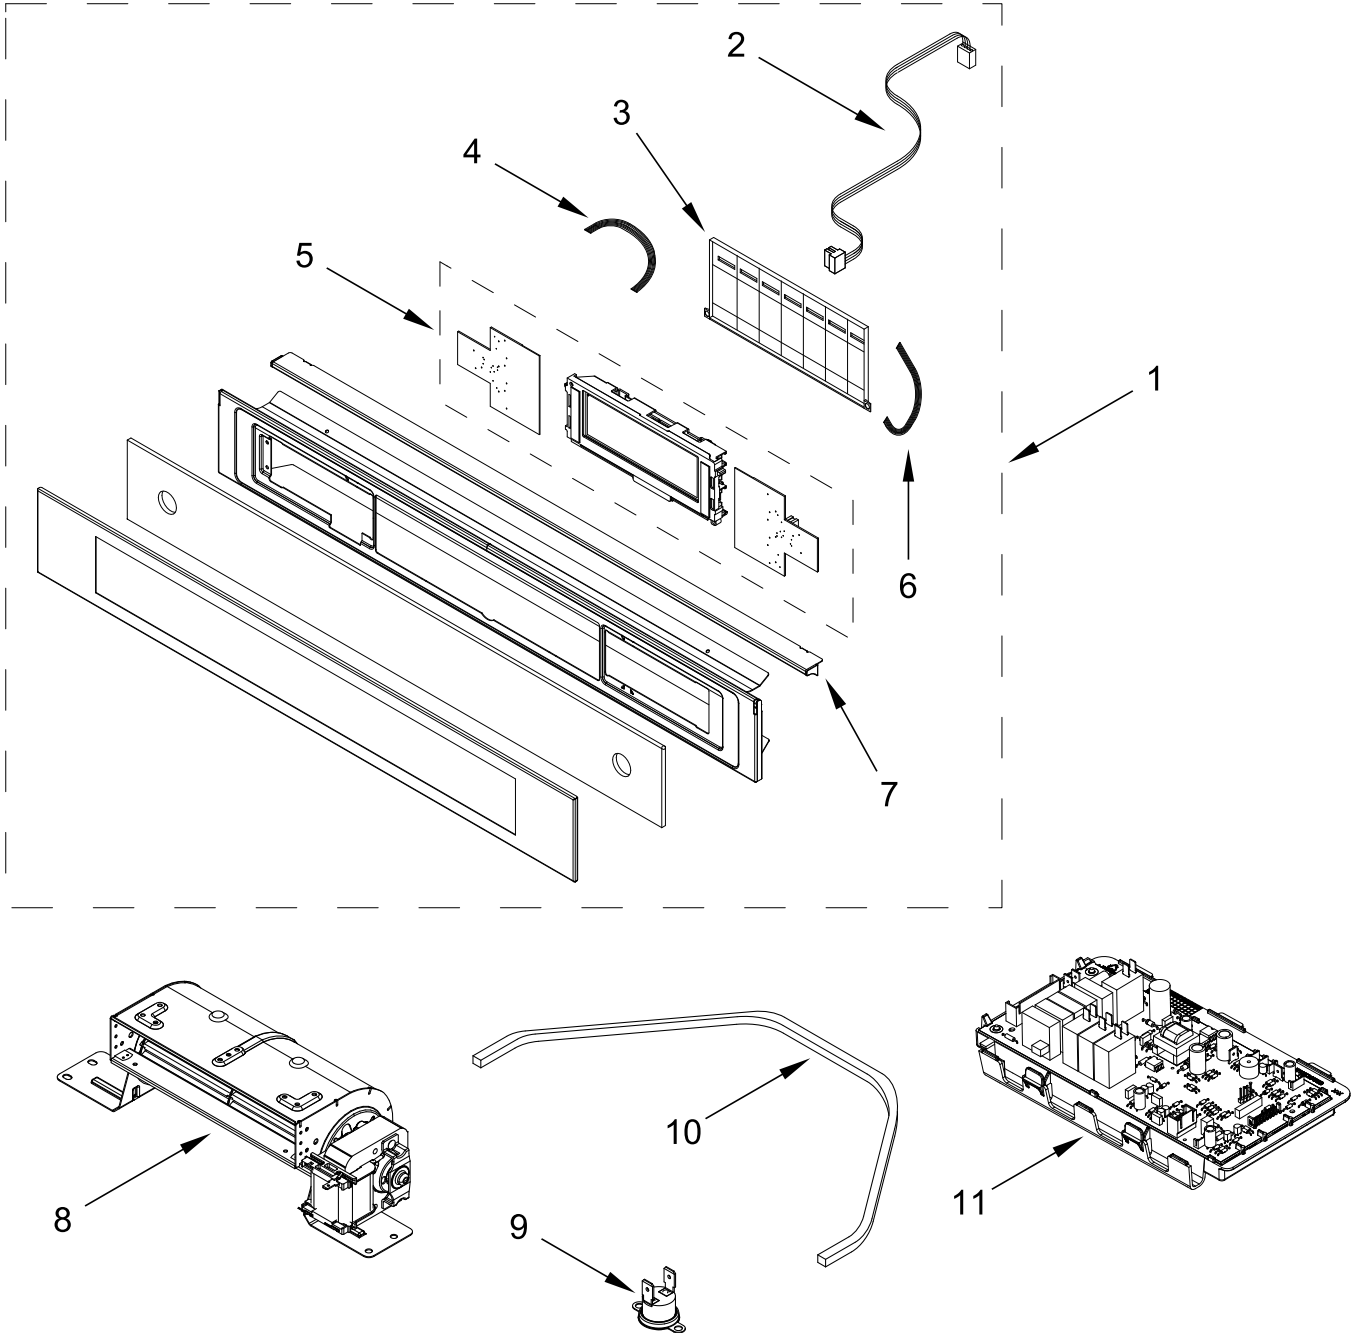

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11681233	Assembly, Control Panel	6	W11348033	Wiring, Left Control	10	W10519009	Gasket, Blower Motor
2	W11348035	Harness, Touch Display	7	W10914742	Trim, Top	11	W11681217	PCBA, Appliance Control Unit
3	W11348132	Cover, Control	8	W11347859	Blower, Cooling Fan			
4	W11348036	Wiring, Right Control	9	W10490220	Thermostat, 165 Celcius (with Bracket)			
5	W11684286	PCBA, User Interface						

OVEN PARTS

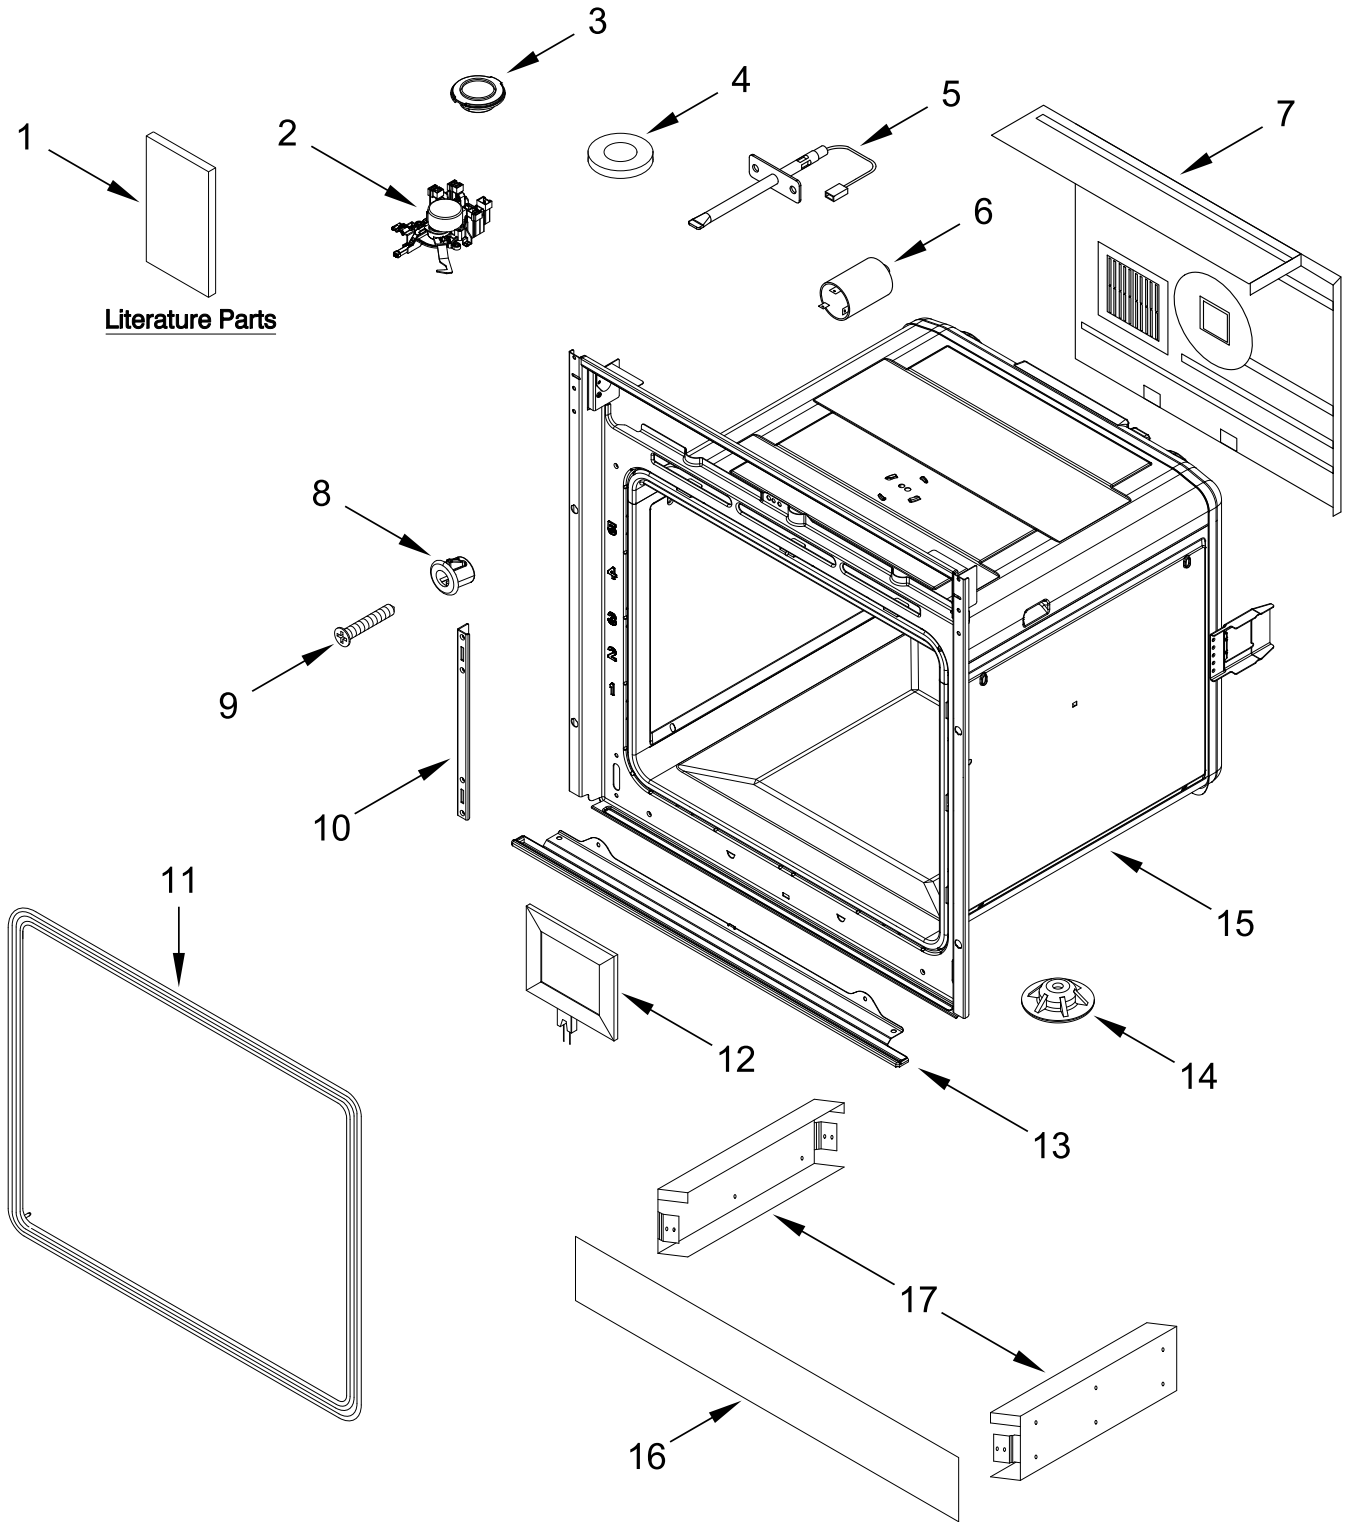


OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W11608852	Instructions, Installation
	W11609950	Manual, Owner's
	W11260143	Sheet, Tech
2	W11347847	Latch, Door
3	W11509867	Cap
4	W11594218	Washer, Teflon
5	W11594207	Probe, Oven Temperature
6	W10549523	Filter, Line Noise

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11681244	Panel, Rear Oven
8	W10578780	Bumper
9	W10519818	Kit, Oven Screws
10	W11581007	Hinge, Running Mechanism
11	W10518387	Gasket, Door
12	W11348087	Lamp, Halogen 25 Watt (with Gasket)
13	W10517979	Trim, Lower
14	W10545973	Foot, Level Oven

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
15		Liner, Oven (Not Serviceable)
16	W11684285	Panel, Insert
17	W11684288	Bracket, Panel
		FOLLOWING PARTS NOT ILLUSTRATED
	W11594182	Harness, Main
	W11348047	Kit, Power Cord (No Plug)
	W11594210	Screw Kit, Insert Panel


INTERNAL OVEN PARTS

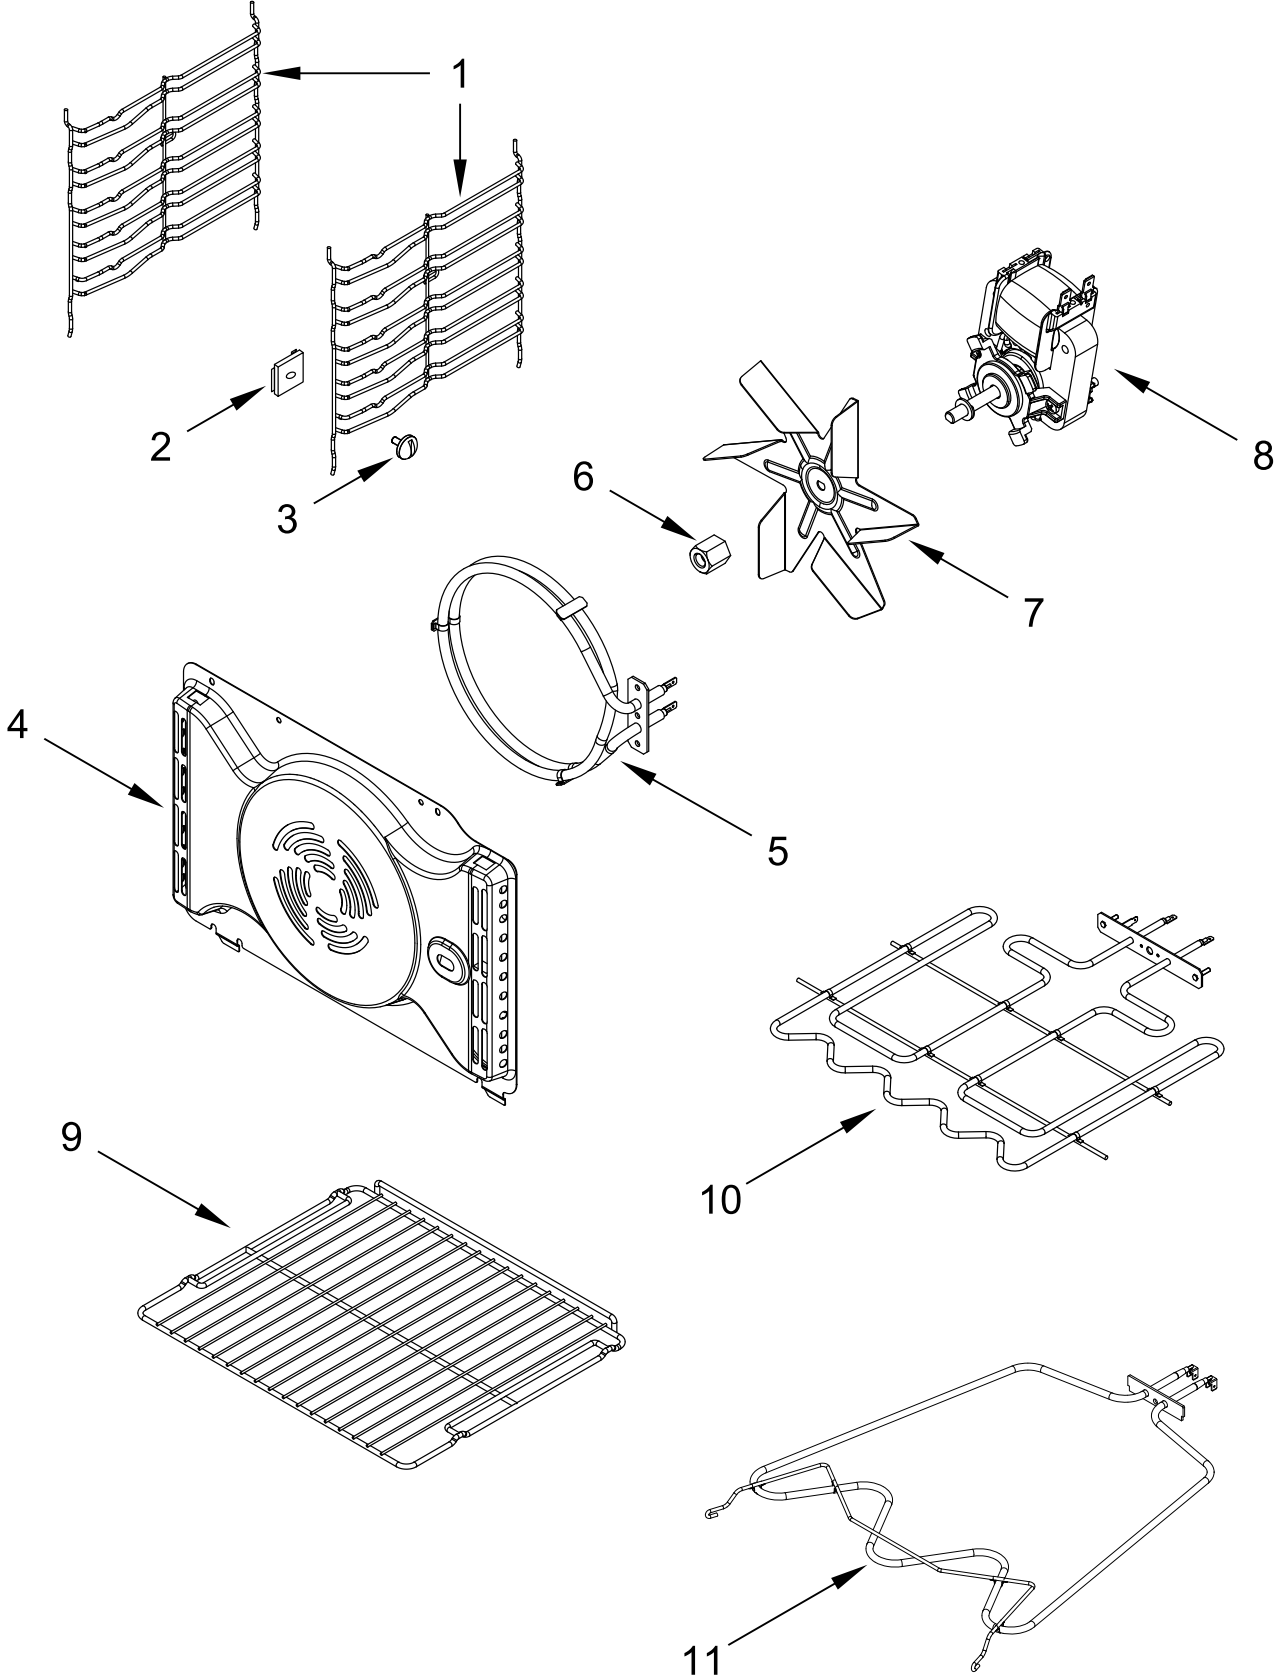

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10762741	Grid, Oven Rack	6	W10901439	Nut, Fan	10	W11347861	Element, Upper Grill
2	W11681231	Nut	7	W10901438	Blade, Fan	11	W11348032	Element, Lower
3	W10519022	Screw, Grid	8	W11347858	Motor, Convection Fan			
4	W11594175	Baffle, Convection Fan	9	W11681229	Rack, Oven			
5	W11347860	Element, Convection						

OVEN DOOR PARTS

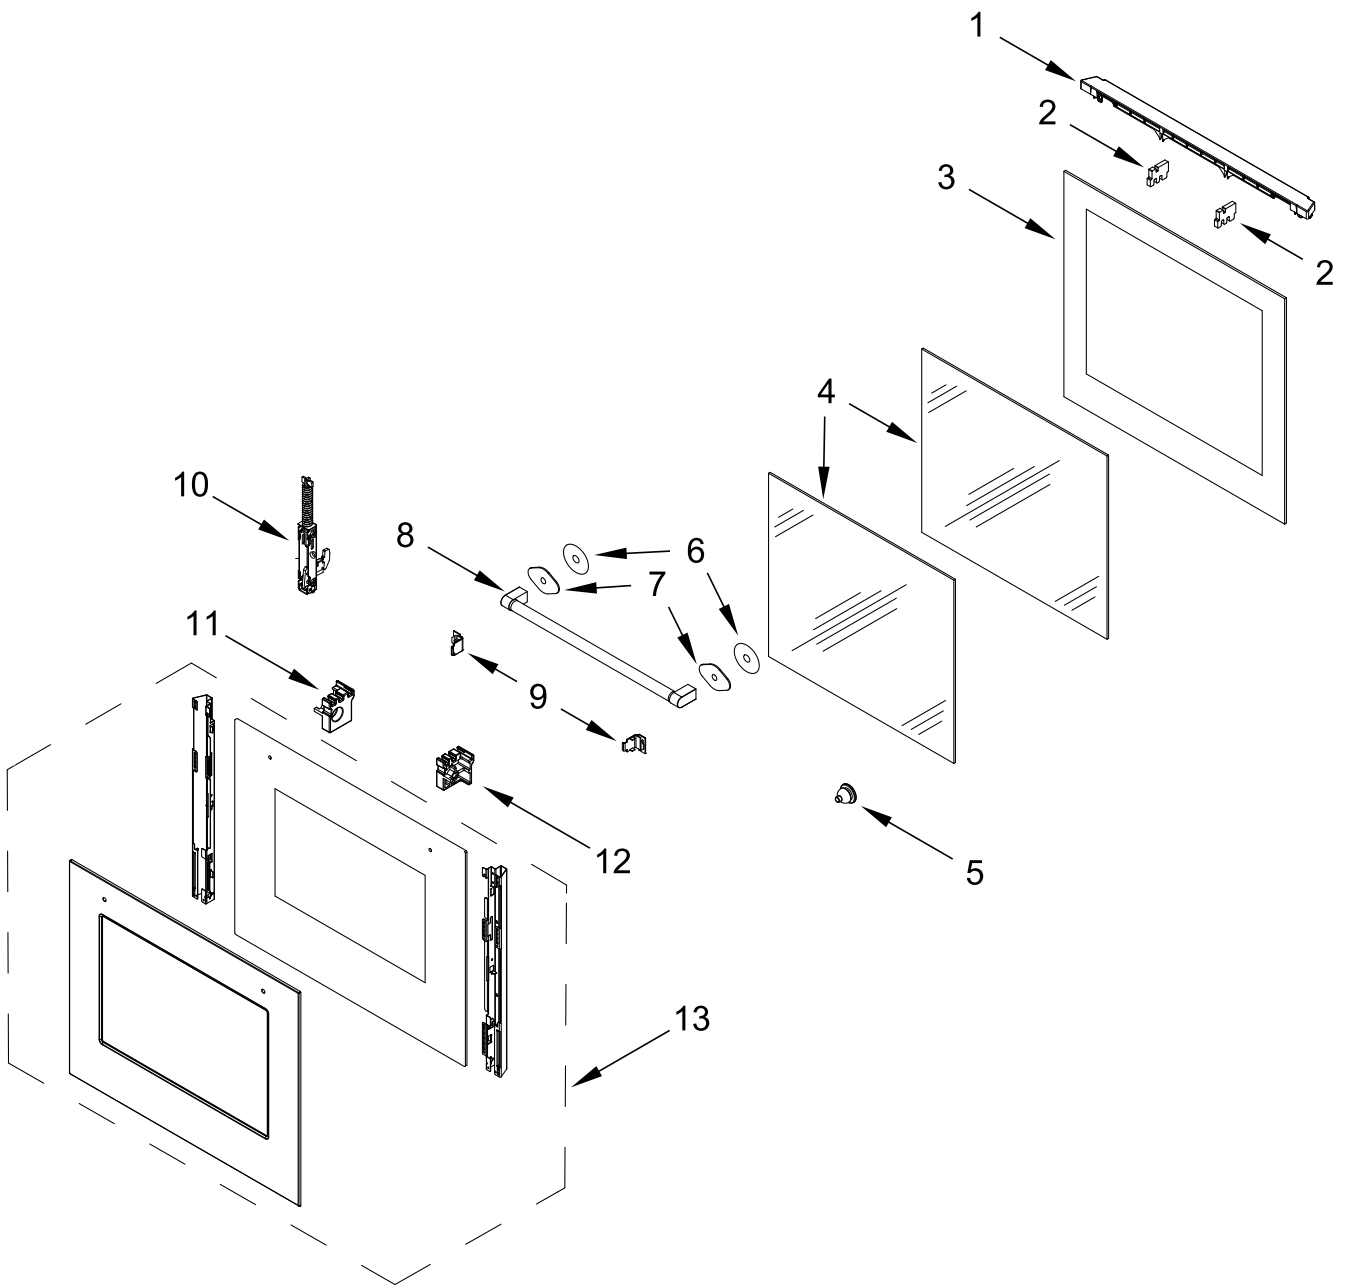

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10518369	Vent, Door Trim Top	6	W10410709	Washer, Door Handle	12	W10518384	Support, Oven Door Glass
2	W10518307	Spacer, Door Trim Top	7	W10260705	Spacer, Rubber	13	W11681228	Assembly, Outer Door
3	W10750365	Assembly, Inner Door Glass	8	W10713236	Handle, Door			
4	W10518376	Glass, Door Inner	9	481010387617	Support, Oven Door Glass			
5	W10519004	Spacer, Oven Door Glass	10	W11681227	Hinge, Door			
			11	W11509863	Support, Oven Glass			