


KitchenAid®

**ELECTRIC RANGE
(Even-Heat True Convection)**

MODELS:

KSIS730PSS1 (Stainless)


COOKTOP AND DUCT PARTS

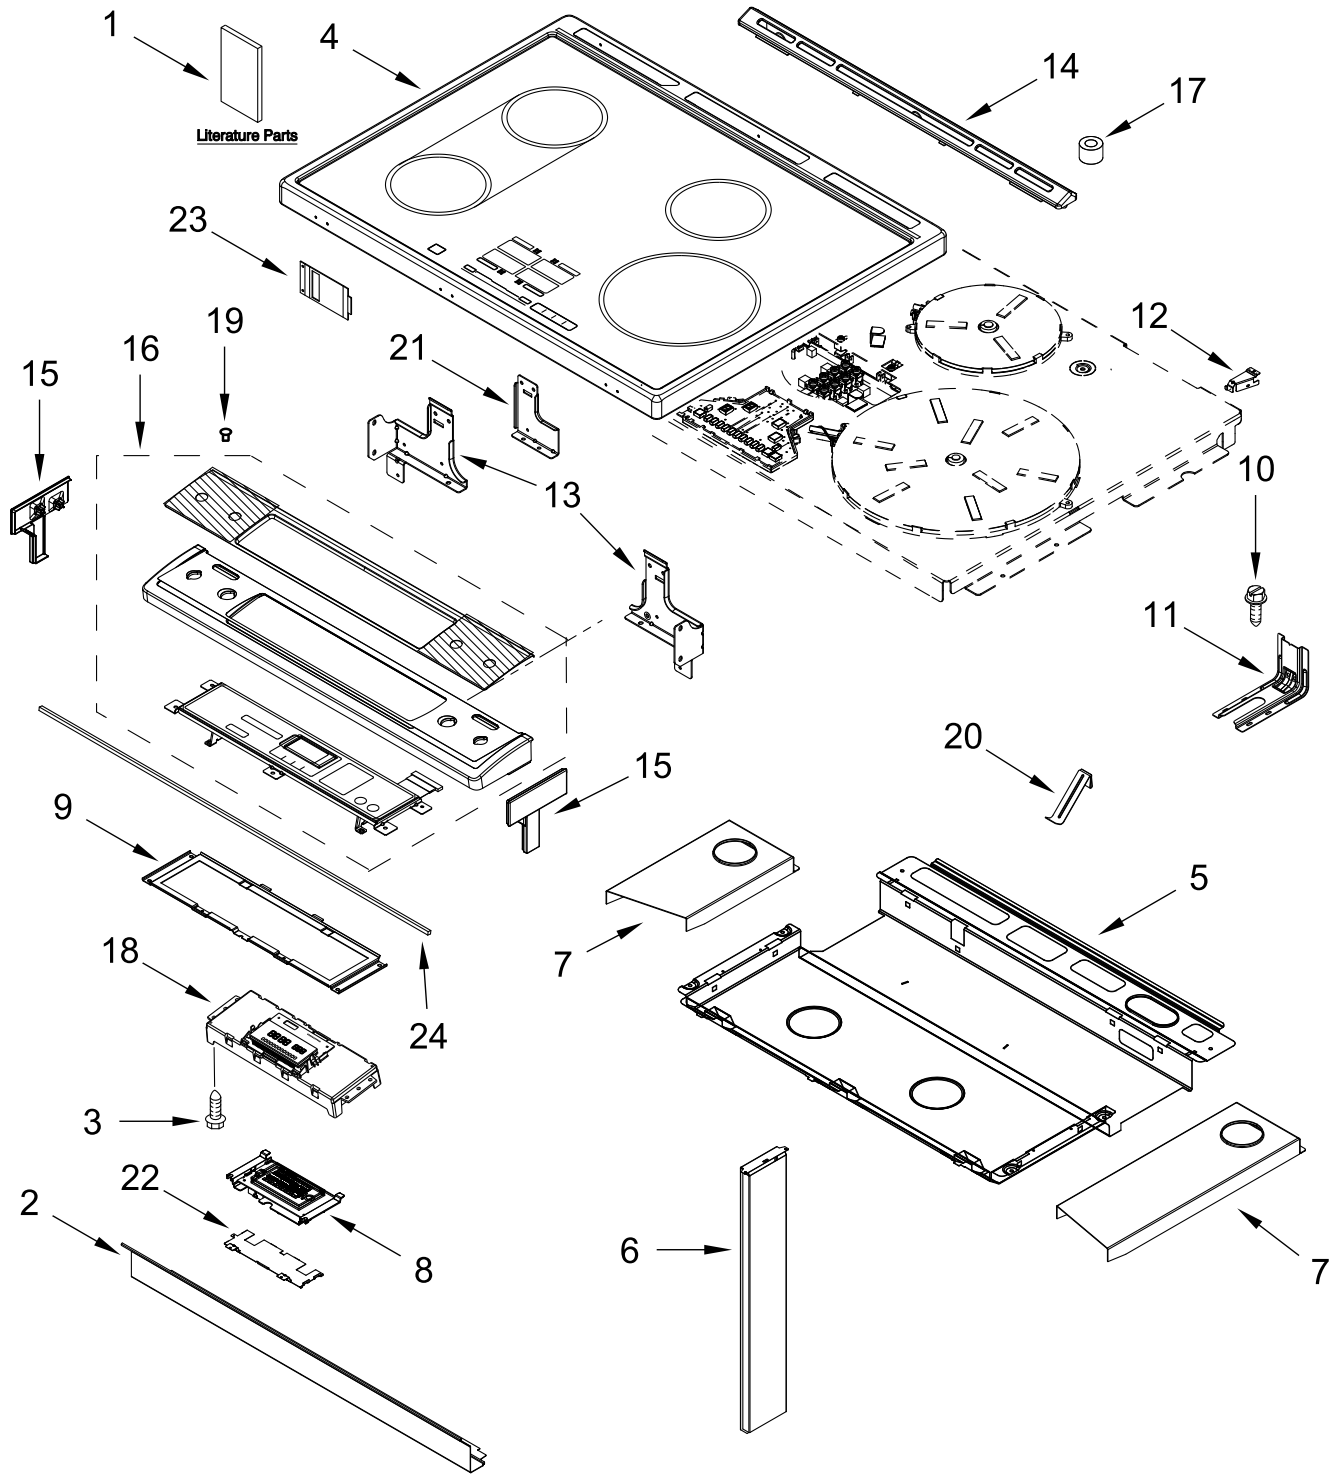

COOKTOP AND DUCT PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	7101P485-60	Screw, Anti-Tip Kit	20	W11616082	Spring (Cantilever)
	W11637353	Use and Care Guide	11	W11379947	Bracket, Anti-Tip	21	W10598048	Bracket, Console (Center)
	W11637366	Tech Sheet	12	W10162253	Brace, Corner (Left)	22	W10558372	Bracket, Control
	W11637354	Quick Start Guide		W10162252	Brace, Corner (Right)	23	W11355689	Keypad Shield
	W11637361	Dimension Guide	13	W10289169	Support, Cooktop (Right)	24	W10612719	Gasket, Console and Cooktop
2		Console, Lower Panel		W10289170	Support, Cooktop (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W10743276	Stainless						
3	3196178	Screw	14		Vent, Trim Top	W11631333		Harness, Main
4		Cooktop		W10636529	Stainless	W11172426		Harness, Display
	W11625481	Black	15		Endcap	W10575120		Harness, Keypad
5	W11610925	Pan, Induction (Lower)		W10555937	Stainless (Left)	313438		Clip, Harness
6	W11610960	Assembly, Induction Side Duct		W10555940	Stainless (Right)	7103P027-60		Nut
7	W11610945	Duct, Recirculation Plate (Left)	16		Console			
	W11610944	Duct, Recirculation Plate (Right)		W11633376	Black			
			17	W10854253	Bumper			
8	W10759325	Assembly, Display	18	W11636877	Control, Electronic (Maxwell)			
9	W10555923	Bracket, User Interface	19	3196068	Lens, Indicator			


INDUCTION ASSEMBLY PARTS

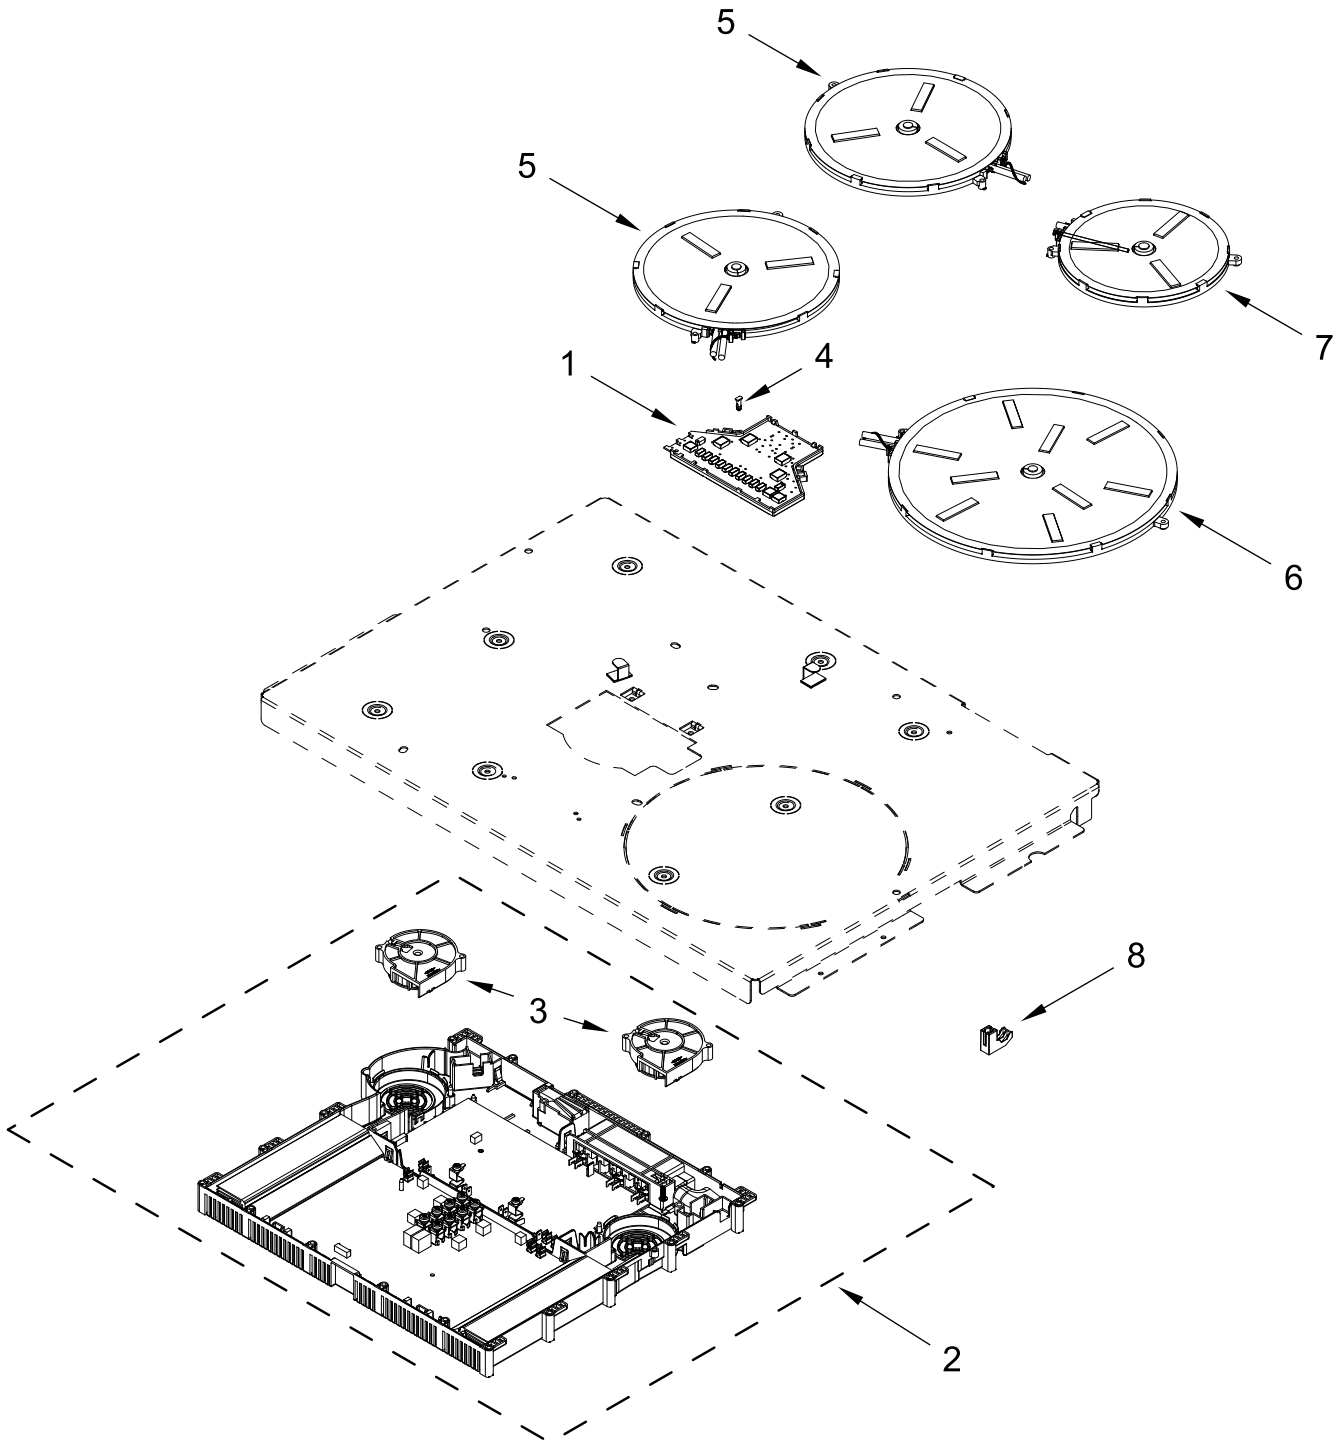

INDUCTION ASSEMBLY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11683059	User, Interface	5	W11683055	Element, Induction	8	W11683063	Strain Relief, Cable
2	W11683057	Assembly, Induction Module			(Left Front and Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
3	W11683058	Fan, Cooling	6	W11683054	Element, Induction		313438	Clip, Harness
4	W11683061	Locking Pin, User Interface			(Right Front)		W11683062	Harness, UI to Module
			7	W11683056	Element, Induction		W11615923	Harness, Induction Cooktop
					(Right Rear)			


CHASSIS PARTS

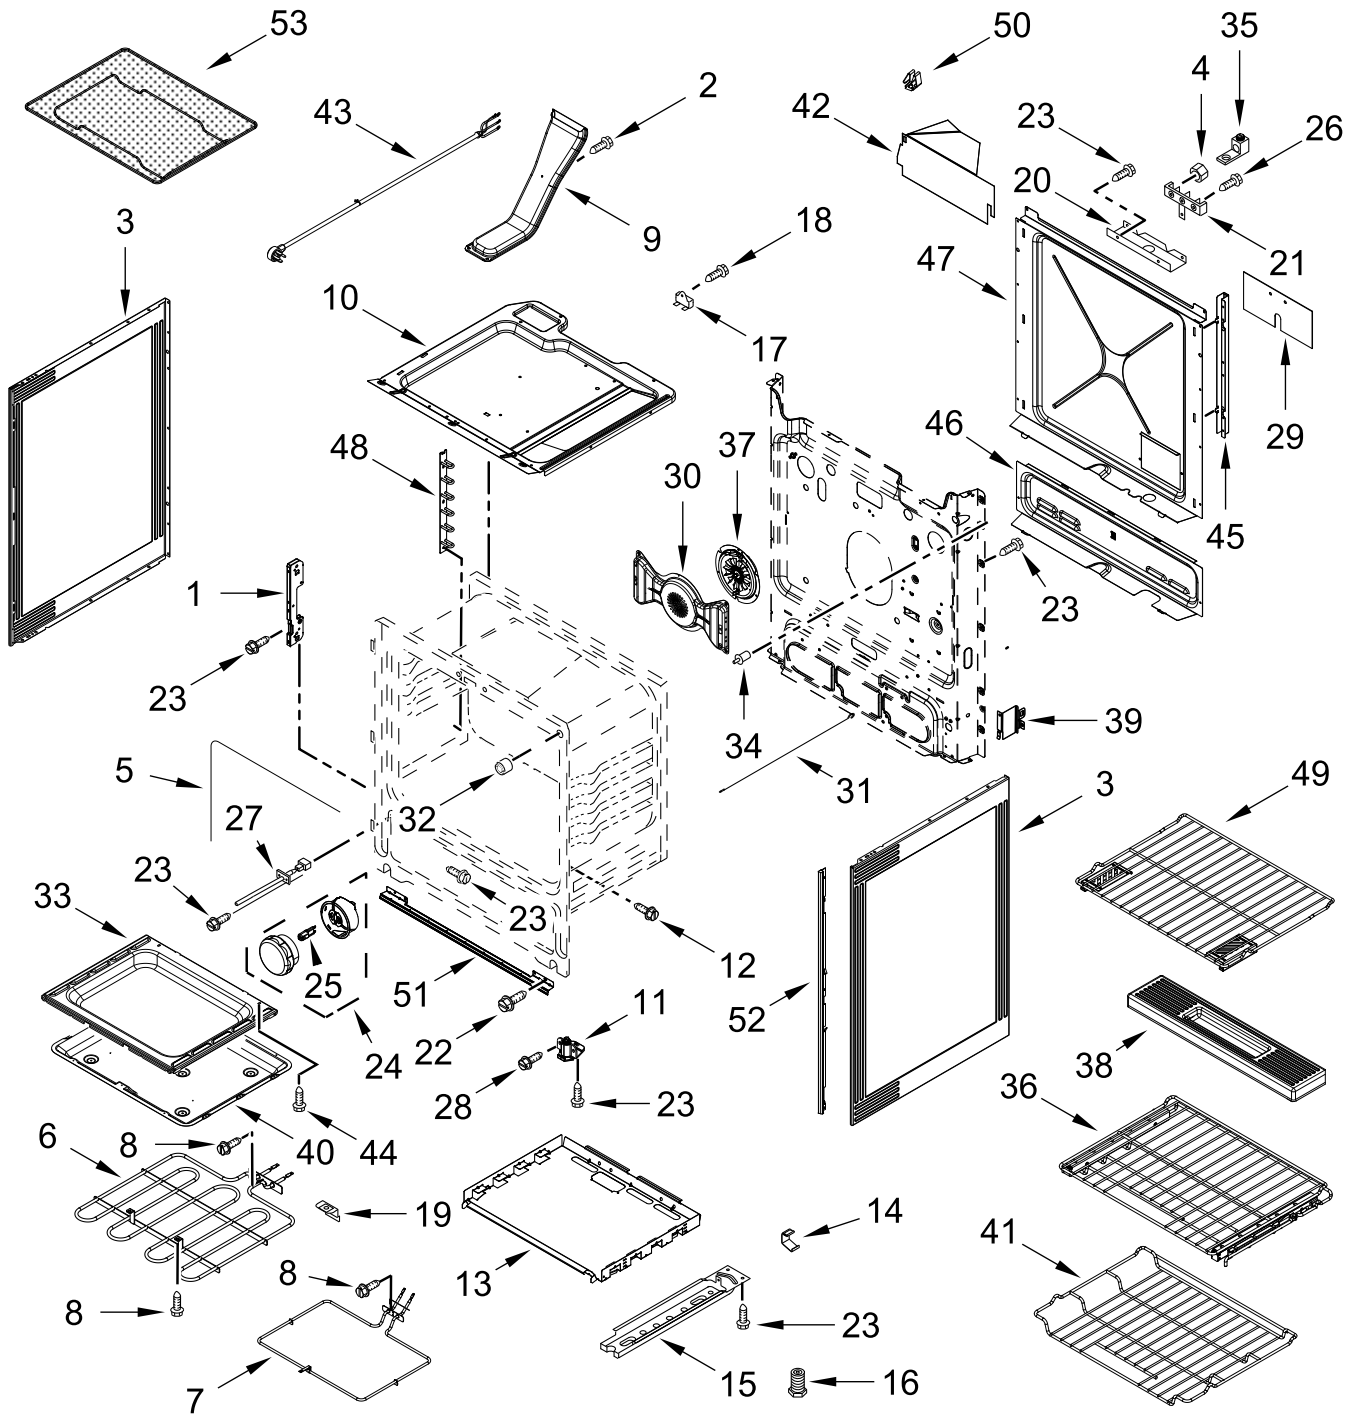

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	22	3196560	Screw	42	W10818358	Shield, Wire
2	W10362924	Screw	23	3196178	Screw	43	W10624592	Cord, Power
3		Panel, Side	24	W11634772	Light Assembly	44	W10516115	Screw
	W10162245	Black	25	W10571723	Bulb, Halogen 40 Watts	45	W10162241	Channel, Rear
4	3400029	Nut	26	3400016	Screw	46	W10162248	Cover, Wire
5	W11491752	Gasket, Door	27	W10586204	Sensor	47	W11379354	Cover, Back
6	W10544952	Element, Broil	28	3196169	Screw	48	W10603482	Rack, Ladder
7	W10774342	Element, Bake	29	W10655441	Shield, Power Cord	49	W10554007	Rack, Steam
8	W10362924	Screw	30	W10346153	Baffle, Full Convection	50	W10645947	Grommet
9	W11122085	Assembly, Flue	31	W10273192	Rod, Door Switch	51	W11620269	Bracket, Front Frame
10	W10289168	Box, Burner SI	32	9758701	Spacer, Door	52	W11510561	Barrier Rail, Rubber (Front Left)
11	W10341186	Front Foot Assembly	33	W10774446	Bottom, Oven		W11510562	Barrier Rail, Rubber (Front Right)
12	W10067840	Screw	34	W11511828	Switch, Door	53	W11661815	Basket, Airfry
13	W10541959	Shield, Bake	35	W10281322	Kit, Bare Wire Adapter Block			FOLLOWING PARTS NOT ILLUSTRATED
14	W10137382	Clip, Panel	36	W10554006	Rack, Maximum Capacity		W10289173	Insulation, Wrap
15	W10390008	Base Rail Assembly (Left)	37	W11353932	Convection Assembly		W10655490	Insulation, Main Back
	W10390007	Base Rail Assembly (Right)	38	W10686408	Kit, Reservoir (Steam Rack)		W10575374	Insulation, Bottom
16	W10058460	Foot, Leveling	39	W10273002	Bracket, Oven Support		4820F015-59	Insulation, Strap
17	3196548	Fuse, Thermal	40	W11379357	Bake Pan		7111P017-60	Clamp, Wire
18	3196172	Screw	41	W10911366	Rack, Sliding			
19	W10035900	Support, Oven Bottom						
20	3186034	Bracket, Service						
21	W10246624	Block, Terminal						

DOOR PARTS

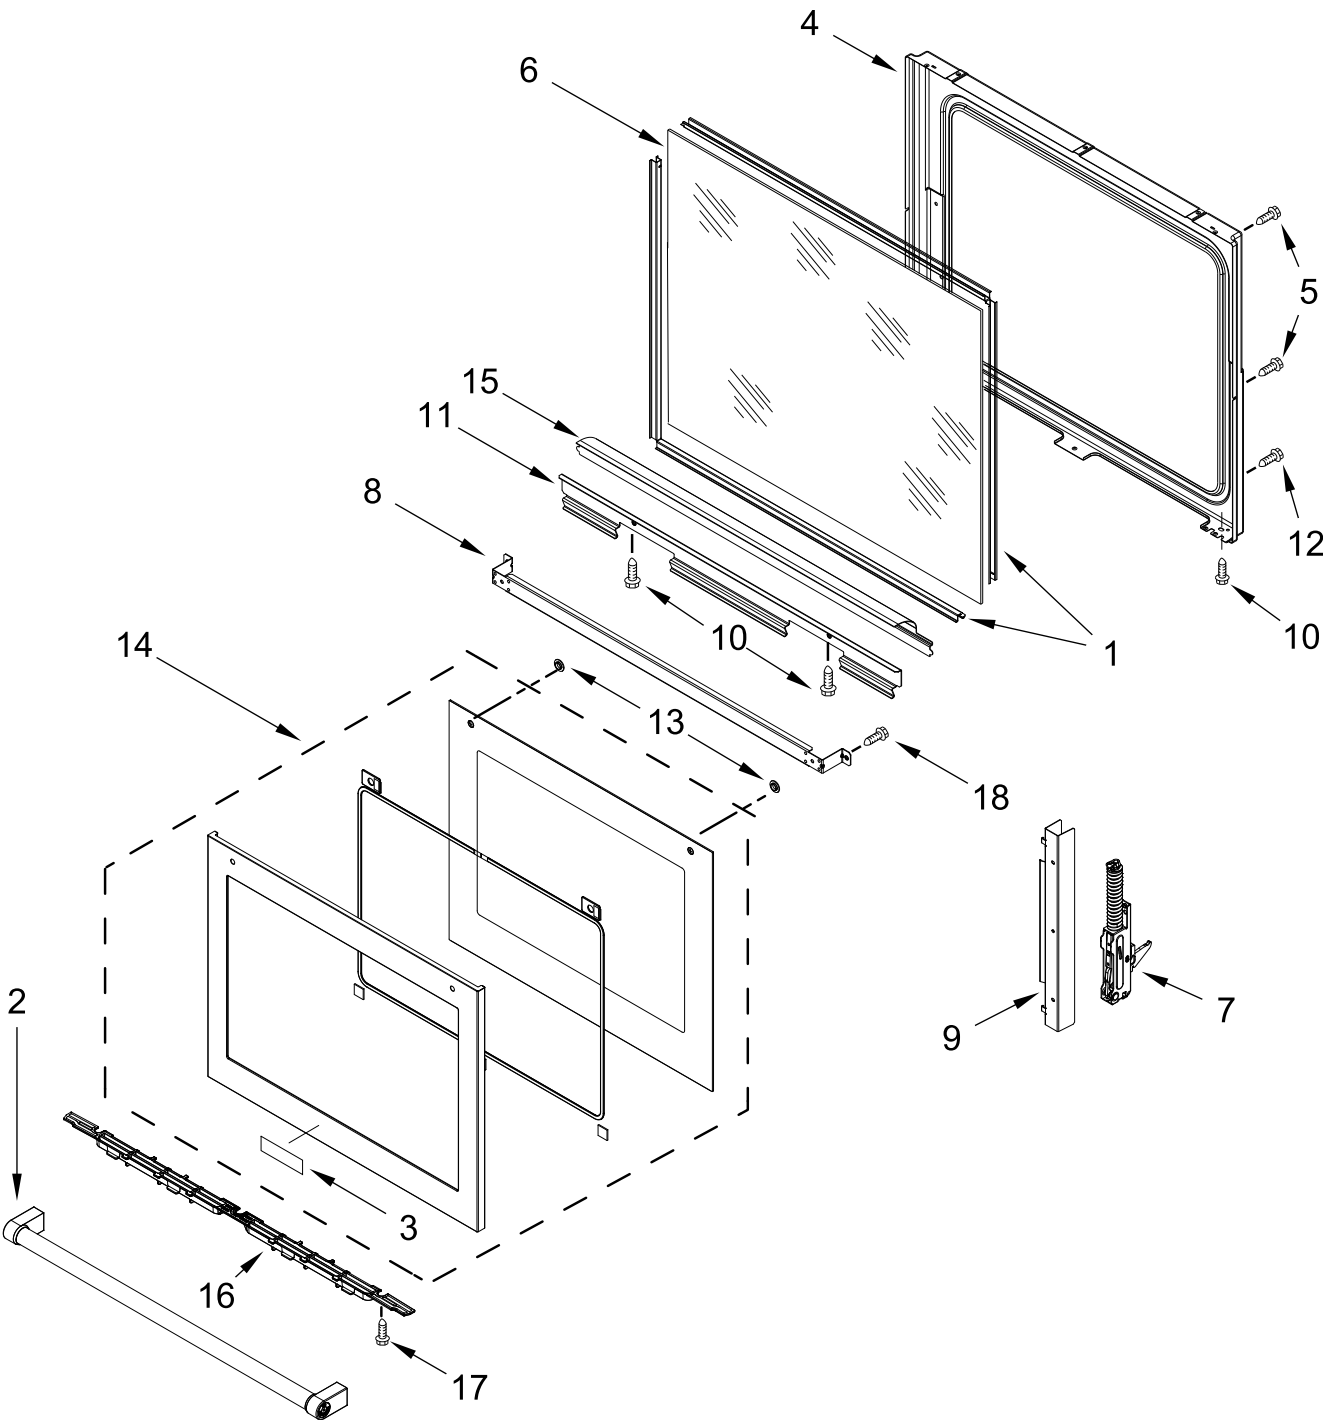


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11379948	Glass Spacer
2		Assembly, Door Handle
	W11669501	Stainless
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11223202	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8	W10541911	Bracket, Glass Upper Handle
9	W10813139	Rail, Vertical Support
10	9780274	Screw
11	W10813140	Rail, Horizontal Support
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10319024	Washer, Door
14		Assembly, Outer Door
	W10634271	Stainless
15		Scoop, Door
	W10613791	Black
16	W11440161	Bottom, Door Cover
17	W10327235	Screw
18	W11091878	Screw

DRAWER PARTS

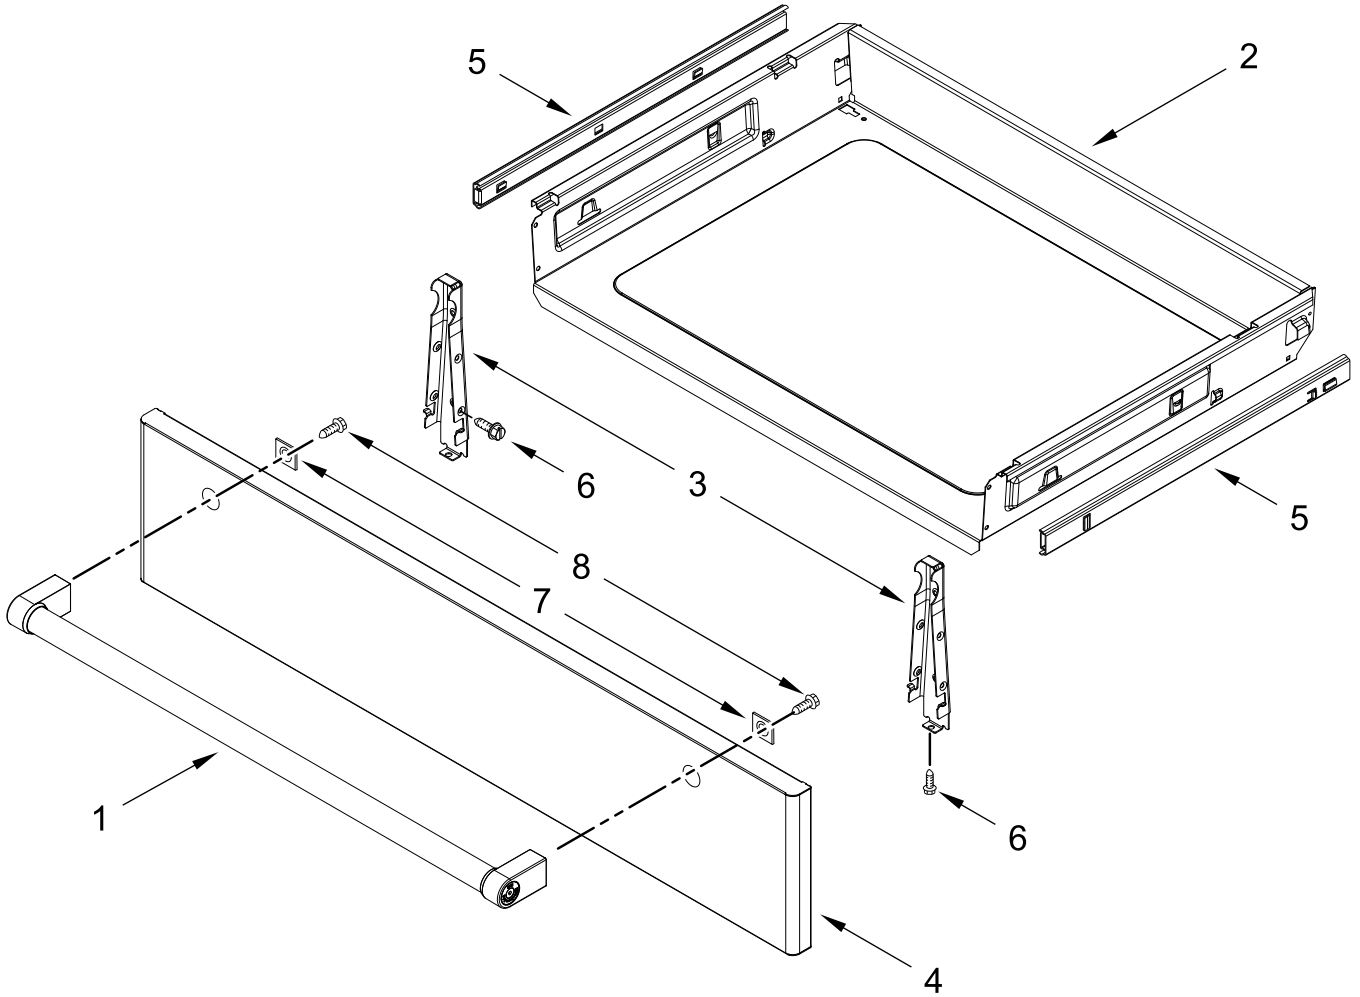

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	7	3823F017-45	Spacer, Handle
	W11669501	Stainless		W10441805	Slide, Drawer (Right)	8	8533988	Screw
2	W10688022	Drawer, Storage	6	3196169	Screw			
3	W10318026	Bracket, Mounting						
4		Panel, Drawer Front						
	W10541954	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	285006	Black
	4392901	Biscuit and Bisque
		PAINT, BULK (1 qt.)
	799344	White (Uncut) REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		ACCESSORY PARTS
	W11042470	Cooktop Cleaning Kit
		TRIM KITS
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655450	Stainless