



XODAIRSWITCH
SINK PRO NANOGRIND

REMOTE AIR SWITCH



XODAIRSWITCH

- Safe - Air Operated
- Easy to Install - no wiring required
- Includes two popular finish buttons

 
YOUR XO KITCHEN WASTE DISPOSAL

The Remote Air Switch is a simple, reliable way to have a convenient activation switch next to the sink for your Disposer. Because the push button works using air pressure, it keeps electricity away from the area immediately around the sink, so it is inherently safer. It is only used with CONTINUOUS FEED Disposers. The product is easily installed and comes with two different, popular button finishes to match your decor

WORLD CLASS SERVICE | COMPREHENSIVE WARRANTIES

OUR LASTING COMMITMENT TO YOU


CATEGORY: Continuous Feed **Optional Accessory**

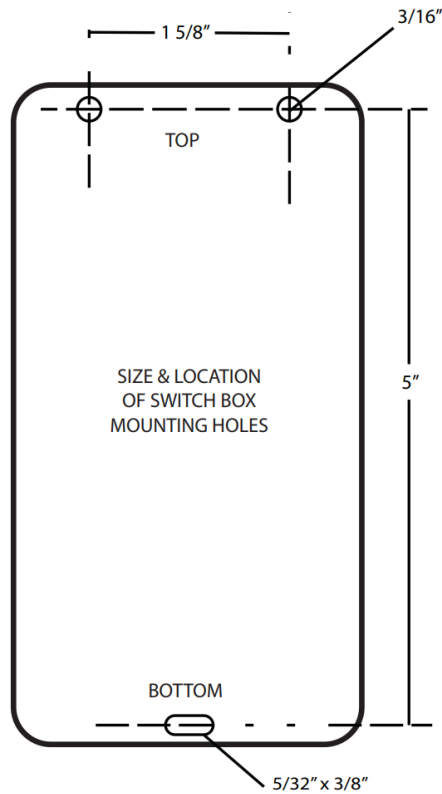

Switch Box Mounting Holes

The switch box has a rear flange with two (2) mounting holes at the top and one (1) mounting hole at the bottom to allow it to be fastened to the wall. Mounting screws are not included.

 BUTTON MOUNTING HOLE

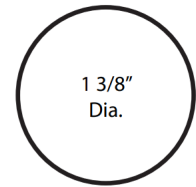

Standard size 1 3/8" faucet hole is required for the remote button.

For counters 1 3/8" thick or less, use lock nut supplied to fasten button in place.
For counters up to 1 1/2" thick use silicon sealant to hold button in place.



Limited warranty see website for details



For 90 days, all our products are backed by our unique Love It or Leave It Guarantee*

(*Does not apply to XO Outdoor Kitchen Products)

PRODUCT HIGHLIGHTS

- Safe - Air Operated
- Easy to Install - no wiring required
- Includes two popular finish button

SPECIFICATIONS

DIMENSIONS: 2-7/8"W x 6"H x 1-7/8"D

ELECTRICAL: 115V / 60Hz

- Use with all Continuous Feed Disposals
- 16" Power Cord /40" Long Air Hose
- Button Mounts in 1 3/8" Hole in Countertop
Switch Box Mounts Under Sink
- All XO Disposals Are UL Listed

