




30" Standard Gas Range User Manual

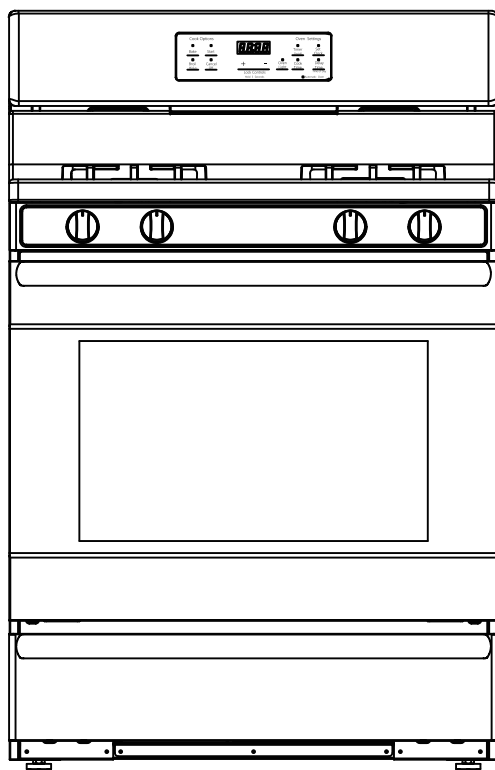

EGR34MCCW/EGR34MCCS/EGR34MCCB

USER S MANUAL

CAUTION: To Reduce The Risk Of Injury, User Must Read And Understand Operator's Manual. Save These Instructions For Future Reference.

IMPORTANT

- 1. Please read Owner's Manual.**
- 2. DO NOT RETURN TO STORE before calling Customer Service with questions or problems.**

For service, support and warranty information:
Call 888.842.3577, email us at customerservice
@elementelectronics.com or visit www.elementelectronics.com

TABLE OF CONTENTS

SAFETY INFORMATION	4
Anti-Tip Bracket	5
General Safety.	5
PARTS AND FEATURES	7
Control Panel Diagram	7
Starting the Burner	8
Bake/Broil	8
Power Failure	8
Grates	9
Sealed Surface Burner	9
How to Clean the Burners.	10
Burner Size	10
COOKWARE	11
ELECTRONIC OVEN CONTROLS	12
Control Panel	12
Clock Display	12
12 and 24 Hour Clock Setting.	12
Setting Clock	12
Cancel/Off	13
Oven Light.	13
Start	13
Timer	13
How to Set the Timer	13
Lock Controls	13
Oven Temperature Format	14
Delay Time.	14
Display Sleep Mode	14
OVEN USE	15
Positioning Racks And Bakeware	15
Pre-Heating the Oven	16
Bake	16
Broil	16
Cook Time.	17
Oven Vent	18
Food Safety	18
Oven Gasket.	18
RANGE CARE.	19
Oven Door.	19
Oven Light.	20
General Cleaning	20
TROUBLE SHOOTING TIPS	22
WARRANTY.	23
CUSTOMER SERVICE	23


SAFETY INFORMATION

NOTE: PLEASE READ ALL SAFETY INSTRUCTIONS BEFORE USING THE APPLIANCE. There are important safety messages in this manual for the appliance. Failure to follow instructions may result in potential safety hazards to the product and/or cause bodily injury.

All safety messages will explain what the potential hazards are, explain how to reduce the chance of injury, and state what can happen if the instructions are not followed.

SYMBOL MEANING

ALL SAFETY MESSAGES WILL EXPLAIN WHAT THE POTENTIAL HAZARDS ARE, EXPLAIN HOW TO REDUCE THE CHANCE OF INJURY, AND STATE WHAT CAN HAPPEN IF THE INSTRUCTIONS ARE NOT FOLLOWED.

	<ul style="list-style-type: none">• This is the safety alert symbol.
	<ul style="list-style-type: none">• This symbol alerts you to potential hazards that can hurt or kill you and others.
	<ul style="list-style-type: none">• All safety messages will follow the safety alert symbol with either the word: "DANGER" or "WARNING."
	<ul style="list-style-type: none">• ALL SAFETY MESSAGES WILL EXPLAIN WHAT THE POTENTIAL HAZARDS ARE, EXPLAIN HOW TO REDUCE THE CHANCE OF INJURY, AND STATE WHAT CAN HAPPEN IF THE INSTRUCTIONS ARE NOT FOLLOWED.
	<ul style="list-style-type: none">• Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.• For your safety, have your range installed and/or serviced by a qualified technician or service agency.• WHAT TO DO IF YOU SMELL GAS:<ul style="list-style-type: none">– Do not light any appliance– Do not touch any electrical switch– Do not use any phones in your home– Immediately call your gas supplier from a safe location outside of the home. Follow the gas suppliers instructions– In the event of an emergency, exit the home immediately, and call the fire department.

▲ DANGER:

YOU MAY BE SERIOUSLY INJURED OR KILLED IF YOU DO NOT IMMEDIATELY FOLLOW INSTRUCTIONS!

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

▲ WARNING:

IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT IN CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH!


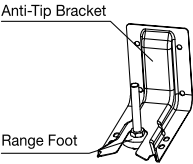
YOU MAY BE SERIOUSLY INJURED OR KILLED IF YOU DO NOT FOLLOW INSTRUCTIONS!

GAS LEAKS CANNOT ALWAYS BE DETECTED BY SMELL. GAS SUPPLIERS RECOMMEND THAT YOU USE A GAS DETECTOR APPROVED BY UL OR CSA-US. FOR MORE INFORMATION, CONTACT YOUR LOCAL GAS SUPPLY COMPANY.

SAFETY INFORMATION (continued)

ANTI-TIP BRACKET

The range will not tip during normal use. However, the range can tip if you apply too much force or weight to the open door without the anti-tip bracket fastened down properly.

▲WARNING:	TIP OVER HAZARD
	<ul style="list-style-type: none">• A child or adult can tip the range and be killed.• Make sure the anti-tip bracket has been properly installed and secured per the installation instructions.• Re-secure the anti-tip bracket if range is moved.• Do not operate the range without the anti-tip bracket installed and secured.• Failure to follow these instructions can result in death or serious burns to adults and children.
 <p>Anti-Tip Bracket</p> <p>Range Foot</p>	<p>TO VERIFY THE ANTI-TIP BRACKET IS INSTALLED AND SECURED PROPERLY:</p> <ol style="list-style-type: none">1. Slide range forward.2. Look for the anti-tip bracket attached to the floor or wall, then slide range back so rear range foot is under anti-tip bracket.3. If the range can be tipped away from the wall, the range has not been secured in place. Repeat steps 1-2 to ensure rear range foot is set properly. <p>NOTE: SEE SAFETY INSTRUCTIONS BELOW FOR FURTHER DETAILS.</p>

GENERAL SAFETY INSTRUCTIONS

▲WARNING:	TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, INJURY TO PERSONS, OR DAMAGE WHEN USING THE RANGE, FOLLOW BASIC PRECAUTIONS, INCLUDING THE FOLLOWING:
------------------	--

Before using your appliance, make sure all the packaging material is removed from the exterior and interior parts of the range.

- Do not climb, sit, stand, or hang on any parts of the appliance.
- To reduce the risk of tipping, the range must be secured by properly installing the anti-tip bracket.
- To check if the device is installed properly, slide the range forward, look for the anti-tip bracket attached to the floor or wall, then slide the range back so the rear range foot is under the anti-tip bracket.
- To ensure proper installation, be sure the range is installed correctly and grounded by a qualified technician.
- The range is equipped with a 3-prong grounding plug to protect against shock. Do not cut the ground prong and always use the proper receptacle. Never use an extension cord with this appliance.
- Before performing any service on your appliance, make sure to disconnect the power supply and the range is unplugged.

SAFETY INFORMATION (continued)

⚠ DANGER:

NEVER USE THE RANGE FOR WARMING OR HEATING THE ROOM. DOING SO MAY RESULT IN CARBON MONOXIDE POISONING AND OVERHEATING THE OVEN!

- **Service Repair:** Do not repair or replace any part of the oven unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.
- **Do Not Leave Children Unattended Near Range!** Children should not be left alone or unattended in area where range is in use. This can lead to potential burns, injury, or death.
- **Wear Proper Apparel:** Loose-fitting or hanging garments should never be worn while using the range. Excess material has the potential to catch on fire and cause burns.
- **Storage in the Oven:** Do not store any items or flammable materials inside the oven. Items inside could ignite and start a fire.
- **Do Not Use Water on Grease Fires:** In case of grease fire, smother fire or flame with well-fitted lid or use a fire extinguisher.
- **Use Only Dry Potholders:** Do not use wet or damp potholders on hot surfaces. May result in burns from steam! Do not let potholder touch hot heating elements. Do not use a towel or other bulky cloth.
- **Use Care When Opening Oven Door:** Let hot air or steam escape before removing or inserting food into the oven.
- **Do Not Heat Unopened Food Containers:** Unopened food containers will build-up pressure and will cause container to burst and result in injury.
- **Keep Oven Vent Ducts Unobstructed:** The air inlets and outlets are necessary for the range to operate properly.
- **Placement of Oven Racks:** Always place oven racks in desired position when oven is off. If a rack must be moved while oven is hot, use potholders to protect hands from hot heating elements in the oven.
- **DO NOT TOUCH HEATING ELEMENTS OR INTERIOR SURFACES OF OVEN:** Heating elements may be hot even though they are dark in color. Interior surfaces of the oven will become hot enough to cause burns! Potential hot surfaces include grates, burners, and other exterior surfaces around the oven.
- During and after use, do not touch, or let clothing or other flammable materials come in contact with the heating elements and/or interior surfaces of oven until they have had sufficient time to cool.
- Potential surfaces of the oven may become hot enough to cause burns – among these surfaces are the oven vent openings, surfaces near these openings, oven door, and windows of the oven door.
- **Do Not Clean Oven Gasket:** The gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.
- **Do Not Use Oven Cleaners:** No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- **Clean Only Parts Listed in Manual.**


READ AND SAVE THESE SAFETY INSTRUCTIONS FOR FUTURE REFERENCE.

1. Please read Owner's Manual.
2. **DO NOT RETURN TO STORE** before calling Customer Service with questions or problems.

PARTS AND FEATURES

RANGE PARTS DIAGRAM:

- A. Control Panel
- B. Oven Vent
- C. Grates
- D. Control Knobs
- E. Oven Light
- F. Oven Racks
- G. Gasket
- H. Oven Door with Handle
- I. Broil
- J. Adjustable Feet x 4

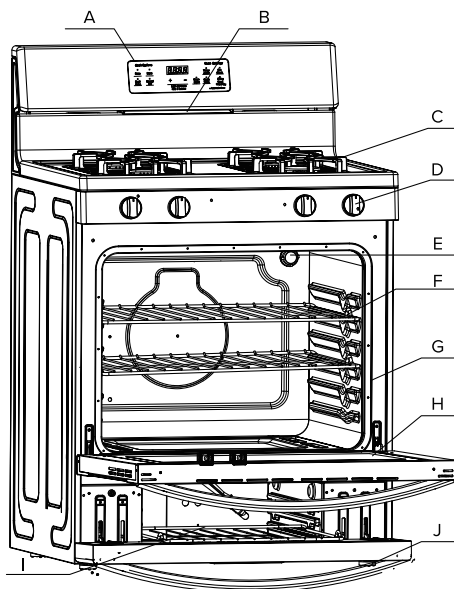


BURN HAZARD



BURNER GRATES AND SURFACE AREAS MAY STILL BE HOT AFTER USE.


CHOKING HAZARD. SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS OLD.

CONTROL PANEL DIAGRAM

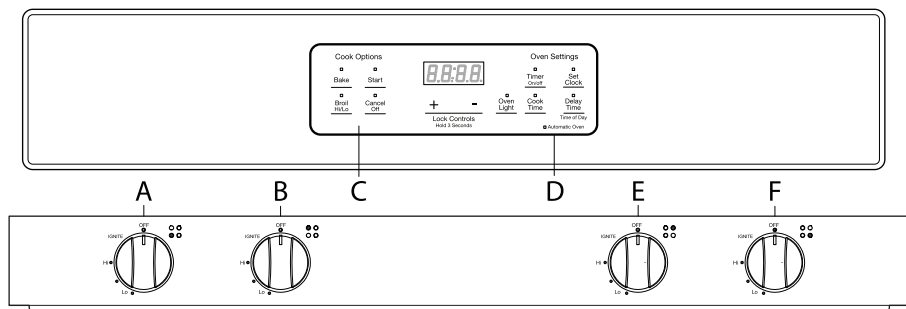

A	FRONT LEFT BURNER	C	COOK OPTIONS	E	REAR RIGHT BURNER
B	REAR LEFT BURNER	D	OVEN SETTINGS	F	FRONT RIGHT BURNER

PARTS AND FEATURES (continued)

 WARNING:	FIRE HAZARD
	<ul style="list-style-type: none">• Do not let the burner flame extend beyond the edge of the pan.• Turn off all controls when not cooking.• Failure to follow these instructions can result in death or fire.• When range is in use, the entire cooktop area may become hot.

KEEP FLAMMABLE MATERIALS AWAY FROM THE BURNERS. DO NOT STORE MATERIALS SUCH AS PAPER TOWELS, HAND TOWELS, OR OTHER COMBUSTIBLE MATERIALS NEAR BURNERS. FAILURE TO DO SO MAY RESULT IN FIRE OR BODILY INJURY.

TO START THE BURNER:

1. Push in and turn knob counterclockwise to the “IGNITE” position and hold.
2. All surface burners will click. However, only the burner with the control knob turned to “IGNITE” will produce a flame.
3. Turn knob to adjust flame level between HI and LO.
4. If a burner does not start a flame, turn knob to the off position and repeat step 1.

NOTES:

- Electric igniters automatically light the surface burners when control knobs are turned to “IGNITE”.
- Before turning a burner on, place filled cookware on the grate.
- Do not operate a burner using empty cookware or without cookware on the grate.
- The flame should be adjusted so it does not extend beyond the edge of the pan.
- **CAUTION: NEVER LEAVE THE IGNITED BURNERS UNATTENDED WHILE COOKING. FOOD MAY IGNITE CAUSING A FIRE IN PAN OR SURROUNDING AREAS.**

BAKE/BROIL CYCLE:

When the range is set to the “Bake” or “Broil” setting, you will hear a few clicking noises as the burners ignite in the oven. This is the normal operation of the range.

- Gas valves may make a “popping” sound when opening or closing.
- Igniters will “click” several times until a flame is sensed.
- A “poof” sound is heard when a Bake or Broil burner ignites; odors and smoke are normal when the oven’s controls are accessed through its control panel.

POWER FAILURE:

In case of prolonged power failure, the surface burners can be lit manually. To light manually, hold a lit match near a burner and the turn knob counterclockwise to “IGNITE.” After burner lights, turn knob to desired setting.

- The right front burner is designed to give maximum power when fully on. It can be used to rapidly bring liquid to a boil and to cook large quantities of food.
- The right rear burner allows for more precise simmering and low temperature cooking.


COOKTOP USE AND PARTS

GRATES

The range comes with 4 dishwasher safe cast iron grates.

SEALED SURFACE BURNERS

- A. Burner Cap
- B. Burner Base
- C. Igniter
- D. Gas Tube Opening

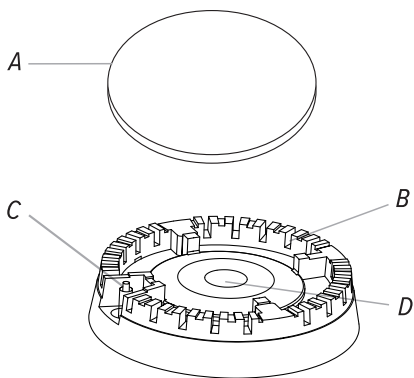

⚠ WARNING:


SERIOUS INJURY POTENTIAL

DO NOT OBSTRUCT THE FLOW OF COMBUSTION OR AIR VENTILATION AROUND THE BURNER GRATE EDGES. FAILURE TO COMPLY MAY RESULT IN SERIOUS INJURY!

Burner Cap: Always keep the burner cap in place when using a surface burner. A clean burner cap will help avoid poor ignition and uneven flames. Always clean the burner cap after a spillover and routinely remove and clean the caps according to the “General Cleaning” section.

Gas Tube Opening: Gas must flow freely throughout the gas tube opening for the burner to light properly. Keep this area free of debris. Do not allow spills, food, cleaning agents or any other material to enter the gas tube opening. Keep spillovers out of the gas tube by always using a burner cap.

Burner Ports: Check the burner flames for proper size and shape when cooking. See illustration at right. The flame size should match the size of the cookware you are using. A good flame is blue in color. Keep this area free of debris. Do not allow spills, food, cleaning agents or any other material to enter the burner ports.

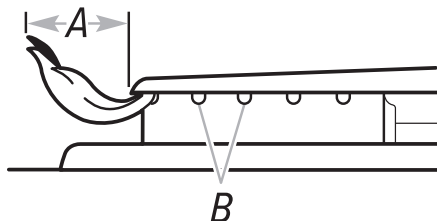

A. 1 - 1.5" (25-38 mm)

 

B. Burner Ports

COOKTOP USE AND PARTS (continued)

HOW TO CLEAN THE BURNERS

IMPORTANT: Before cleaning, make sure all controls are off and the oven and cooktop are cool. Do not use oven cleaners, bleach, or rust removers.

1. Remove the burner cap from the burner base and clean according to "General Cleaning" section.
2. Once cleaned, make sure burner caps are positioned in the correct location according to size.
3. Clean the gas tube opening with a damp cloth.
4. Clean clogged burner ports with a straight metal pin as shown. Do not enlarge or distort the port. Do not use a wooden toothpick. If the burner needs to be adjusted, contact a trained repair specialist.
5. Replace the burner cap, making sure the alignment pins are properly aligned with the burner cap.
6. If the burner does not light, check cap alignment. If the burner still does not light, do not service the sealed burner yourself. Contact a trained repair specialist.

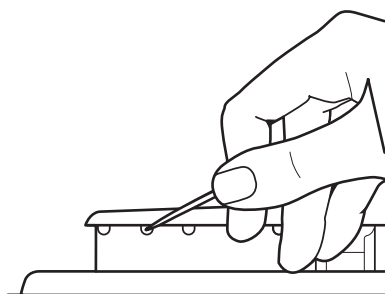


- A. Burner cap is not properly seated.
 B. Burner cap is properly seated

BURNER SIZE

Select a burner that best fits your cookware. See the following illustration and chart.

BURNER OUTPUT RATINGS: BTU/HR			
Propane (LP) Gas 10" W.C.P.			
BURNER	BTU RATE	ORIFICE SIZE (mm)	INTERNAL VALVE COLOR
LF	9500	0.90 (0.035")	Green
LR	9500	0.90 (0.035")	Green
RF	11500	1.02 (0.04")	Blue
RR	5000	0.66 (0.026")	Red
OVEN	18000	1.24 (0.049")	N/A


BURNER OUTPUT RATINGS: BTU/HR			
Natural (NG) Gas 5" W.C.P.			
BURNER	BTU RATE	ORIFICE SIZE (mm)	INTERNAL VALVE COLOR
LF	9500	1.40 (0.055")	Green
LR	9500	1.40 (0.055")	Green
RF	11500	1.62 (0.064")	Blue
RR	5000	1.01 (0.04")	Red
OVEN	18000	1.95 (0.077")	N/A

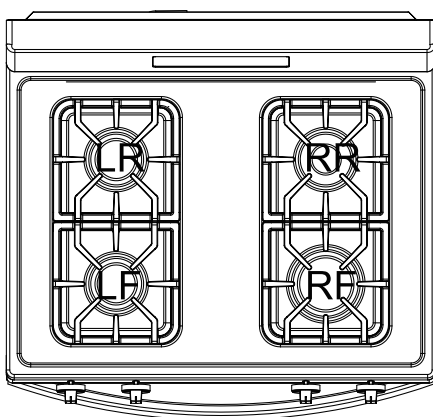

COOKWARE

IMPORTANT: Do not leave empty cookware on a hot surface cooking area, element, or surface burner.


Ideal cookware should have a flat bottom, straight sides and a well fitted lid, and the material should be of medium-to-heavy thickness.

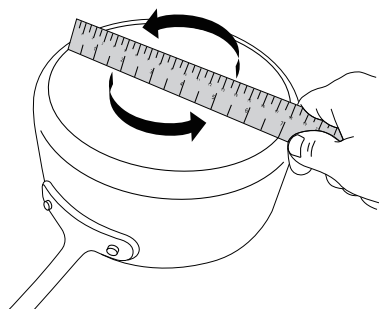

NOTE

- Rough finishes may scratch the cooktop or grates. Aluminum and copper core/base cookware may be used.
- Cookware material is a factor in how quickly and evenly heat is transferred, which affects cooking results.
- Cookware with nonstick surfaces should not be used under the broiler.
- Check for flatness by placing the straight edge of a ruler across the bottom of the cookware. While you rotate the ruler, no space or light should be visible between it and the cookware.

For best results, the cookware should be centered above the burner with the bottom sitting level on the grate. The flame should be adjusted so that it does not extend up the sides of the pan.

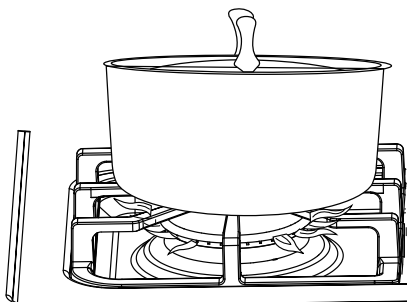


Use the following chart as a general guide for cookware material characteristics. Individual results may vary.

COOKWARE	CHARACTERISTICS
Aluminum	Heats quickly and evenly. Suitable for all types of cooking. Medium or heavy thickness is best for most cooking tasks.
Cast iron	Heats slowly and evenly. Good for browning and frying. Maintains heat for slow cooking.
Ceramic or Ceramic Glass	Follow manufacturer's instructions. Heats slowly, but unevenly. Ideal results on low to medium heat settings. May scratch the cooktop.
Porcelain Enamel-On Steel or Cast Iron	See stainless steel or cast iron.
Stainless Steel	Heats quickly, but unevenly. A core/base of aluminum or copper on stainless steel provides even heating.

ELECTRONIC OVEN CONTROLS

CONTROL PANEL DIAGRAM

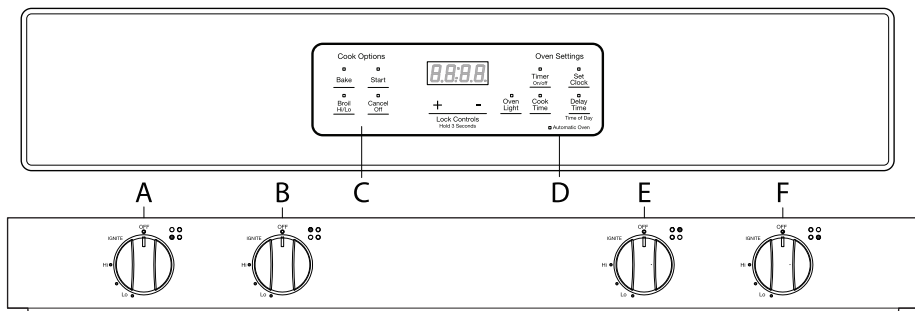

A	FRONT LEFT BURNER	C	COOK OPTIONS	E	REAR RIGHT BURNER
B	REAR LEFT BURNER	D	OVEN SETTINGS	F	FRONT RIGHT BURNER

CLOCK/DISPLAY

When the power is first supplied to the range or if a power failure occurs, “12:00” will appear on the display. See “How to Set the Clock” section to set the time. When the oven is not in use the display will only show the time.

NOTES:

- The clock function on this range has two available time settings. 12-hour or 24-hour time.
- The range is programmed with the 12-hour time mode set as the default setting.
- Before setting the clock, make sure the oven and timer are off.
- If you would like to change the time mode from the default setting, you must change it before setting the clock.

HOW TO SET THE 12-HOUR OR 24-HOUR TIME SETTING:

- 1) To switch the clock mode from 12-hour or 24-hour time, press the “Set Clock” pad, and hold for 3 seconds.
- 2) After 3 seconds, 12 or 24 will appear on the display.
 - If the display shows “12” you are switching the time mode to 12-hour time.
 - If the display shows “24” you are switching the time mode to 24-hour time.
- 3) Once your desired time mode appears, the display will automatically switch back to the clock display indicating that your time mode has been updated.

HOW TO SET THE CLOCK:

After the desired time setting mode has been selected you can now set the clock time on the range.

- 1) To set the clock, press the “Set Clock” pad, and the hours will begin to flash, press the “+ or -” pad to adjust the hour. To lock in the hour, press the “Set Clock” pad.
- 2) Once the hour is locked in, the minutes will begin to flash on the display, next press the “+ or -” pad to adjust the minutes. To lock in the minutes, press the “Set Clock” pad.
- 3) The clock time on your range is now set.

ELECTRONIC OVEN CONTROLS (continued)

CANCEL/OFF

The Cancel/Off pad stops all functions of the oven except the Lock Controls.

OVEN LIGHT

When the oven door is closed or open, press the "Oven Light" pad to turn the lights on or off.

START

The "Start" Pad begins the oven function. If the "Start" pad is not pressed within 30 seconds after pressing a function pad, the display will begin to flash for 30 seconds, then 5 reminder tones will sound, and "PUSH" icon and "On" icon will begin to flash alternately on the display for 30 seconds. If the "Start" pad is not pressed the oven function will be canceled and the display will return to showing the clock time.

TIMER

The timer can be set in hours or minutes up to 11 hours and 59 minutes (in the 12-hour time mode; 23 hours and 59 minutes in the 24-hour time mode), and counts down the set time programmed into the system. The timer does not start or stop the oven.

HOW TO SET THE TIMER:

- 1) To set the Timer, press the "Timer On/Off" pad.
- 2) Next, the display will begin to flash, to set the desired hour or minutes, press the "+ or -" pad.
- 3) Then press the "Timer On/Off" pad to begin the Timer.
- 4) When the set time ends, the end-of-cycle tones will sound.
- 5) Press the "Timer On/Off" pad to stop the timer and the reminder tones.

NOTE: If you would like to stop the Timer at any time, press the "Timer On/Off" pad twice.

LOCK CONTROLS

The Lock Controls function locks the control panel pads from being used to avoid any unintended use of the cook functions. When the control panel is locked, **only the Oven Light will function.**

TO LOCK/UNLOCK CONTROL PANEL:

1. To lock the control panel, press both the "+ and -" pads at the same time and hold for three seconds, then "LOC" icon will appear on the display and begin to flash. Once "LOC" stops flashing, your control panel is now locked.
2. To unlock the control panel, press both the "+ and -" pads at the same time and hold for three seconds, then "OPN" icon will appear on the display and begin to flash. Once "OPN" icon stops flashing, your control panel is now unlocked.

⚠ WARNING:	LOCK CONTROLS FUNCTION
	LOCK CONTROLS FUNCTION DOES NOT LOCK THE OVEN DOOR.

ELECTRONIC OVEN CONTROLS (continued)

OVEN TEMPERATURE FORMAT

- The default temperature scale setting for the oven is set to Fahrenheit.
- When using the oven, the oven temperature on the display will appear in Fahrenheit (F).
- However, if you would like to change the temperature scale to Celsius (C), please see directions below.

HOW TO CHANGE THE OVEN TEMPERATURE SCALE TO CELSIUS:

- 1) To change the oven temperature scale to Celsius (C), press the “Bake” pad and hold for 3 seconds.
- 2) Next, the letter “C” will appear on the display for a few seconds.
- 3) The “C” will disappear from the display, and the clock time will reappear on the display indicating the oven temperature scale has been switched.
- 4) When using the Bake function, the oven temperature will now display the letter “C” next to the temperature.

HOW TO CHANGE THE OVEN TEMPERATURE SCALE BACK TO FAHRENHEIT:

- To change the oven temperature scale back to Fahrenheit (F), repeat above steps 1-3. However, during the adjustment the letter “F” will appear on the display instead of a “C.”

DELAY TIME

The delay time function is available in the Bake or Broil mode.

HOW TO SET THE DELAY TIME:

- 1) To set the Delay Time, press the “Delay Time” pad, and the display will begin to flash.
- 2) Next, press the “+ or -” pad to set the time to when you would like your cooking time to begin.
- 3) Once you have set your desired delay time, press the “Delay Time” pad again to lock in the set time.
- 4) Next, press the “Bake” OR “Broil Hi/Lo” pad.
 - a. If the “Bake” pad has been pressed, press the “+ or -” pad to adjust to the desired oven temperature.
 - b. If the “Broil Hi/Lo” pad has been pressed, the “HI” will automatically appear on display. Press the “Broil Hi/Lo” pad twice to set the “LO.”
- 5) Next, press the “Start” pad to begin the delay time and the set time will appear on the display indicating that your Delay Time mode has been start.
- 6) When your delay time has been programmed, the Automatic Oven indicator will light up.
- 7) If you would like to cancel the Delay Time function, press the “Cancel/Off” pad.

DISPLAY SLEEP MODE

Display sleep mode can be used to turn off the display function. The oven controls can still be used in display sleep mode. To enter display sleep mode, press and hold the “Timer” pad for 3 seconds. To exit display sleep mode, press and hold the “Timer” pad for 3 seconds.

OVEN USE

OVEN USE

IMPORTANT: To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the oven door or bottom. Do not line the oven bottom or racks with foil or liner.

POSITIONING RACKS AND BAKEWARE

- Position racks before turning on the oven.
- Do not position racks with bakeware on them.
- Make sure racks are level.
- Placement of food items on the different rack positions will impact the cooking results.
- Oven mitts should be worn at all times when touching the oven racks or placing food in/removing food from the oven!


TO REMOVE OVEN RACKS

Pull rack out to the stop position, raise the front edge, and then lift out.


TO INSERT OVEN RACKS

Place rack on the rack support in the oven. Tilt the front edge up slightly, and slide rack back until it clears the stop position. Lower front and slide back into the oven.


OVEN FUNCTION	RACK POSITION
BAKE:	
Large Roast/Turkey	Use Rack 1
Meat/Poultry	Use Rack 2
Cake/Cookies	Use Rack 3
Batch Baking	Use Rack 2 and 5

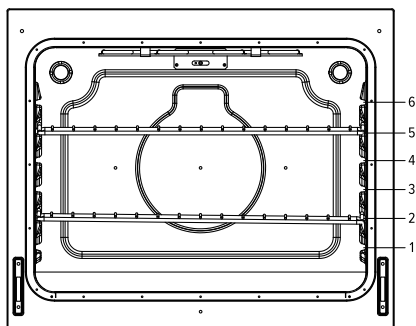

For best results when baking layer cakes on 2 racks, use racks 2 and 5 in the lower and upper section of the oven. For an even bake, stagger the cake pans on the bottom rack so that it is not positioned directly below the cake pans on the top rack. Place the cake pans on the racks as shown in the illustration below. (Diagram A)

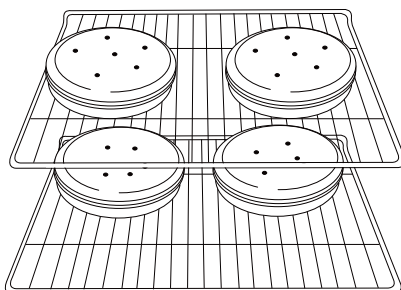

For best results when baking layer cakes on 2 racks in the middle section of the oven, use racks 3 and 5. For an even bake, stagger the cake pans on the bottom rack so that it is not positioned directly below the cake pans on the top rack. Place the cake pans on the racks as shown in the illustration below. (Diagram B)

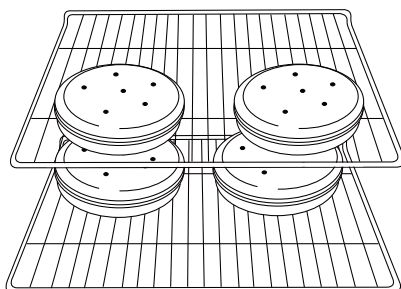

NOTE: To avoid damage to oven racks, do not use steel-wool, abrasive powder cleaners, abrasive paper towels, gritty washcloths, rust remover or harsh chemicals for cleaning.

OVEN USE (continued)

PRE-HEATING THE OVEN

- To begin pre-heating the oven, press the “Bake” pad, and then press the “Start” pad. “PrE” icon will appear on the display when the oven is pre-heating and it will sound 3 reminder tones when the preheat is done.
- The oven will take approximately 6 to 11 minutes to reach 350°F (177°C) with all of the oven racks provided with your oven inside the oven cavity. Higher temperatures will take longer to preheat.
- The preheat cycle rapidly increases the oven temperature. The actual oven temperature will go above your set temperature to offset the heat lost when your oven door is opened to insert food. This ensures that when you place your food in the oven, the oven will begin at the proper temperature. Insert your food when the preheat tone sounds.
- Do not open the door during preheat before the tone sounds.

BAKE

Before baking, position racks according to the “Positioning Racks and Bakeware” section.


HOW TO SET OVEN TO BAKE FUNCTION:

1. To set the oven to Bake mode, press the “Bake” pad on the control panel.
2. 350°F (177°C) will appear on the display.
3. Use the “+ or -” pad to enter the desired oven temperature.
 - The temperature of the oven can be set from 170°F (77°C) to 550°F (288 °C).
4. Once the oven temperature has been set, press the “Start” pad to begin the oven heating process.
5. Once the oven has reached the specified temperature, place food in the oven. To change the oven temperature, you must first press the “Cancel/Off” pad then repeat the setting steps to reset the temperature.
6. When you are finished using the oven, press the “Cancel Off” pad to turn off the oven.
7. Remove food from the oven.

BROIL

The broiler is located at the bottom of the range below the oven door.

IMPORTANT: To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the “Broil” door or bottom. Do not line the bottom or racks with aluminum foil or liner.

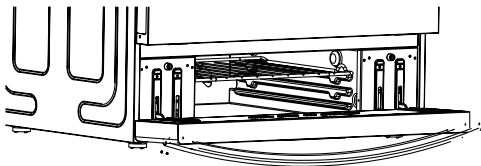

OVEN USE (continued)

HOW TO SET THE OVEN TO BROIL FUNCTION :

High Setting:

1. The Broil Hi mode uses intense heat from the burner to sear foods. Use Broil Hi for thinner cuts of meat and/or when you would like to have a seared surface and rare interior. To use this mode press the “Broil Hi/Lo” pad once and then press “Start.” It is not necessary to preheat when using this mode.

Low Setting:

1. To set the Broiler on low, press the “Broil” pad twice on the control panel.
2. Next, press the “START” pad. The display will show LO and is set to the lowest temperature setting.

Once the HI or LO Broiler setting is selected, you can now use the broiler.

1. Open the broiler door and pull the rack out to the stop position.
2. Place food on a broiler safe pan, then place it in the center of the broiler rack.
3. Push the broiler rack to the original position. Close the door to ensure the proper broiler temperature.
4. Press the “Cancel Off” pad when you are finished using the broiler.

To remove the “Broil” rack, pull it out to the stop position, raise the front edge, then lift out. Reverse the steps to replace the rack.

 WARNING:	FIRE HAZARD
	DO NOT LEAVE THE RANGE UNATTENDED WHEN USING THE BROILER.

COOK TIME

The cook time function is available in the Bake or Broil Hi/Lo mode.

HOW TO SET THE COOK TIME FUNCTION

- 1) When you're cooking with “Bake” OR “Broil Hi/Lo,” If a set cooking time is desired, press the “Cook Time” pad.
- 2) Use the “+ or -” pad to enter the desired cooking time.
- 3) Once you have set your cooking time, press the “Cook Time” pad again to begin the set cooking time, and the Automatic Oven indicator will light up.
- 4) At the end of the set time, the oven will automatically turn off, and the “OFF” icon appear on the display and begin to flash and the end of cycle tone will sound. You can press any pad on the control panel to stop the “OFF” icon.

*NOTES: If you would like to set a cooking time first, press the “Cook Time” pad, and use the “+ or -” pad to enter the desired cooking time, then press the “Cook Time” pad again to begin the set cooking time. Next, select to press the “Bake” or “Broil Hi/Lo” pad, and use the “+ or -” pad to adjust to the desired oven temperature, then press the “Start” pad to begin the oven heating process to cooking, and the Automatic Oven indicator will light up. At the end of the set time, follow step 4 above.


- To avoid damage to the broiler, do not step on or apply weight to the broiler door while it is open.
- Use caution when using the broiler, food may cook or burn quicker than in the oven.
- Do not leave food unattended while food is cooking in the broiler.
- Preheat the broiler before use. Completely close broil door during broiling.
- Do not use broiler cavity for storage.
- Broiling uses direct radiant heat to cook food. The lower the temperature, the slower the cooking. Thicker cuts and unevenly shaped pieces of meat, fish and poultry may cook better at lower broiling temperatures.
- For best results, use a broiler pan and grid. It is designed to drain juices and help avoid spatter and smoke.
- Pull out the rack to the stop position before turning or removing food. Use tongs to turn food. Very thin cuts of fish, poultry or meat may not need to be turned.

OVEN USE (continued)

OVEN VENT

Never block the air vent to the oven. They provide the necessary air openings that are necessary for the range to keep cool and operate properly.

▲WARNING:	DAMAGE POTENTIAL
	THE OVEN VENT RELEASES HOT AIR AND MOISTURE FROM THE OVEN. THE VENT SHOULD NOT BE BLOCKED OR COVERED. BLOCKING OR COVERING THE OVEN VENT WILL CAUSE POOR AIR CIRCULATION, AFFECTING THE COOKING RESULTS. DO NOT SET PLASTIC, PAPER OR OTHER ITEMS THAT COULD MELT OR BURN NEAR THE OVEN VENT.

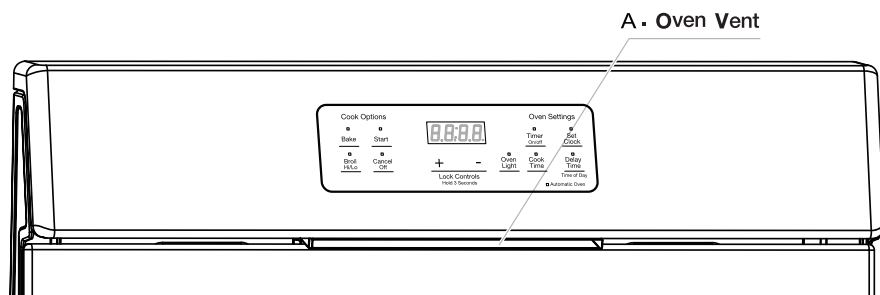

FOOD SAFETY

Cook food thoroughly to help protect against any food borne illnesses. Use a food thermometer to take food temperatures and check in different locations.

▲WARNING:	FOOD POISONING HAZARD
DO NOT LET FOOD SIT IN THE OVEN MORE THAN ONE HOUR BEFORE OR AFTER COOKING. DOING SO CAN RESULT IN FOOD POISONING OR SICKNESS.	

OVEN GASKET


The gasket is essential for a good seal. Care should be taken not to rub, damage or move the gasket.

RANGE CARE

OVEN DOOR


IMPORTANT: Use both hands to remove oven door(s).

1. Open the oven door fully so it is at a 90 degree angle.
2. Next, locate the oven door latches in both corners of the oven door, then flip up the hinge latch on each side to the unlocked position. (See diagram below). Pliers may be required to unlock hinges.
3. Once the latch is in the unlocked position, grasp the oven door with both hands, and then gently close the oven door to as far as it will shut.
4. Using both hands, lift and pull the oven door towards you and remove.
5. Set the oven door(s) aside on a covered work surface.

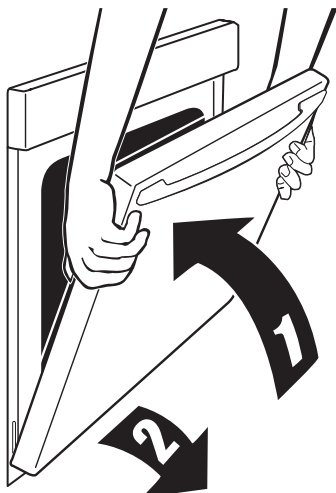

HOW TO REINSTALL THE OVEN DOOR

1. To reinstall the oven door, insert both hanger arms of the oven door into the range. The hinge latches on both sides should be in the unlocked position before inserting hanger arms into the range.
2. Once the hanger arms are placed into the range, open the oven door fully. It is recommended to use a rubber mallet to ensure hinges are securely locked into place.
3. Next, locate the hinge lever latches, and move them back to the locked position.
4. Once the oven door levers are locked, gently close the door and check that the door can open and close with no issues.
5. Check to see if there are any gaps on both sides of the oven door. If there are gaps, the door has not been reinstalled correctly. Repeat the removal and installation procedure.

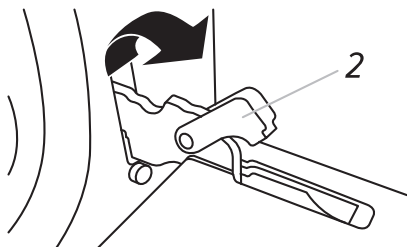

RANGE CARE (continued)

▲WARNING:

TO AVOID OVEN DOOR GLASS BREAKAGE:

- Do not close the oven door if the racks are not fully inserted into the oven cavity or when bakeware extends past the front edge of an oven rack.
- Do not set objects on the glass surface of the oven door.
- Do not hit glass surfaces with bakeware or other objects.
- Do not wipe down glass surfaces until the oven has completely cooled.
- For normal oven use, it is not suggested to remove the oven door. However, if removal is necessary, make sure the oven is off and cool. Then, follow the instructions below. The oven door is heavy.

▲WARNING:

TIP OVER HAZARD



- A child or adult can tip the range and be killed.
- Make sure the anti-tip bracket has been properly installed and secured per the installation instructions.
- Re-secure the anti-tip bracket if range is moved.
- Do not operate the range without the anti-tip bracket installed and secured.
- Failure to follow these instructions can result in death or serious burns to adults and children.


OVEN LIGHT

The oven light is a standard 25-watt (G9 Halogen) appliance bulb.

Before replacing the light, make sure the oven and cooktop are cool and the control knobs are off.

HOW TO REPLACE OVEN LIGHT

1. Disconnect the power supply.
2. Turn the glass cover counter-clockwise to remove.
3. Pull out the bulb straight out of the socket.
4. Replace bulb by pushing in, then reinsert glass cover clockwise.
5. Reconnect power.

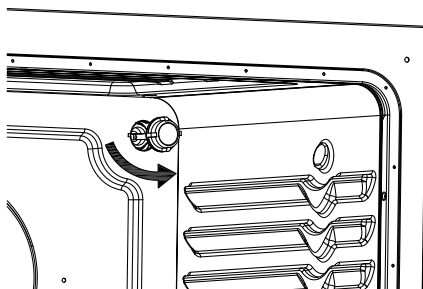

GENERAL CLEANING

IMPORTANT: Before cleaning, make sure all controls are off and the oven is cool. Always follow label instructions on cleaning products.

- Use soap and water along with a soft cloth or sponge to clean the surface areas of the range. Wipe with a clean damp cloth, then wipe dry.
- To clean the grates or burner caps, wash with hot soapy water then rinse with water. Dry with clean towel immediately after.
- To clean control panel and knobs, wipe surfaces with soapy soft cloth, then wipe down with cloth rinsed in water. Dry with clean, soft cloth.

RANGE CARE (continued)

▲WARNING:

FOOD POISONING HAZARD

DO NOT LET FOOD SIT IN THE OVEN MORE THAN ONE HOUR BEFORE OR AFTER COOKING. DOING SO CAN RESULT IN FOOD POISONING OR SICKNESS.

▲WARNING:

STAINLESS STEEL (ON SOME MODELS)

TO AVOID DAMAGE TO STAINLESS STEEL SURFACES, DO NOT USE SOAP-FILLED SCOURING PADS, ABRASIVE CLEANERS, COOKTOP CLEANER, STEEL-WOOL PADS, GRITTY WASHCLOTHS OR ABRASIVE PAPER TOWELS.

CLEANING METHOD FOR STAINLESS STEEL

- Use a stainless-steel cleaner, or a mild cleaner recommended on stainless steel surfaces.
- Wipe cleaner with a soft cloth in the direction of the grain to avoid damage.
- Rinse with clean water and dry with soft, lint-free cloth.
- May use stainless steel polish for appliances afterwards.

CLEANING THE OVEN DOOR EXTERIOR

- Clean with a mild soap and water solution.
- Rinse with clean water, then dry with a soft cloth.

CLEANING THE OVEN CAVITY

- Do not use strong oven cleaners as they may scratch the interior coating.
- Food spills should be cleaned when oven cools. At high temperatures, foods may react with the porcelain coating resulting in staining, etching, pitting or faint white spots.
- Do not use a steel-wool pad to clean inside surface.
- Use a non-scratch sponge to scrub tough surface areas.
- Clean interior areas with a mild soap and water solution.
- Rinse with a clean damp cloth, then dry with a soft cloth.

TROUBLESHOOTING TIPS

Try the solutions suggested here first to avoid the cost of an unnecessary service call.

OVEN WILL NOT OPERATE	POSSIBLE SOLUTIONS:
Has a household fuse blown, or has a circuit breaker tripped?	Replace the fuse or reset the circuit breaker. If the problem continues, call an electrician.
Is the electronic oven control set correctly?	See “Electronic Oven Controls” section.
Is the oven control lockout set?	See “Control Lockout” section.
Does the oven temperature calibration need adjustment?	See “Oven Temperature Control” section.
Do the oven indicator lights flash?	See the “Display” and/or the “Oven Lights” section. If the indicator light(s) keeps flashing, call for service. See “Assistance or Service” section.
Is the proper oven temperature calibration set?	See “Oven Temperature Control” section.
Was the oven preheated?	See “Baking” section.
Are the racks positioned properly?	See “Positioning Racks and Bakeware” section.
Is there proper air circulation around bakeware?	See “Positioning Racks and Bakeware” section.
Is the batter evenly distributed in the pan?	Check that batter is level in the pan.
Is the proper length of time being used?	Adjust cooking time.
Has the oven door been opened while cooking?	Oven peeking releases oven heat and can result in longer cooking times.
Are baked items too brown on the bottom?	Move rack to higher position in the oven.
Er- and a number or letter flash in the display. ErrF appears on the display.	You have a function error code. Press the Cancel/Off pad. Allow the oven to cool for one hour. Put the oven back into operation. If the error code repeats, disconnect all power to the oven for at least 30 seconds and then reconnect power. If the function error code repeats again, call for customer service.
Oven burner ignition failure or flameout.	Check to ensure gas shutoff valves are set to the “Open” position. If problem persists, contact qualified installer or service provider to ensure gas connections have been properly made.

LIMITED WARRANTY

Element Appliance Limited Warranty

(the “Products” or “Product” when referencing a singular product herein)

This Product (including any accessories included in the original packaging) as supplied and distributed in new condition, is warranted by Element Appliance Company, LLC (“Element”) to the original customer who purchases the Product from an authorized Element retailer (the “Original Customer” or “you”) against defects in material and workmanship under proper use, maintenance, and care according to the owner’s manual, warnings, and instructions accompanying the Product (“Warranty”) as follows:

* **PLEASE NOTE** – Proof of purchase evidencing the date of purchase by the Original Purchaser from an authorized Element retailer (“Valid Proof of Purchase”) is **required** for all Warranty service. The express Warranty set forth herein is subject to all terms and conditions set forth below.

1. WARRANTY SERVICE:

A. ONE-YEAR WARRANTY: Except as provided in subpart 1.B below, for a period of **one (1) year** from the date of purchase by the Original Customer (the “Warranty Period”), if the parts or components covered by this Warranty are determined by Element or Element’s authorized service provider to be defective in material or workmanship, Element will, at its sole and absolute discretion and option: (i) repair the defective part or component at no charge to the Original Customer, (ii) replace the defective Product with a new Product of similar or better quality, at no charge to the Original Customer, or (iii) refund the documented purchase price paid by the Original Customer (excluding tax) to the Original Customer upon return of the defective Product as directed by Element. After the Warranty Period expires, the Original Customer must pay for all parts, components, shipping and handling, labor, and replacement costs associated with the Product or any part or component thereof, regardless of any defects in the Product or any part or component thereof.

B. LIMITED EXTENDED WARRANTY THROUGH PRODUCT REGISTRATION: If and only if the Original Customer registers the Product at www.elementelectronics.com within **ninety (90)** days of the date of purchase by the Original Customer, then the Warranty Period discussed in subpart 1.A. above shall be extended an additional one (1) year to a new Warranty Period equaling **two (2) years** from the date of purchase by the Original Customer. If the Product is not registered as provided for in this subpart 1.B, then the standard one-year Warranty Period set forth in subpart 1.A shall apply.

C. TIMING AND PROCEDURE: Before Warranty service can commence, the Original Customer must contact either (i) the retailer from whom the Original Customer purchased the Product, or (ii) Element directly, in either case for problem determination and service procedures. Valid Proof of Purchase evidencing that the Product is within the Warranty Period **MUST** be presented by Original Customer in order to obtain the requested Warranty service. Please have your model and serial number available, along with your date of purchase of the Product. To remain eligible for Warranty service, Original Customer may not return the Product or any part or component thereof to the retailer or Element without Element’s prior written consent.

LIMITED WARRANTY

2. EXCLUSIONS AND LIMITATIONS TO WARRANTY SERVICE

The Warranty covers manufacturing defects in materials and workmanship of the Product encountered in the normal, non-commercial use of the Product, and **does not cover** (a) damages or malfunctions resulting from improper or unreasonable use or maintenance, abuse, negligence, failure to follow instructions contained in any written materials that accompany the Product, deterioration by reason of excess moisture, corrosive atmosphere, lightning, power surges, connections to improper voltage supply, unauthorized alteration, or other external causes such as extremes in temperature or humidity, modifications, scratches or discoloration; (b) any damage caused by using non-authorized parts or service facilities for repair of Products (however, for avoidance of doubt, using non-authorized parts or service facilities will not, in and of itself, void the Warranty); (c) transportation, shipping, delivery, pickup, insurance, installation, or set-up costs; (d) ordinary wear and tear, cosmetic damage, or damage due to acts of nature, including but not limited to, water, floods, wind, storm, tornado, earthquake, or fire, or due to damage caused by extraordinary impact events, such as dropping, crushing, demolition or other extraordinary damage; (e) commercial use of the Product, or use of the Product for anything other than single-family household or residential use; or (f) modification of the Product or any part of the Product.

This Warranty is made to the Original Customer only and does not cover Products sold AS IS or WITH ALL FAULTS. The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the United States, and only applies to Product if it was purchased and serviced in the United States. The addition of equipment or features to the Product that are not manufactured or recommended by Element could affect the intended function of the Product, and therefore may void the Warranty. Furthermore, the exposure of the Product to chemicals, heat, cold, humidity, or other elements can affect the Product components, and therefore, the Warranty does not cover discoloration, fading, cosmetic changes, rust, or any damages or failure related to any such items. The Warranty is contingent upon the proper use, maintenance, and care of the Product. The Warranty may be void if the Product has been used in a manner contradictory to, or in violation of, the terms of the user's manual, warnings, or instructions accompanying the Product.

THIS WARRANTY IS MADE IN LIEU OF AND SUPERSEDES ALL OTHER WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR GENERAL USE, WHETHER EXPRESS, IMPLIED, COLLATERAL, STATUTORY, OR PROVIDED BY COMMON LAW, THE UNIFORM COMMERCIAL CODE, OR OTHERWISE. ELEMENT FURTHER DISCLAIMS ALL WARRANTIES AFTER THE END OF THE WARRANTY TERM DEFINED ABOVE.

LIMITED WARRANTY

NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY OTHER PERSON, FIRM, OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON ELEMENT. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE, AT ELEMENT'S SOLE DISCRETION, ARE THE EXCLUSIVE REMEDIES OF THE CUSTOMER.

ELEMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT. THESE INCLUDE, BUT ARE NOT LIMITED TO, ANY DAMAGES IN THE FORM OF LOST PROFITS, LOSS OF USE, LEGAL FEES, ECONOMIC LOSS, PERSONAL INJURIES, OR ANY OTHER DAMAGES CAUSED BY CIRCUMSTANCES BEYOND THE CONTROL OF ELEMENT. NOTWITHSTANDING THE FOREGOING, ELEMENT'S AGGREGATE LIABILITY TO ANY CUSTOMER SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CUSTOMER WHO PURCHASED THE PRODUCT, AND IS NOT TRANSFERRABLE. NO PERSON IS AUTHORIZED TO ALTER, EXTEND, OR WAIVE THIS WARRANTY OR ANY OF ITS TERMS OR CONDITIONS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on warranties, so the above limitations or exclusions may not apply to you. This Warranty gives you specific rights, and you may have other rights, which vary from state to state. The exclusions and limitations to the Warranty apply to the maximum extent permitted by law and unless restricted or prohibited by law. Where any term of this Warranty is prohibited by applicable law, it shall be null and void, but the remainder of this Warranty shall remain in effect. PLEASE DIRECT ALL CORRESPONDENCE TO:

Element Appliance Company, LLC
customerservice@elementelectronics.com
(888) 842-3577
<https://elementelectronics.com>

NOTES



30" Standard Gas Range User Manual

Element, the Element Logo, and Bring it home are trademarks of Element Brand Holding, LLC. All other trademarks are the property of their respective owner, who has not sponsored, endorsed, or approved this product. ©2024 Element Appliance Company, LLC. All rights reserved.

Distributed by Element Appliance Company, LLC
Augusta, GA 30909

For service, support and warranty information:
Call 888.842.3577, email us at
customerservice@elementelectronics.com
or visit www.elementelectronics.com

EGR34MCCW/EGR34MCCS/EGR34MCCB