




24" Under Counter Beverage Center

MODELS:

WUB50X24HV02 (Black Stainless)


CABINET PARTS

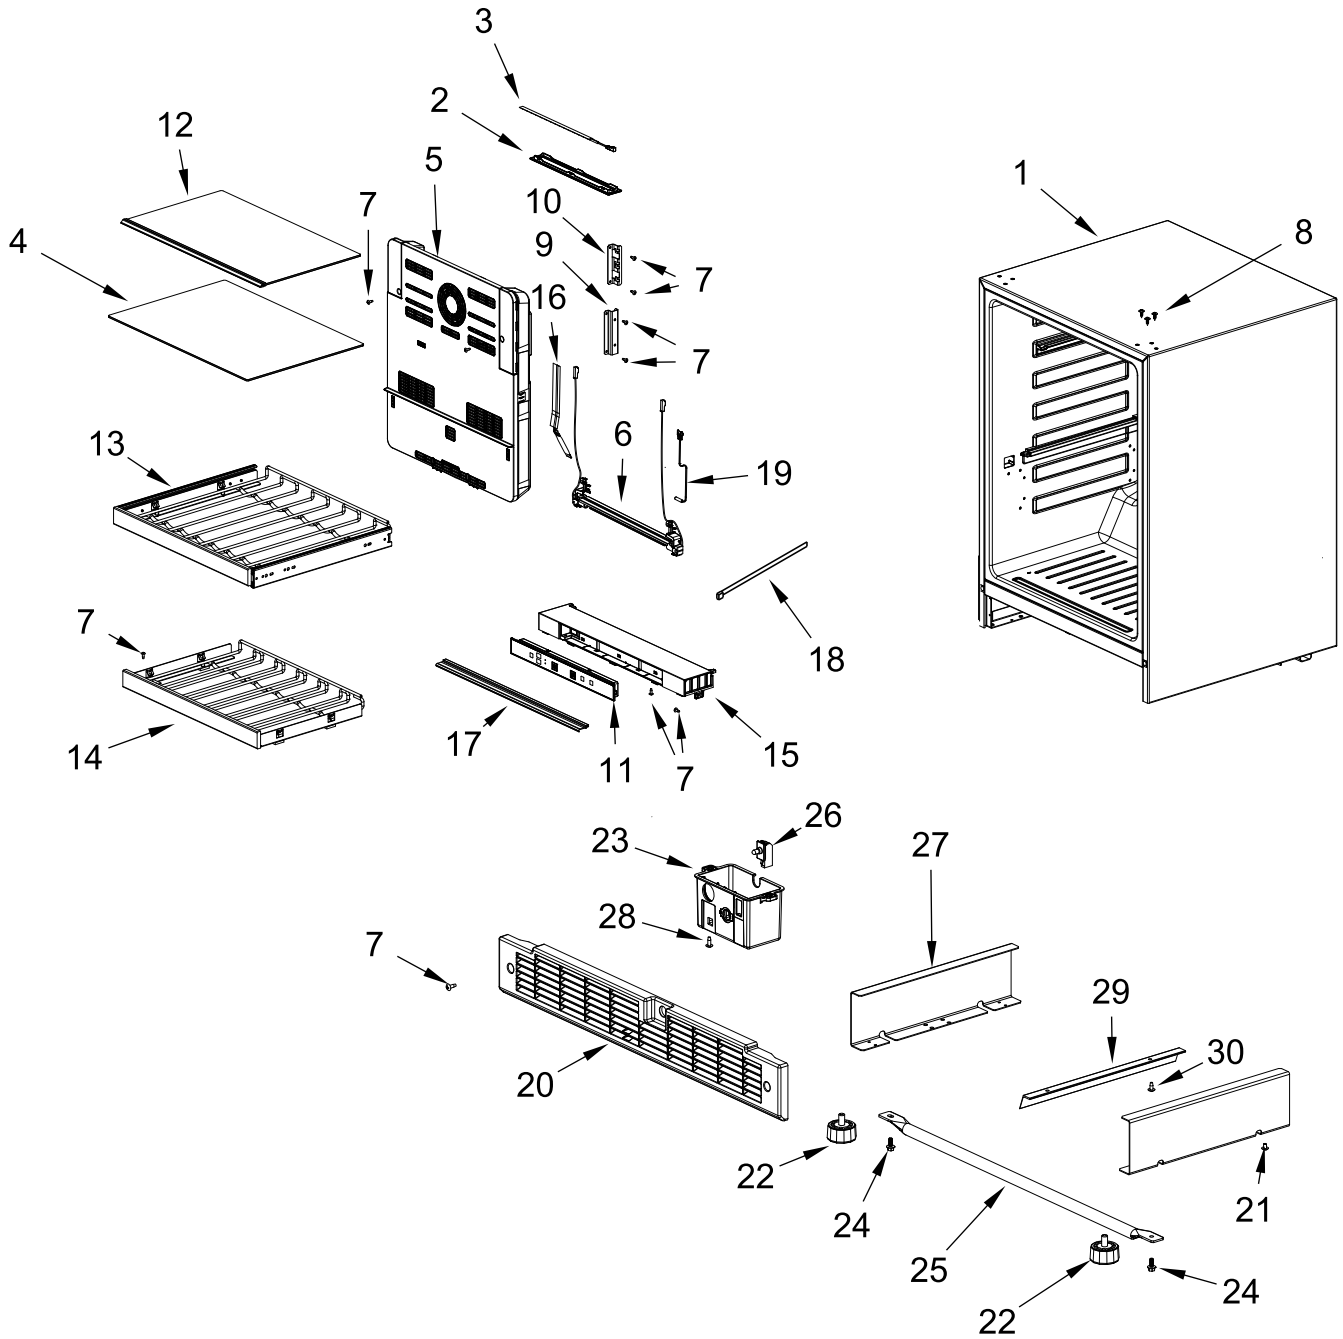

CABINET PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Cabinet (Not A Service Part)	9	W11311388	Shelf, Support	21	W11371101	Screw
			10	W11311389	Support	22	4344763	Leg, Leveling
2	W11312450	Cover, LED	11	W11311645	Control Assembly	23	W11492236	Box, Switch
3	W11312453	LED Assembly	12	W11263886	Glass Shelf	24	W11371100	Screw
4	W11311383	Shelf, Glass	13	W11312493	Wine Rack	25	W11265575	Brace
5	W11312455	Assembly, Fan Cover (Includes Fan Motor, and Sensor)	14	W11312494	Wine Rack, Lower	26	W11265587	Switch, Door
			15	W11312540	Box, Control	27	W11313093	Support, Side
6	W11263842	Defrost Holder and Heater	16	W11476539	Temperature Fuse	28	W11371097	Screw
			17	W11312550	Trim, Sash	29	W11265577	Seal, Condenser
7	W11371095	Screw	18	4344829	Tie, Cable	30	W11371103	Screw
8	4344796	Screw	19	W11263884	Sensor, Defrost			
			20	W11239541	Grille			

DOOR PARTS

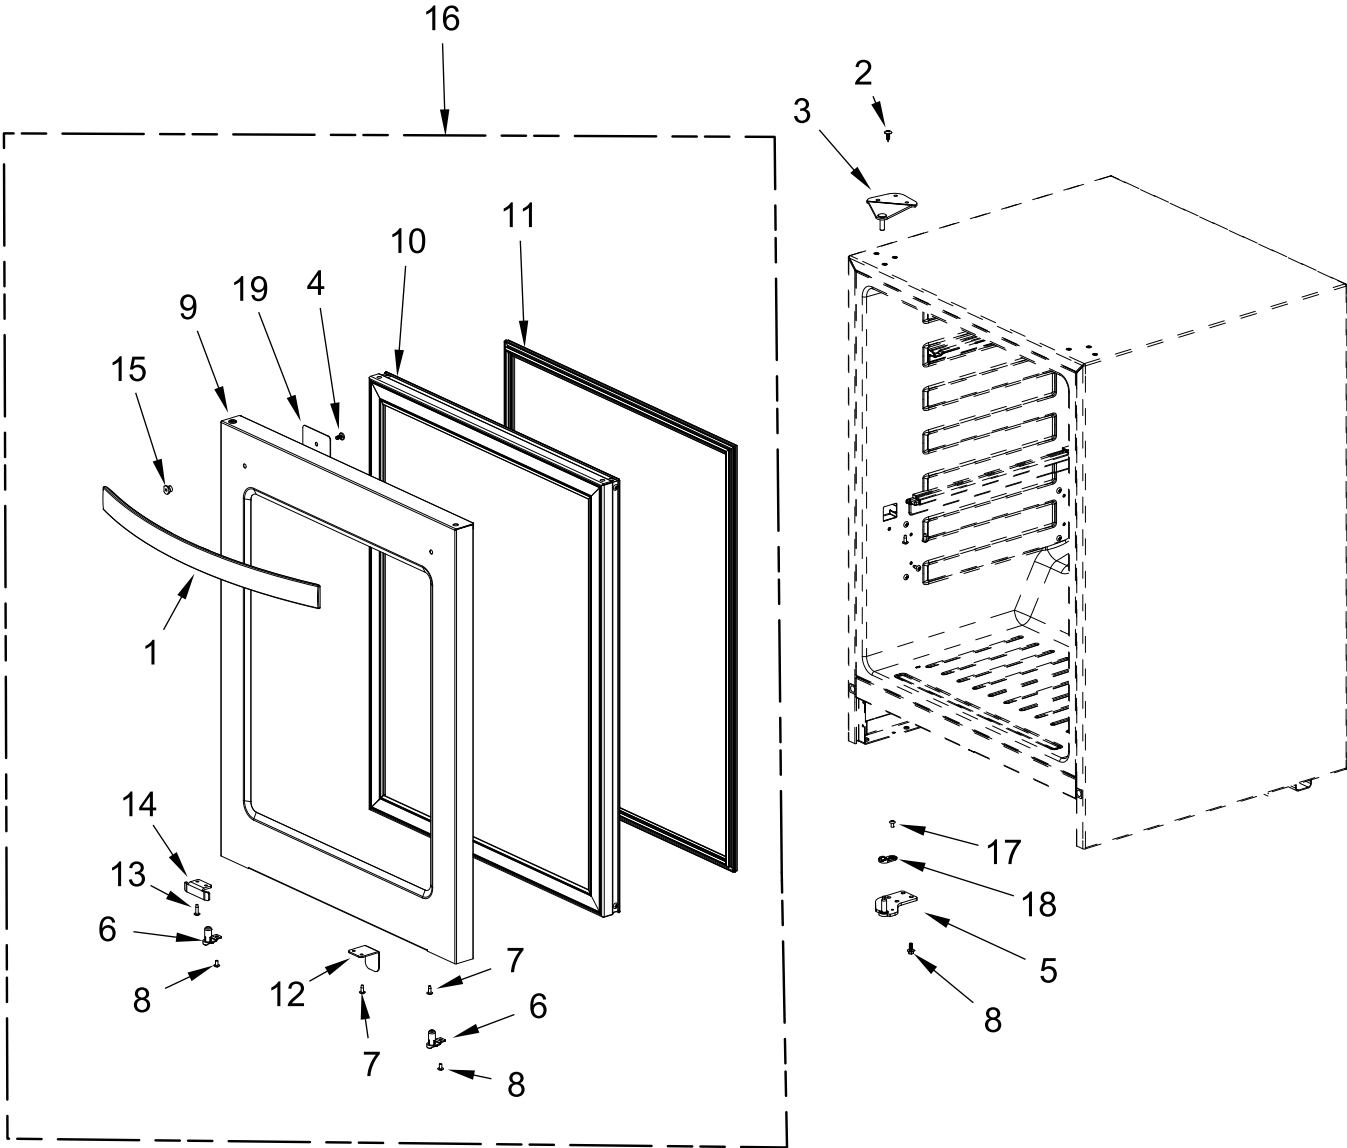


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11476530	Handle, Door
2	4344796	Screw
3	W11264668	Hinge, Top
4	W10319186	Screw
5	W11264645	Hinge Mount
6	W11265573	Closer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11371097	Screw
8	W11371100	Screw
9		Wrap, Door
	W11476533	Black Stainless
10	W11614591	Foam, Door
11	W11312621	Gasket, Door
12	W11312687	Plate

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W11371345	Screw
14	W11312648	Stopper, Door
15	W10772902	Stud, Mounting
16	W11476529	Assembly, Door
17	W10797377	Screw
18	W11264644	Washer
19	W10622815	Plate, Door Handle

UNIT PARTS

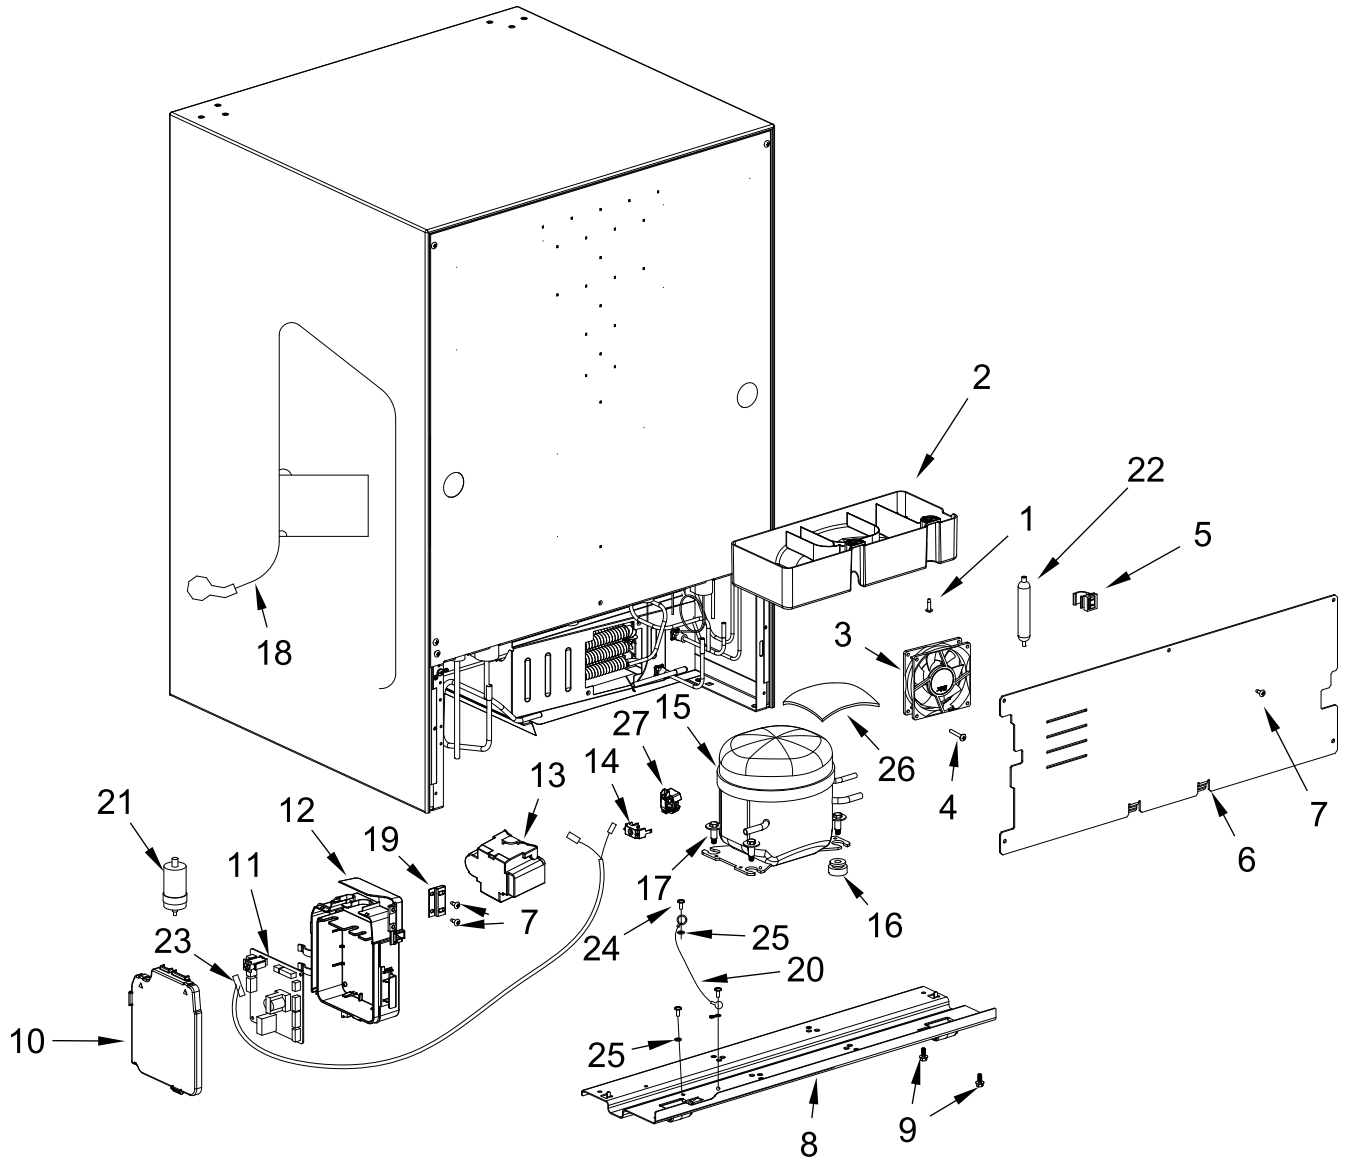

UNIT PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11375763	Screw
2	W11538057	Pan, Water
3	W11265584	Assembly, Fan Motor
4	W11371341	Screw
5	W11265569	Clamp
6	W11264703	Cover, Rear
7	W11371097	Screw
8	W11614599	Plate, Base
9	W11371100	Screw
10	W11313206	Cover, PCB
11	W11614616	Control, Electronic
12	W11313209	PCB Box

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W11568820	Cover
14	W11614617	Protector, Motor
15	W11538055	Compressor
16	4344779	Grommet, Compressor
17	4344780	Bolt, Compressor
18	W11498145	Cord, Power
19	W11576947	Clamp, Cord
20	W11614621	Wire
21	W11538053	Capacitor
22	W10805035	Drier (Service Drier Without Dye)
23	W11263876	Harness, Wire

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
24	4344797	Screw
25	W10322070	Washer
26	W11360595	Compressor, Rubber
27	W11614619	PTC Relay
		REFRIGERANT CHARGE
		52 grams (R600a)