

KitchenAid®

Dishwasher

MODELS:


KDTE204KBL3 (Black)

KDTE204KWH3 (White)

KDTE204KPS3 (Stainless)

KDTE204KBS3 (Black Stainless)


DOOR AND PANEL PARTS

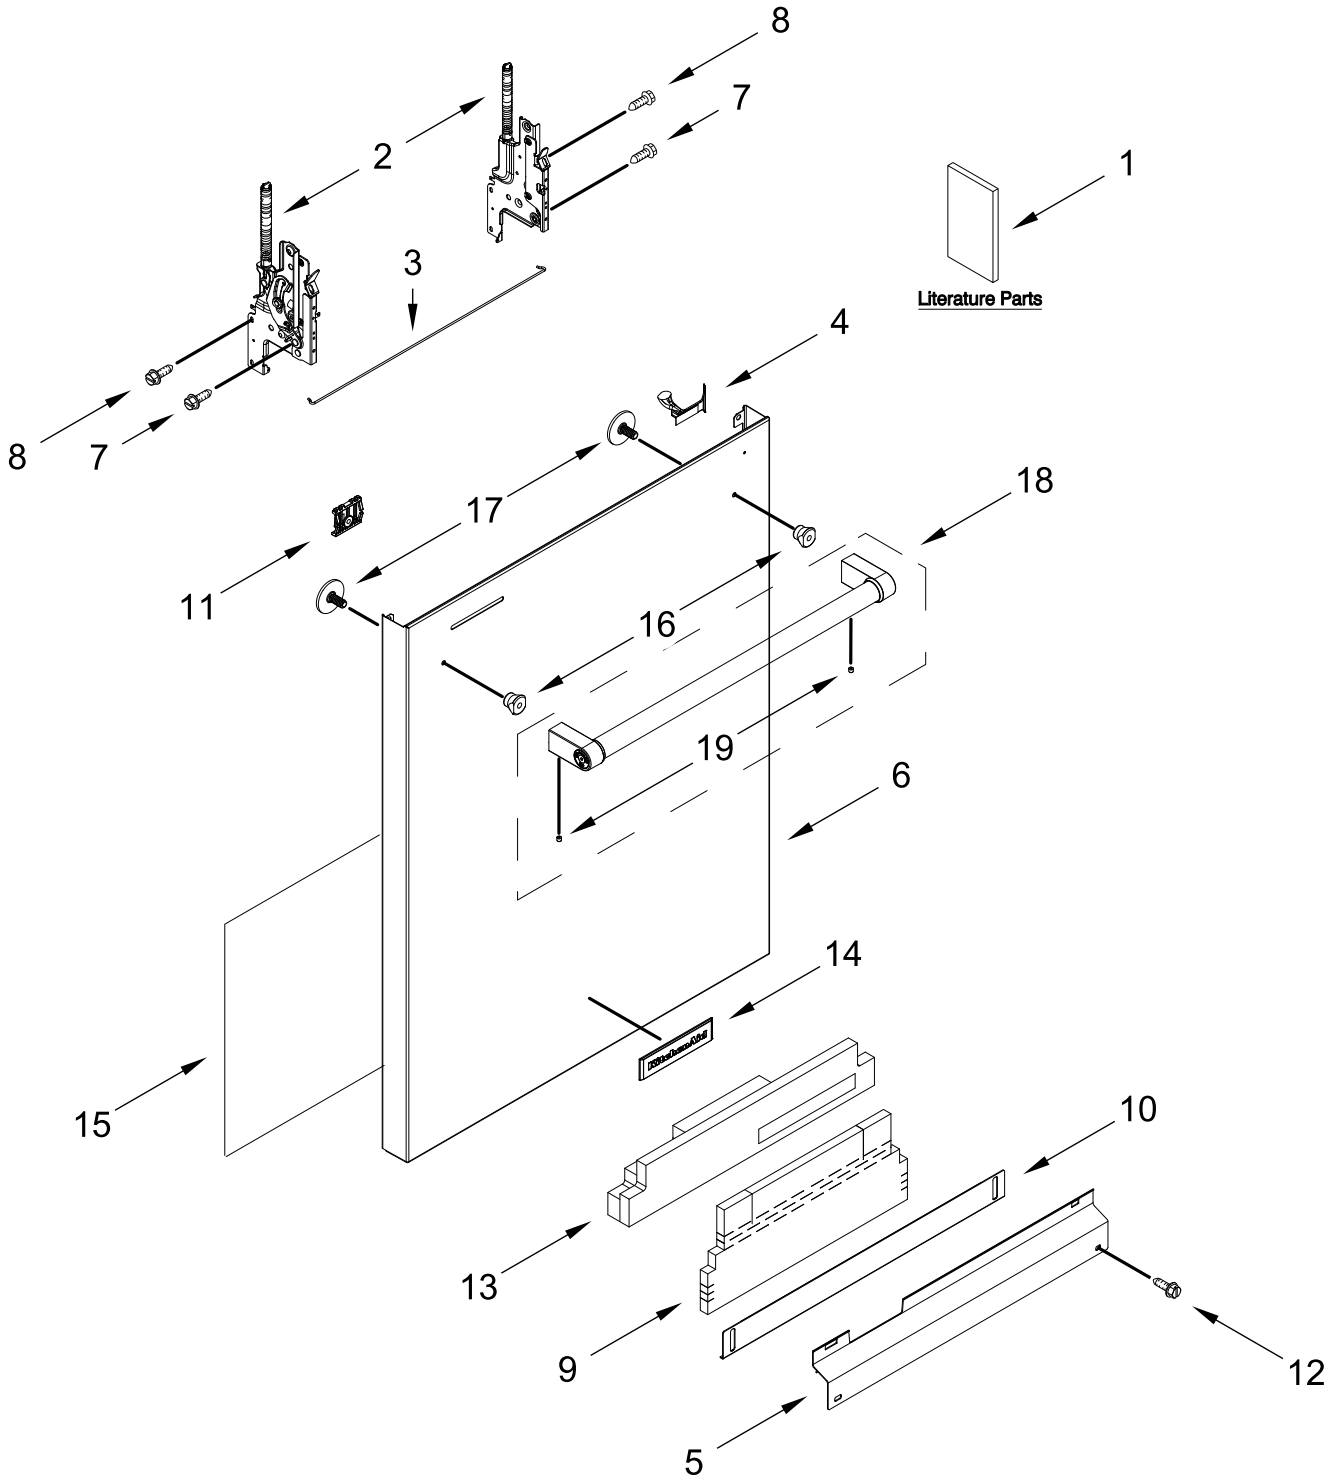

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6		Panel, Front (Includes 4, 11 & 14)	11	W10692757	Barrel Nut, Front Panel
	W11323304	Owners Manual		W11233280	Black	12	W11438978	Screw, Black
	W11650509	Energy Guide		W11233281	White		W11438977	Screw, White
	W11366144	Tech Sheet		W11233283	Stainless	13	W10919858	Insulation, Multi-Layer
2		Arm, Hinge		W11233284	Black Stainless	14	W10518673	Nameplate
	W11662392	Left Hand		3400000	Screw	15	W10919859	Insulation, Front Panel
	W11662370	Right Hand	7					
3	W11377160	Cross Brace, Door	8	W11364953	Screw	16	W11049903	Stud, Mounting
4	W11102920	Light Pipe	9	W11038694	Insulation, Single Layer	17	W10316572	Screw
5		Access Panel				18		Handle, Assembly (Includes 19)
	W11108979	Black	10		Toe Panel		W11417401	Stainless
				W11467733	Black			
				W11467726	White	19	W10687133	Set Screw


CONTROL PANEL AND INNER DOOR PARTS

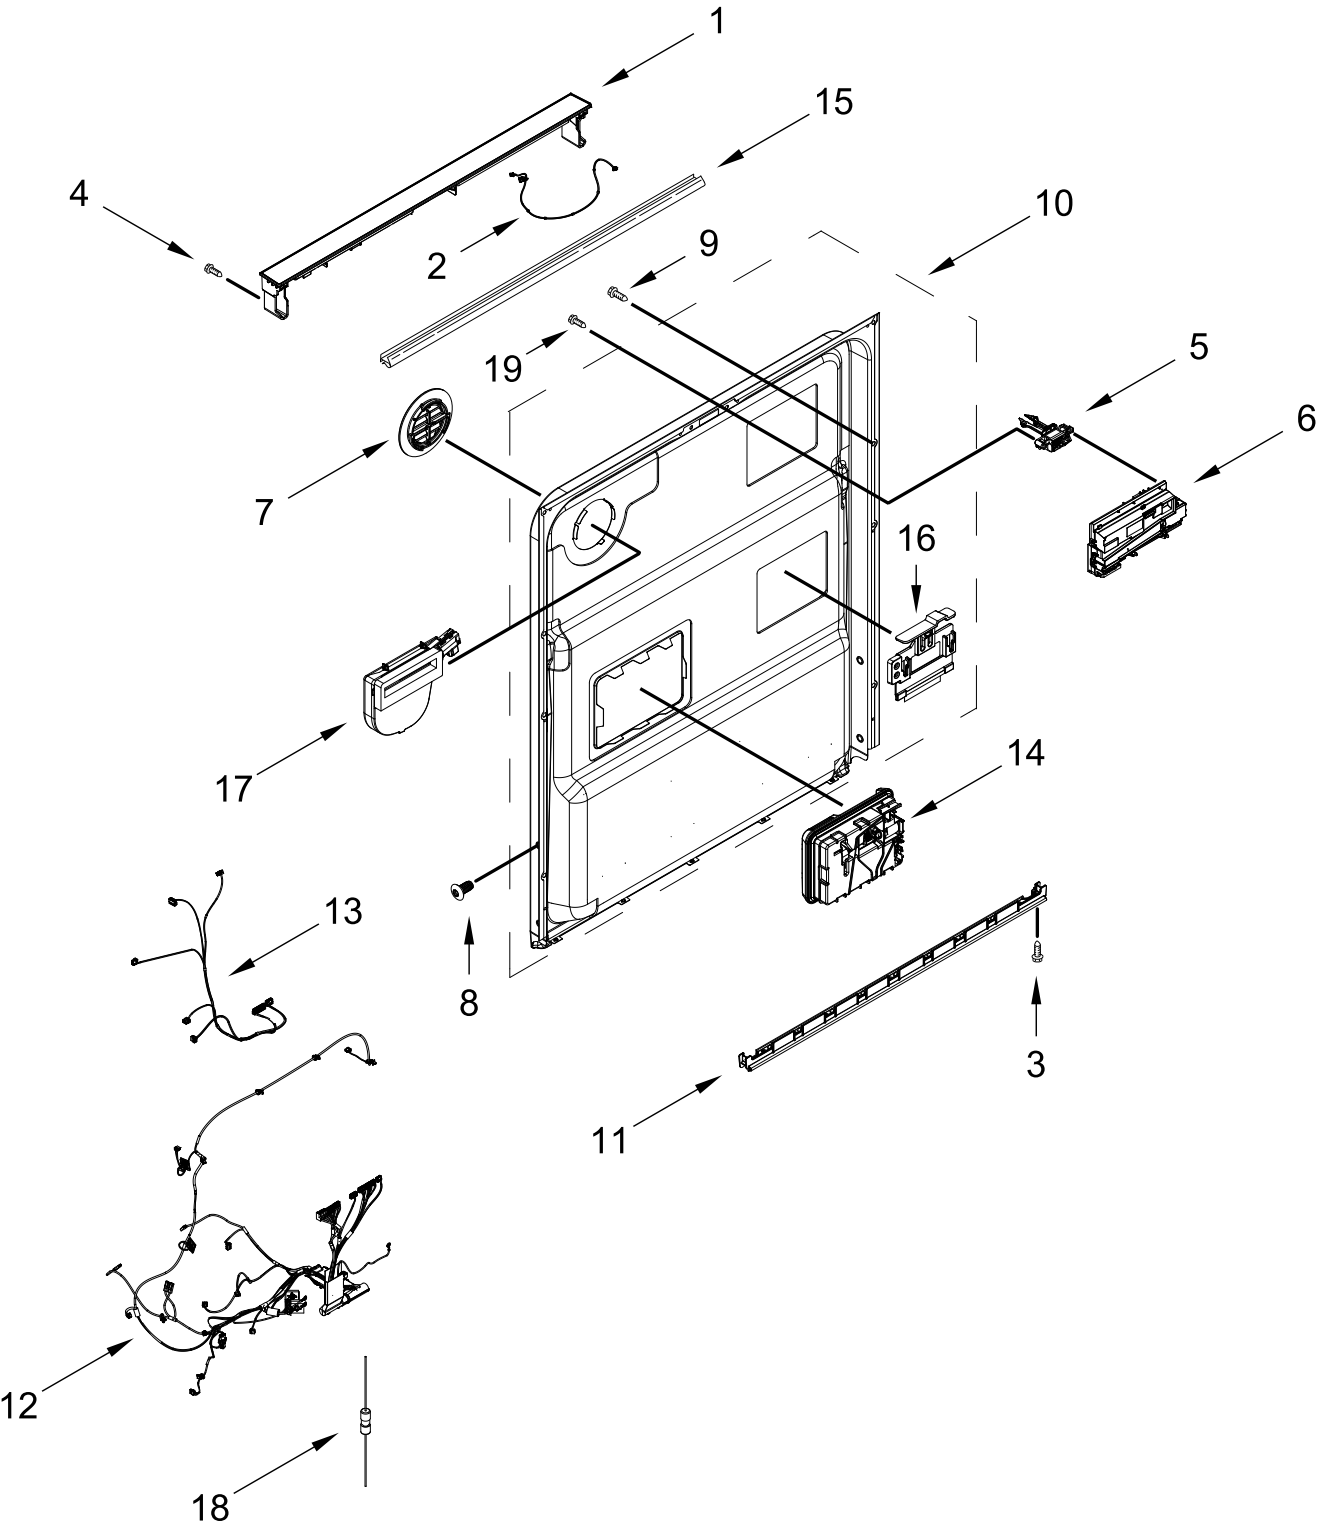

CONTROL PANEL AND INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly	7	W11025634	Bezel, Vent	14	W11092649	Dispenser Assembly
	W11500340	Black	8	3400071	Screw	15	W11050927	Seal, Console/Door
	W11500341	White	9	W10348409	Screw	16	W11088985	Hanger, Control
2	W11336943	Jumper, Door	10	W11098822	Inner Door Assembly	17	W11527847	Vent Assembly
3	W11258418	Screw	11	W11563231	Seal, Door Bottom	18	W11397505	Fuse, In-line
4	W10711884	Screw (Long)	12	W11649432	Wiring Harness, Main (Includes Thermostat & Fuse)	19	W10348408	Screw
5	W11091934	Latch Assembly (Includes Switch)	13	W11630926	Wiring Harness, Inner Door			
6	W11591754	Control, Electronic						


TUB AND FRAME PARTS

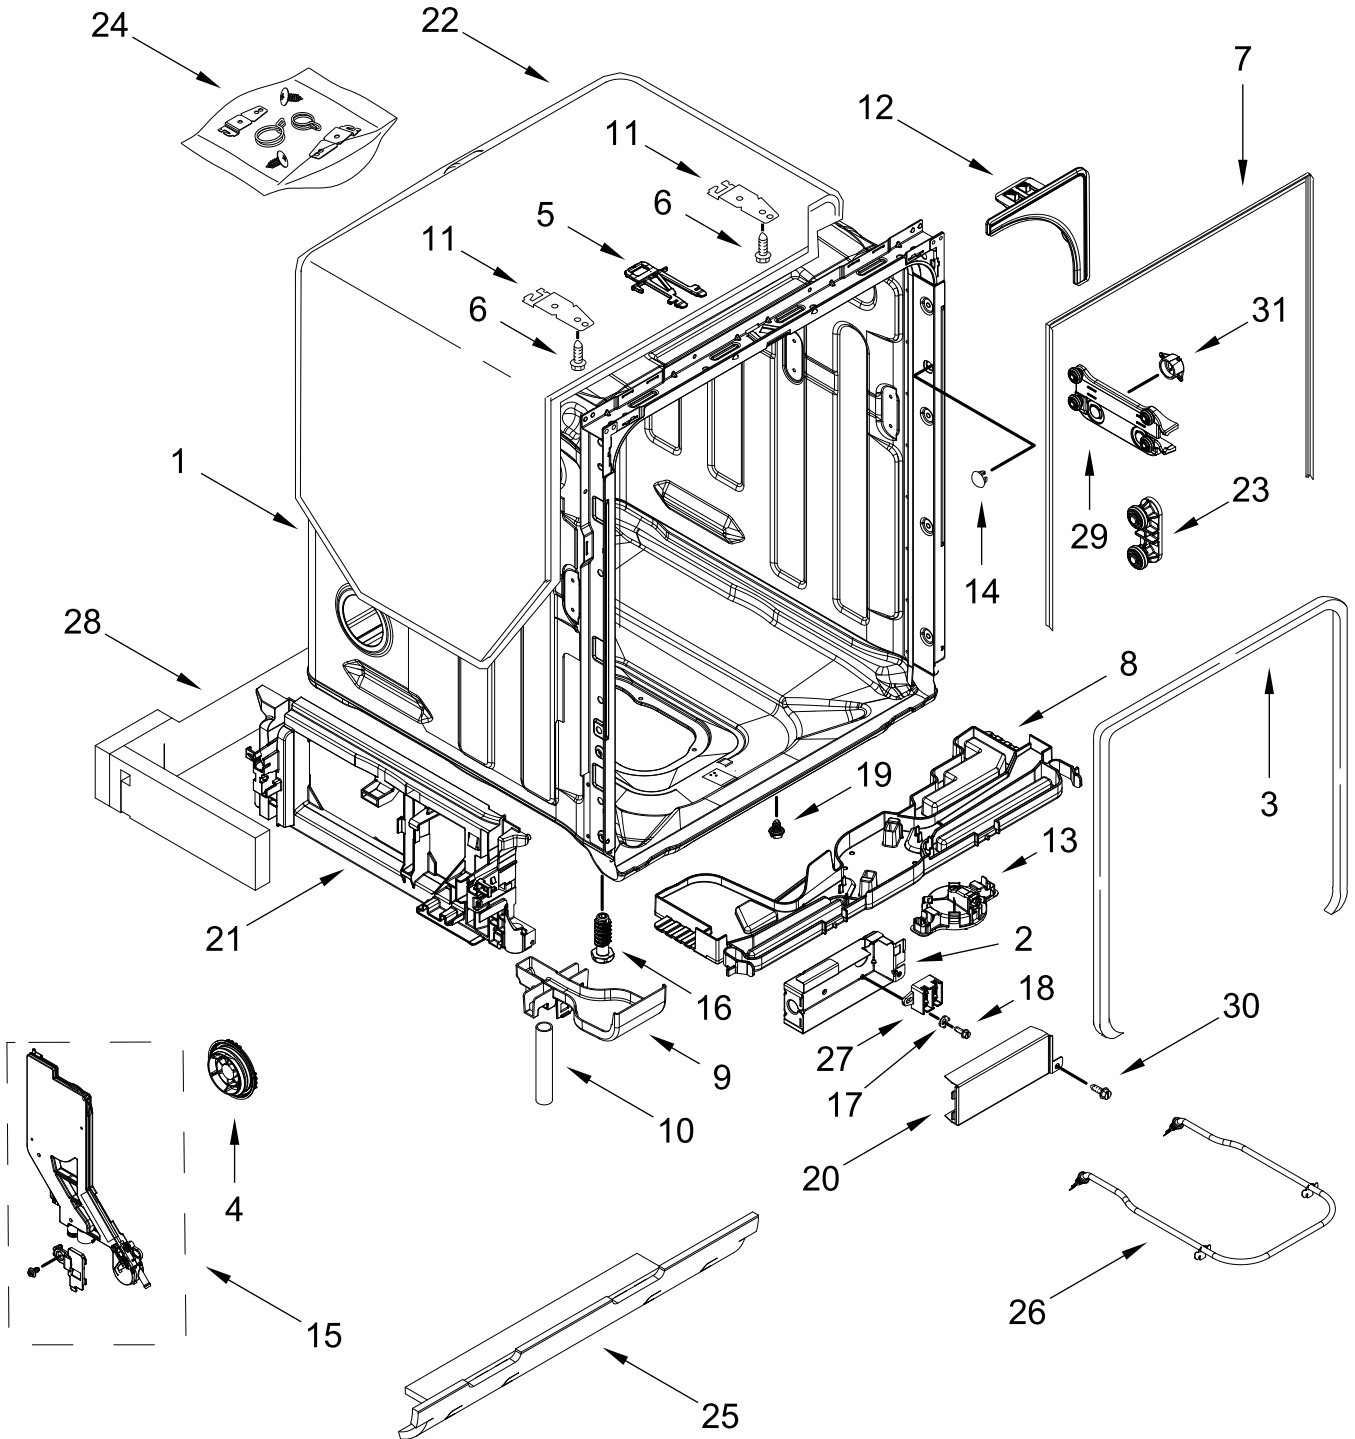

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11120458	Tub Assembly (includes gasket)	15	W11429970	Water Inlet Assembly	25	W11393126	Sound Insulation, Bottom
2	W11226744	Base, Terminal Box	16	W11455395	Leg, Leveling	26	W11536143	Heater Element Assembly
3	W11035860	Gasket, Tub	17	3378128	Washer, Pronged Cup	27	W11132441	Terminal Block
4	W11429974	Nut, Water Inlet	18	W10277003	Screw	28	W10919865	Insulation, U-Wrap
5	W11090487	Strike, Latch	19	3400892	Screw	29		Tub Mount, Third Level Rack
6	W11296374	Screw	20	W11226746	Cover, Terminal Box			
7	W11165091	Seal, Cabinet	21		Side Support, Tub			
8	W11025993	Drip Tray		W10920122	Left Hand		W11094449	Left Hand
9	W11025986	Funnel, Overfill Protection		W10920120	Right Hand		W11256437	Right Hand
10	W11025988	Funnel Extension	22	W11221921	Shield, Tub Sound	30	3400014	Screw, Grounding
11	8269145	Bracket, Undercounter	23	W11086088	Tub Mount, Upper Rack	31	W10920244	Nut, Tub
12	W11165093	Cover, Tub Corner	24	W11362500	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)			
13	W11255994	Float Switch						
14	W11184083	Plug, Tub						


PUMP, WASHARM AND MOTOR PARTS

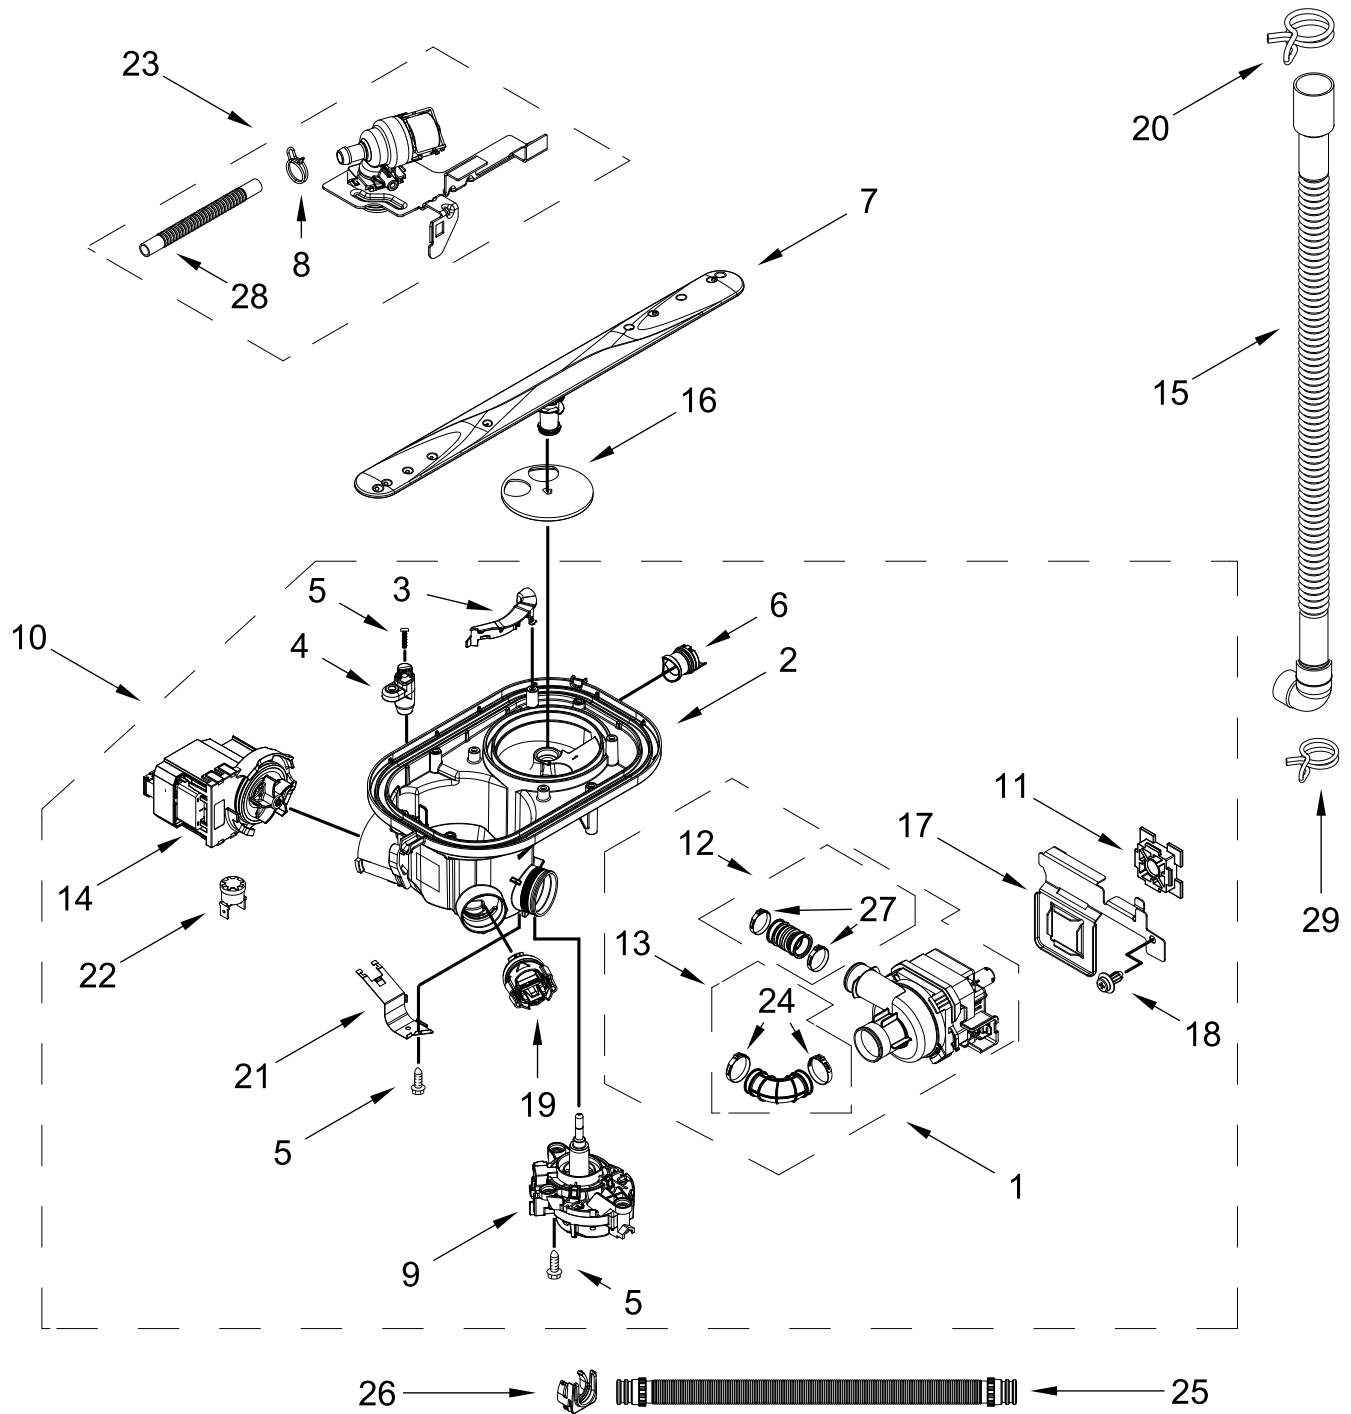

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11048807	Pump Assembly	10	W11243648	Motor & Sump Assembly	20	370445	Clamp, Hose
2	W11034554	Sump with Seal (Includes 3, 4, 5, 6 & 9)	11	W11036660	Isolator, Rear Motor	21	W11163419	Bracket, Thermostat
3	W10891543	Diffuser, Inlet	12	W11250985	Hose, Pressure	22	W11193089	Thermostat (Included with Main Wiring Harness)
4	W11050773	Drain Vent Assembly	13	W10900389	Hose, Suction	23	W11025970	Fill Valve Assembly
5	9741232	Screw	14	W11193157	Motor, Drain	24	W11122851	Clamp, Hose
6	W10891547	Check Valve, Drain	15	W11131184	Hose, Drain	25	W11036159	Hose
7	W11048456	Wash Arm Assembly	16	W11175571	Disc, Diverter	26	W11036143	Clip, Hose
8	371505	Clamp, Hose	17	W11497568	Bracket, Rear Motor	27	W10466656	Clamp, Hose
9		Diverter Valve Motor (Not Serviced)	18	W11418271	Fastener	28	W11036287	Hose, Inlet
			19	W11126174	Indicator, Optical Wash	29	W11236576	Clamp, Hose


UPPER WASH AND RINSE PARTS

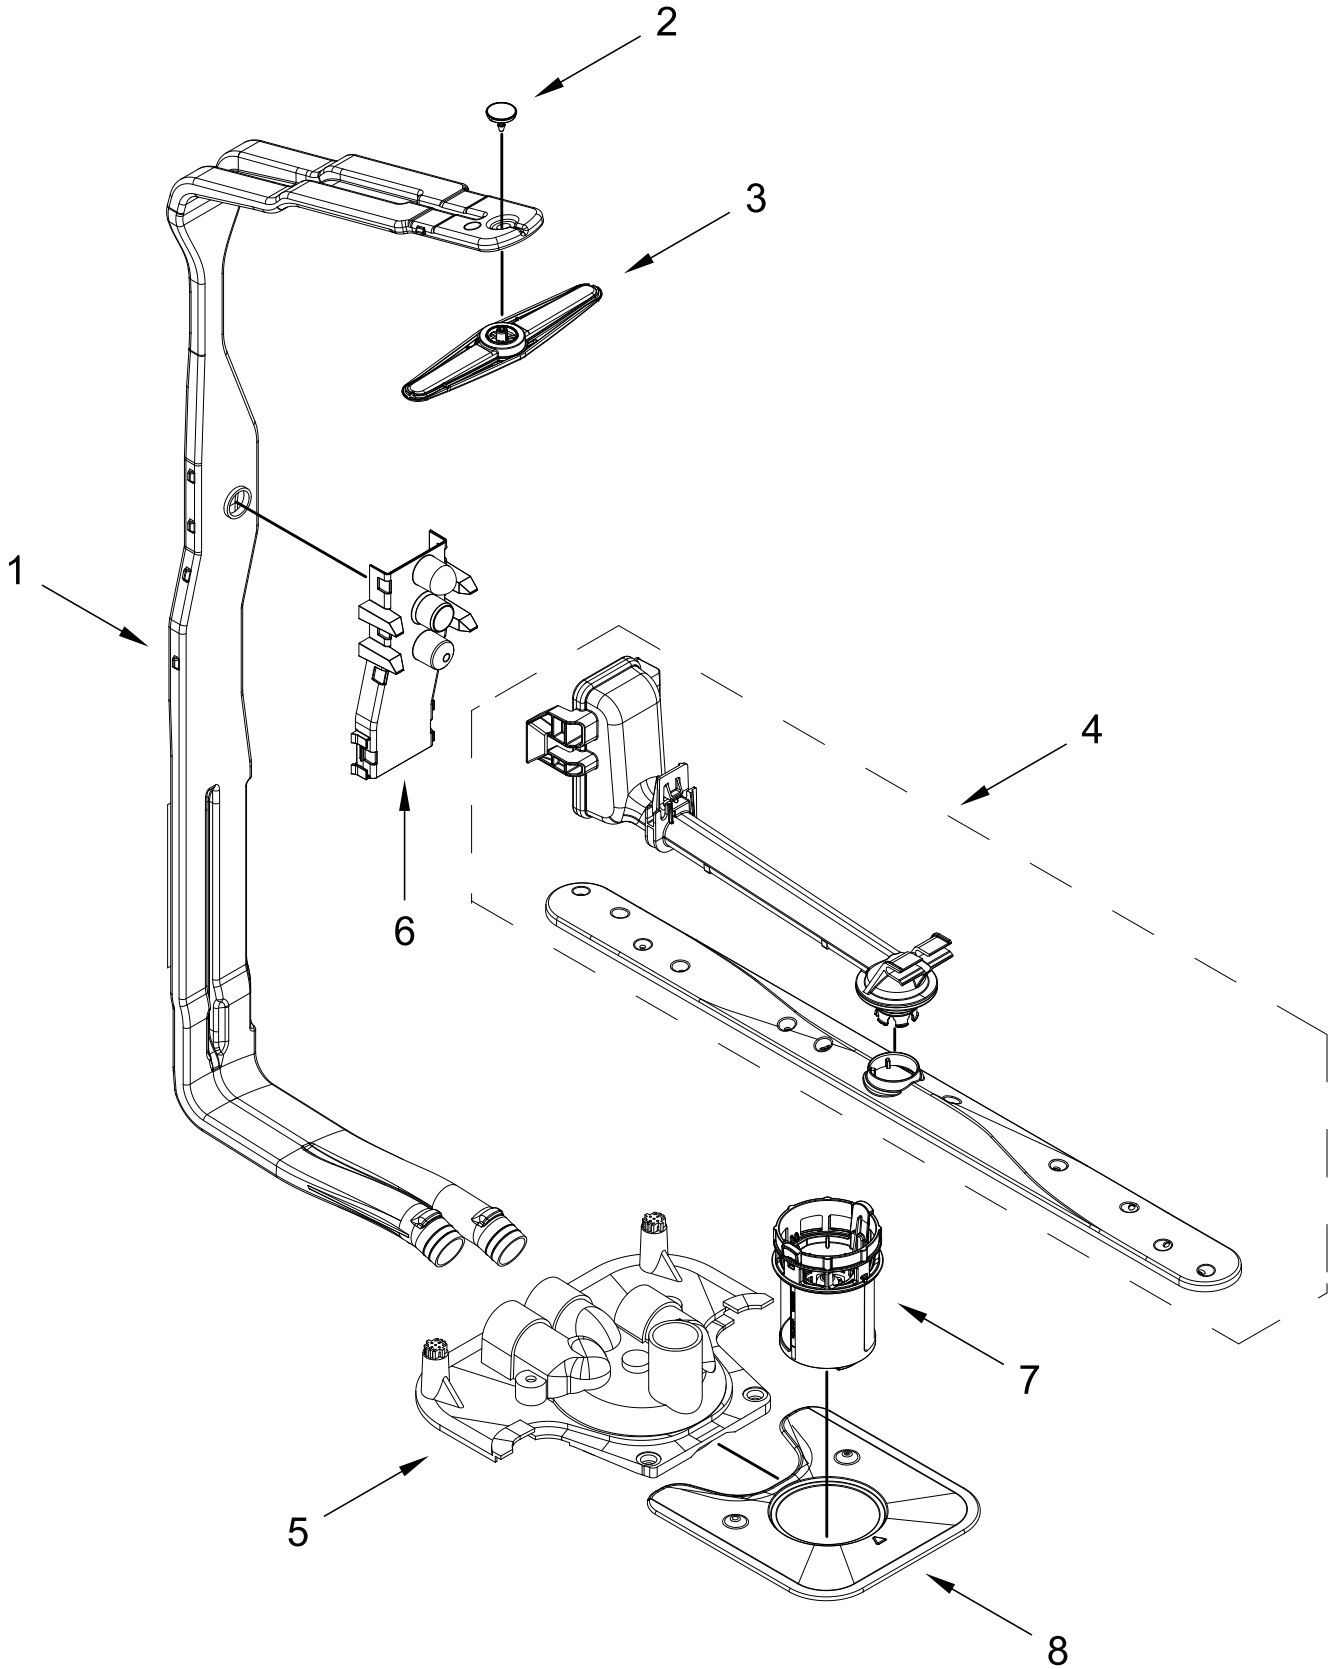

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11507999	Feed Tube Assembly	5	W11128231	Cover, Diverter	7	W10891533	Filter
2	W11039888	Retainer	6	W10892836	Retainer, Docking (2nd Level)	8	W10891539	Screen
3	W11039869	Sprayarm, Third Level						
4	W11174340	Upper Sprayarm Assembly						


UPPER RACK AND TRACK PARTS

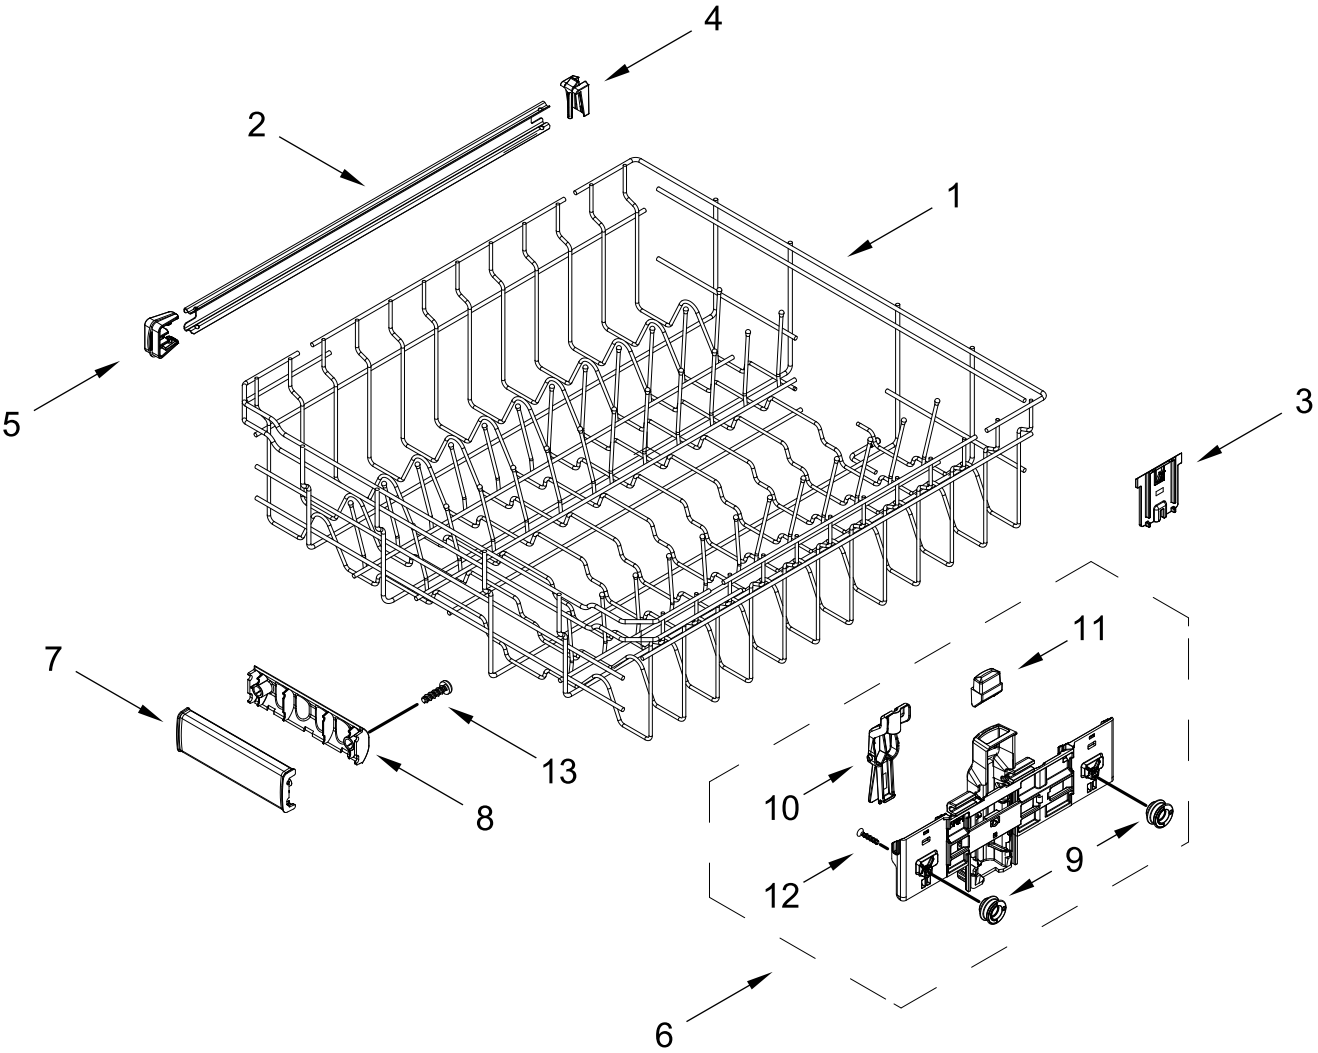

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10847875	Dishrack, Upper	6		Rack Adjuster	9	W11048221	Wheel
2	W11441109	Track, Dishrack		W11268090	Left Hand	10	W11180178	Leveler, Adjuster Arm
3	W11180605	Clip, Adjuster Arm		W11268086	Right Hand	11	W11267699	Button, Adjuster Arm
4	W11084872	Track Stop, Rear	7	W11268682	Handle, Dishrack Front	12	W11376395	Screw
5	W11084874	Track Stop, Front	8	W11268681	Handle, Dishrack Rear	13	9741232	Screw


LOWER RACK PARTS

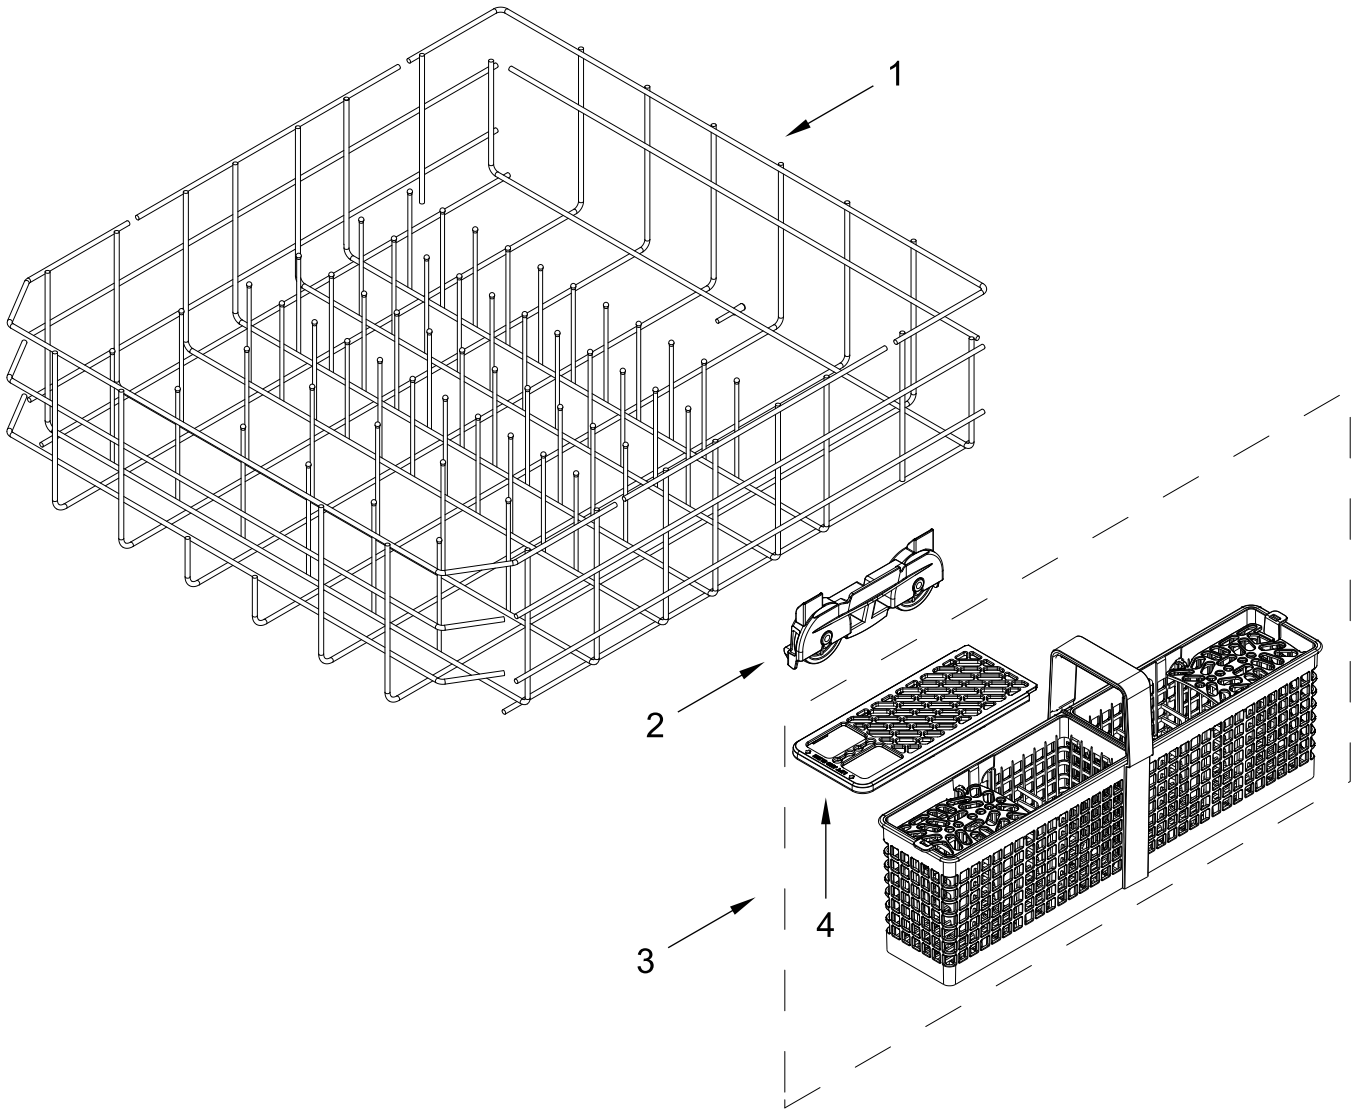

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10525641	Dishrack, Lower	3	W11291798	Silverware Basket Assembly
2	W11133747	Wheel & Transport Assembly	4	W11267718	Lid, Silverware Basket

THIRD LEVEL RACK AND TRACK PARTS

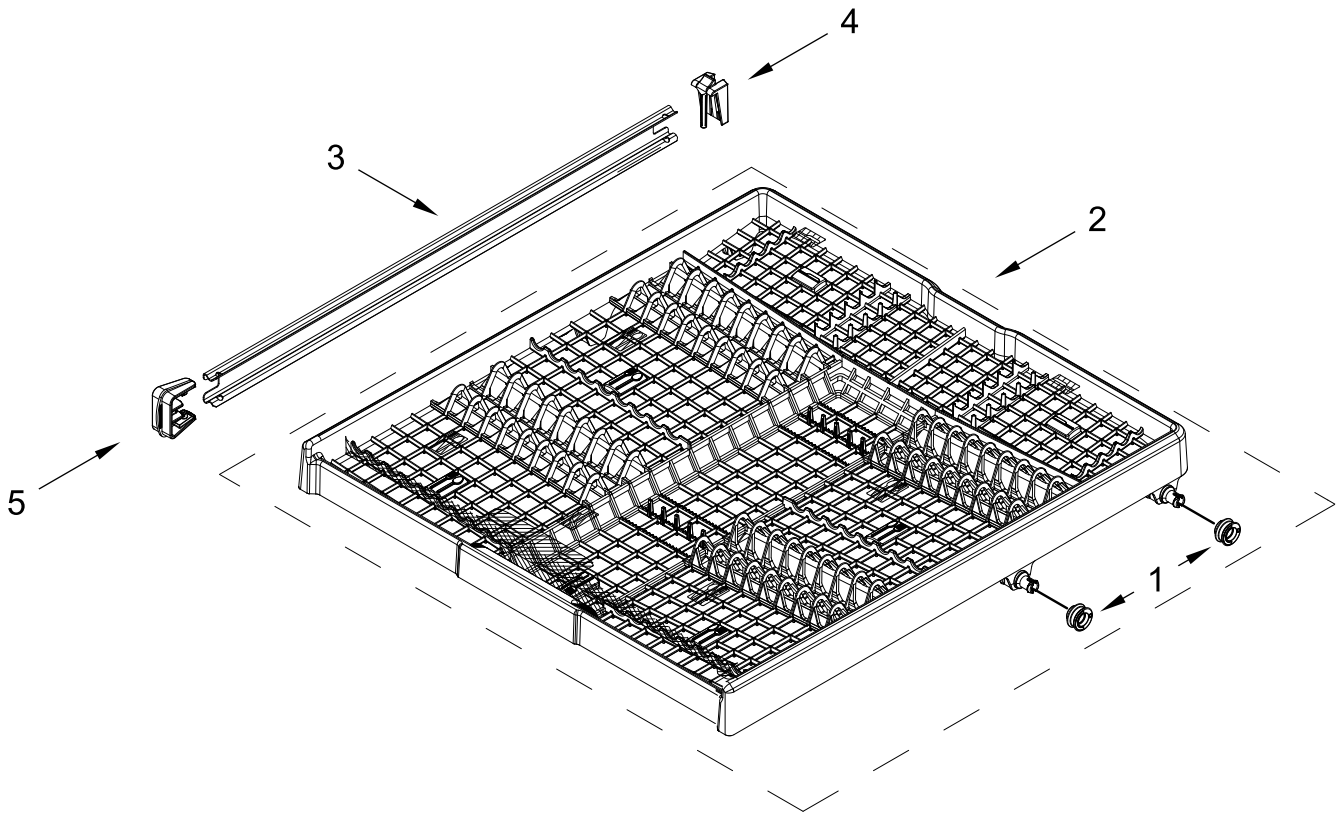

THIRD LEVEL RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11048219	Wheel	3	W11441109	Track, Dishrack	4	W11084872	Track Stop, Rear
2	W11540175	Rack, Third Level				5	W11084874	Track Stop, Front

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396277	Barrier Kit
	W11381654	External Drain Hose, 12 FT
	W11365011	Power Cord Kit (Straight)
	W11365014	Power Cord Kit (Right Angle)
	4396672	Strain Relief, Power Cord (Metallic)
	W10685193	Compression Hose Fitting, Water Line
	W10278635RP	Fill Hose Kit