


Quick start guide

Power on:


Push the robot to the boot point, long press the power switch for 1s, when the light strip turns into blue, indicating the robot has been powered on.



Notice: please make sure the key switch is at "on" position.

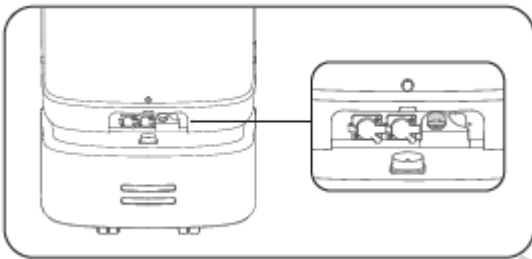

- laser mapping boot point(ensure the robot is at the boot point and facing direction is correct)
- marker mapping boot point (ensure the robot is right under the marker)

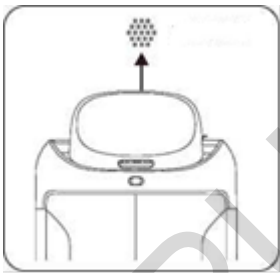

Power off:

long press the power switch for 3s, it will prompt the power off notification, press it, when the screen is black and light strip is off, indicating the robot has been powered off.

Pause:

Tap the robot screen to pause the robot during a task, tap it again to resume the task.

Emergency stop:

Press the emergency stop switch to stop the robot when meeting emergency. Turn the stop switch clockwise and follow the interface prompts to resume robot operation.