

# Use & Care MANUAL



3 Series  
Built-In Electric 30"  
Single and Double Ovens

*RVSOE330 / RVDOE330*

# Congratulations

Your purchase of this product attests to the importance you place upon the quality and performance of the major appliances you use. With minimal care, as outlined in this guide, this product is designed to provide you with years of dependable service. Please take the few minutes necessary to learn the proper and efficient use and care of this quality product.

Some of the key features of this appliance include:

- A broad range of baking and broiling modes—up to 11 cooking modes in all—to make even your most challenging baking projects a success.
- A two-speed convection fan that allows you to cook foods more thoroughly and evenly—even when baking large quantities.
- Four convection modes offering greater air circulation to shorten cooking times and cook foods more evenly.
- Dual broiling elements producing intense radiant heat for faster broiling and a larger coverage area.
- Three broiling modes including a new low-broil mode for delicate broiling and top-browning.
- A meat probe offers perfect baking/roasting of meats.
- A halogen lighting system to provide more light with less glare.
- A concealed bake element for easier cleaning.
- Six adjustable rack positions with the largest usable baking space available in this class.

Your complete satisfaction is our ultimate goal. If you have any questions or comments about this product, please our Consumer Support Center at 1-888-845-4641.

We appreciate your choosing a Viking Range product and hope that you will again select our products for your other major appliance needs. For more information about the complete and growing selection of our products, visit us online at [vikingrange.com](http://vikingrange.com)

# Table of Contents

## Getting Started

|                   |   |
|-------------------|---|
| Warnings & Safety | 4 |
| Before Using Oven | 8 |

## Product Controls

|                             |    |
|-----------------------------|----|
| Setting the Clock           | 8  |
| Oven Control Panel          | 9  |
| Oven Features               | 9  |
| Clocks and Timers           | 10 |
| Oven Functions and Settings | 13 |

## Operation

|                                     |    |
|-------------------------------------|----|
| Using the Oven                      | 14 |
| Preheat                             | 14 |
| Meat Probe Function                 | 14 |
| Rack Positions                      | 14 |
| Conventional and Convection Cooking | 15 |
| Condensation                        | 16 |
| Pan Placement Tips                  | 16 |
| Baking                              | 17 |
| BAKE (Two-Element Bake)             | 17 |
| CONV BAKE (Convection Bake)         | 17 |
| TRU CONV (TruConvec™)               | 17 |
| Solving Baking Problems             | 20 |
| Roasting                            | 21 |
| CONV ROAST (Convection Roast)       | 21 |
| Broiling                            | 24 |
| CONV BROIL (Convection Broil)       | 24 |
| HI BROIL                            | 24 |
| MED BROIL                           | 24 |
| LOW BROIL                           | 24 |
| Convection Dehydrate/Defrost        | 26 |

## Product Care

|                          |    |
|--------------------------|----|
| Cleaning and Maintenance | 27 |
| Self-Clean Cycle         | 28 |
| Replacing Oven Lights    | 29 |
| Troubleshooting          | 29 |
| Service Information      | 30 |
| Warranty                 | 31 |

# Warnings & Safety

**Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution, and care must be exercised when installing, maintaining, or operating the appliance.**

**ALWAYS** contact the manufacturer about problems or conditions you do not understand.

## Recognize Safety Symbols, Words, Labels


|  |
|--|
| <b>⚠ DANGER</b>  |
| Hazards or unsafe practices which <b>WILL</b> result in severe personal injury or death  |
| <b>⚠ WARNING</b>   |
| Hazards or unsafe practices which <b>COULD</b> result in death or severe personal injury   |
| <b>⚠ CAUTION</b>   |
| Hazards or unsafe practices which <b>COULD</b> result in minor personal injury.<br>All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. |

**Read and follow all instructions before using this appliance** to prevent the potential risk of fire, electric shock, personal injury or damage to the appliance as a result of improper usage of the appliance. Use appliance only for its intended purpose as described in this manual.

**To ensure proper and safe operation:** Appliance must be properly installed and grounded by a qualified technician. **DO NOT** attempt to adjust, repair, service, or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified servicer.

**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

|   |
|---|
| <b>⚠ WARNING</b>  |
| <b>DO NOT</b> use commercial oven cleaners inside the oven. Use of these cleaners can produce hazardous fumes or can damage the porcelain finishes. |

|   |
|---|
| <b>⚠ WARNING</b>  |
|  To avoid risk of property damage, personal injury or death; follow information in this manual exactly to prevent a fire or explosion. <b>DO NOT</b> store or use gasoline or other flammable vapors and liquids in the vicinity of this or any appliance. |

|  |
|--|
| <b>⚠ WARNING</b>   |
| <b>NEVER</b> cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks air flow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard. |

|   |
|---|
| <b>⚠ WARNING</b>  |
| <b>DO NOT</b> cook on the oven bottom. This could result in damage to your appliance. Always use oven racks when cooking in the oven. |

# Warnings & Safety

## To Prevent Fire or Smoke Damage

- Be sure all packing materials are removed from the appliance before operating it.
- Keep area around appliance clear and free from combustible materials, gasoline, and other flammable vapors and materials.
- Many aerosol-type spray cans are **EXPLOSIVE** when exposed to heat and may be highly flammable. Avoid their use or storage near an appliance.
- Many plastics are vulnerable to heat. Keep plastics away from parts of the appliance that may become warm or hot.
- Combustible items (paper, plastic, etc.) may ignite and metallic items may become hot and cause burns. **DO NOT** leave oven unsupervised when drying herbs, breads, mushrooms, etc., as this may create a fire hazard.

## In Case of Fire

Turn off appliance to avoid spreading the flame.

- Smother fire or flame by closing the oven door.
- **DO NOT** use water on grease fires. Use baking soda, a dry chemical or foam-type extinguisher to smother fire or flame.

## Child Safety

- **NEVER** leave children alone or unsupervised near the appliance when it is in use or is still hot.
- **DO NOT** store items of interest to children over the unit. Children climbing to reach items could be seriously injured.
- Children must be taught that the appliance and utensils in it can be hot. Let hot utensils cool in a safe place, out of reach of small children. Children should be taught that an appliance is not a toy. Children should not be allowed to play with controls or other parts of the appliance.

## Cooking Safety

- Use dry, sturdy pot-holders. Damp pot-holders may cause burns from steam. Dishtowels or other substitutes should **NEVER** be used as potholders because they can get caught on appliance parts.
- Loose-fitting or hanging garments should never be worn while using the appliance. **DO NOT** drape towels or materials on oven door handles. These items could ignite and cause burns.
- **ALWAYS** place oven racks in the desired positions while oven is cool. Slide oven rack out to add or remove food, using dry, sturdy pot-holders. **ALWAYS** avoid reaching into the oven to add or remove food. If a rack must be moved while hot, use a dry pot-holder.
- **ALWAYS** turn the oven off at the end of cooking.
- **DO NOT** heat unopened food containers; buildup of pressure may cause the container to explode and result in injury.
- Use care when opening the oven door. Let hot air or steam escape before moving or replacing food.
- **NEVER** use aluminum foil to cover oven racks or oven bottom. This could result in risk of electric shock, fire, or damage to the appliance. Use foil only as directed in this guide.
- **DO NOT** cook on the oven bottom. This could result in damage to your appliance. Always use oven racks when cooking in the oven.
- **PREPARED FOOD WARNING:** Follow food manufacturer's instructions. If a plastic frozen food container and/or its cover distorts, warps, or is otherwise damaged during cooking, immediately discard the food and its container. The food could be contaminated.

## Heating Elements

- **NEVER** touch oven heating elements, areas near elements, or interior surfaces of oven.
- Heating elements may be hot even though dark in color. Areas near elements and interior surfaces of an oven may become hot enough to cause burns.
- During and after use, **DO NOT** touch or let clothing or other flammable materials contact heating elements, areas near elements, or interior surfaces of oven until they have had sufficient time to cool.

## Self-Clean Oven

- Clean only parts listed in this guide. **DO NOT** clean door gasket. The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket. **DO NOT** use oven cleaners of any kind in or around any part of the self-clean oven.
- Before self-cleaning the oven, remove broiler pan, oven racks and other utensils and wipe up excessive spill-overs to prevent excessive smoke, flare-ups or flaming.
- This oven features a cooling fan which operates automatically during a clean cycle. If the fan does not turn on, the unit will not operate. The user should contact Service for repair.

## Important Safety Notice and Warning

The California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires the Governor of California to publish a list of

# Warnings & Safety

substances known to the State of California to cause cancer or reproductive harm, and requires businesses to warn customers of potential exposures to such substances. Users of this appliance are hereby warned that when the oven is engaged in the self-clean cycle, there may be some low-level exposure to some of the listed substances, including carbon monoxide. Exposure to these substances can be minimized by properly venting the oven to the outdoors by opening the windows and/or door in the room where the appliance is located during the self-clean cycle.

## Important notice regarding pet birds:

**NEVER** keep pet birds in the kitchen or in rooms where the fumes from the kitchen could reach. Birds have a very sensitive respiratory system. Fumes released during an oven self-cleaning cycle may be harmful or fatal to birds. Fumes released due to overheated cooking oil, fat, margarine and overheated non-stick cookware may be equally harmful.

## About Your Appliance

- For proper oven performance and operation, **DO NOT** block or obstruct the any vents above or below the doors.
- Avoid touching oven vent area while oven is on and for several minutes after oven is turned off. When the oven is in use, the vent and surrounding area become hot enough to cause burns. After oven is turned off, **DO NOT** touch the oven vent or surrounding areas until they have had sufficient time to cool.
- Other potentially hot surfaces include oven vent, surfaces near the vent opening, oven door, areas around the oven door, and oven window.
- The misuse of oven doors (e.g. stepping, sitting, or leaning on them) can result in potential hazards and/or injuries.

### **WARNING**

**NEVER** use appliance as a space heater to heat or warm a room to prevent potential hazard to the user and damage to the appliance. Also, **DO NOT** use the oven as a storage area for food or cooking utensils.

### **WARNING**

To prevent possible damage to cabinets and cabinet finishes, use only materials and finishes that will not discolor or delaminate and will withstand temperatures up to 194°F (90°C). Heat and moisture resistant adhesive must be used if the product is to be installed in laminated cabinetry. Check with your builder or cabinet supplier to make sure that the materials meet these requirements.

### **WARNING**



#### **ELECTRICAL SHOCK HAZARD**

**DO NOT** touch a hot oven light bulb with a damp cloth as the bulb could break. Should the bulb break, disconnect power to the appliance before removing bulb to avoid electrical shock.

### **WARNING**



#### **ELECTRICAL SHOCK HAZARD**

Disconnect the electric power at the main fuse or circuit breaker before replacing bulb.

### **WARNING**



#### **BURN OR ELECTRICAL SHOCK HAZARD**

Make sure all controls are "OFF" and oven is COOL before cleaning. Failure to do so can result in burns or electrical shock.

### **CAUTION**

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

# Warnings & Safety

## ⚠ WARNING



### BURN HAZARD

When self-cleaning, surfaces may get hotter than usual. Therefore, children should be kept away.

## ⚠ CAUTION



### BURN HAZARD

The oven door, especially the glass, can get hot.  
**Danger of burning: DO NOT touch the glass!**

## ⚠ WARNING

To avoid sickness and food waste when using automatic time baking:

- **DO NOT** use foods that will spoil while waiting for cooking to start, such as dishes with milk or eggs, cream soups, custards, fish, pork, poultry, or foods with stuffing.
- Any food that has to wait for cooking to start should be very cold or frozen before it is placed in the oven.
- **DO NOT** use foods containing baking powder or yeast with automatic time baking. They will not rise properly.
- **DO NOT** allow food to remain in the oven for more than 2 hours after the end of the cooking cycle.
- To avoid sickness and food waste, **DO NOT** allow defrosted food to remain in the oven for more than 2 hours.

## ⚠ CAUTION

You must carefully check the food during the dehydration process to ensure that it does not catch fire.

## ⚠ NOTICE

The cooling fan should be operating when the unit is in operation. If you notice the cooling fan is not operating or you observe unusual or excessive noise coming from the cooling fan, contact a Viking Range Authorized Service Center before continuing operation. Failure to do so can result in damage to the oven or surrounding cabinets.

## ⚠ CAUTION



**DO NOT** touch the exterior portions of the oven after self-cleaning cycle has begun, since some parts become extremely hot to the touch!

During the first few times the self-cleaning feature is used, there may be some odor and smoking from the "curing" of the binder in the high-density insulation used in the oven. When the insulation is thoroughly cured, this odor will disappear. During subsequent self-cleaning cycles, you may sense an odor characteristic of high temperatures.

**KEEP THE KITCHEN WELL-VENTED DURING THE SELF-CLEAN CYCLE.**

## ⚠ NOTICE

Avoid any damage to oven vents. The vents need to be unobstructed and open to provide proper airflow for optimal oven performance.

## ⚠ NOTICE

**DO NOT** turn the Temperature Control on during defrosting. Turning the convection fan on will accelerate the natural defrosting of the food without the heat.

## ⚠ CAUTION

**DO NOT** store items of interest to children over the unit. Children climbing to reach items could be seriously injured.

## ⚠ WARNING

This appliance features a self-cleaning cycle. During this cycle, the oven reaches elevated temperatures in order to burn off soil and deposits. A powder ash residue is left in the bottom of the oven after completion of the self-clean cycle.

**Note: DO NOT use commercial oven cleaners inside the oven. Use of these cleaners can produce hazardous fumes or can damage the porcelain finishes. DO NOT line the oven with aluminum foil or other materials. These items can melt or burn during a self-clean cycle, causing permanent damage to the oven.**

## ⚠ WARNING

### STATE OF CALIFORNIA PROP 65

The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the state to cause cancer, birth defects or other reproductive harm and requires businesses to warn customers of potential exposure to such substances. Self-clean ovens can cause low-level exposure to some of these substances, including carbon monoxide, during the cleaning cycle. Exposure can be minimized by venting with an open window or using a ventilation fan or hood

# Before Using Oven

## Oven

**Important! Before first use, wipe interior with soapy water and dry thoroughly. Then set the oven selector to “BAKE”, the thermostat to 350°F, and operate for an hour.**

### All models include:


- A broad range of baking and broiling modes—up to eleven cooking modes in all—to make even your most challenging baking projects a success.
- A two-speed convection fan—this allows you to cook foods more thoroughly and evenly—even when baking large quantities.
- Four convection modes offering greater air circulation to shorten cooking times and cook foods more evenly.
- Three broiling modes including a new low-broil mode for delicate broiling and top-browning.
- A meat probe offers perfect baking/roasting of meats.
- A concealed bake element for easier cleaning.
- This appliance is certified by Star-K to meet strict regulations in conjunction with specific instructions found on [www.star-k.org](http://www.star-k.org)

## Setting the Clock

The time-of-day must be set before any other program can be used. When your oven is first connected to the power in your home, the timer display will show --:--.


To program the time-of-day:

1. Push and hold the “MIN/SEC TIMER” and “BAKE TIME” buttons simultaneously.
2. Turn the “SET” knob until correct time is displayed on the digital clock.
3. Release hold from “MIN/SEC TIMER” and “BAKE TIME” buttons.

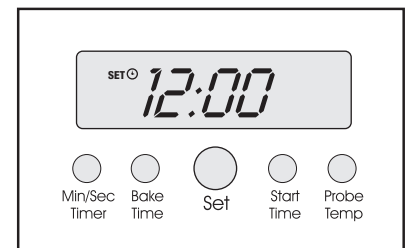



# Oven Control Panel

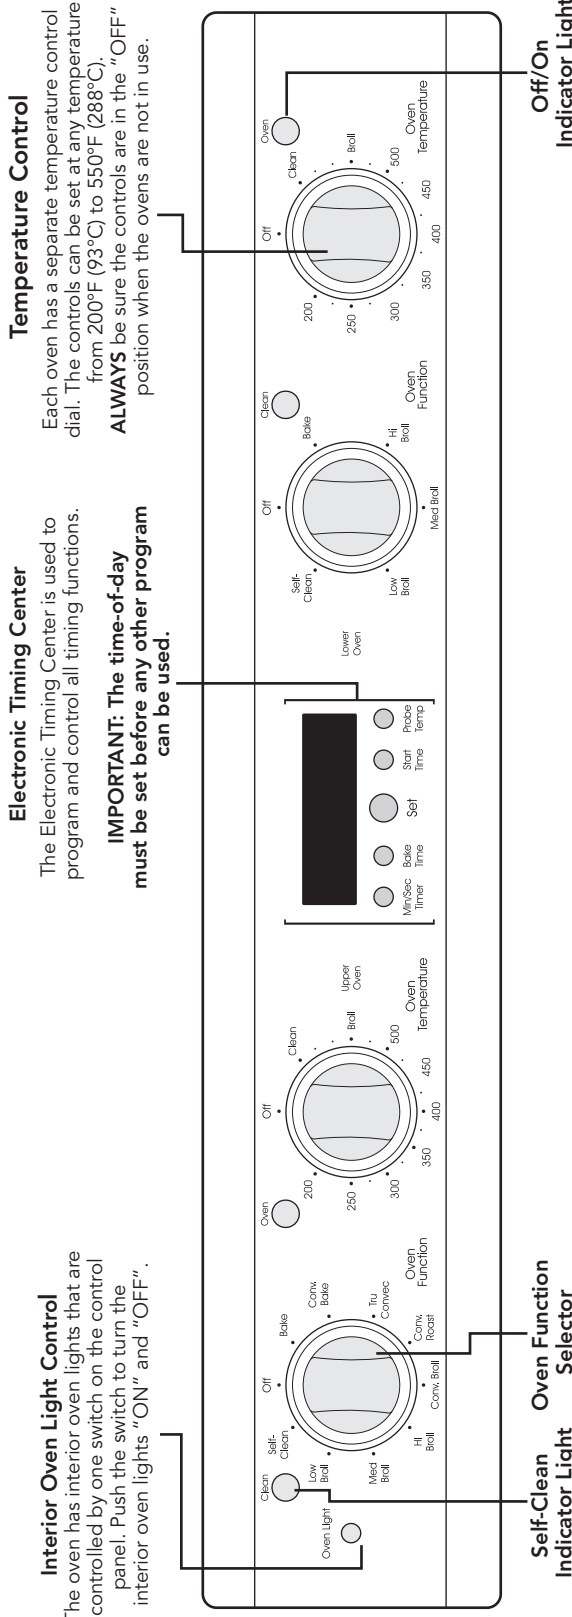

## Interior Oven Light Control

The oven has interior oven lights that are controlled by one switch on the control panel. Push the switch to turn the interior oven lights "ON" and "OFF".

## Electronic Timing Center

The Electronic Timing Center is used to program and control all timing functions. **IMPORTANT: The time-of-day must be set before any other program can be used.**


## Temperature Control

Each oven has a separate temperature control dial. The controls can be set at any temperature from 200°F (93°C) to 550°F (288°C). **ALWAYS** be sure the controls are in the "OFF" position when the ovens are not in use.

# Oven Functions and Settings

- Bake**  
Conventional, single-rack baking (breads, cakes, cookies, pastry, pies, entrees, vegetables)
- Conv Bake (Convection Bake)**  
Multi-rack baking for heavier or frozen foods (e.g., four frozen pies, pizzas, entrees, vegetables)
- TruConv™**  
Multi-rack baking for breads, cakes, cookies (up to six racks of cookies at once)
- Conv Roast (Convection Roast)**  
Whole turkeys, whole chickens, hams, etc.
- Conv Broil (Convection Broil)**  
Thicker meats, faster than regular broil, and with less smoke generation
- High-Broil**  
Dark meats at 1" thickness or less where rare or medium doneness is desired
- Medium-Broil**  
White meats such as chicken or meats greater than 1" thick that would be over-browned in high broil
- Low-Broil**  
Delicate broiling such as meringue
- Conv Dehydrate (Convection Dehydrate)**  
Use this setting to dehydrate fruits and vegetables
- Conv Defrost (Convection Defrost)**  
Use this setting to defrost foods
- Self-Clean**  
A pyrolytic self-cleaning cycle where the oven reaches elevated temperatures in order to burn off soils and deposits

# Oven Features

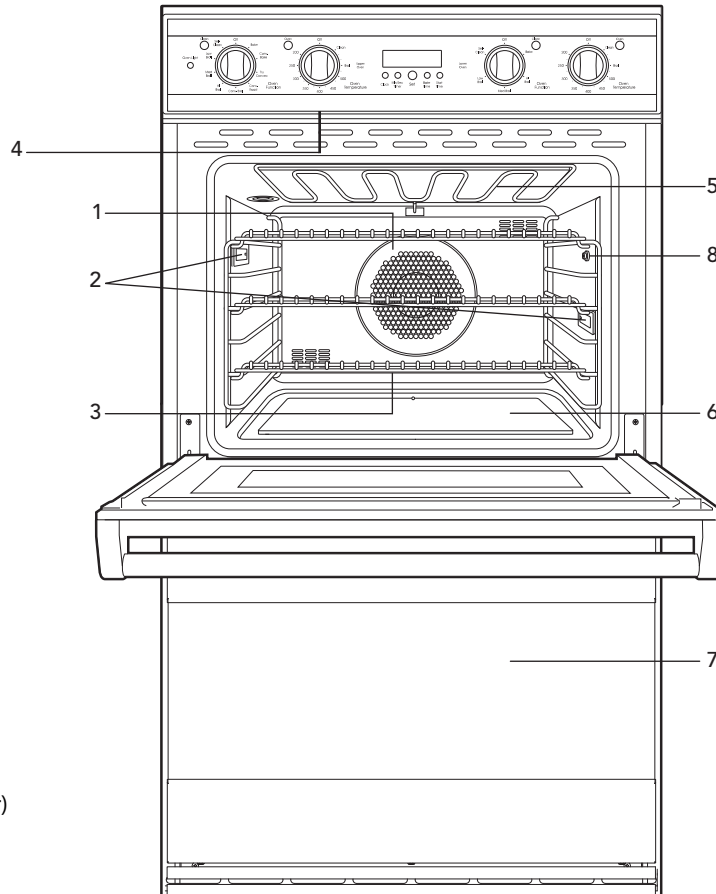


- 1. TruConvect™ element (behind baffle)
- 2. Oven light
- 3. Oven racks (three upper, three lower)

- 4. Model/Serial number plate (under control panel)
- 5. Broil element
- 6. Bake element
- 7. Lower oven
- 8. Meat probe

# Clocks and Timers

## Electronic Timing Center

The Electronic Timing Center is used to program and control all timing functions. It has five display and programming modes that are activated by the four push buttons and the "SET" knob. Both the BAKE TIME mode and the MIN/SEC TIMER mode can be used to time cooking periods. These features can even be used at the same time when both ovens are in use. However, only BAKE TIME and Self-Cleaning modes shut the oven off automatically when the timed program is over. For example, you can time bake a casserole in the upper oven using the BAKE TIME mode, while broiling in the lower oven using the MIN/SEC TIMER. One oven can also be cleaned while timing foods in the other oven using the MIN/SEC TIMER.

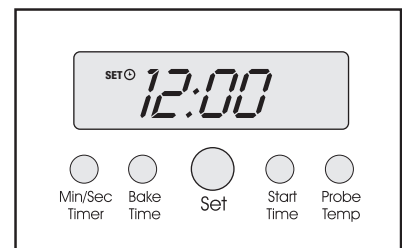

# Clocks and Timers

## Setting the Min/Sec Timer

The MIN/SEC TIMER is designed for accurate timing and is ideal for baking delicate items such as biscuits, cookies, and popovers, and for precise broiling. The MIN/SEC TIMER can be used at the same time the BAKE TIME or START TIME functions are in use. It can be used for timing up to 24 hours. When setting the timer, the time displayed will increase in 1 minute increments. When the timer counts down to 1 minute, the timer alarm will give two short beeps and the display changes from hours: minutes to seconds only.

## To program the Min/Sec Timer

1. Press the "MIN/SEC TIMER" button. The timer will display :00 and the word TIMER will be displayed in the lower right corner.
2. Turn the "SET" knob until the desired duration time is displayed.

The MIN/SEC TIMER is now programmed. The alarm will sound at the end of the countdown. The program can be canceled anytime by setting the remaining time to :00. To change back to the time-of-day, press the "CLOCK" button. Notice that a small clock will be displayed in the upper right corner to indicate that a program is in progress. The display will return automatically to the MIN/SEC TIMER after a few seconds.

## Timer Alarm

At the end of a MIN/SEC TIMER program or BAKE TIME program, the alarm will consist of three beeps followed by two beeps every 10 seconds until the "MIN/SEC TIMER" button is pressed. Whenever a valid function key is pressed or when a control function starts automatically, one beep will be sounded. When an invalid function key is pressed, two beeps will be sounded.

## Setting the Automatic Start Time Bake Program

The BAKE TIME and START TIME modes of the timer can be used to automatically turn the oven on and off at a preselected time. The Automatic Time Bake program is ideal for foods with no danger of spoilage during the time the oven is left off.

## To Set The Automatic Time Bake Program:

### 1. Set the start time:

**A) For Single Ovens** – Program the start time by pressing the "START TIME" button and turning the "SET" knob until the desired start time is displayed. This is the time of day you want the food to begin cooking.

**B) For Double Ovens** – Press the "START TIME" button once to set the starting time for the upper oven (UPPER OVEN will show on the display). Press the "START TIME" button twice to set the starting time for the lower oven (LOWER OVEN will show on the display). Then program the start time by turning the "SET" knob until the desired start time is displayed. This is the time of day you want the food to begin cooking.

### 2. Set the desired baking time:

Once the start time is set, the display will switch to :00 and the words SET, COOK and TIME will appear on the right side of the display. You will now enter the desired baking time. Turn the "SET" knob until the desired baking time is displayed in hours and minutes. Once the desired bake time is set, the word SET will disappear and the word DELAY will appear in the display indicating that the Bake Hours program has been set.

**Note:** For double ovens, the word DELAY will show with either UPPER OVEN or LOWER OVEN depending on which oven has been selected.

**Note:** For delayed Time Bake, the oven will automatically add 30 minutes to the programmed cooking time to account for preheat.

## To Set The Automatic Time Bake Program: (cont.)

3. **Set the Oven Function selector** to the desired function – BAKE, CONVECTION BAKE, or TRUCONVEC™, etc.
4. **Set the temperature control knob to the desired baking temperature.**

# Clocks and Timers

5. The Automatic Time Bake program is now set.

**Note:** *The display will continue to show the amount of bake time that was programmed (this will remain until the programmed start time is reached). You can return the display to clock mode by pressing the "CLOCK" button. Notice that a small clock will be displayed in the upper right corner to indicate that a program is in progress. Switch back to the timer mode by pressing the "BAKE TIME" button.*

6. When the specified time is reached, the oven will automatically turn on. It will bake for the programmed amount of time at the selected temperature.

**Note:** *At 1 minute from the end of the specified bake program, the oven timer will beep once. At the end of the specified bake program, the oven will automatically turn off and the timer will sound a series of three beeps. This will continue until the "START TIME" button is pressed. The display will then return to displaying the time.*

**Note:** *Setting the remaining duration time to :00 will cancel the Automatic Bake program.*

# Functions and Settings

These functions allow you to customize the oven controls to suit your specific tastes. The following oven settings are available:

## Degree Format

The oven has been preset to the Fahrenheit temperature scale. With this feature, users can switch to the Celsius temperature scale.

## Clock Format

This feature allows users to choose a 12-hour or 24-hour format for the clock display.

## Sabbath Mode

This mode offers users belonging to religions with “no work” restrictions to program their ovens to comply with the Sabbath requirement. When the oven door is opened in Sabbath mode, the oven light stays off while the convection fan and heating elements remain on.

## Showroom Mode

### (Not recommended to be used by the consumer)

This mode allows the oven to be hooked up to a 120 volt electrical supply for display or showroom made purposes. In this mode, the electronic display/controls and oven lights will function but the heating elements and convection fan will NOT function.

## To enter into the Oven Settings mode:

1. Press and hold the “MIN/SEC TIMER” button for 3 seconds.
2. Use the “SET” knob to scroll between the different Oven Settings.
3. To toggle between a specific Oven Setting, press the “MIN/SEC TIMER” button.

**Note:** *Whatever Oven Setting is displayed while you toggle between settings is what will be active when you exit the Oven Settings feature.*

4. To exit the Oven Settings mode, press the “BAKE TIME” button. The oven will automatically exit the Oven Settings mode if the “BAKE TIME” button is not pressed within 60 seconds.

# Using the Oven

## Preheat


For best results, it is extremely important that you preheat your oven to the desired cooking temperature before placing food items in the oven to begin cooking. In many cooking modes, partial power from the broiler is used to bring the oven to the preheat temperature. Therefore, placing food items in the oven during preheat mode is not recommended. The Preheat System is engineered so that the oven is brought to the desired set temperature in a manner which will provide the optimum cooking environment based on the selected cooking mode in the shortest possible time.

## Meat Probe Function

The meat probe takes the guesswork out of roasting by cooking foods to the ideal internal temperature. The probe temperature setting is used to notify the user when the internal temperature of the meat being roasted is reached.

### To Set the Automatic Probe Function

1. Insert probe into the meat and slide into oven.
2. Plug the probe into the outlet located on right interior wall of the oven and close oven door.
3. Select cooking function and set temperature.
4. Press the "PROBE TEMP" button.
5. Turn the "SET" knob to the desired internal temperature. The word PROBE and the desired internal temperature will be displayed on the lower right of the clock. On double ovens, the manual/timed control must be turned to "UPPER TIMED."

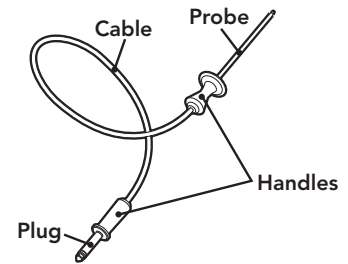

**Note:** It is recommended to set the internal temperature about 10 degrees lower than actual desired internal temperature. The meat will continue to cook when removed from the oven and will reach desired internal temperature while "standing".


The word PROBE flashes and tone sounds three times when desired temperature is reached. The tone will sound twice every 10 seconds after completion until probe function is closed.

## Rack Positions

Each oven is equipped with three heavy-duty racks, including two TruGlide™ racks. With the TruGlide™ racks, the bottom section remains in the oven and the top section smoothly glides outward when pulled. This reduces the chances of spills from items that contain a lot of juice or liquid. This rack can be used in any of the six rack positions.

All ovens have five rack positions. Position 5 is the farthest from the oven bottom. Position 1 is the closest to the oven bottom. The racks can be easily removed and arranged at various levels. For best results with conventional baking, do not use more than one rack at a time. It is also recommended, when using two racks, to bake with the racks in positions 2 and 4 or positions 3 and 5.

1. Arrange the oven racks in the desired positions BEFORE heating the oven. If cooking on two racks at the same time, use rack positions 2 and 4 or positions 3 and 5.
2. Turn the Oven Function selector to desired function. Cooking starts immediately and stops when the Oven Function selector is turned to "OFF".
3. Set the Temperature Control to the desired temperature.
4. Place the food in the oven after the oven indicator light goes out.

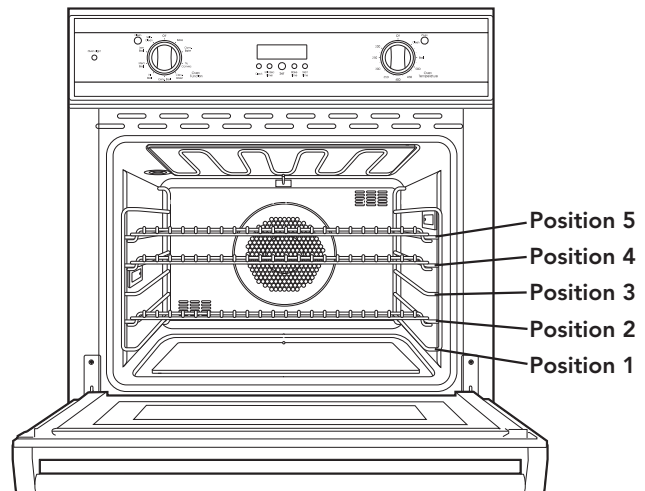

# Using the Oven

## Conventional and Convection Cooking

Because of variations in food density, surface texture and consistency, some foods may be prepared more successfully using the conventional bake setting. For this reason, conventional baking is recommended when preparing baked goods such as custard. The user may find other foods that are also prepared more consistently in conventional bake. This is perfectly normal. Convection cooking is a cooking technique which utilizes fan forced air to circulate heat throughout the entire oven creating the optimum cooking environment. Cooking with convection is intended when performing multi-rack baking and for baking heavier foods. Below are tips which will allow you to get the best results out of your oven when cooking with convection.

- As a general rule, to convert conventional recipes to convection recipes, reduce the temperature by 25°F (-3.9°C) and the cooking time by approximately 10 to 15%.
- Cooking times for standard baking and convection baking will be the same. However, if using convection to cook a single item or smaller load, then it is possible to have 10-15% reduction in cooking time. (Remember convection cooking is designed for multi-rack baking or cooking large loads.)
- If cooking items which require longer than 45 minutes, then it is possible to see a 10-15% reduction in cooking time. This is especially true for large items cooked in the convection roast function.
- A major benefit of convection cooking is the ability to prepare foods in quantity. The uniform air circulation makes this possible. Foods that can be prepared on two of three racks at the same time include: pizza, cakes, cookies, biscuits, muffins, rolls, and frozen convenience foods.
- For three-rack baking, use any combination of rack positions 2, 3, 4, and 5. For two-rack baking, use rack positions 2 and 4 or positions 3 and 5. Remember that the racks are numbered from bottom to top. See "Oven Features" section.
- Items cooked in a convection function can be easily over-baked. This being the case, it is usually a good idea to pull items out of the oven just before they seem to be done. Items will continue to cook right after they are set out of the oven.
- Some recipes, especially those that are homemade, may require adjustment and testing when converting from standard to convection modes. If unsure how to convert a recipe, begin by preparing the recipe in conventional bake. After achieving acceptable results, follow the convection guidelines listed for the similar food type. If the food is not prepared to your satisfaction during this first convection trial, adjust only one recipe variable at a time (cooking time, rack position, or temperature) and repeat the convection test. Continue adjusting one recipe variable at a time until satisfactory results are achieved.

# Using the Oven

## Condensation

The oven is supplied with a system which provides a natural circulation of air. In most cases, this natural circulation will eliminate any observed condensation. However, there will be instances where condensation is observed. This is NOT a sign that the oven is not working properly.


Condensation can occur depending on the following factors:

- Type of food being cooked
  - Steam and condensation is a natural by product of cooking any food with high water content, such as frozen food, chicken, etc.
  - Use a covered container, where practical, when cooking to reduce the amount of condensation that forms.
- Length of cooking time
  - If the oven is going to be used for prolonged periods of time, then additional ventilation may be required.
  - Do not leave food in the oven to cool after it has been cooked and the oven has been switched off.
  - To reduce condensation, ensure the oven is well heated before placing food in the oven cavity.
- Blockage of the oven's air flow
  - If the oven air flow is changed, the oven will not perform to specification.
- Proper installation ventilation
  - The oven needs good ventilation within the installed cabinets to perform per specification.
- Type of cabinetry the oven is installed in
  - Cabinets need to meet specific temperature requirements.
  - Some cabinetry materials have high water contents that can outgas during the heating cycle.
- Ambient conditions in the kitchen including humidity and temperature


## Pan Placement Tips

- When using large (15" x 13") flat pans or trays that cover most of the rack, rack positions 2 or 3 produce the best results.
- When baking on more than one rack, it is recommended to use one of the convection modes and the 2nd and 4th position or the 3rd and 5th position for more even baking. When baking on three racks, use any combination of positions 2, 3, 4, and 5 for more consistent results.
- Stagger pans in opposite directions when two racks and several pans are used in conventional bake. If possible, no pan should be directly above another.
- Allow 1 to 2 inches of air space around all sides of each pan for even air circulation.

**Single Rack Pan Placement**

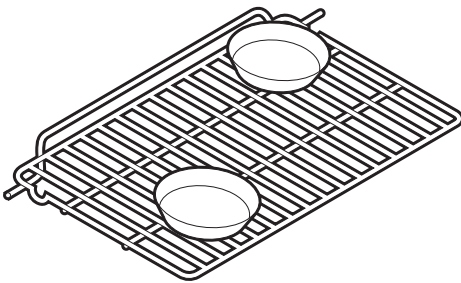

**Multiple Rack Pan Placement**

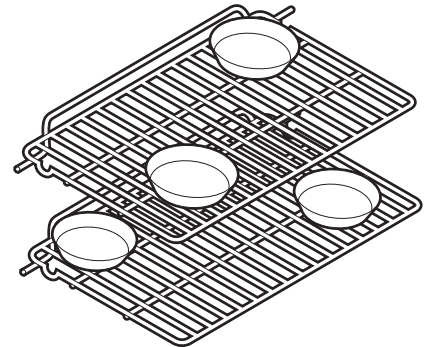




# Using the Oven


## BAKE (Two-Element Bake)

Full power heat is radiated from the bake element in the bottom of the oven cavity and supplemental heat is radiated from the broil element. This function is recommended for single-rack baking. Many cookbooks contain recipes to be cooked in the conventional manner. Conventional baking/roasting is particularly suitable for dishes that require a high temperature. Use this setting for baking, roasting, and casseroles.

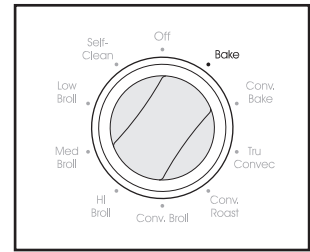

## CONV BAKE (Convection Bake)


The bottom element operates at full power, and the top broil element operates at supplemental power. The heated air is circulated by the motorized fan in the rear of the oven providing a more even heat distribution. This even circulation of air equalizes the temperature throughout the oven cavity and eliminates the hot and cold spots found in conventional ovens. A major benefit of convection baking is the ability to prepare food in quantity using multiple racks—a feature not possible in a standard oven.

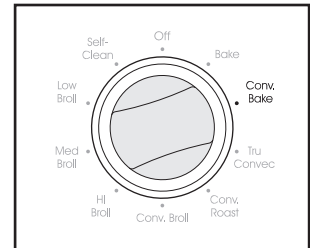

When roasting using this setting, cool air is quickly replaced, searing meats on the outside and retaining more juices and natural flavor on the inside with less shrinkage. With this heating method, foods can be baked and roasted at the same time with minimal taste transfer, even when different dishes are involved, such as cakes, fish or meat. The hot air system is especially economical when thawing frozen food. Use this setting for baking and roasting.

## TRU CONV (TruConv™)

The rear element only operates at full power. There is no direct heat from the bottom or top elements. The motorized fan in the rear of the oven circulates air in the oven cavity for even heating. Use this setting for foods that require gentle cooking such as pastries, souffles, yeast breads, quick breads and cakes. Breads, cookies, and other baked goods come out evenly textured with golden crusts. No special bakeware is required. Use this function for single-rack baking, multiple-rack baking, roasting, and preparation of complete meals. This setting is also recommended when baking large quantities of baked goods at one time.

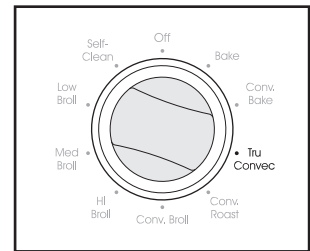

## Baking Tips

- Make sure the oven racks are in the desired positions before you turn the oven on.
- **DO NOT** open the oven door frequently during baking. If you must open the door, the best time is during the last quarter of the baking time.
- Bake to shortest time suggested and check for doneness before adding more time. For baked goods, a stainless steel knife placed in the center of the food should come clean when done.
- Use the pan size and type recommended by the recipe to ensure best results. Cakes, quick breads, muffins, and cookies should be baked in shiny, reflective pans for light, golden crusts. Avoid the use of old, darkened pans. Warped, dented, stainless steel and tin-coated pans heat unevenly and will not give uniform baking results.

# Baking

## Baking Chart

| Food                | Pan Size        | Single Rack Position | Temp              | Time (min) |
|---------------------|-----------------|----------------------|-------------------|------------|
| <b>BREADS</b>       |                 |                      |                   |            |
| Biscuits            | Cookie sheet    | 3 or 4               | 400° F (204.4° C) | 8 - 10     |
| Yeast loaf          | Loaf pan        | 3 or 4               | 375° F (190.6° C) | 30 - 35    |
| Yeast rolls         | Cookie sheet    | 3 or 4               | 400° F (204.4° C) | 12 - 15    |
| Nut bread           | Loaf pan        | 3 or 4               | 375° F (190.6° C) | 30 - 35    |
| Cornbread           | 8" x 8"         | 3 or 4               | 400° F (204.4° C) | 20 - 25    |
| Gingerbread         | 8" x 8"         | 3 or 4               | 350° F (176.7° C) | 35 - 40    |
| Muffins             | Muffin tin      | 3 or 4               | 375° F (190.6° C) | 15 - 20    |
| Corn muffins        | Muffin tin      | 3 or 4               | 375° F (190.6° C) | 15 - 20    |
| <b>CAKES</b>        |                 |                      |                   |            |
| Angel food          | Tube pan        | 3 or 4               | 375° F (190.6° C) | 35 - 45    |
| Bundt               | Tube pan        | 3 or 4               | 350° F (176.7° C) | 45 - 55    |
| Cupcakes            | Muffin pan      | 3 or 4               | 350° F (176.7° C) | 16 - 20    |
| Layer, sheet        | 13" x 9"        | 3 or 4               | 350° F (176.7° C) | 40 - 50    |
| Layer, two          | 9" round        | 3 or 4               | 350° F (176.7° C) | 30 - 35    |
| Pound               | Loaf pan        | 3 or 4               | 350° F (176.7° C) | 60 - 65    |
| <b>COOKIES</b>      |                 |                      |                   |            |
| Brownies            | 13" x 9"        | 3 or 4               | 350° F (176.7° C) | 25 - 30    |
| Choc. chip          | Cookie sheet    | 3 or 4               | 375° F (190.6° C) | 12 - 15    |
| Sugar               | Cookie sheet    | 3 or 4               | 350° F (176.7° C) | 10 - 12    |
| <b>PASTRY</b>       |                 |                      |                   |            |
| Cream puffs         | Cookie sheet    | 3 or 4               | 400° F (204.4° C) | 30 - 35    |
| <b>PIES</b>         |                 |                      |                   |            |
| Crust, unfilled     | 9" round        | 3 or 4               | 425° F (218.3° C) | 10 - 12    |
| Crust, filled       | 9" round        | 3 or 4               | 375° F (190.6° C) | 55 - 60    |
| Lemon meringue      | 9" round        | 3 or 4               | 350° F (176.7° C) | 12 - 15    |
| Pumpkin             | 9" round        | 3 or 4               | 350° F (176.7° C) | 40 - 45    |
| Custard             | 6 - 4 oz cups   | 3 or 4               | 350° F (176.7° C) | 35 - 40    |
| <b>ENTREES</b>      |                 |                      |                   |            |
| Egg rolls           | Cookie sheet    | 3 or 4               | 400° F (204.4° C) | 12 - 15    |
| Fish sticks         | Cookie sheet    | 3 or 4               | 425° F (218.3° C) | 18 - 21    |
| Lasagna, frz        | Cookie sheet    | 3 or 4               | 375° F (190.6° C) | 65 - 70    |
| Pot pie             | Cookie sheet    | 3 or 4               | 400° F (204.4° C) | 35 - 40    |
| Gr. peppers stuffed | 13" x 9"        | 3 or 4               | 375° F (190.6° C) | 65 - 70    |
| Quiche              | 9" round        | 3 or 4               | 400° F (204.4° C) | 25 - 30    |
| Pizza, 12"          | Cookie sheet    | 3 or 4               | 400° F (204.4° C) | 15 - 20    |
| Mac. & cheese, frz  | Cookie sheet    | 3 or 4               | 375° F (190.6° C) | 60 - 65    |
| <b>VEGETABLES</b>   |                 |                      |                   |            |
| Baked potatoes      | On rack         | 3 or 4               | 375° F (190.6° C) | 60 - 65    |
| Spinach souffle     | 1 qt. casserole | 3 or 4               | 350° F (176.7° C) | 45 - 50    |
| Squash              | Cookie sheet    | 3 or 4               | 375° F (190.6° C) | 50 - 55    |
| French fries        | Cookie sheet    | 3 or 4               | 425° F (218.3° C) | 15 - 20    |

# Baking

**Convection Baking Chart**

| Food                | Pan Size        | Single Rack Position | Temp              | Time (min) |
|---------------------|-----------------|----------------------|-------------------|------------|
| <b>BREADS</b>       |                 |                      |                   |            |
| Biscuits            | Cookie sheet    | 2 & 4                | 375° F (190.6° C) | 7 - 9      |
| Yeast loaf          | Loaf pan        | 2 & 4                | 350° F (176.7° C) | 20 - 25    |
| Yeast rolls         | Cookie sheet    | 2 & 4                | 375° F (190.6° C) | 11 - 13    |
| Nut bread           | Loaf pan        | 2 & 4                | 350° F (176.7° C) | 20 - 25    |
| Cornbread           | 8" x 8"         | 2 & 4                | 375° F (190.6° C) | 15 - 20    |
| Gingerbread         | 8" x 8"         | 2 & 4                | 325° F (162.8° C) | 30 - 35    |
| Muffins             | Muffin tin      | 2 & 4                | 350° F (176.7° C) | 12 - 15    |
| Corn muffins        | Muffin tin      | 2 & 4                | 350° F (176.7° C) | 0 - 12     |
| <b>CAKES</b>        |                 |                      |                   |            |
| Angel food          | Tube pan        | 3 or 4               | 325° F (162.8° C) | 30 - 35    |
| Bundt               | Tube pan        | 3 or 4               | 325° F (162.8° C) | 35 - 40    |
| Cupcakes            | Muffin pan      | 2 & 4                | 325° F (162.8° C) | 15 - 17    |
| Layer, sheet        | 13" x 9"        | 2 & 4                | 325° F (162.8° C) | 30 - 32    |
| Layer, two          | 9" round        | 2 & 4                | 325° F (162.8° C) | 25 - 30    |
| Pound               | Loaf pan        | 2 & 4                | 325° F (162.8° C) | 5 - 50     |
| <b>COOKIES</b>      |                 |                      |                   |            |
| Brownies            | 13" x 9"        | 2 & 4                | 325° F (162.8° C) | 20 - 25    |
| Choc. chip          | Cookie sheet    | 2,3,& 4              | 350° F (176.7° C) | 7 - 10     |
| Sugar               | Cookie sheet    | 2,3,& 4              | 325° F (162.8° C) | 9 - 10     |
| <b>PASTRY</b>       |                 |                      |                   |            |
| Cream puffs         | Cookie sheet    | 2 & 4                | 375° F (190.6° C) | 4 - 27     |
| <b>PIES</b>         |                 |                      |                   |            |
| Crust, unfilled     | 9" round        | 2 & 4                | 400° F (204.4° C) | 7 - 9      |
| Crust, filled       | 9" round        | 2 & 4                | 350° F (176.7° C) | 50 - 55    |
| Lemon meringue      | 9" round        | 2 & 4                | 325° F (162.8° C) | 4 - 5      |
| Pumpkin             | 9" round        | 2 & 4                | 325° F (162.8° C) | 35 - 45    |
| Custard             | 6 - 4oz cups    | 2 & 4                | 325° F (162.8° C) | 30 - 35    |
| <b>ENTREES</b>      |                 |                      |                   |            |
| Egg rolls           | Cookie sheet    | 2 & 4                | 375° F (190.6° C) | 8 - 10     |
| Fish sticks         | Cookie sheet    | 2 & 4                | 400° F (204.4° C) | 13 - 16    |
| Lasagna, frz        | Cookie sheet    | 2 & 4                | 350° F (176.7° C) | 60 - 65    |
| Pot pie             | Cookie sheet    | 2 & 4                | 375° F (190.6° C) | 10 - 12    |
| Gr. peppers stuffed | 13" x 9"        | 2 & 4                | 350° F (176.7° C) | 45 - 50    |
| Quiche              | 9" round        | 2 & 4                | 375° F (190.6° C) | 20 - 25    |
| Pizza, 12"          | Cookie sheet    | 2 & 4                | 375° F (190.6° C) | 10 - 12    |
| Mac. & cheese, frz  | Cookie sheet    | 3 or 4               | 350° F (176.7° C) | 45 - 50    |
| <b>VEGETABLES</b>   |                 |                      |                   |            |
| Baked potatoes      | On rack         | 3 or 4               | 350° F (176.7° C) | 45 - 50    |
| Spinach souffle     | 1 qt. casserole | 3 or 4               | 325° F (162.8° C) | 35 - 40    |
| Squash              | Cookie sheet    | 3 or 4               | 350° F (176.7° C) | 40 - 45    |
| French fries        | Cookie sheet    | 3 or 4               | 400° F (204.4° C) | 10 - 15    |

# Solving Baking Problems

Baking problems can occur for many reasons. Check the chart below for the causes and remedies for the most common problems. It is important to remember that the temperature setting and cooking times you are accustomed to using with your previous oven may vary slightly from those required with this oven. If you find this to be true, it is necessary for you to adjust your recipes and cooking times accordingly.

**Common Baking Problems/Remedies**


| <b>Problems</b>                                 | <b>Cause</b>  | <b>Remedy</b>  |
|---|---|--|
| Cakes burned on the sides or not done in center | <ol style="list-style-type: none"> <li>1. Oven was too hot</li> <li>2. Wrong pan size</li> <li>3. Too many pans</li> </ol>  | <ol style="list-style-type: none"> <li>1. Reduce temperature</li> <li>2. Use recom. pan size</li> <li>3. Reduce no. of pans</li> </ol>   |
| Cakes crack on top                              | <ol style="list-style-type: none"> <li>1. Batter too thick</li> <li>2. Oven too hot</li> <li>3. Wrong pan size</li> </ol>   | <ol style="list-style-type: none"> <li>1. Follow recipe</li> <li>2. Add liquid</li> <li>3. Reduce temperature</li> <li>4. Use recom. pan size</li> </ol>   |
| Cakes are not level                             | <ol style="list-style-type: none"> <li>1. Batter uneven</li> <li>2. Oven or rack not level</li> <li>3. Pan was warped</li> </ol>  | <ol style="list-style-type: none"> <li>1. Distribute batter evenly</li> <li>2. Level oven or rack</li> <li>3. Use proper pan</li> </ol>  |
| Food too brown on bottom                        | <ol style="list-style-type: none"> <li>1. Oven door opened too often</li> <li>2. Dark pans being used</li> <li>3. Incorrect rack position</li> <li>4. Wrong bake setting</li> <li>5. Pan too large</li> </ol> | <ol style="list-style-type: none"> <li>1. Use door window to check food</li> <li>2. Use shiny pans</li> <li>3. Use recom. rack position</li> <li>4. Adjust to conventional or convection setting as needed</li> <li>5. Use proper pan</li> </ol> |
| Food too brown on top                           | <ol style="list-style-type: none"> <li>1. Rack position too high</li> <li>2. Oven not preheated</li> <li>3. Sides of pan too high</li> </ol>  | <ol style="list-style-type: none"> <li>1. Use recom. rack position</li> <li>2. Allow oven to preheat</li> <li>3. Use proper pans</li> </ol>  |
| Cookies too flat                                | <ol style="list-style-type: none"> <li>1. Hot cookie sheet</li> </ol>   | <ol style="list-style-type: none"> <li>1. Allow sheet to cool between batches</li> </ol>   |
| Pies burned around edges                        | <ol style="list-style-type: none"> <li>1. Oven too hot</li> <li>2. Too many pans used</li> <li>3. Oven not preheated</li> </ol>   | <ol style="list-style-type: none"> <li>1. Reduce temperature</li> <li>2. Reduce no. of pans</li> <li>3. Allow oven to preheat</li> </ol>   |
| Pies too light on top                           | <ol style="list-style-type: none"> <li>1. Oven not hot enough</li> <li>2. Too many pans used</li> <li>3. Oven not preheated</li> </ol>  | <ol style="list-style-type: none"> <li>1. Increase temperature</li> <li>2. Reduce no. of pans</li> <li>3. Allow oven to preheat</li> </ol>   |

# Roasting

## CONV ROAST (Convection Roast)

The convection element runs in conjunction with the inner and outer broil elements. This transfer of heat (mainly from the convection element) seals moisture inside large roasts. Use this setting for whole turkeys, whole chickens, hams, etc.

**Note:** You can also roast foods using bake settings. See the “Baking” section for additional information.

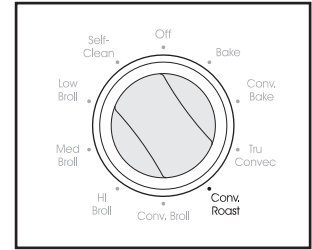

## Roasting Tips

**ALWAYS** use a broiler pan and grid when roasting. The hot air must be allowed to circulate around the item being roasted. **DO NOT** cover what is being roasted. Convection roasting seals in juices quickly for a moist, tender product. Poultry will have a light, crispy skin and meats will be browned, not dry or burned. Cook meats and poultry directly from the refrigerator. There is no need for meat or poultry to stand at room temperature.

- As a general rule, to convert conventional recipes to convection recipes, reduce the temperature by 25°F (-3.9°C) and the cooking time by approximately 10 to 15%.
- **ALWAYS** roast meats fat side up in a shallow pan using a roasting rack. No basting is required when the fat side is up. **DO NOT** add water to the pan as this will cause a steamed effect. Roasting is a dry heat process.
- Poultry should be placed breast side up on a rack in a shallow pan. Brush poultry with melted butter, margarine, or oil before and during roasting.
- For convection roasting, **DO NOT** use pans with tall sides as this will interfere with the circulation of heated air over the food.
- If using a cooking bag, foil tent, or other cover, use the conventional bake setting rather than either convection setting.
- When using a meat thermometer, insert the probe halfway into the center of the thickest portion of the meat. (For poultry, insert the thermometer probe between the body and leg into the thickest part of the inner thigh.) The tip of the probe should not touch bone, fat, or gristle to ensure an accurate reading. Check the meat temperature halfway through the recommended roasting time. After reading the thermometer once, insert it 1/2 inch (1.3 cm) further into the meat, then take a second reading. If the second temperature registers below the first, continue cooking the meat.
- Roasting times **ALWAYS** vary according to the size, shape and quality of meats and poultry. Less tender cuts of meat are best prepared in the conventional bake setting and may require moist cooking techniques. Remove roasted meats from the oven when the thermometer registers 5°F (-15°C) to 10°F (-12°C) lower than the desired doneness. The meat will continue to cook after removal from the oven. Allow roasts to stand 15 to 20 minutes after roasting in order to make carving easier.

For many foods, especially roasts and poultry, internal food temperature is the best test for doneness. The meat probe takes the guesswork out of roasting by cooking foods to the exact doneness you want.

**Note:** Double oven models have a probe in the upper oven only.

Use of probes other than the one provided with this product may result in damage to the probe. Use the handles of the probe and plug when inserting and removing them from the meat and outlet.

- To avoid damaging your probe, **DO NOT** use tongs to pull on the cable when removing.
- To avoid breaking the probe, make sure food is completely defrosted before inserting.
- To prevent possible burns, **DO NOT** unplug the probe from the outlet until the oven has cooled.
- **NEVER** leave the probe inside the oven during a self-cleaning cycle.
- **DO NOT** store the probe in the oven.

After preparing the meat and placing on broiler pan, follow these steps for proper probe placement.

- Lay the probe on the outside of the meat along the top or side and mark with your finger where the edge of the meat comes to on the probe. The point should rest in the center of the thickest meaty part of the roast.
- Insert the probe completely into the meat. It should not touch the bone, fat, or gristle. For roasts with no bone, insert the probe into the meatiest part of the roast. For bone-in ham or lamb, insert the probe into the center of the lowest large muscle or joint. Insert the probe into the meatiest part of the inner thigh from below and parallel to the leg of a whole turkey.
- When setting the probe temperature, it is recommended to set the temperature about 10°F (4°C) lower than desired internal temperature. The meat will continue to cook when removed from the oven and will reach the desired doneness while “standing”.

# Roasting

**Conventional Roasting Chart**  
(when using the Bake or Convection Bake setting)

| Food                   | Weight      | Temp              | Time (min/lb)         | Internal Temp    |
|------------------------|-------------|-------------------|-----------------------|------------------|
| <b>BEEF</b>            |             |                   |                       |                  |
| <b>Rib roast</b>       |             |                   |                       |                  |
| Rare                   | 4 - 6 lbs   | 325° F (162.8° C) | 25                    | 140° F (60.0° C) |
| Medium                 | 4 - 6 lbs   | 325° F (162.8° C) | 30                    | 155° F (68.3° C) |
| Well done              | 4 - 6 lbs   | 325° F (162.8° C) | 40                    | 170° F (76.7° C) |
| <b>Rump roast</b>      |             |                   |                       |                  |
| Medium                 | 4 - 6 lbs   | 325° F (162.8° C) | 25                    | 155° F (68.3° C) |
| Well done              | 4 - 6 lbs   | 325° F (162.8° C) | 30                    | 170° F (76.7° C) |
| <b>Tip roast</b>       |             |                   |                       |                  |
| Medium                 | 3 - 4 lbs   | 325° F (162.8° C) | 35                    | 155° F (68.3° C) |
| Well done              | 3 - 4 lbs   | 325° F (162.8° C) | 40                    | 170° F (76.7° C) |
| <b>LAMB</b>            |             |                   |                       |                  |
| Lamb leg               | 3 - 5 lbs   | 325° F (162.8° C) | 30                    | 180° F (82.2° C) |
| <b>PORK</b>            |             |                   |                       |                  |
| Pork loin              | 3 - 5 lbs   | 325° F (162.8° C) | 35                    | 180° F (82.2° C) |
| Pork chops<br>1" thick | 1-1 1/4lbs  | 350° F (176.7° C) | 55 - 60<br>total time | N/A              |
| Ham, fully<br>cooked   | 5 lbs       | 325° F (162.8° C) | 18                    | 130° F (54.4° C) |
| <b>POULTRY</b>         |             |                   |                       |                  |
| Chicken, whole         | 3 - 4 lbs   | 375° F (190.6° C) | 30                    | 180° F (82.2° C) |
| Turkey,<br>unstuffed   | 12 - 16 lbs | 325° F (162.8° C) | 16 - 20               | 180° F (82.2° C) |
| Turkey                 | 20 - 24 lbs | 325° F (162.8° C) | 16 - 20               | 180° F (82.2° C) |
| Turkey, stuffed        | 12 - 16 lbs | 325° F (162.8° C) | 17 - 21               | 180° F (82.2° C) |
| Turkey, stuffed        | 20 - 24 lbs | 325° F (162.8° C) | 17 - 21               | 180° F (82.2° C) |
| Turkey breast          | 4 - 6 lbs   | 325° F (162.8° C) | 20                    | 180° F (82.2° C) |

**Note:** The above information is given as a guide only.


# Roasting

## Convection Roasting Chart

| Food                   | Weight      | Temp              | Time (min/lb)         | Internal Temp    |
|------------------------|-------------|-------------------|-----------------------|------------------|
| <b>BEEF</b>            |             |                   |                       |                  |
| <b>Rib roast</b>       |             |                   |                       |                  |
| Rare                   | 4 - 6 lbs   | 325° F (162.8° C) | 25                    | 140° F (60.0° C) |
| Medium                 | 4 - 6 lbs   | 325° F (162.8° C) | 24                    | 155° F (68.3° C) |
| Well done              | 4 - 6 lbs   | 325° F (162.8° C) | 30                    | 170° F (76.7° C) |
| <b>Rump roast</b>      |             |                   |                       |                  |
| Medium                 | 4 - 6 lbs   | 325° F (162.8° C) | 20                    | 155° F (68.3° C) |
| Well done              | 4 - 6 lbs   | 325° F (162.8° C) | 24                    | 170° F (76.7° C) |
| <b>Tip roast</b>       |             |                   |                       |                  |
| Medium                 | 3 - 4 lbs   | 325° F (162.8° C) | 30                    | 155° F (68.3° C) |
| Well done              | 3 - 4 lbs   | 325° F (162.8° C) | 35                    | 170° F (76.7° C) |
| <b>LAMB</b>            |             |                   |                       |                  |
| Lamb leg               | 3 - 5 lbs   | 325° F (162.8° C) | 30                    | 180° F (82.2° C) |
| <b>PORK</b>            |             |                   |                       |                  |
| Pork loin              | 3 - 5 lbs   | 325° F (162.8° C) | 30                    | 180° F (82.2° C) |
| Pork chops<br>1" thick | 1-1 1/4lbs  | 325° F (162.8° C) | 45 - 50<br>total time | N/A              |
| Ham, fully<br>cooked   | 5 lbs       | 325° F (162.8° C) | 15                    | 130° F (54.4° C) |
| <b>POULTRY</b>         |             |                   |                       |                  |
| Chicken, whole         | 3-4 lbs     | 350 (176.7 C)     | 25                    | 180° F (82.2° C) |
| Turkey,<br>unstuffed   | 12 - 16lbs  | 325° F (162.8° C) | 11                    | 180° F (82.2° C) |
| Turkey                 | 20 - 24 lbs | 325° F (162.8° C) | 11                    | 180° F (82.2° C) |
| Turkey, stuffed        | 12 - 16 lbs | 325° F (162.8° C) | 9 - 10                | 180° F (82.2° C) |
| Turkey, stuffed        | 20 - 24 lbs | 325° F (162.8° C) | 9 - 10                | 180° F (82.2° C) |
| Turkey breast          | 4 - 6 lbs   | 325° F (162.8° C) | 20                    | 180° F (82.2° C) |


**Note:** The above information is given as a guide only.

# Broiling

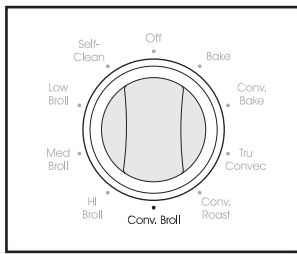


## CONV BROIL (Convection Broil)

The top element operates at full power. This function is exactly the same as regular broiling with the additional benefit of air circulation by the motorized fan in the rear of the oven. Smoke is reduced since the airflow also reduces peak temperatures on the food. Use this setting for broiling thick cuts of meats.

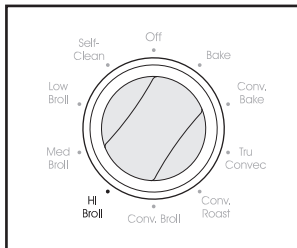


## HI BROIL

Heat radiates from both broil elements, located in the top of the oven cavity, at full power. The distance between the foods and the broil elements determines broiling speed. For fast broiling, food may be as close as 2 inches (5 cm) to the broil element. Fast broiling is best for meats where rare to medium doneness is desired. Use this setting for broiling small and average cuts of meat.

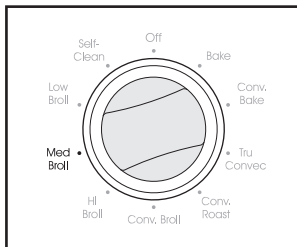

## MED BROIL

Inner and outer broil elements pulse on and off to produce less heat for slow broiling. Allow about 4 inches (10 cm) between the top surface of the food and the broil element. Slow broiling is best for chicken and ham in order to broil food without over-browning it. Use this setting for broiling small and average cuts of meat.

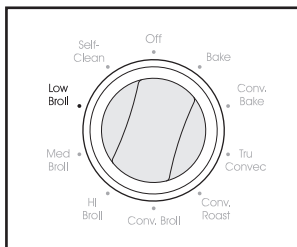

## LOW BROIL

This mode uses only a fraction of the available power to the inner broil element for delicate top-browning. The inner broil element is on for only part of the time. Use this setting to gently brown meringue on racks 3 or 4 in 3-4 minutes.

## Broiling Instructions

Broiling is a dry-heat cooking method using direct or radiant heat. It is used for small, individualized cuts such as steaks, chops, and patties. Broiling speed is determined by the distance between the food and the broil element. Choose the rack position based on desired results.

Conventional broiling (LOW, MED or HI BROIL) is most successful for cuts of meat 1-2 inches thick and is also more suitable for flat pieces of meat. Convection broiling has the advantage of broiling food slightly quicker than conventional. Convection broiling of meats produces better results, especially for thick cuts. The meat sears on the outside and retains more juices and natural flavor inside with less shrinkage.

## To Use Broil or Convection Broil

1. Arrange the oven rack in the desired position before turning broiler on.
2. Center the food on a cold broiler pan and grid. Place broiler pan in oven.
3. Set the oven function selector to desired broiling function and the temperature control knob to "BROIL".
4. Close the door. There is not a detent to hold the door in the open broil stop position. With open-door broiling, the broil element does not cycle on and off. With closed-door broiling, the broil element might cycle on and off if an extended broiling time is required. A built-in smoke "eliminator" in the top of the oven helps reduce smoke and odors.



# Broiling

**Broiling Chart**

| Type and Cut of Meat   | Weight         | Setting          | Rack   | Time (min) |
|------------------------|----------------|------------------|--------|------------|
| <b>BEEF</b>            |                |                  |        |            |
| <b>Sirloin, 1"</b>     |                |                  |        |            |
| Rare                   | 14 oz          | Hi Broil         | 4 or 5 | 8-10       |
| Medium                 | 14 oz          | Hi Broil         | 4 or 5 | 10-12      |
| Well done              | 14 oz          | Hi Broil         | 4 or 5 | 11-13      |
| <b>T-Bone, 3/4"</b>    |                |                  |        |            |
| Rare                   | 10 oz          | Hi Broil         | 4 or 5 | 7-8        |
| Medium                 | 10 oz          | Hi Broil         | 4 or 5 | 9-10       |
| Well done              | 10 oz          | Hi Broil         | 4 or 5 | 11-12      |
| <b>Hamburger, 1/2"</b> |                |                  |        |            |
| Rare                   | 1/4 lb.        | Hi Broil         | 4 or 5 | 6-7        |
| Medium                 | 1/4 lb.        | Hi Broil         | 4 or 5 | 7-8        |
| Well done              | 1/4 lb.        | Hi Broil         | 4 or 5 | 8-9        |
| <b>CHICKEN</b>         |                |                  |        |            |
| Bnls breast 1"         | 1/2 lb.        | Med-Broil        | 4 or 5 | 15-20      |
| Bnls breast 1"         | 1/2 lb.        | Convection Broil | 3 or 4 | 15-20      |
| Bones in Breast        | 2-3 lbs. total | Med Broil        | 3 or 4 | 40-45      |
| Bones in Breast        | 2-3 lbs. total | Convection Broil | 3 or 4 | 25-30      |
| Chicken pieces         | 2-3 lbs. total | Med Broil        | 3 or 4 | 40-45      |
| Chicken pieces         | 2-3 lbs. total | Convection Broil | 3      | 25-30      |
| <b>HAM</b>             |                |                  |        |            |
| Ham slice, 1"          | 1 lb.          | Med Broil        | 3 or 4 | 22         |
| <b>LAMB</b>            |                |                  |        |            |
| Rib chops, 1"          | 12 oz.         | Convection Broil | 3 or 4 | 7          |
| Shoulder               | 1 lb.          | Convection Broil | 3 or 4 | 6          |
| <b>PORK</b>            |                |                  |        |            |
| Loin chops, 3/4"       | 1 lb.          | Convection Broil | 3      | 14         |
| Bacon                  |                | Med Broil        | 4      | 6          |
| <b>FISH</b>            |                |                  |        |            |
| Salmon steak           | 1 lb.          | Med Broil        | 3      | 7          |
| Fillet                 | 1 lb.          | Med Broil        | 3 or 4 | 6          |

**Note:** The above information is given as a guide only.

# Broiling

## Broiling Tips

- **ALWAYS** use a broiler pan and grid for broiling. They are designed to provide drainage of excess liquid and fat away from the cooking surface to help prevent splatter, smoke, and fire.
- To keep meat from curling, slit fatty edge.
- Brush chicken and fish with butter several times as they broil to prevent drying out. To prevent sticking, lightly grease broiler tray.
- Broil on first side for slightly more than half the recommended time, season, and turn. Season second side just before removing.
- **ALWAYS** pull rack out to stop position before turning or removing food.
- Use tongs or a spatula to turn meats. **NEVER** pierce meat with a fork, as this allows the juices to escape.
- Remove the broiler pan from the oven when you remove the food. Drippings will bake onto the pan if it is left in the heated oven after broiling. While pan is hot, place damp paper towel over grid. Drizzle with liquid dishwashing detergent and pour water over grid. This will make cleaning of the pan easier, or the broiler pan can be lined with aluminum foil to make cleaning easier. Be sure the foil extends up the side of the pan. Although it is not recommended, the grid can also be covered with foil. Be sure to slit openings to conform with the openings in the grid so melted fat can drain through to prevent spattering, smoking, or the possibility of grease fire.

# Convection Dehydrate/Defrost

## Convection Dehydrate

This oven is designed not only to cook, but also to dehydrate fruits and vegetables.

1. Prepare the food as recommended.
2. Arrange the food on drying racks (not included with the oven; contact a local store handling speciality cooking utensils).
3. Set the appropriate low temperature and turn the selector to "TRU CONV".

### CAUTION

You must carefully check the food during the dehydration process to ensure that it does not catch fire.

## Convection Defrost

1. Place the frozen food on a baking sheet.
2. Set the temperature control to "OFF".
3. Turn the selector to "TRU CONV".

### WARNING

To avoid sickness and food waste, **DO NOT** allow defrosted food to remain in the oven for more than 2 hours.

### NOTICE

**DO NOT** turn the Temperature Control on during defrosting. Turning the convection fan on will accelerate the natural defrosting of the food without the heat.

# Cleaning and Maintenance

Any piece of equipment works better and lasts longer when maintained properly and kept clean. Cooking equipment is no exception. Your oven must be kept clean and maintained properly.

## Oven Surfaces

Several different finishes have been used in your electric oven. Cleaning instructions for each surface are given below. Your oven features a Self-Clean cycle for the oven interior. See "*Self-Clean Cycle*" for complete instructions. **NEVER** USE AMMONIA, STEEL WOOL PADS OR ABRASIVE CLOTHS, CLEANSERS, OVEN CLEANERS, OR ABRASIVE POWDERS. THEY CAN PERMANENTLY DAMAGE YOUR OVEN.

## Control Knobs

MAKE SURE ALL THE CONTROL KNOBS POINT TO THE OFF POSITION BEFORE REMOVING. Pull the knobs straight off. Wash in detergent and warm water. Dry completely and replace by pushing firmly onto stem.

## Stainless Steel Parts

Some stainless steel parts may have a protective wrap, which must be peeled off. All stainless steel body parts should be wiped regularly with hot, soapy water at the end of each cooling period and with liquid cleaner designed for this material when soapy water will not do the job. If build-up occurs, **DO NOT** use steel wool, or abrasive cloths, cleaners, or powders. If it is necessary to scrape stainless steel surface to remove encrusted material, soak area with hot, wet towels to loosen the material, then use a wooden or nylon spatula or scraper. **DO NOT** use a metal knife, spatula, or any other metal tool to scrape stainless steel surfaces. Scratches are almost impossible to remove.

## Oven Racks

Clean with detergent and hot water. Stubborn spots can be scoured with a soap-filled steel wool pad. **DO NOT** CLEAN THE OVEN RACKS USING THE SELF-CLEAN CYCLE. They could sustain damage due to the extreme heat of the Self-Clean cycle.

## Meat Probe

The meat probe may be cleaned with soap and water or a soap-filled scouring pad. Cool the probe before cleaning. Scour stubborn spots with a soap-filled scouring pad, rinse and dry.

- **DO NOT** immerse the meat probe in water.
- **DO NOT** store the probe in the oven.

# Self-Clean Cycle


This oven features an automatic pyrolytic self-cleaning cycle. During this cycle, the oven reaches elevated temperatures in order to burn off soil and deposits. An integral smoke eliminator helps reduce odors associated with the soil burn off. A powder ash residue is left in the bottom of the oven after completion of the self-clean cycle. The door latch is automatically activated after selecting the self-clean setting. The latch ensures that the door cannot be opened while the oven interior is at clean temperatures.

## Before starting the Self-Clean cycle:

1. Remove the oven racks, and any other items/utensils from the oven. The high heat generated during the cleaning cycle can discolor, warp, and damage these items. **DO NOT** use foil or liners in the oven. During the self-clean cycle, foil can burn or melt and damage the oven surface.
2. Wipe off any large spills from the oven bottom and sides. **NEVER** use oven cleaners inside a self-cleaning oven or on raised portions of the door.
3. Some areas of the oven must be cleaned by hand before the cycle begins. Soils in these areas will be baked on and very difficult to clean if not removed first. Clean the door up to the gasket, the door frame, and up to 2" (5.1 cm) inside the frame with detergent and hot water. Rinse thoroughly and dry.

**⚠ WARNING**

**BURN OR ELECTRICAL SHOCK HAZARD**  
Make sure all controls are "OFF" and oven is COOL before cleaning. Failure to do so can result in burns or electrical shock.




**⚠ CAUTION**

**DO NOT** touch the exterior portions of the oven after self-cleaning cycle has begun, since some parts become extremely hot to the touch!

During the first few times the self-cleaning feature is used, there may be some odor and smoking from the "curing" of the binder in the high-density insulation used in the oven. When the insulation is thoroughly cured, this odor will disappear. During subsequent self-cleaning cycles, you may sense an odor characteristic of high temperatures.

**KEEP THE KITCHEN WELL-VENTED DURING THE SELF-CLEAN CYCLE.**



## To start the Self-Clean cycle:

1. Close the door completely.
2. Turn the oven selector knob clockwise to the "SELF CLEAN" mode.
3. Turn the temperature control knob past the clean setting until the knob stops. At this time, the clean indicator light will come on. Within 30 seconds, the automatic door latch engages and the oven indicator light comes on. The oven indicator light will remain ON until the oven reaches the self-clean temperature and will then cycle on and off during the self-clean cycle. When the oven reaches the elevated temperature needed for self-clean, the door-lock indicator light comes on.
4. The door-lock indicator light will remain on until the self-clean is completed or interrupted and the oven temperature drops to a safe temperature. A complete cycle is approximately 3-1/2 hours with an additional 30 minutes needed for the oven to cool down enough for the door latch to disengage.

**Note:** A fan noise will be heard during the self-clean cycle and will continue to run for the 3-1/2 hour duration of the self-clean cycle.

5. When the cycle is completed, turn both the oven selector and temperature control knob to the "OFF" position. When the oven has completely cooled, open door and remove any ash from the oven surfaces with a damp cloth.

## To stop the Self-Clean cycle:

To cancel or interrupt the self-cleaning cycle, turn both the temperature control knob and the oven function selector knob to "OFF". When the oven temperature drops to a safe temperature, the automatic door latch will release and the oven door can be opened. When the oven has completely cooled, remove any ash from the oven surfaces with a damp sponge or cloth.

# Replacing Oven Lights

**⚠ WARNING**

**ELECTRICAL SHOCK HAZARD**  
Disconnect the electric power at the main fuse or circuit breaker before replacing bulb.



**⚠ WARNING**

**DO NOT** touch bulb with bare hands. Clean off any signs of oil from the bulb and handle with a soft cloth.


## Halogen Lights

1. Unsnap glass light cover using a screwdriver in the access groove.
2. Firmly grasp light bulb and pull out.
3. Replace with halogen bulb using volt and wattage listed on glass cover.
4. Replace the light cover by snapping glass cover onto metal box.
5. Reconnect power at the main fuse or circuit breaker.

## Power Failure

**DO NOT** attempt to use during a power failure. Unit will not function.

requirements

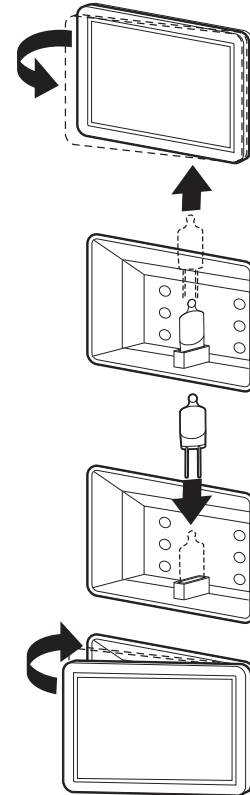

# Troubleshooting

| Problem                                    | Possible Cause and/or Remedy   |
|--|--|
| Oven will not function.                    | Oven is not connected to electrical power.<br>Have electrician check power circuit breaker, wiring and fuses.. |
| Oven does not operate in self-clean cycle. | Door is not shut tight enough for automatic door latch to lock.  |
| Oven is not clean after self-clean cycle.  | Temperature control knob not rotated all the way past clean until it stops.                                    |
| Broil does not work.                       | Temperature control knob is rotated too far past broil position.   |
| Door will not open.                        | Oven is still in self-clean mode. If oven is hot, door latch will release when a safe temperature is reached   |
| Oven light will not work.                  | Light bulb is burned out.<br>Oven is not connected to power.   |

# Service Information

If service is required, call your authorized service agency.


Have the following information readily available.

- Model number
- Serial number
- Date purchased
- Name of dealer from whom purchased

Clearly describe the problem that you are having. If you are unable to obtain the name of an authorized service agency, or if you continue to have service problems, contact Viking Range, LLC at 1-888-845-4641, or write to:

**VIKING RANGE, LLC  
PREFERRED SERVICE  
1803 Hwy 82W  
Greenwood, Mississippi 38930 USA**

The model and serial number for your oven can be found by opening the door and looking underneath the control panel on the left hand side.

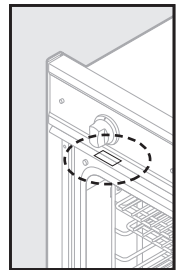

Record the information indicated below. You will need it if service is ever required.

Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Date of purchase \_\_\_\_\_ Date installed \_\_\_\_\_

Dealer's name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

If service requires installation of parts, use only authorized parts to insure protection under the warranty.

**Keep this manual for future reference.**

# Warranty

## BUILT-IN ELECTRIC OVEN WARRANTY

### TWO YEAR FULL WARRANTY

Built-in ovens and all of their component parts, except as detailed below\*, are warranted to be free from defective materials or workmanship in residential housed hold use for a period of two (2) years from the date of original retail purchase. Viking Range, warrantor, agrees to repair or replace at its option, any part which fails or is found to be defective during the warranty period. Warranty service must be performed by a Viking Range LLC authorized service agency or representative.

\*90 Day Cosmetic Warranty: Products are warranted to be free from cosmetic defects in material or workmanship for a period of 90 days from the date of original retail purchase. This warranty covers manufacturing based defects only and does not cover issues resulting from handling or installation. Inspection of the product should be made at time of delivery. Any defects must be reported to the selling dealer within the 90 day period. Viking Range LLC uses the most up to date processes and the best materials available to produce all color finishes. However, slight color variation may be noticed because of the inherent differences in painted parts and porcelain parts as well as differences in product location and natural or artificial lighting. Warranty service must be performed by a Viking Range LLC authorized service agency or representative.

\*90 Day Residential Plus: Viking products are designed and certified for residential use only. They are not intended for use in commercial applications. Viking products should only be used in accordance to national and local codes. Viking is not responsible for property damage or injury resulting from use in a commercial application. To support the manufacturing quality of its appliance's Viking will provide a full 90 day warranty for products used in "Residential Plus" applications. This "Residential Plus" warranty applies to applications where use of the product extends beyond residential use but is in compliance with national and local code. In some jurisdictions these applications are zoned as residential. Examples of, but not limited to, such applications covered by this warranty are bed and breakfasts, fire stations, private clubs, churches, condominium/apartment common areas etc. Under this "Residential Plus" warranty, the product, its components and accessories are warranted to be free from defective material or workmanship for a period of ninety (90) days from the date of original retail purchase. Viking Range, LLC, warrantor, agrees to repair or replace, at its option, any part which fails or is found to be defective during the warranty period. This warranty covers parts and labor. This warranty excludes use of the product in all commercial locations such as restaurants, food service locations and institutional food service locations.

### FIVE YEAR LIMITED WARRANTY

Any bake element, tubular or infrared burner which fails due to defective materials or workmanship in normal residential use during the third thru the fifth year from the date of original retail purchase will be repaired or replaced free of charge for the part itself, with the owner paying all other costs, shipping, handling and labor. Aesthetic conditions such as corrosion, scratching, discoloration, carbon/food build up or similar blemishes due to normal wear and tear or improper use or lack of maintenance is excluded from this warranty.

### WARRANTY TERMS

This warranty extends to the original retail purchaser of the product warranted hereunder and to each transferee owner of the product during the term of the original purchaser's warranty. The warranty is transferable by the original retail purchaser via home sale only. If a transferee owner is unable to provide proof of purchase from the original purchaser and the product has not been previously registered, the production date of the product, located in the serial number on the product, will serve as the effective warranty start date.

The activation date of the warranty begins from the date of original retail purchase. In the case of new product purchase via building development sales, activation begins from the earlier date of either certificate of occupancy or 24 months from date of manufacture. Note date of manufacture is identified by serial tag on product.

This warranty does not cover units purchased as b-stock, liquidation, salvage, seconds, refurbished, as-is, used products.

This warranty shall apply to products purchased in the United States and Canada. Products must be purchased in the country where service is requested. Warranty service must be performed by a Viking Range LLC authorized service agency or representative. Warranty shall not apply to damage resulting from abuse, accident, natural disaster, loss of electrical power to the product for any reason, alteration, improper installation, improper operation, or repair service of the product by anyone other than a Viking Range LLC authorized service agency or representative. This warranty does not apply to commercial usage. Warrantor is not responsible for consequential or incidental damage whether arising out of breach of warranty, breach of contract or otherwise. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations do not apply to you.

Owner shall be responsible for proper installation, providing normal care and maintenance, providing proof of purchase upon request, and making the product reasonably accessible for service. If the product or one of its component parts contains a defect or malfunction during the warranty period, after a reasonable number of attempts by the warrantor to remedy the defects or malfunctions, the owner is entitled to either a refund or replacement, at the warrantor's discretion of the product or its component part or parts. Warrantor's liability on any claim of any kind, with respect to the goods or services covered hereunder, shall in no case exceed the price of the goods or service or part thereof which gives rise to the claim.

### WARRANTY SERVICE

Under the terms of this warranty, service must be performed by a Viking Range LLC authorized service agent or representative. Service will be provided during normal business hours. Labor performed at overtime or premium rates shall not be covered by the warranty. To obtain warranty service contact Viking Range LLC Customer Care at 1-888-845-4641. Please have model number, serial number, and date of original purchase available when calling. IMPORTANT: retain proof of original purchase to establish warranty period. The return of the owner registration card is not a condition of warranty coverage. You should, however, return the owner registration card so Viking Range LLC can contact you should any question of safety arise which could affect you. Any implied warranties of merchantability and fitness applicable to the above described burner assemblies, infrared rotisserie burners, grill grates, and stainless steel parts are limited in duration to the period of coverage of the applicable express written limited warranties set forth above. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from jurisdiction to jurisdiction.

Specifications subject to change without notice.

Viking Range, LLC  
111 Front Street  
Greenwood, Mississippi 38930 USA  
(662) 455-1200

For product information, call 1-888-845-4641  
or visit the Viking Web site at [vikingrange.com](http://vikingrange.com)